



SERVICE 		7 X 87.107-26
--	--	-----------------------------

Enclosure to spare parts list 268 106 21 07-98, 1:1987 (index 7: SX 87.107)

DIFFERENCES BETWEEN THE MODELS 266 AND 268

Square	Description	Part Number 266	Part Number 268
B	Cylinder cover	501 68 60-06	503 40 60-01
	Cylinder cover USA	501 68 60-08	503 40 60-02
	Plastic plug	501 61 52-01	503 40 63-01
	Cylinder cover support	—	501 51 54-01
c	Cylinder compl.	501 68 55-71	501 65 85-71
	Piston A	501 65 88-02	501 65 94-02
	Piston B	501 65 88-03	501 65 94-03
	Gasket	501 52 25-04	503 40 54-01
D	Carburetor	503 28 01-17	503 28 01-14
	Gasket, carburettor – manifold	501 29 64-03	501 29 64-02
	Manifold	503 49 24-01	501 80 66-02
	Gasket, cylinder – manifold	501 51 19-02	501 80 68-03
	Sealing collar	501 68 64-01	501 65 90-01
	Air filter holder	504 35 86-10	503 44 65-01
	Screw, carburettor	503 49 69-02	503 49 69-01
	Washer – attachment plate	503 23 00-01	503 44 64-01
	Screw, manifold	503 20 21-12	—
	Gasket, air filter	501 81 56-01	—
	Sleeve	501 28 92-01	503 44 51-01
	Air filter, nylon	501 80 71-01	503 44 72-01
	Air filter, flock	501 80 71-02	—
	Air filter, paper	—	503 44 70-01
	Filter holder, upper	—	503 44 67-01
	Sealing collar	—	503 44 71-01
	Console, filter holder	—	503 44 63-01
	Screw, console	—	725 53 28-56
	Washer	—	503 23 00-42
	Screw, filter holder	—	729 53 42-05
Spring, filter holder	—	503 44 68-01	
Cover, air filter	—	503 44 69-01	
G	Silencer, Scandinavia	501 65 76-01	503 40 64-01
	Silencer, FF	501 65 77-01	503 40 65-01
	Silencer, XP FF	501 65 77-03	503 40 55-02
	Silencer, jungle	501 56 78-01	503 40 55-01
	Exhaust deflector	501 81 72-01	503 40 57-01
	Spark arrestor	501 81 59-01	503 40 56-01
	Screw, silencer	501 68 65-01	725 53 69-55
	Nut	503 22 20-03	—

Square	Description	Part Number 266	Part Number 268
H	Crankshaft compl. with clutch	501 52 84-03	—
	Crankshaft compl. without clutch	.	501 52 84-02
J	Ignition module	501 51 61-01	—
	Ignition coil	501 51 62-01	—
	Ignition unit	—	506 02 72-01
	Screw, ignition module	725 53 29-56	—
	Screw, ignition unit		725 52 94-55
	Washer, ignition unit	—	734 48 51-01
	Screw, ignition coil	725 52 92-06	—
	Washer, ignition coil	503 23 00-01	—
	Short circuit lead	—	501 83 98-01
	Sealing ring holder	501 52 82-01	—
	O-ring	740 42 21-00	—
	Screw, sealing ring holder	725 52 92-06	
	Flywheel compl.	501 52 52-02	—
	Flywheel compl. G	501 52 52-01	—
K	Starter compl.	501 77 67-01	501 77 67-03
	Pulley	503 10 24-02	503 10 24-03
	Sticker XP	503 45 42-01	501 77 73-01
	Sticker XPG	503 45 43-01	501 77 74-01
L	Clutch compl.	501 77 85-01	501 77 85-02
	Clutch spring	501 40 34-02	501 91 98-01
M	Crankcase compl.	501 68 52-63	501 77 99-01
	Flat bumper	501 53 79-01	503 44 57-01
	Felling spike, 4 teeth	.	503 44 55-01
	Rubber sealing	501 51 73-01	—
	Rubber bellows fuel hose	—	501 55 10-01
	Rubber bellows throttle trigger		503 44 50-01
	Air conductor	501 52 61-02	501 65 92-01
	Idling screw	501 29 65-01	—
	Spring	501 29 66-01	—
	Connecting plate	501 52 62-01	—
	Screw	729 22 19-01	—
	Sealing ring	—	503 26 02-04
N	Carburettor	503 28 01-17	503 28 01-14
	Idling screw	—	503 45 31-01
	Ball	—	503 41 92-01
	Throttle shaft	501 81 44-01	503 53 32-01
	H-screw	501 26 89-01	503 53 38-10
R	Outside spike, 4 teeth	—	503 44 56-01
	Gasket kit, engine	501 52 26-05	501 52 26-04