


MODEL NO. 3662

BODY PARTS SECTION

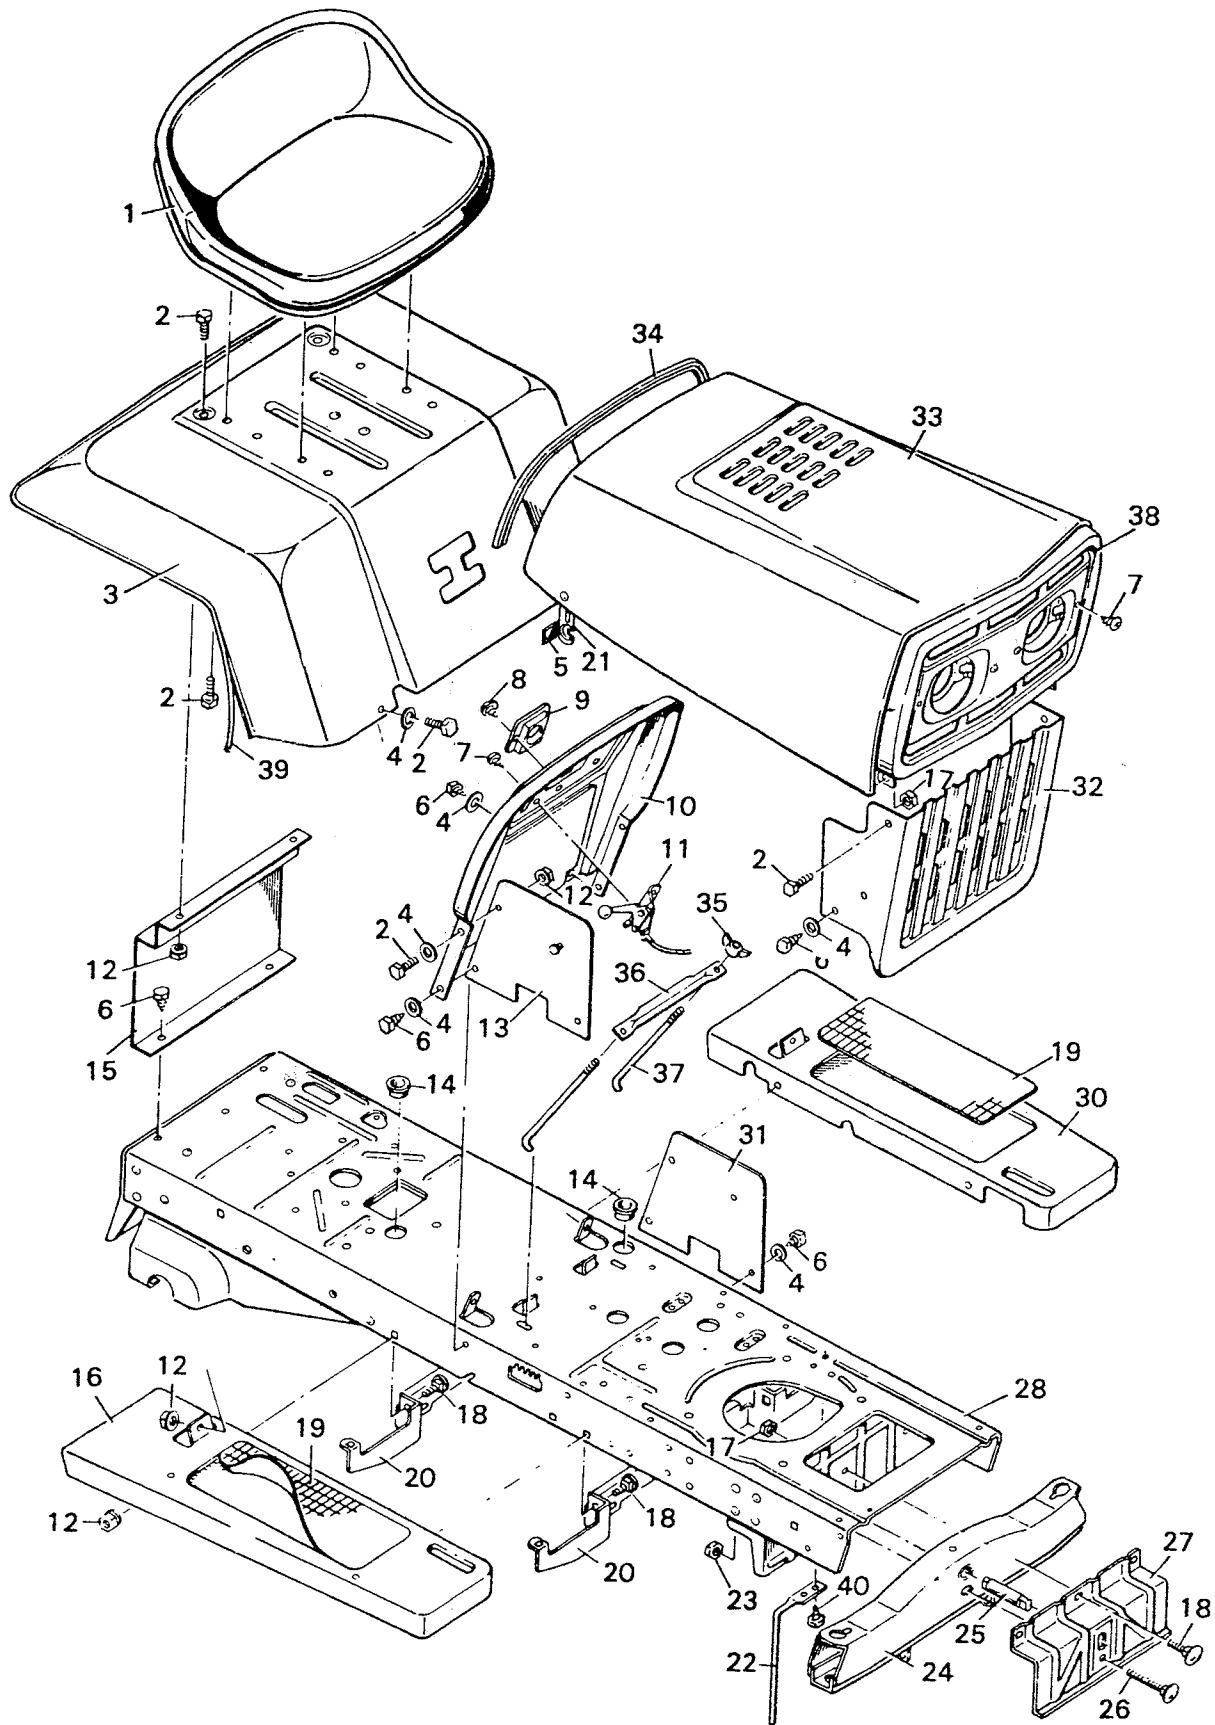


MODEL NO. 3662

Key No.	Part No.	Description
1	21970	Seat
2	1X45	Bolt 5/16"-18X5/8"
3	23325	Rear Shroud
4	17X47Z	Washer
5	21434	Grip
6	26X197	Screw 5/16"X5/8" Type B
7	26X159	Screw # 8X3/8" Type A
8	26X186	Screw # 10X 1/2" Type AB
9	21707	Steering Post Bearing
10	23299	Control Panel
11	23332PA	Remote Control
12	15X79Z	Flange Nut 5/16"-18
13	21792	Side Plate R.H.
14	21268	Grommet
15	21714	Rear Shroud Support
16	21934	Running Board R.H.
17	15X79	Flange Nut 5/16"-18
18	2X53	Carriage Bolt 5/16"-18X5/8"
19	21710	Rubber Mat
20	21547	Running Board Support
21	403040	Hood Latch R.H.
---	403041	Hood Latch L.H.
22	23146Z	Belt Guide
23	15X84Z	Lock Nut 3/8"-16
24	21441	Front Axle Ass'y.
25	21469	Pivot Pin
26	2X60	Carriage Bolt 3/8"-16X3"
27	21534	Front Axle Hanger
28	402037	Frame Ass'y.
30	21935	Running Board L.H.
31	21793	Side Plate L.H.
32	21713	Lower Grill
33	24083	Hood Assembly
34	21765	Edge Trim
35	14X81	Wing Nut
36	21761Z	Battery Clamp
37	21762Z	Battery Clamp Rod
38	21706C	Upper Grill w/Light
39	21789	Edge Trim
40	26X49	Screw
*	21720E	Headlight Retainer

* Not Illustrated

MODEL NO. 3662

STEERING SECTION

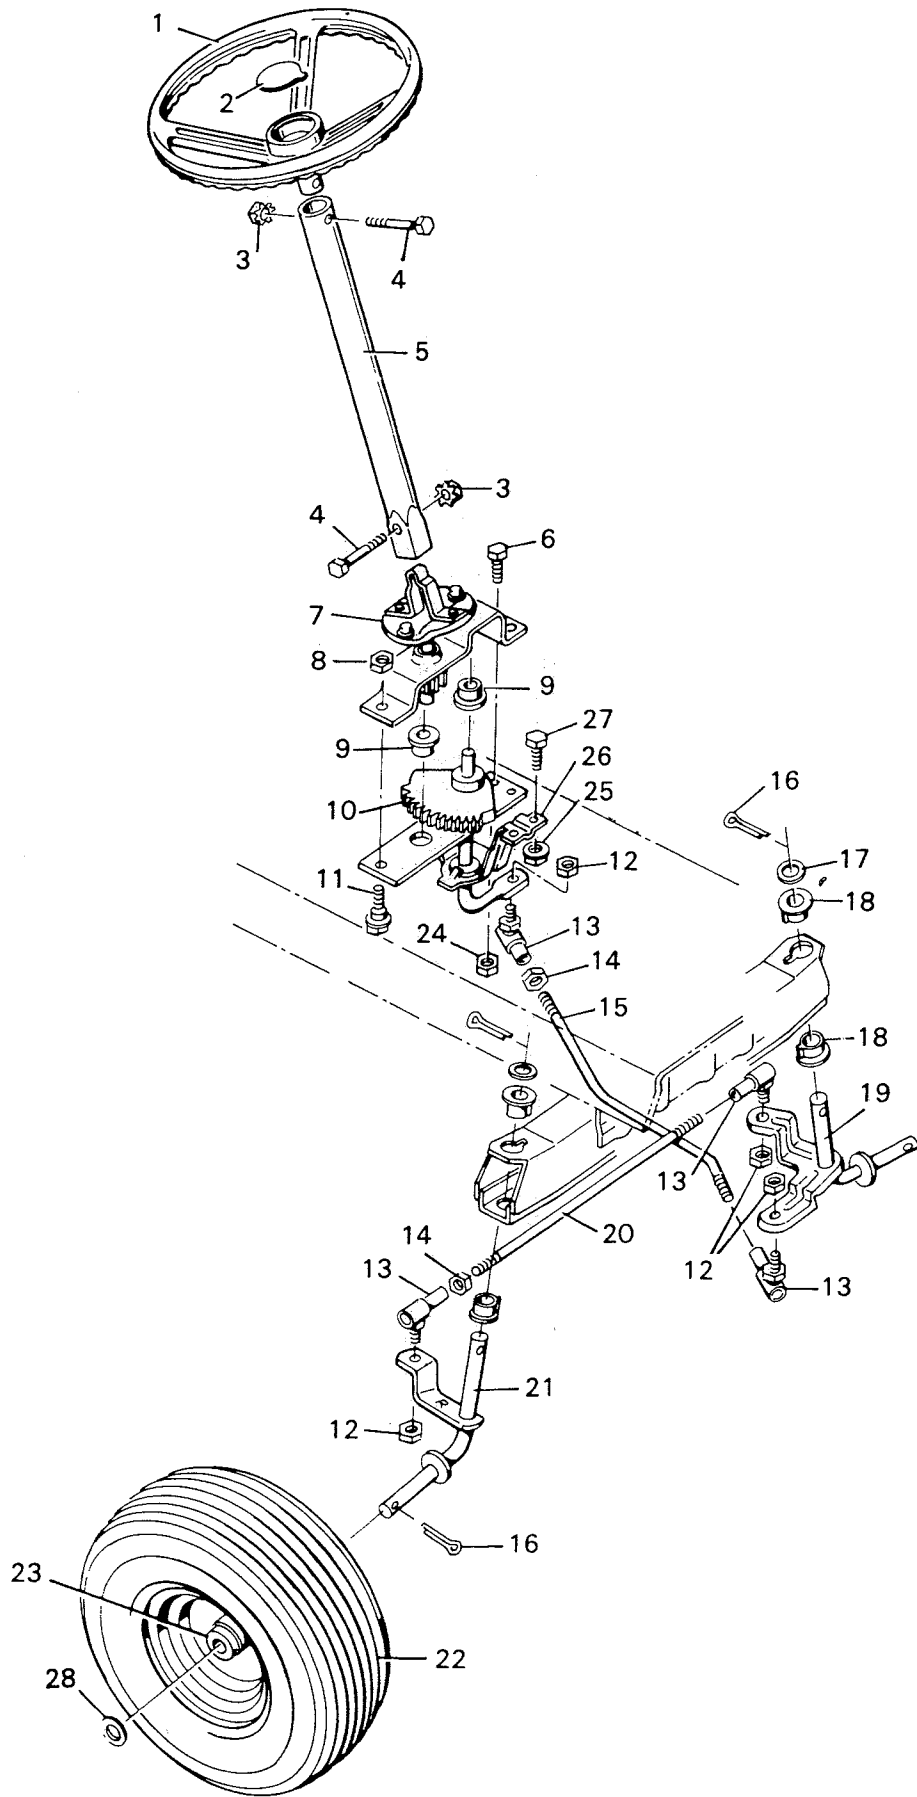


MODEL NO. 3662

Key No.	Part No.	Description
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Keys Nut 5/16"-18
4	1X75	Bolt 5/16"-18X1 3/4"
5	21486C	Steering Post
6	1X45	Screw 5/16"-18X7/8"
7	21493	Steering Gear & Coupling Ass'y.
8	15X84	Locknut 3/8"-16
9	20587	Bearing
10	21692	Steering Arm Gear & Brkt. Ass'y.
11	9X12	Shoulder Bolt
12	15X77	Locknut 3/8"-24
13	21031	Ball Joint
14	15X61	Hex Nut 3/8"-24
15	21482	Drag Link Rod
16	30X49	Cotter Pin 1 1/4"
17	17X83Z	Washer
18	23820	Spindle Bearings
19	24045	Spindle Ass'y. L.H.
20	21475	Tie Rod Ass'y.
21	24044	Spindle Ass'y. R.H.
22	403000	Rim Only
*	403001	Tire Only
*	400162	Valve Stem & Cap
23	403010	Front Wheel Bearing
24	15X43	Locknut 5/16"-18
25	15X79	Flange Nuts 5/16"-18
26	21693	Steering Bracket
27	1X45	Bolt 5/16"-18X5/8"
28	17X115	Washer
	21747	Parts Bag Assembly

* Not Illustrated

MODEL NO. 3662

DRIVE SECTION

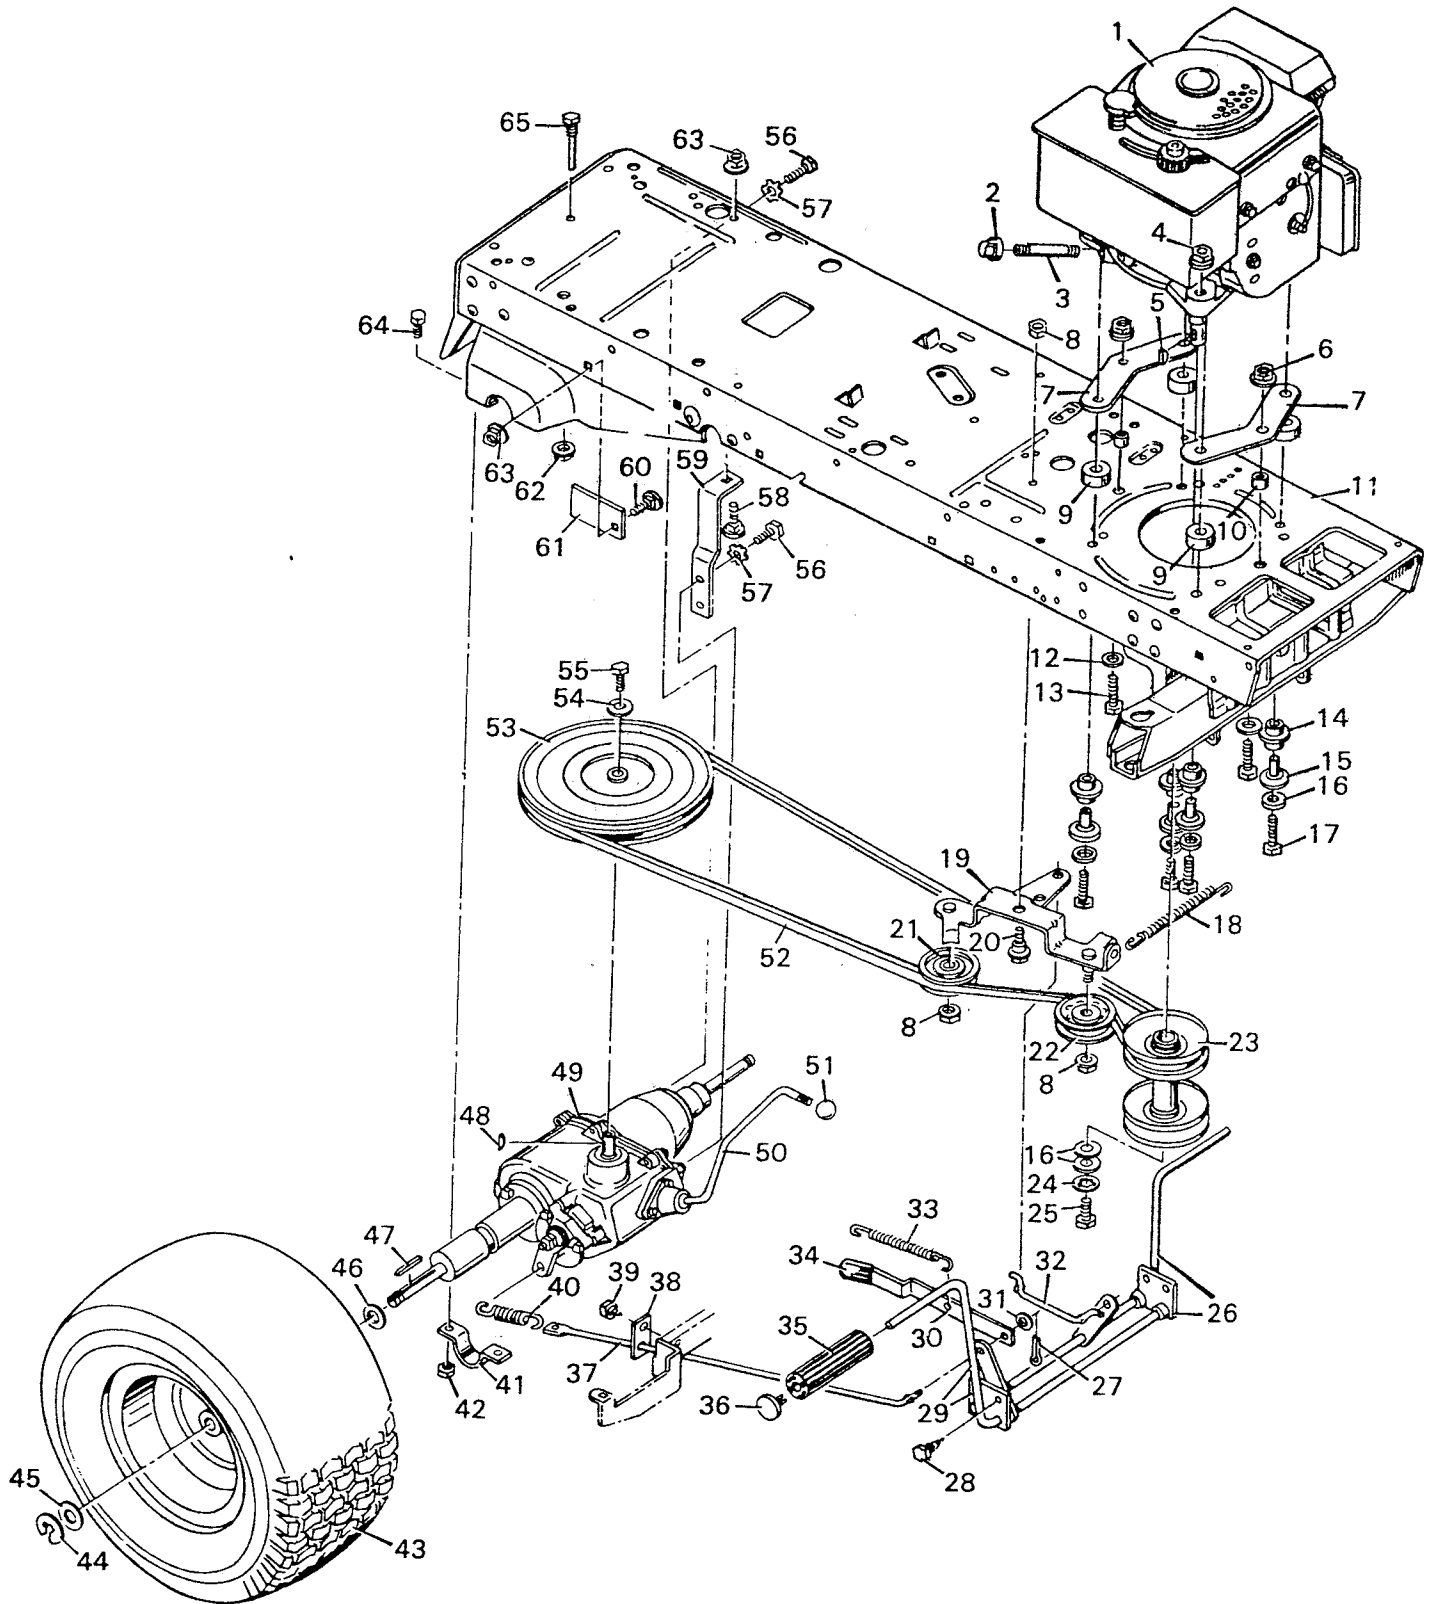

MODEL NO. 3662


Key No.	Part No.	Description	Key No.	Part No.	Description
1	-----	Engine	35	21544	Clutch & Brake Pedal
2	21651	Extension Cap	36	21535	Push-On-Cap
3	21749	Oil Extension Pipe	37	21472Z	Brake Rod
4	15X90	Flange Locknut	38	21678Z	Brake Rod Support
5	20062	Woodruff Key # 6	39	26X185	Screw
6	15X89	Flange Locknut 1/4"-20	40	21675	Tension Spring
7	23982Z	Strap	41	21473	Transaxle Clamp
8	15X84	Flange Locknut 3/8"-16	42	15X88	Flange Locknut 5/16"-18
9	24589	Rubber Load Mount	43	403004	Wheel Only
10	32212	Spacer	*	403005	Tire 18X9.50-8
11	402037	Frame Channel	*	400162	Valve Stem & Cap
12	17X37Z	Washer	44	11X3	E-Ring
13	1X94	Bolt 1/4"-20X1 1/4"	45	17X115	Washer
14	24590	Rubber Rebound Mount	46	21521	Transaxle Washer
15	24591	Spacer Tube	47	21553	Square Key
16	10851Z	Washer	48	21539	Woodruff Key # 61
17	1X107	Hex Bolt 5/16"-24X2 1/2"	49		Transaxle #
18	23724	Drive Idler Spring	50	23335E	Shift Lever Unit
19	21428	Idler Bracket & Stud Assembly	51	20844	Shift Lever Knob
20	9X12	Shoulder Bolt	52	21615	Drive Belt
21	20613	Idler Pulley	53	21447	Input Pulley
22	21409	Idler Pulley	54	18X30	Spring Lockwasher
23	24124Z	Stock Pulley Assembly	55	1X38Z	Bolt 1/4"-20X5/8"
24	19X39	Shakeproof Washer	56	1X84	Bolt 5/16"-18X1
25	1X20	Bolt 3/8"-24X1"	57	18X15	Lockwasher
26	21951	Clutch Lever Assembly	58	2X57	Carriage Bolt 3/8"-16X7/8"
27	30X20	Cotter Pin	59	21440Z	Transaxle Support Bracket
28	26X174	Screw	60	2X56	Carriage Bolt 3/8"-16X3/4"
29	21948	Brake Lever Assembly	61	21683	Belt Guide
30	21484Z	Parking Brake Arm	62	15X79	Flange Nut 5/16"-18
31	17X47Z	Washer	63	15X68	Flange Locknut 3/8"-16
32	21681	Clutch Link Rod	64	1X91	Hex Bolt 5/16"-18X3/4"
33	20682	Spring	65	20619	Guide Screw
34	21434	Grip			

NOTE: Complete illustration of Transaxle shown on page 94 & 95.

MODEL 9-3653
MODEL 9-3666
MODEL 9-3667
MODEL 9-3697

36" BLADE HOUSING

9-3662

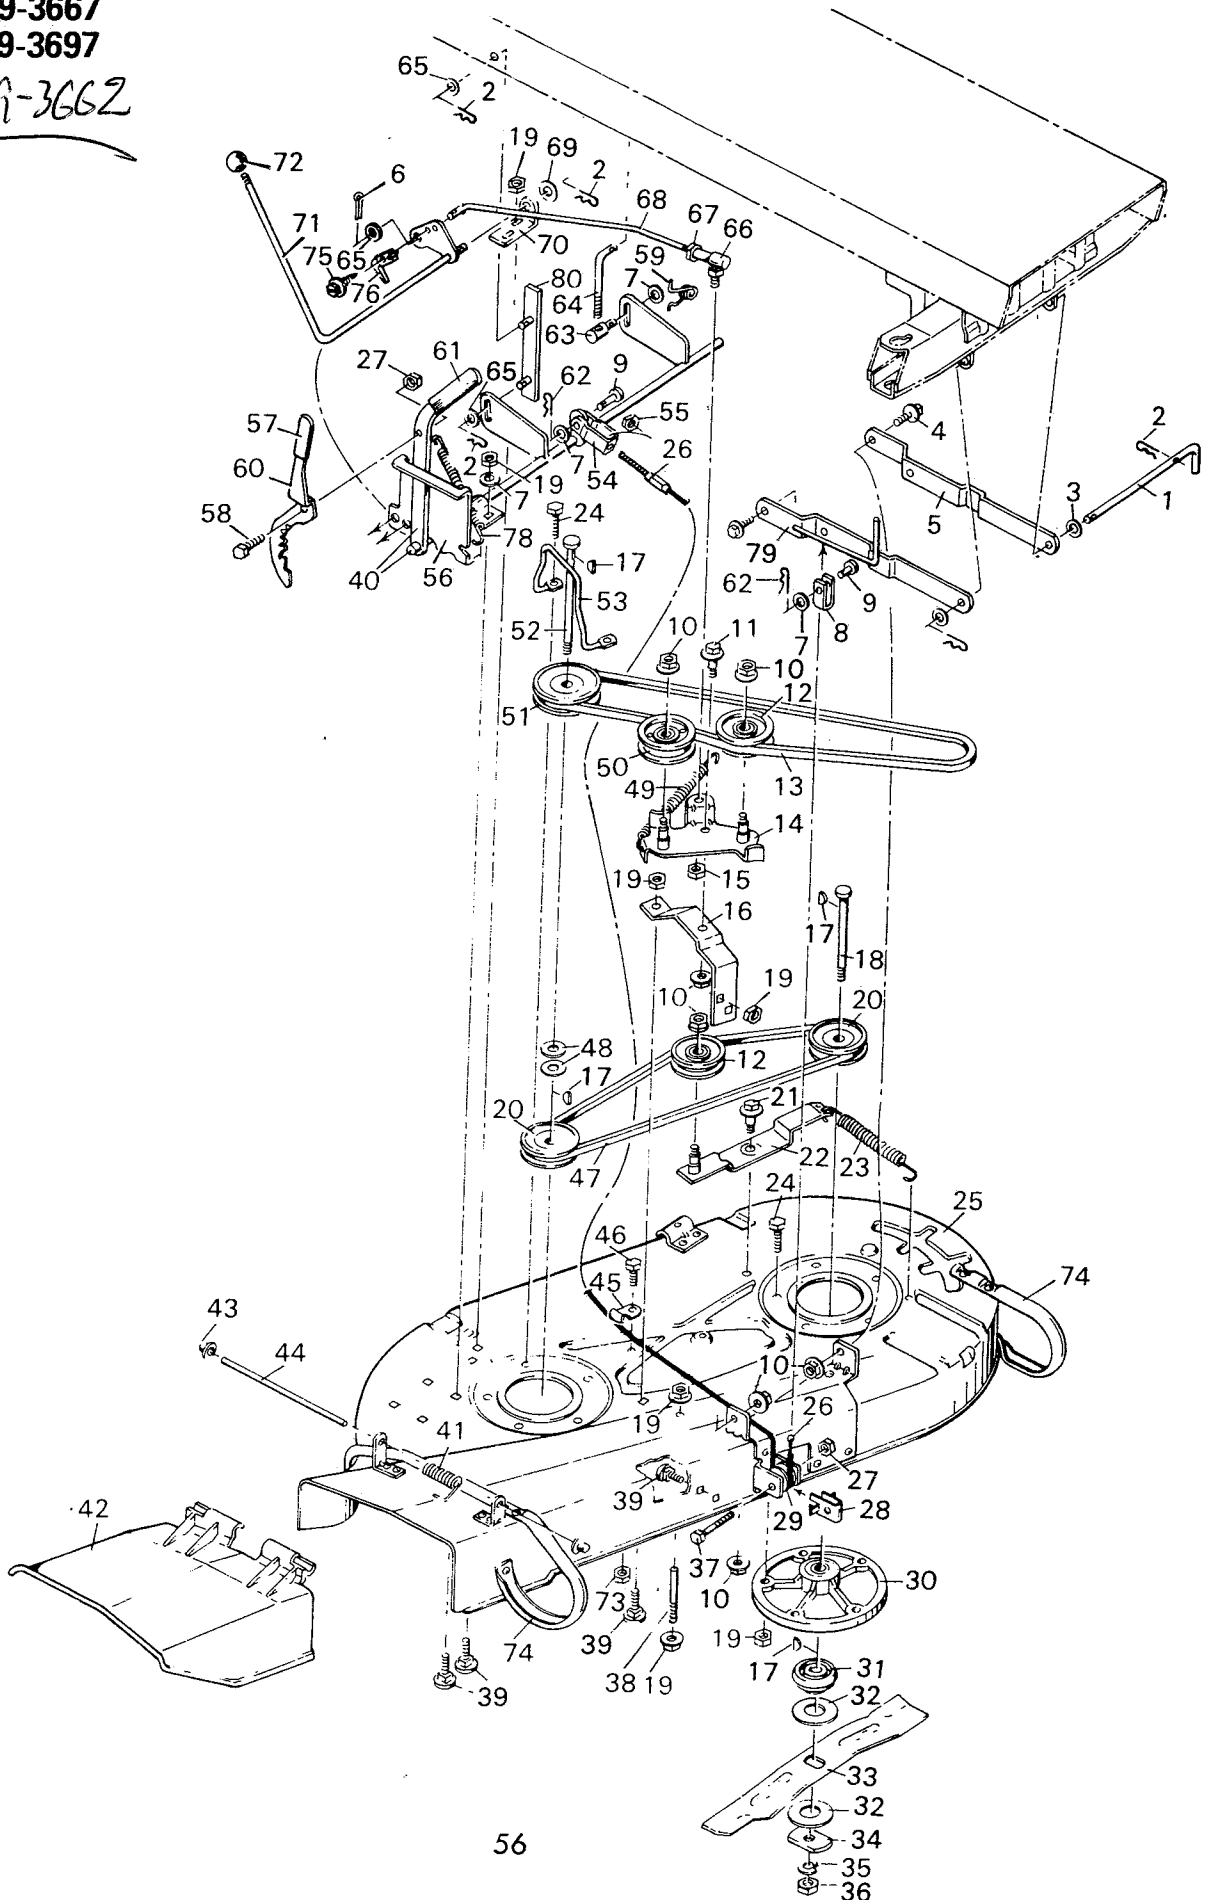


MODEL 9-3653
MODEL 9-3662
MODEL 9-3666
MODEL 9-3667
MODEL 9-3697

404036

PARTS LIST *DECK ASSY*

Key No.	Part No.	Description	Key No.	Part No.	Description
1	21912Z	Pull Pin	41	21189	Torsion Spring
2	20692	Cotter Hair Pin	42	21154	Chute Deflector
3	17X57Z	Washer	43	28X23	Push-On-Cap
4	9X14	Shoulder Bolt	44	21198Z	Deflector Rod
5	21911	Support Arm L.H.	45	21953Z	Cable Guide
6	30X20	Cotter Pins	46	1X38Z	Bolt 1/4"-20X5/8"
7	17X47Z	Washer	47	20557	Cross Drive Belt
8	24073Z	Clevis	48	17X87Z	Washers
9	29X93	Clevis Pin	49	24074	Idle Spring
10	15X84Z	Flange Locknut 3/8"-16	50	21409	Idler Pulley
11	9X12	Shoulder Bolt 3/8"-16X7/8"	51	21096	Jackshaft Pulley
12	20613	Idler Pulley	52	21024	Jackshaft - Long
13	21649	Blade Drive Belt	53	21504Z	Belt Guide
14	21503	Blade Drive Idler Assembly	54	21915Z	Adjusting Clevis
15	15X77	Locknut 3/8"-24	55	15X2	Hex Nut 5/16"-18
16	21496	Idler Support Bracket	56	21500	Lifter Bracket
17	20062	Woodruff Key # 6	57	20476	Lifter Latch Grip
18	20616	Jackshaft - Short	58	6X46	Shoulder Screw
19	15X88	Flange Locknut 5/16"-18	59	23139	Torsion Spring
20	21022	Jackshaft Pulley	60	21591Z	Lifter Latch
21	9X15	Shoulder Bolt	61	21249	Lifter Grip
22	21139Z	Twin Blade Idler Bracket Assembly	62	20692	Cotter Hair Pin
23	20682	Cross Drive Idler Spring	63	21920	Adjusting Nut
24	1X84Z	Bolt 5/16"-18X11"	64	23704Z	Adjusting Rod
25	21907	Blade Housing	65	17X53Z	Washer
26	21913	Lifter Cable	66	21031	Ball Joint
27	15X67	Hex Nut 1/4"-20	67	15X61	Hex Nut 3/8"-24
28	21917Z	Cable Guide	68	21517	Link Rod
29	21916	Nylon Pulley	69	17X67Z	Washer
30	20551	Jackshaft Housing Assembly	70	20934	Scissors Bracket R.H.
31	20617	Blade Adapter	71	23915C	Blade Drive Lever Assembly
32	21673Z	Washer	72	20739	Lever Knob
33	20930	Blade	73	15X66	Hex Nut 1/4"-20
34	20663Z	Blade Washer	74	404015	Skid Set
35	18X27	Lockwasher	75	26X211	Screw # 10X1" Type AB
36	15X72	Hex Nut 1/2"-20	76	24527	Limit Switch
37	1X90	Bolt 1/4"-20X1 3/4"	78	20682	Lifter Latch Spring
38	23169	Belt Guide	79	23256	Support Arm Assembly R.H.
39	2X53	Carriage Bolt	80	23705Z	Hanger Bracket Assembly
40	21906	Lifter Assembly			

MODEL 9-3662

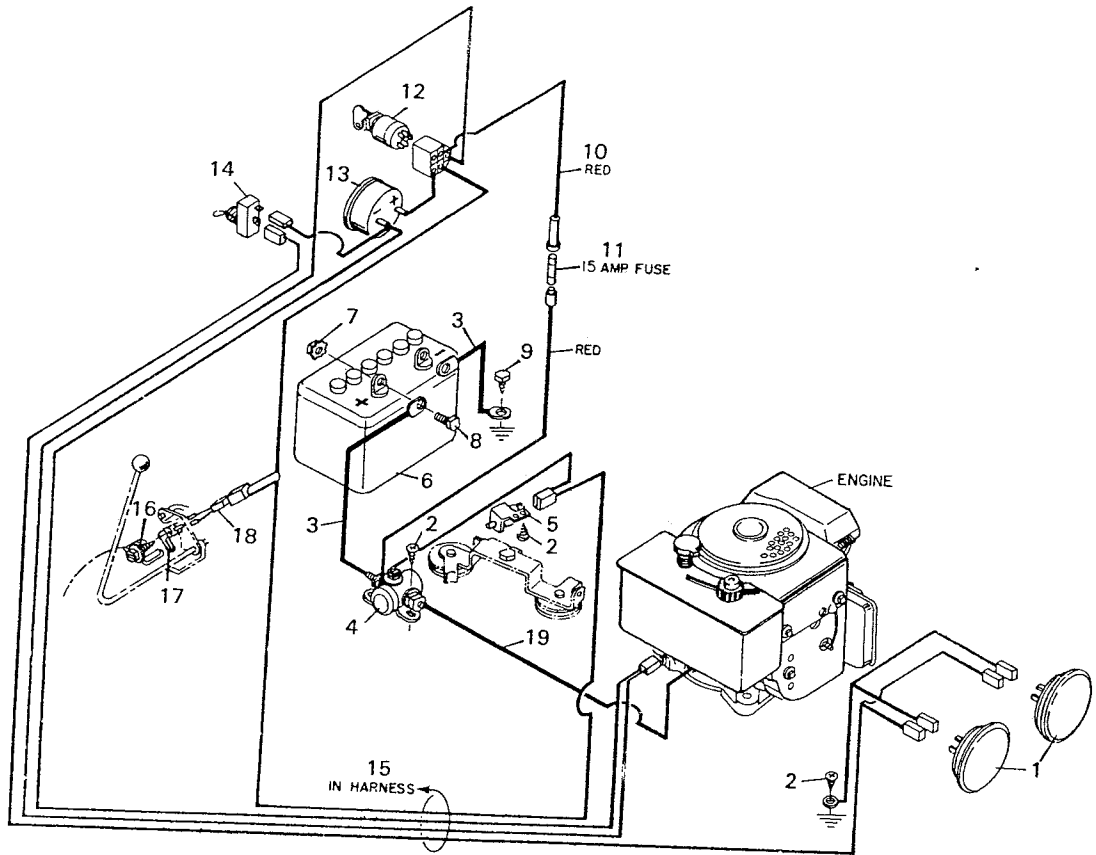

Key No.	Part No.	Description
1	20837	Seal Beam Light
2	26X185	Screw
3	21263	Battery Cable
4	21261	Solenoid
5	21549	Limit Switch - Clutch
6	21075	Battery
*	21079	Electrolyte - (Battery Acid)
7	15X66	Keps Nut 1/4''-20
8	1X38Z	Bolt 1/4''-20X5/8''
9	26X174	Screw
10	23834	Fuse Wire
11	23752	Fuse
12	21064PA	Switch & Key
13	21057PA	Ammeter Assembly
14	20899PA	Light Switch
15	23788	Wiring Harness
16	26X211	Screw # 10X1'' Type AB
17	24527	Limit Switch - Blade Housing
18	23984	Jumper Wire
*	21980	Wire Clamp
19	23785	Battery Cable
	20729	Key Only

* Not Illustrated.