


MODEL 2-25501
MODEL 2-25502

STEERING PARTS
DRAWING

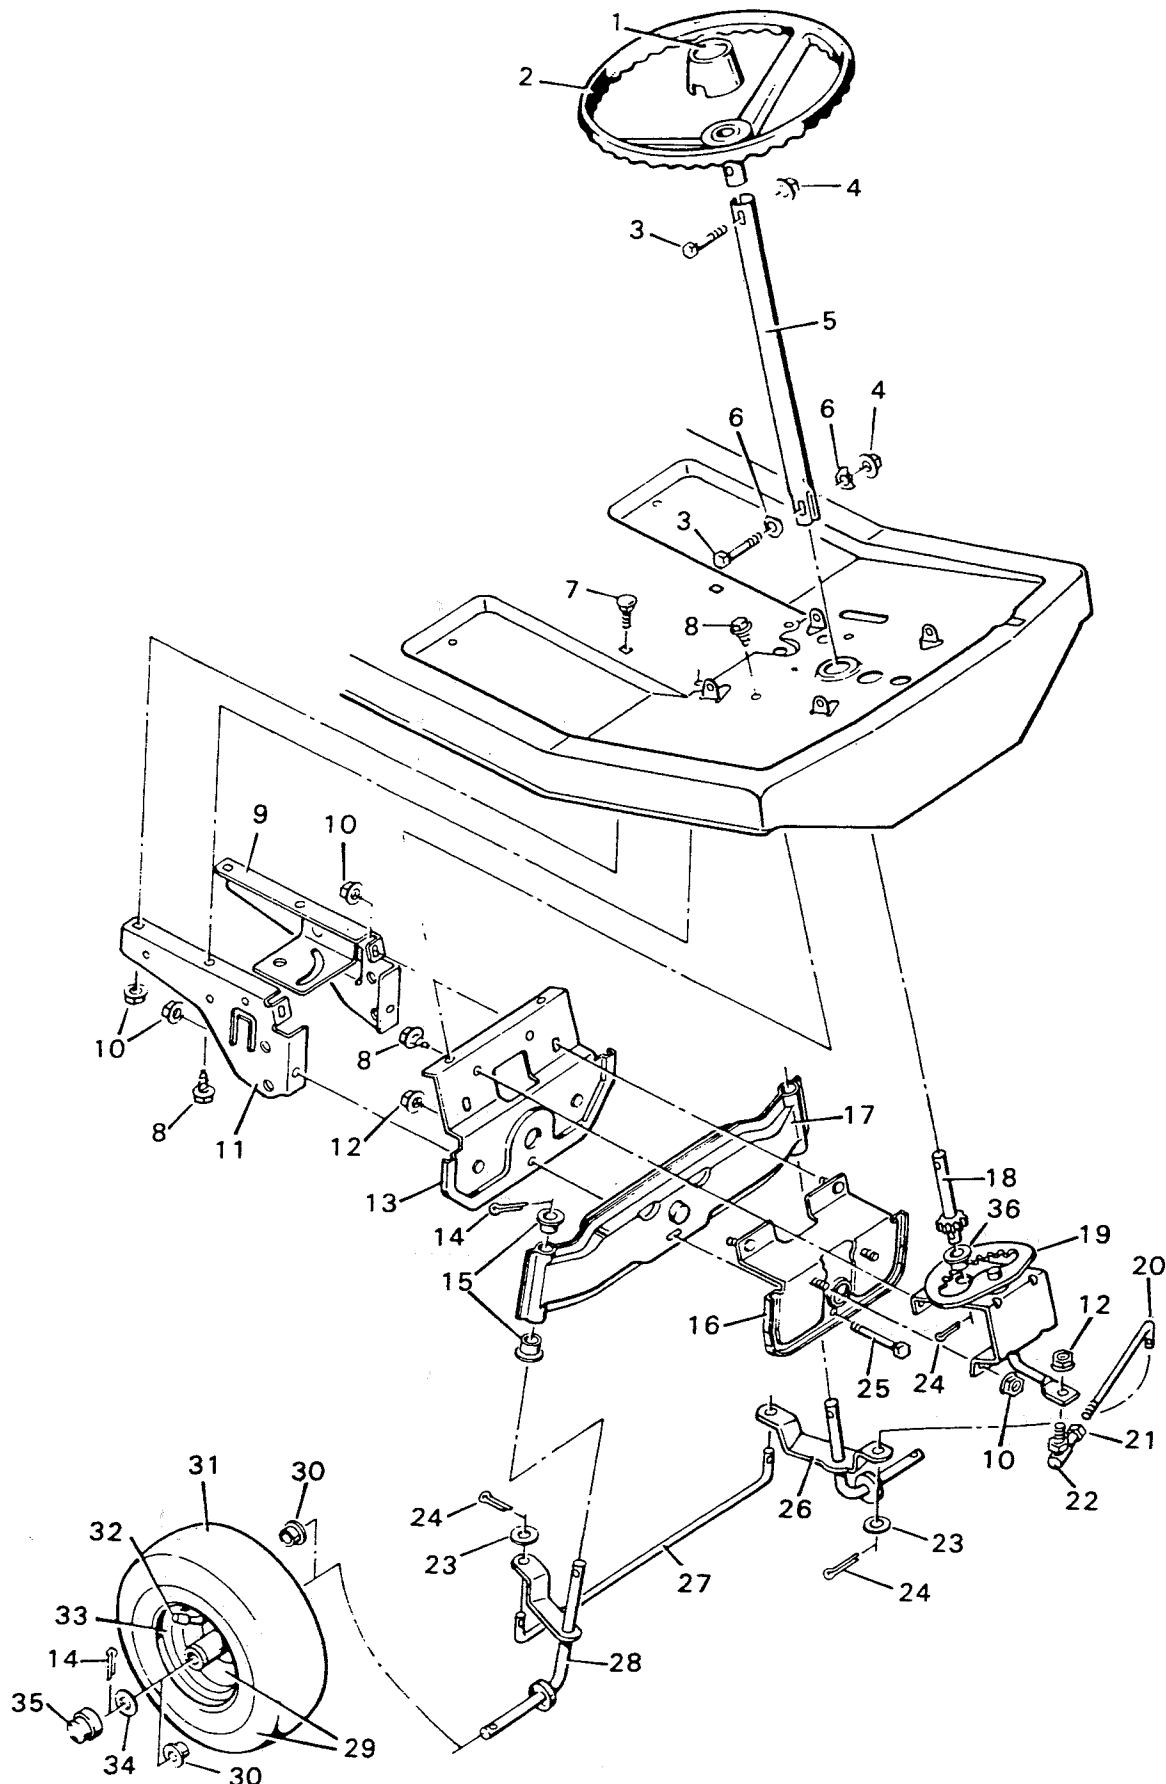

MODEL 2-25501
MODEL 2-25502


STEERING PARTS LIST

KEY NO.	DESCRIPTION	MODEL 2-25501	MODEL 2-25502
1	Cap-Steering Wheel	23573	23573
2	Steering Wheel	90126	90126
3	Hex Bolt 5/16"-18X1 1/2"	1X102	1X102
4	Flange Locknut 5/16"-13	15X88	15X88
5	Steering Post	90130C	90130C
6	Formed Cup Washer	17X132	17X132
7	Carriage Bolt 5/16"-18X5/8"	2X53	2X53
8	Tapping Screw	26X49	26X49
9	Left Suspension Plate	55116	55116
10	Flange Hex Nut	15X79	15X79
11	Right Suspension Plate	55118	55118
12	Flange Locknut 3/8"-24	15X87	15X87
13	Front Axle Support Assembly	55056	55056
14	Cotter Pin	30X49	30X49
15	Spindle Bearing	55003	55003
16	Front Axle Hanger Assembly	55058	55058
17	Front Axle Assembly	55024	55024
18	Pinion Gear	55001	55001
19	Sector Assembly	55041	55041
20	Drag Link	55046	55046
21	Hex Nut 3/8"-24	15X61	15X61
22	Steering Ball Joint	21031	21031
23	Washer	17X53	17X53
24	Cotter Pin	30X20	30X20
25	Hex Bolt 3/8"-24X 2-3/8"	1X69	1X69
26	Left Spindle Assembly	55039	55039
27	Tie Rod	55026	55026
28	Right Spindle Assembly	55038	55038
29	Wheel & Tire Assembly	24624	24395
30	Bearing*	24615	24368
31	Tire Only*	----	24394
32	Valve Stem & Cap*	----	24373
33	Wheel Only*	----	24364E
34	Washer	17X100Z	24583
35	Hub Cap	----	24582
36	Bearing	55168	55168
--	Parts Bag Assembly	55147	55147
--	Owners Manual	F-5929	F-5929
--	Parts List	F-5632	F-5633

*NOTE: These key numbers are included with key no. 29. When ordering replacement parts specify the brand name of the tire to insure that tread patterns on tire match.

**MODEL 2-25501
MODEL 2-25502**

**MOTION DRIVE PARTS
DRAWING**

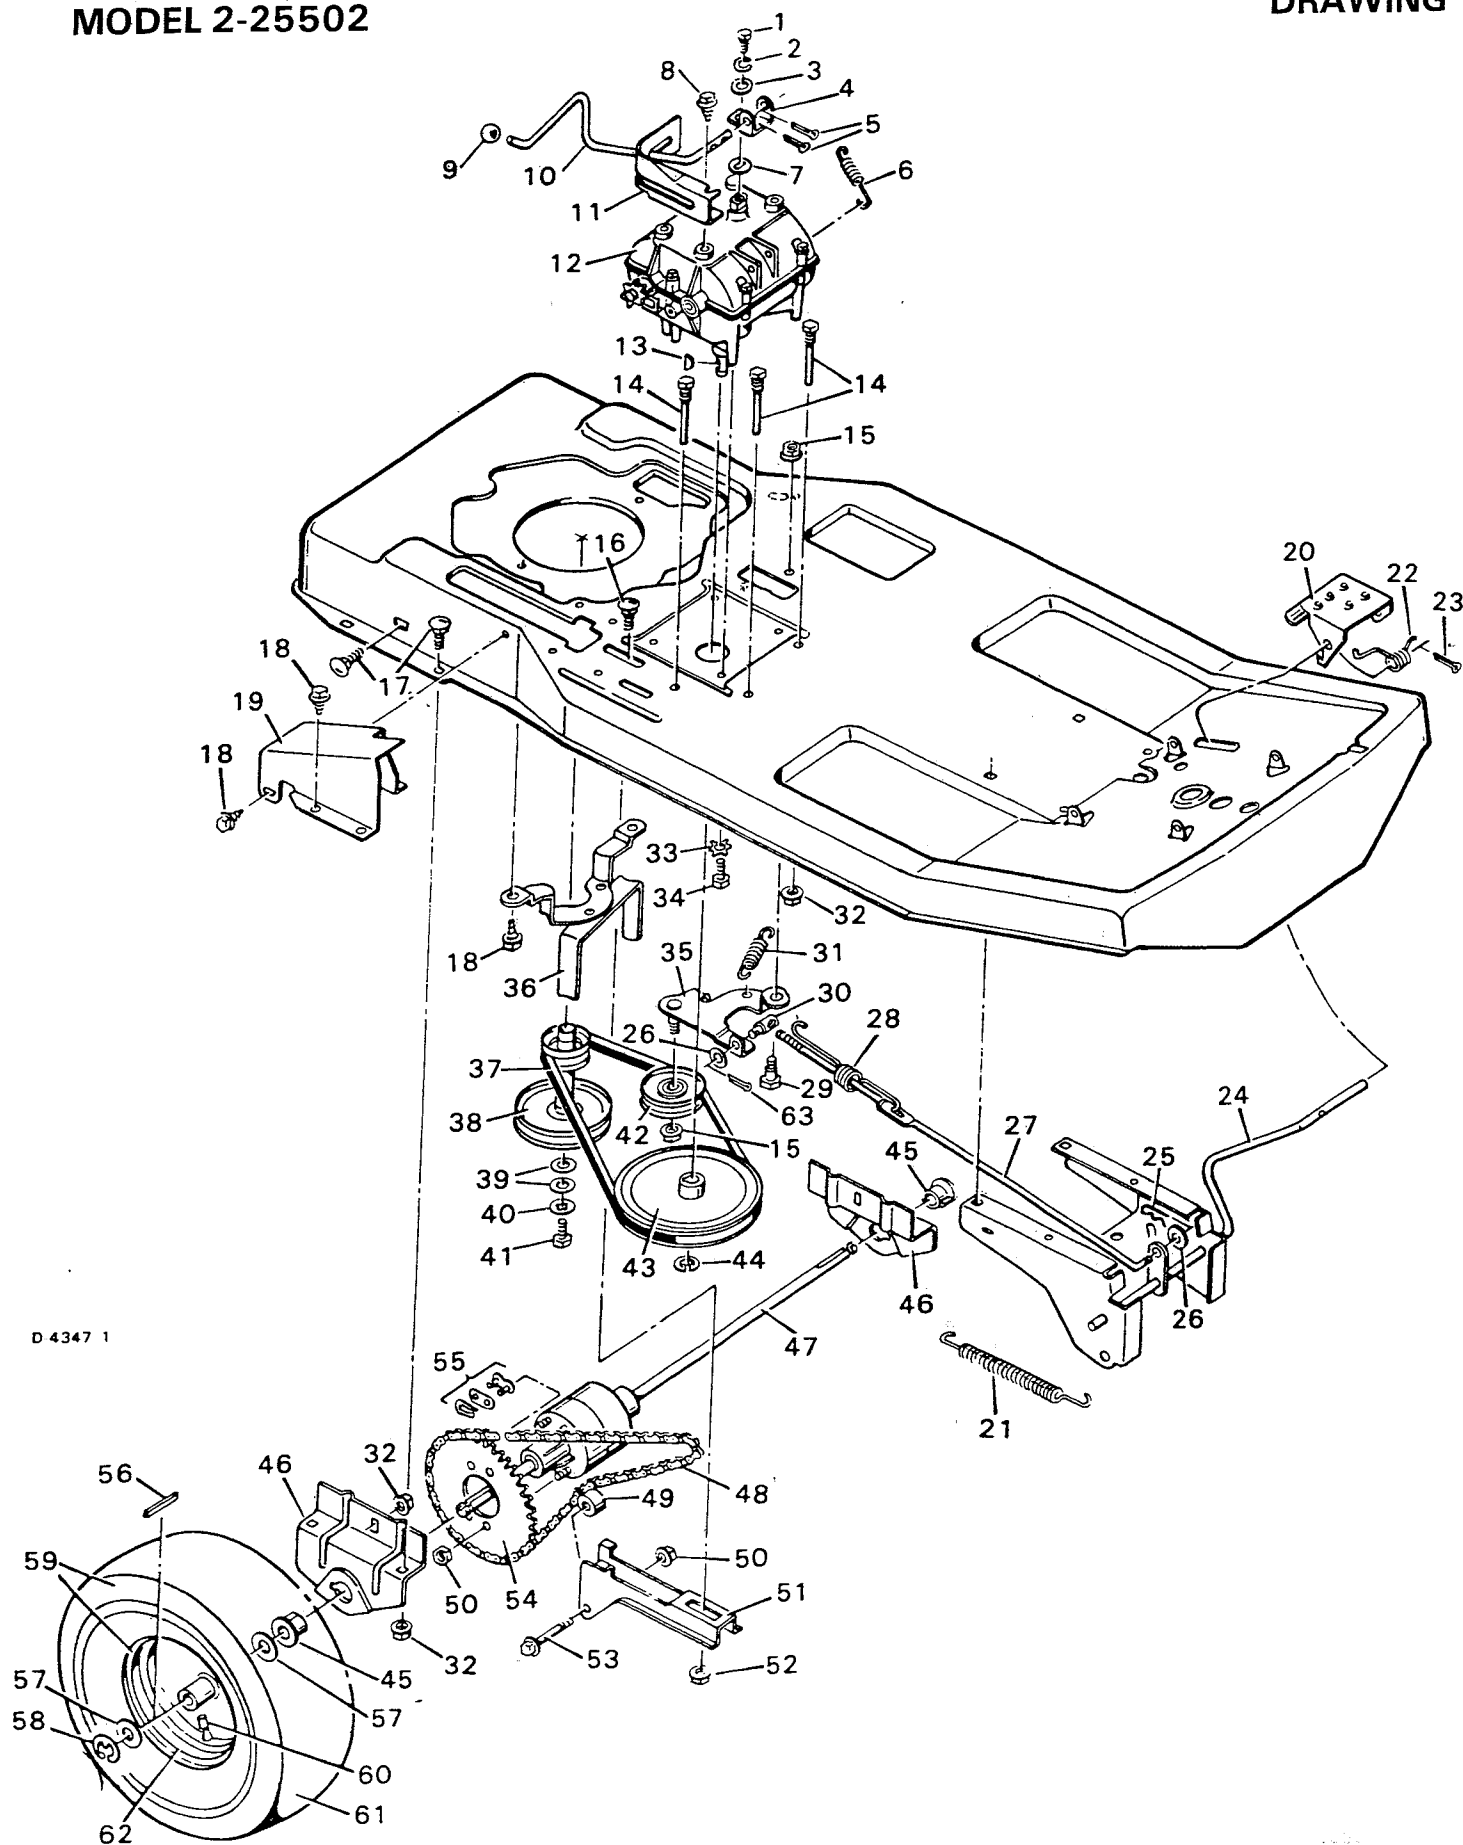

D 4347 1

F-5992


KEY NO.	DESCRIPTION	MODEL 2-25501	MODEL 2-25502	KEY NO.	DESCRIPTION	MODEL 2-25501	MODEL 2-25502
1	Hex Bolt 1/4"-20X5/8"	1X82	1X82	33	Shakeproof Washer	19X6	19X6
2	Spring Lockwasher	18X30	18X30	34	Hex Bolt 5/16"-18X5/8"	1X45	1X45
3	Washer	17X32Z	17X32Z	35	Idler Arm Assembly	55067Z	55067Z
4	Transmission Yoke	24834Z	24834Z	36	Belt Guide Assembly	55053Z	55053Z
5	Cotter Pin	30X20	30X20	37	Traction Drive Belt	37X38	37X38
6	Extension Spring-Brake Return	165X28	165X28	38	Stack Pulley Assembly	55112Z	55112Z
7	Washer	17X134	17X134	39	Washer	10851Z	10851Z
8	Tapping Screw	26X207	26X207	40	Shakeproof Washer	19X39	19X39
9	Knob, Shift Lever	24844	24844	41	Hex Bolt 3/8"-24X1"	1X20	1X20
10	Shift Lever	55120Z	55121Z	42	Idler Pulley	20613	20613
11	Transmission Gate	24833Z	24833Z	43	Pulley	55101	55101
12	Transmission Peerless	55148PA	24832PA	44	Retainer Ring	11X7	11X7
	7560 (25501) Peerless			45	Axle Bearing	90225	90225
	7080 (25502)			46	Bracket, Rear Axle	55063	55064
13	Woodruff Key #9	20697	20697	47	Differential-Peerless 100 †	55000	55000
14	Guide Screw	20619	20619	48	Roller Chain	55114	55114
15	Flange Locknut 3/8"-16	15X84	15X84	49	Roller	90176	90176
16	Carriage Bolt 3/8"-16X3/4"	2X56	2X56	50	Flange Locknut 5/16"-18	15X88	15X88
17	Carriage Bolt 5/16"-18X5/8"	2X53	2X53	51	Chain Adjusting Bracket	55194	55194
18	Tapping Screw	26X49	26X49	52	Flange Hex Nut 3/8"-16	15X68	15X68
19	Chain Gate	55030	55030	53	Shoulder Bolt 5/16"-18X1.72"	9X22	9X22
20	Pedal-Brake/Clutch	55027	55027				
21	Extension Spring-Pedal	165X2	165X2	54	Sprocket-40 Tooth (25501)	55066	55028
22	Torsional Spring-Pedal	166X18	166X18		Sprocket-45 Tooth (25502)		
23	Cotter Pin	30X49	30X49	55	Connecting Link	20730	20730
24	Lever Assembly-Brake/Clutch	55050	55050	56	Square Key 3/16"	21553	21553
25	Hair Pin	20692	20692	57	Washer	21521	21521
26	Washer	17X47	17X47	58	E-Ring	11X3	11X3
27	Rod, Brake/Clutch	55099Z	55099Z	59	Wheel & Tire Assembly	24387	24389
28	Extension Spring-Brake Unti	165X42	165X42	60	Valve Stem & Cap*	24373	24373
29	Shoulder Bolt 3/8"-16X7/8"	9X15Z	9X15Z	61	Tire Only*	24379	24380
30	Adjusting Nut	55002	55002	62	Wheel Only*	24390E	24390E
31	Extension Spring-Clutch Unit	165X39	165X39				
32	Flange Hex Nut 5/16"-18	15X79	15X79				

† NOTE: Complete illustration of transmission shown on page 94, 95 & 96.
Complete illustration of differential shown on page 97.

*NOTE: These key numbers are included with key no. 59. When ordering replacement parts specify the brand name of the tire to insure that tread patterns on tire match.

MODEL 2-25501
MODEL 2-25502

BODY PARTS DRAWING

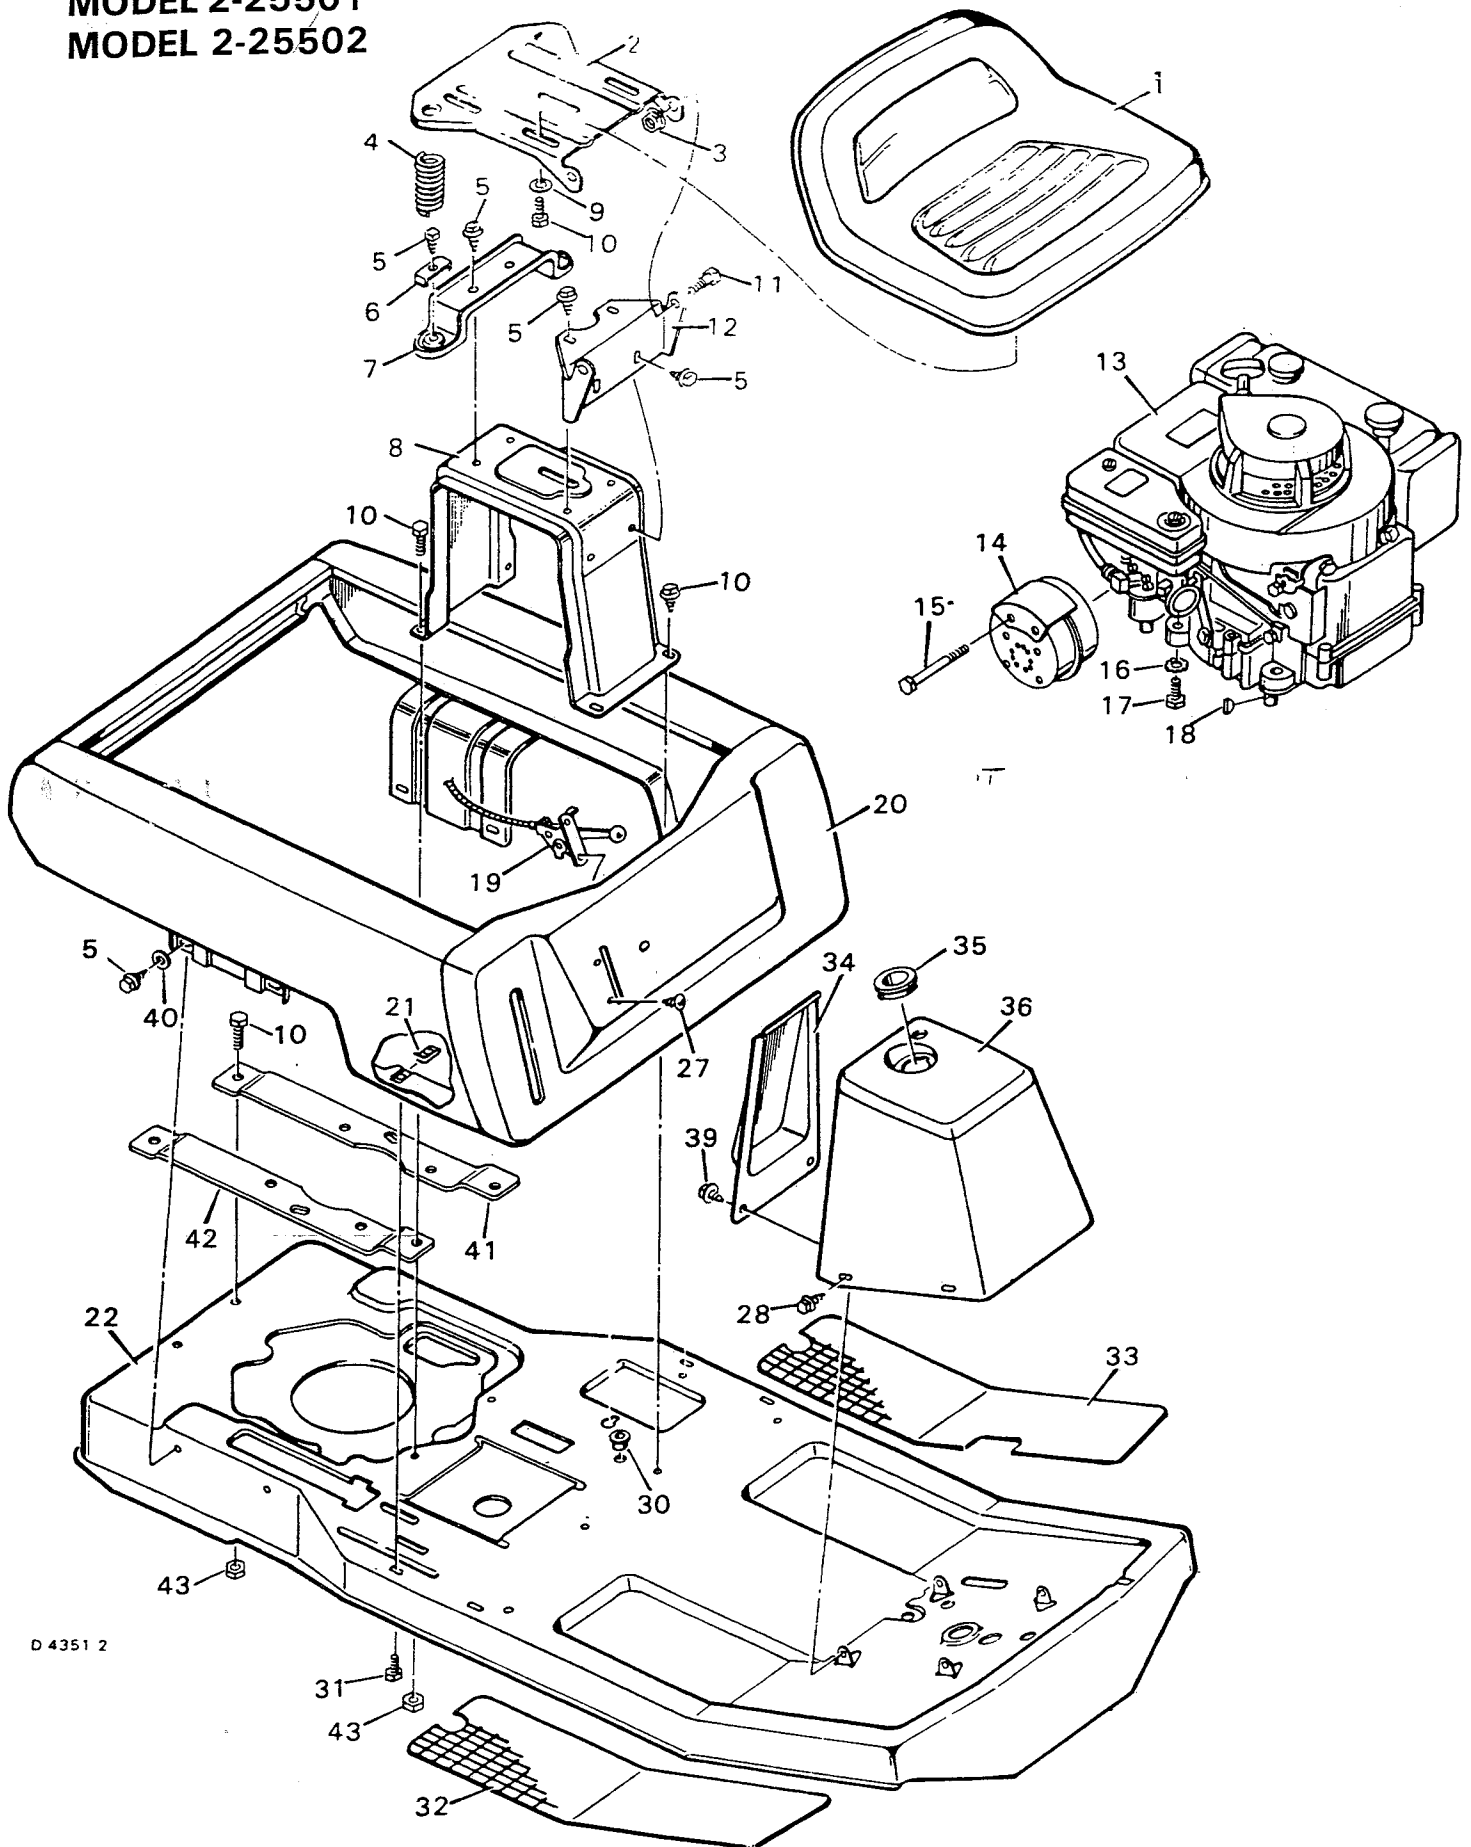

D 4351 2

F-5992

MODEL 2-25501

MODEL 2-25502


BODY PARTS LIST

KEY NO.	DESCRIPTION	2-25501 PART NO.	2-25502 PART NO.
1	Seat	90405	90367
2	Seat Mount	55098	55098
3	Flange Locknut 3/8"-16	15X84	15X84
4	Seat Spring	164X13	164X13
5	Screw	26X49	26X49
6	Spring Retainer	90014	90014
7	Spring Hanger	55062	55062
8	Seat Support	55060	55060
9	Washer	17X47	17X47
10	Hex Bolt 5/16"-18X5/8"	1X45	1X45
11	Shoulder Bolt 3/8"-16X7/8"	9X15Z	9X15Z
12	Seat Hinge	55061	55061
13	Engine	†	†
14	Muffler	----	90331PA
15	Hex Bolt 1/4"-20X3-1/4"	----	1X117
16	Shakeproof Washer	19X8	19X8
17	Bolt-Engine Mount	20103	20103
18	Woodruff Key No. 6	20062	20062
19	Control & Cable	55122PA	90095
20	Rear Body Assembly	55007	55008
21	Tinnerman Nut 1/4"-20	28X18	28X18
22	Frame Channel	55175	55111
27	Tapping Screw	26X159	26X159
28	Tapping Screw	26X214	26X214
30	Bushing	23857	23857
31	Hex Bolt 1/4"-20X1/2"	1X100	1X100
32	Mat-Running Board (R.H.)	55102	55102
33	Mat-Running Board (L.H.)	55103	55103
34	Console Plate	55023	55023
35	Bearing - Steering Post	55004	55004
36	Console Assembly	55018	55018
39	Machine Screw 1/4"-20X1/2"	4X24	4X24
40	Washer	19X6	19X6
41	Engine Strap (L.H.)	55171	----
42	Engine Strap (R.H.)	55170	----
43	Flanged Locknut 5/16-18	15X88	----

† NOTE: Your Engine Model, Type & Code Number is stamped on the Blower Housing. All parts pertaining to the engine are available from the Briggs and Stratton Parts and Service Station listed in the yellow pages of the classified Telephone Directory.

MODEL 2-25501
MODEL 2-25502

BLADE HOUSING — TOP
HALF PARTS DRAWING

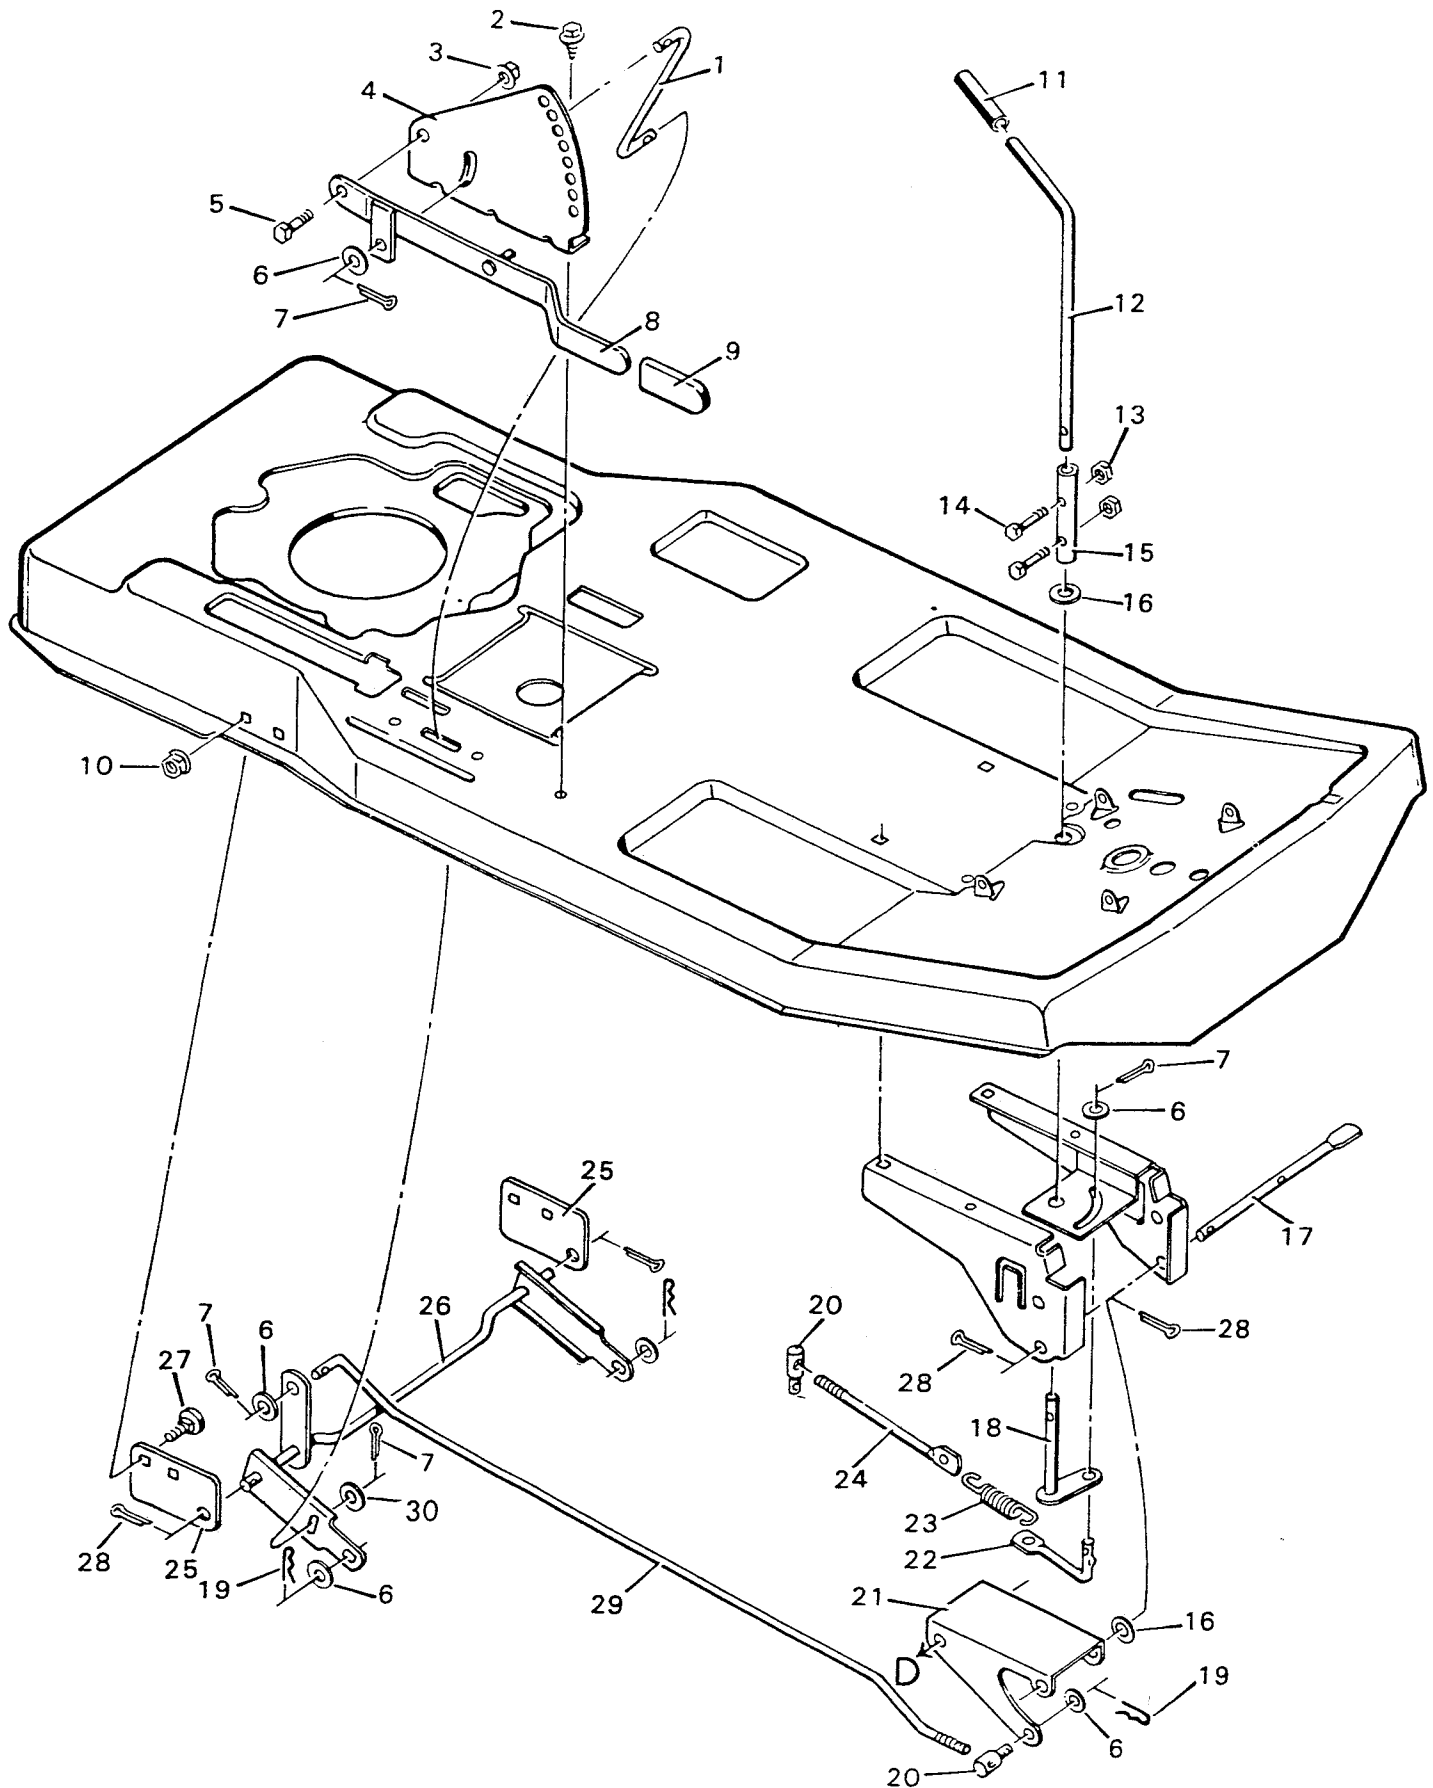


**MODEL 2-25501
MODEL 2-25502**

KEY NO.	DESCRIPTION	PART NO.
1	Lifter Rod	55133
2	Tapping Screw	26X49
3	Flange Locknut 3/8"-16	15X84
4	Index Plate	55143
5	Shoulder Bolt 3/8"-16	9X9
6	Washer	17X53
7	Cotter Pin	30X20
8	Lifter Lever Assembly	55129
9	Grip-Lifter Lever	21249
10	Flange Hex Nut 5/16"-18	15X79
11	Grip-Blade Lever	20476
12	Blade Lever	55089Z
13	Flange Locknut 1/4"-20	15X89
14	Hex Bolt 1/4"-20X1"	1X76
15	Tube, Blade Lever	55088Z
16	Washer	17X67Z
17	Suspension Pin	55141Z
18	Rod & Arm Assembly	55085
19	Hair Pin	20692
20	Adjusting Nut	21920
21	Bracket, Front Suspension	55139
22	Front Link	55090
23	Extension Spring-Blade Clutch	165X7
24	Blade Drive Link	55091Z
25	Lifter Mounting Plate	55134
26	Suspension Rod Assembly	55125
27	Carriage Bolt 5/16"-18X5/8"	2X53
28	Cotter Pin	30X49
29	Linkage Rod	55140Z
30	Washer	17X57Z

**MODEL 2-25501
MODEL 2-25502**

**BLADE HOUSING - BOTTOM
HALF PARTS DRAWING**

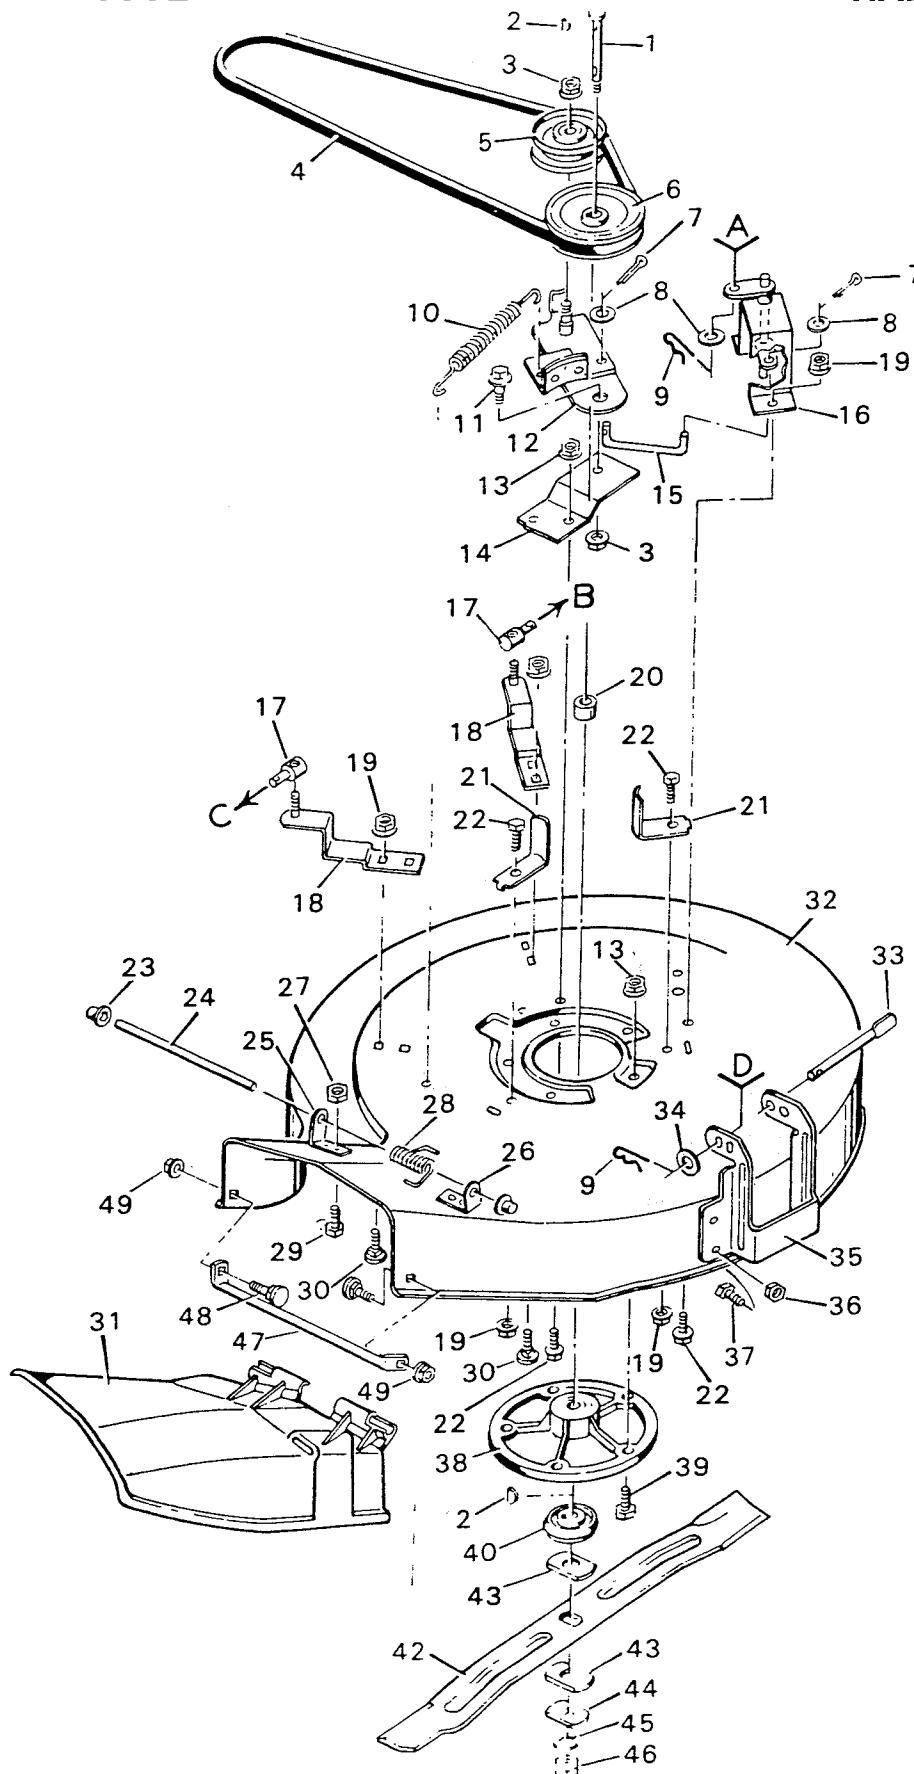


MODEL 2-25501**MODEL 2-25502****BLADE HOUSING — BOTTOM****HALF PARTS LIST**

KEY NO.	DESCRIPTION	PART NO.
1	Jackshaft	24578
2	Woodruff Key #6	20062
3	Flange Locknut 3/8"-16	15X84
4	Belt-Blade Drive	37X36
5	Idler Pulley	20613
6	Pulley	23538
7	Cotter Pin	30X20
8	Washer	17X53
9	Hair Pin	20692
10	Extension Spring-Blade Brake	165X24
11	Shoulder Bolt 3/8"-16X7/8"	9X15Z
12	Blade Idler Assembly	55077
13	Flange Locknut 5/16"-18	15X88
14	Idler Support Bracket	55095
15	Idler Link	55094Z
16	Pivot Rod & Bracket Assembly	55071
17	Adjusting Nut	21920
18	Rear Bracket & Bolt Assembly	55135
19	Flange Hex Nut 5/16" - 18	15X79
20	Jackshaft Spacer	24533
21	Belt Guide	55096Z
22	Hex Bolt 5/16"-18X5/8"	1X45
23	Push On Cap	28X23
24	Deflector Rod	21197Z
25	Rear Deflector Bracket	21181
26	Front Deflector Bracket	21186
27	Hex Nut #10-24	15X51
28	Torsional Spring	166X4
29	Machine Screw #10-24X5/8"	4X21
30	Carriage Bolt 5/16"-18X5/8"	2X53
31	Chute Deflector	21151
32	Blade Housing Assembly	55106
33	Pull Pin	55142Z
34	Washer	17X67Z
35	Front Bracket	55144
36	Keps Nut 1/4"-20	15X66
37	Machine Screw 1/4"-20X1/2"	4X25
38	Jackshaft Housing Assembly	24384
39	Hex Bolt 5/16"-18X1"	1X84
40	Blade Adapter	20617
42	Blade-25"	20083
43	Washer	21673Z
44	Blade Washer	20663Z
45	Spring Lockwasher	18X27
46	Hex Nut-Blade Mount	15X72
47	Horn Guard	20581
48	Carriage Bolt 1/4"-20X9/16"	2X39
49	Flange Locknut 1/4"-20	15X89

**MODEL 2-25501
2-25502**

WIRING DIAGRAM

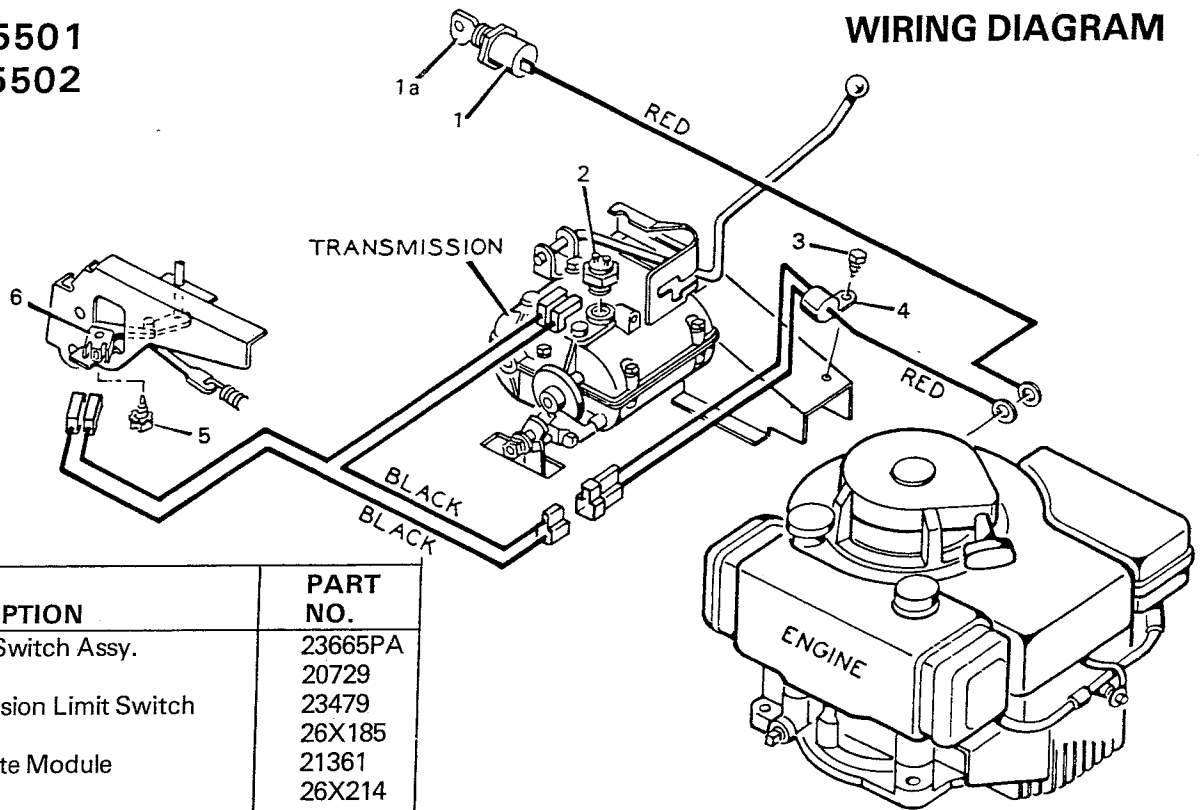

KEY NO.	DESCRIPTION	PART NO.
1	Ignition Switch Assy.	23665PA
1a	Key Only	20729
2	Transmission Limit Switch	23479
3	Screw	26X185
4	Solid State Module	21361
5	Screw	26X214
6	Limit Switch	24527
*	Wiring Harness	55104
*	Wire Clamp	21980
*	Owner's Manual	F-5929