


BODY PARTS DRAWING

MODEL 4-25501

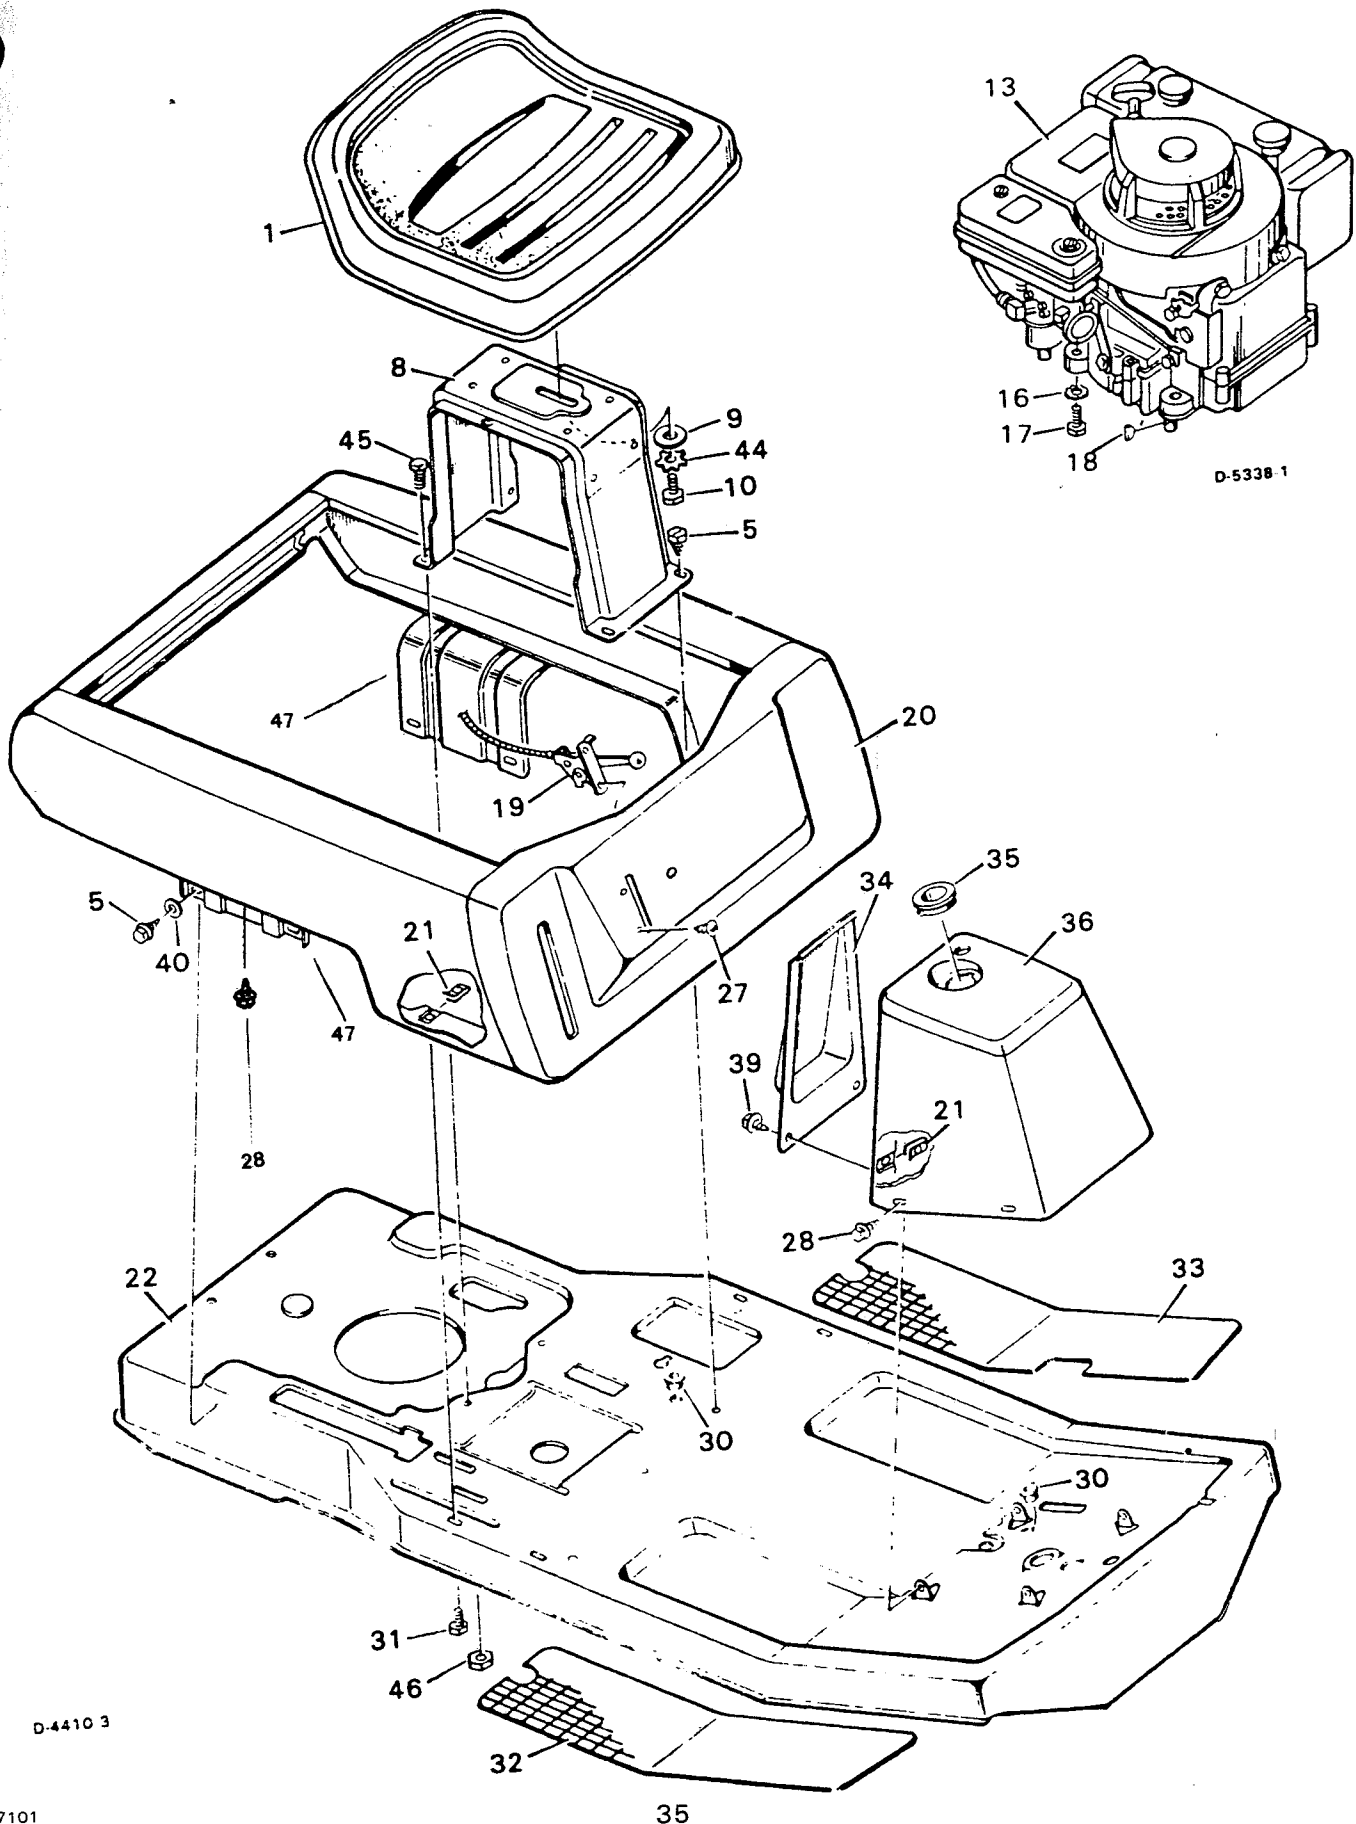


KEY NO.	DESCRIPTION	PART NO.
1	Seat	23568
5	Screw	26X49
8	Seat Support	55060
9	Washer	20663Z
10	Hex Bolt 1/2"-13X3/4"	1X88
13	Engine	†
16	Shakeproof Washer	19X8
17	Bolt - Engine Mount	20103
18	Woodruff Key No. 6	20062
19	Control & Cable	55122PA
20	Rear Body Assembly	55007
21	Tinnerman Nut 1/4"-20	28X18
22	Frame Channel	55192
27	Tapping Screw	26X159
28	Tapping Screw	26X214
30	Bushing	55176
31	Hex Bolt 1/4"-20X5/8"	6X74
32	Mat-Running Board (R.H.)	55102
33	Mat-Running Board (L.H.)	55103
34	Console Plate	55023
35	Bearing - Steering Post	55004
36	Console Assembly	55018
39	Machine Screw 1/4"-20X1/2"	4X24
40	Washer	19X6
44	Shakeproof Washer	19X36
45	Bolt - Hex 5/16-18X5/8	1X45
46	Hex Nut	15X88
47	Body Support Brkt.	550162
	Parts List	F-6812
	Instruction Book	F-6811
	Parts Bag	55309

†NOTE: Your Engine Model, Type & Code Number is stamped on the Blower Housing. All parts pertaining to the engine are available from the Briggs and Stratton Parts and Service Station listed in the yellow pages of the classified Telephone Directory.

STEERING PARTS DRAWING

MODEL 4-25501

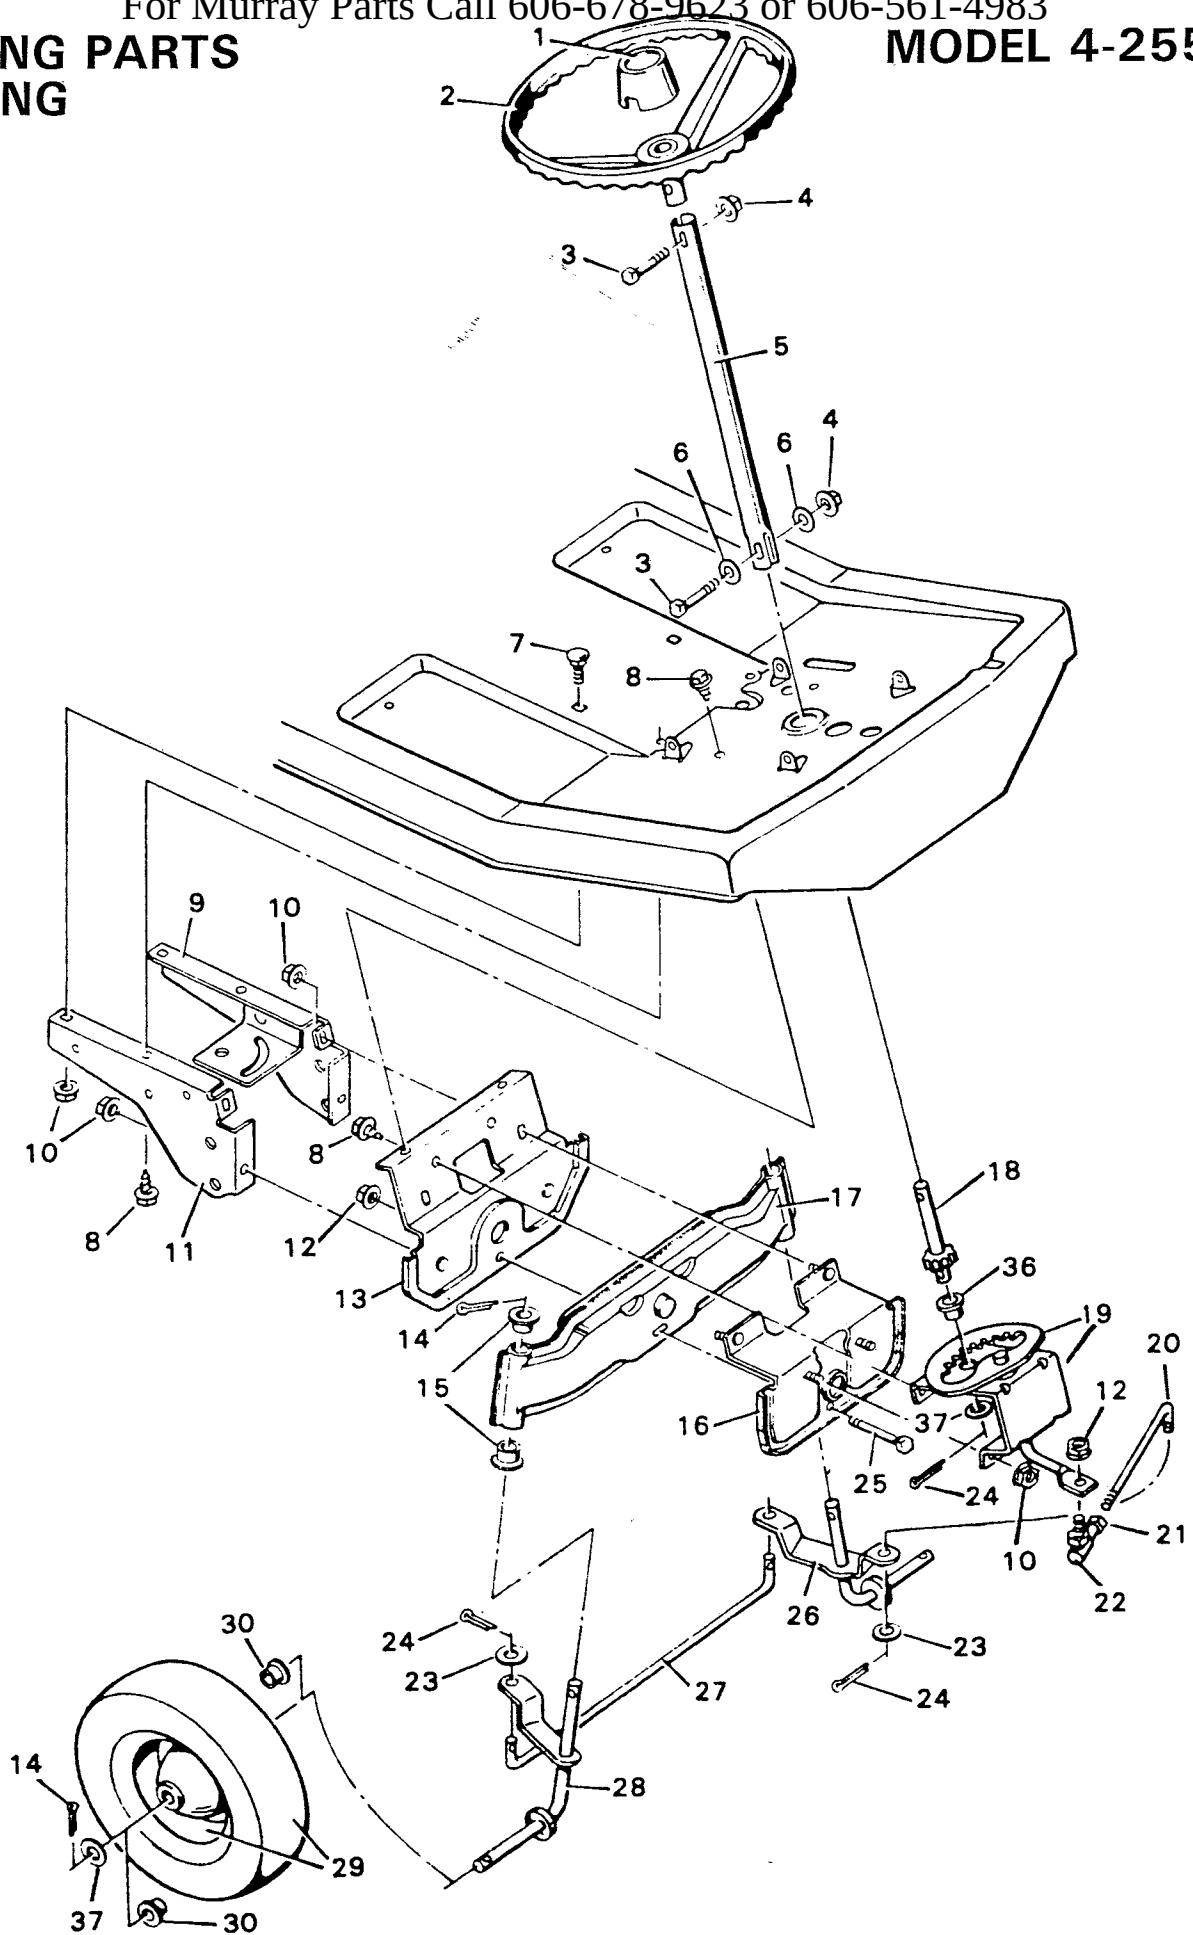


D-4350 3

KEY NO.	DESCRIPTION	PART NO.
1	Cap-Steering Wheel	23573
2	Steering Wheel	90126
3	Hex Bolt 5/16"-18X1 1/2"	1X102
4	Flange Locknut 5/16"-13	15X88
5	Steering Post	90130C
6	Washer	17X47Z
7	Carriage Bolt 5/16"-18X5/8"	2X53
8	Tapping Screw	26X49
9	Left Suspension Plate	55200
10	Flange Hex Nut	15X79
11	Right Suspension Plate	55201
12	Flange Locknut 3/8"-24	15X87
13	Front Axle Support Assembly	55056
14	Cotter Pin	30X49
15	Spindle Bearing	55003
16	Front Axle Hanger Assembly	55058
17	Front Axle Assembly	55024
18	Pinion Gear	55001
19	Sector Assembly	55041
20	Drag Link	55046
21	Hex Nut 3/8"-24	15X61
22	Steering Ball Joint	21031
23	Washer	17X53
24	Cotter Pin	30X20
25	Hex Bolt 3/8"-24X2 3/8"	1X69
26	Left Spindle Assembly	55039
27	Tie Rod	55026
28	Right Spindle Assembly	55038
29	Wheel & Tire Assembly	24624
30	Bearing*	24615
36	Bearing	55168
37	Washer	17X100Z

*NOTE: These key numbers are included with key no. 29. When ordering replacement parts specify the brand name of the tire to insure that tread patterns on tire match.

MOTION DRIVE PARTS DRAWING

MODEL 4-25501

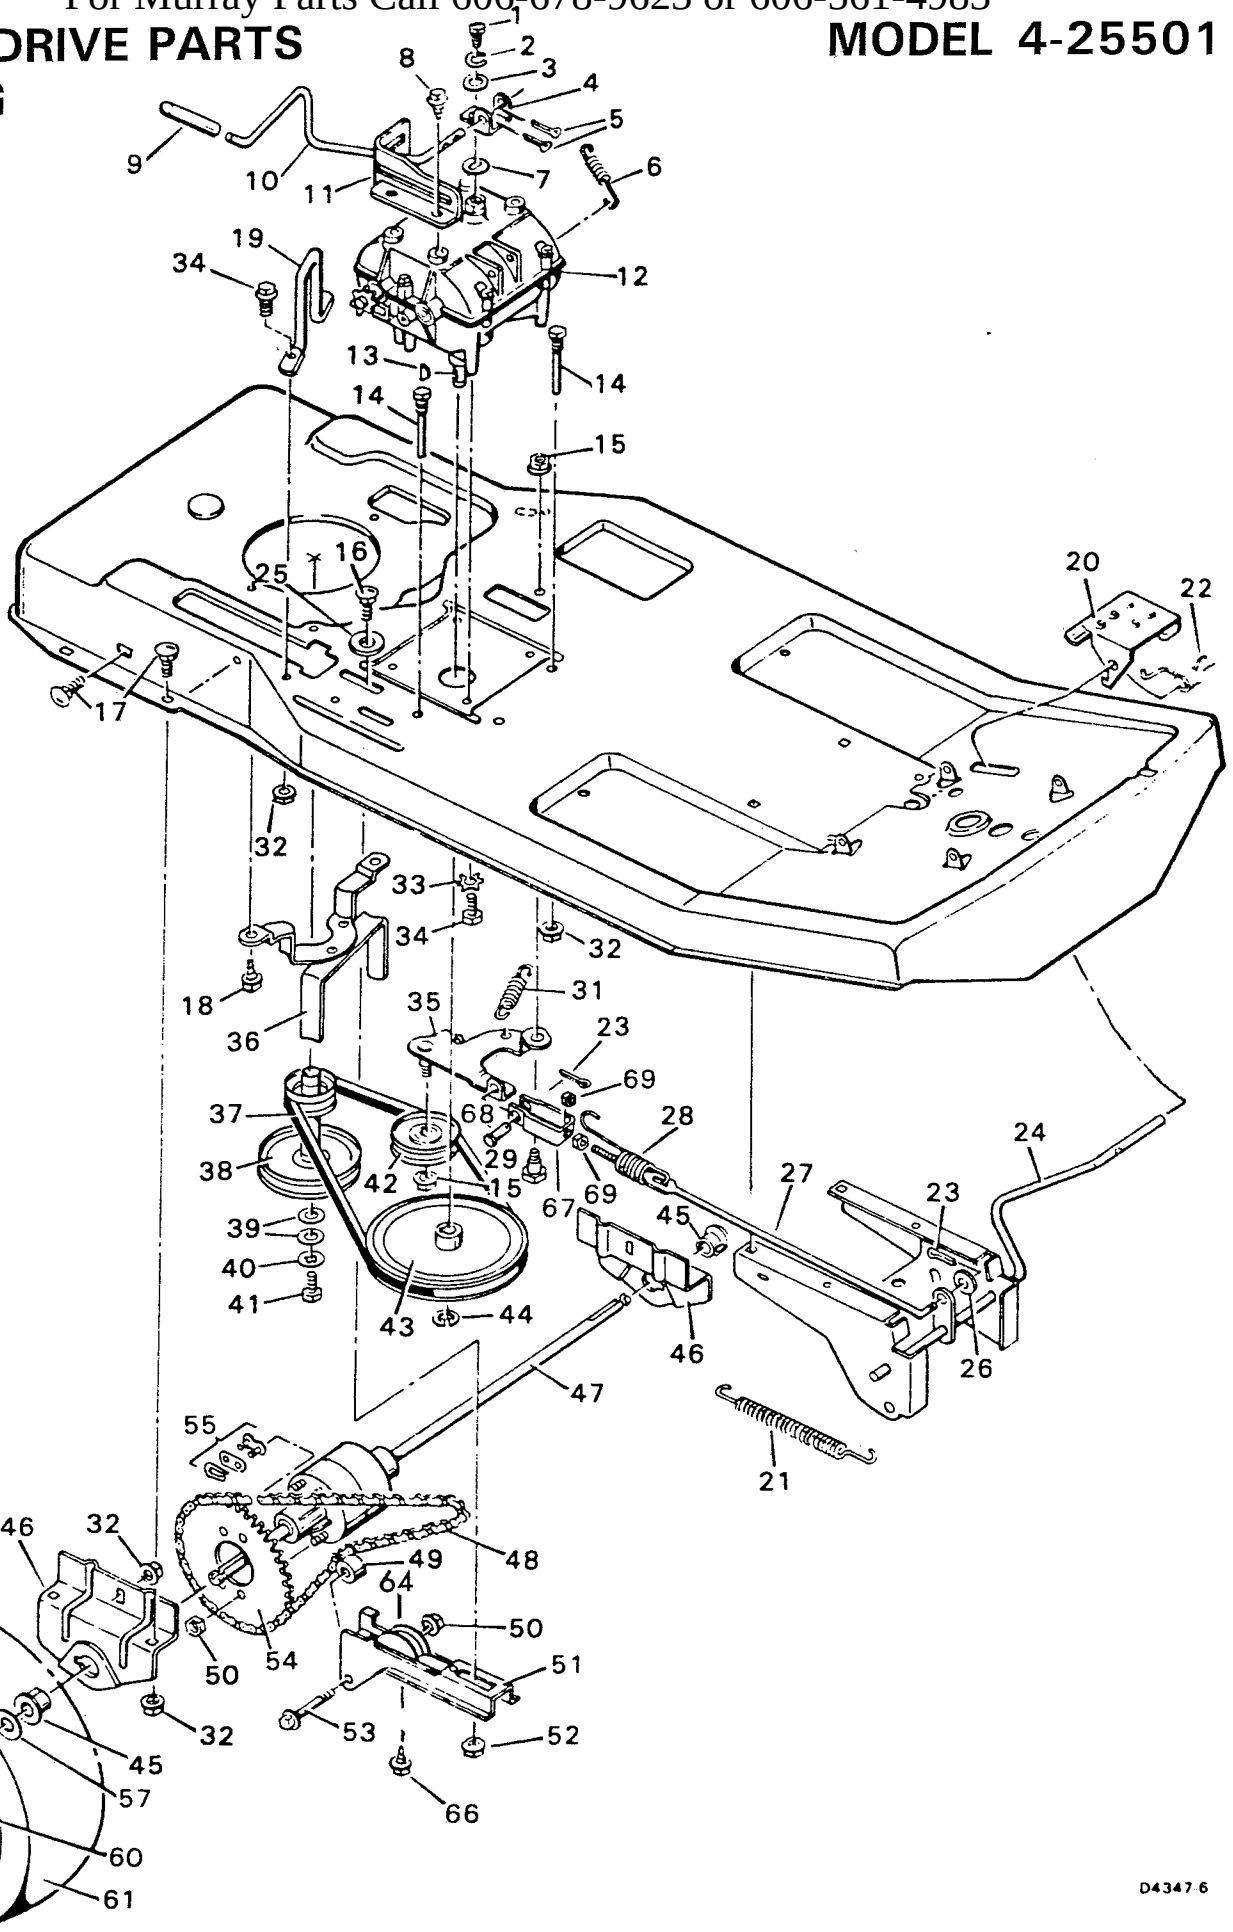

D4347 6

MODEL 4-25501**MOTION DRIVE PARTS
LIST**


KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Hex Bolt 1/4"-20X5/8"	1X82	34	Hex Bolt 5/16"-18X5/8"	1X45
2	Spring Lockwasher	18X32	35	Idler Arm Assembly	55067Z
3	Washer	17X32Z	36	Belt Guide Assembly	55053Z
4	Transmission Yoke	24834Z	37	Traction Drive Belt	37X38
5	Cotter Pin	30X20	38	Stack Pulley Assembly	55112Z
6	Extension Spring-Brake Return	165X28	39	Washer	10851Z
7	Washer	17X134	40	Shakeproof Washer	19X39
8	Tapping Screw	26X207	41	Hex Bolt 3/8"-24X1"	1X20
9	Grip	54127	42	Idler Pulley	20613
10	Shift Lever	55120Z	43	Pulley Transmission	55101
11	Transmission Gate	55263Z	44	Retainer Ring	11X7
12	Transmission-Peerless 756B	†	45	Axle Bearing	90225
13	Woodruff Key # 9	20697	46	Bracket, Rear Axle	55063
14	Guide Screw	20619	47	Differential-Peerless 100	†
15	Flange Locknut 3/8"-16	15X84	48	Roller Chain	55114
16	Carriage Bolt 3/8"-16X3/4"	2X56	49	Roller**	90176
17	Carriage Bolt 5/16"-18X5/8"	2X53	50	Flange Locknut 5/16"-18**	15X88
18	Tapping Screw	26X49	51	Chain Adjusting Bracket	55194
19	Chain Gate	55030	52	Flange Hex Nut 3/8"-16	15X68
20	Pedal-Brake/Clutch	55246	53	Shoulder Bolt 5/16"-18X1.72***	9X22
21	Extension Spring - Pedal	165X2	54	Sprocket-40 Tooth	55066
22	Torsional Spring-Pedal	166X18	55	Connecting Link	20730
23	Cotter Pin	30X49	56	Square Key 3/16"	21553
24	Lever Assembly-Brake/Clutch	55247	57	Washer	21521
25	Washer	17X67Z	58	E-Ring	11X3
26	Washer	17X47Z	59	Wheel & Tire Assembly	24995
27	Rod, Brake/Clutch	55220Z	60	Valve Stem & Cap*	24373
28	Extension Spring-Brake Unit	165X42	61	Tire Only*	24379
29	Shoulder Bolt 3/8"-16X7/8"	9X15Z	62	Wheel Only*	24994E
31	Extension Spring-Clutch Unit	165X39	64	Guide Block**	23403
32	Flange Hex Nut 5/16"-18	15X79	66	Tapping Screw**	26X214
33	Shakeproof Washer	19X6	67	Clevis	21915Z
			68	Clevis Pin	29X99
			69	Hex Nut	15X2

†NOTE: All parts pertaining to this Transmission or Differential are available from Tecumseh Parts and Service Centers listed in the yellow pages of the telephone directory under "Engines, Gasoline" or "Gasoline Engines".

*NOTE: These key numbers are included with key no. 59. When ordering replacement parts specify the brand name of the tire to insure that tread patterns on tire match.

**NOTE: These key numbers are included with key no. 51

BLADE HOUSING — TOP HALF PARTS DRAWING

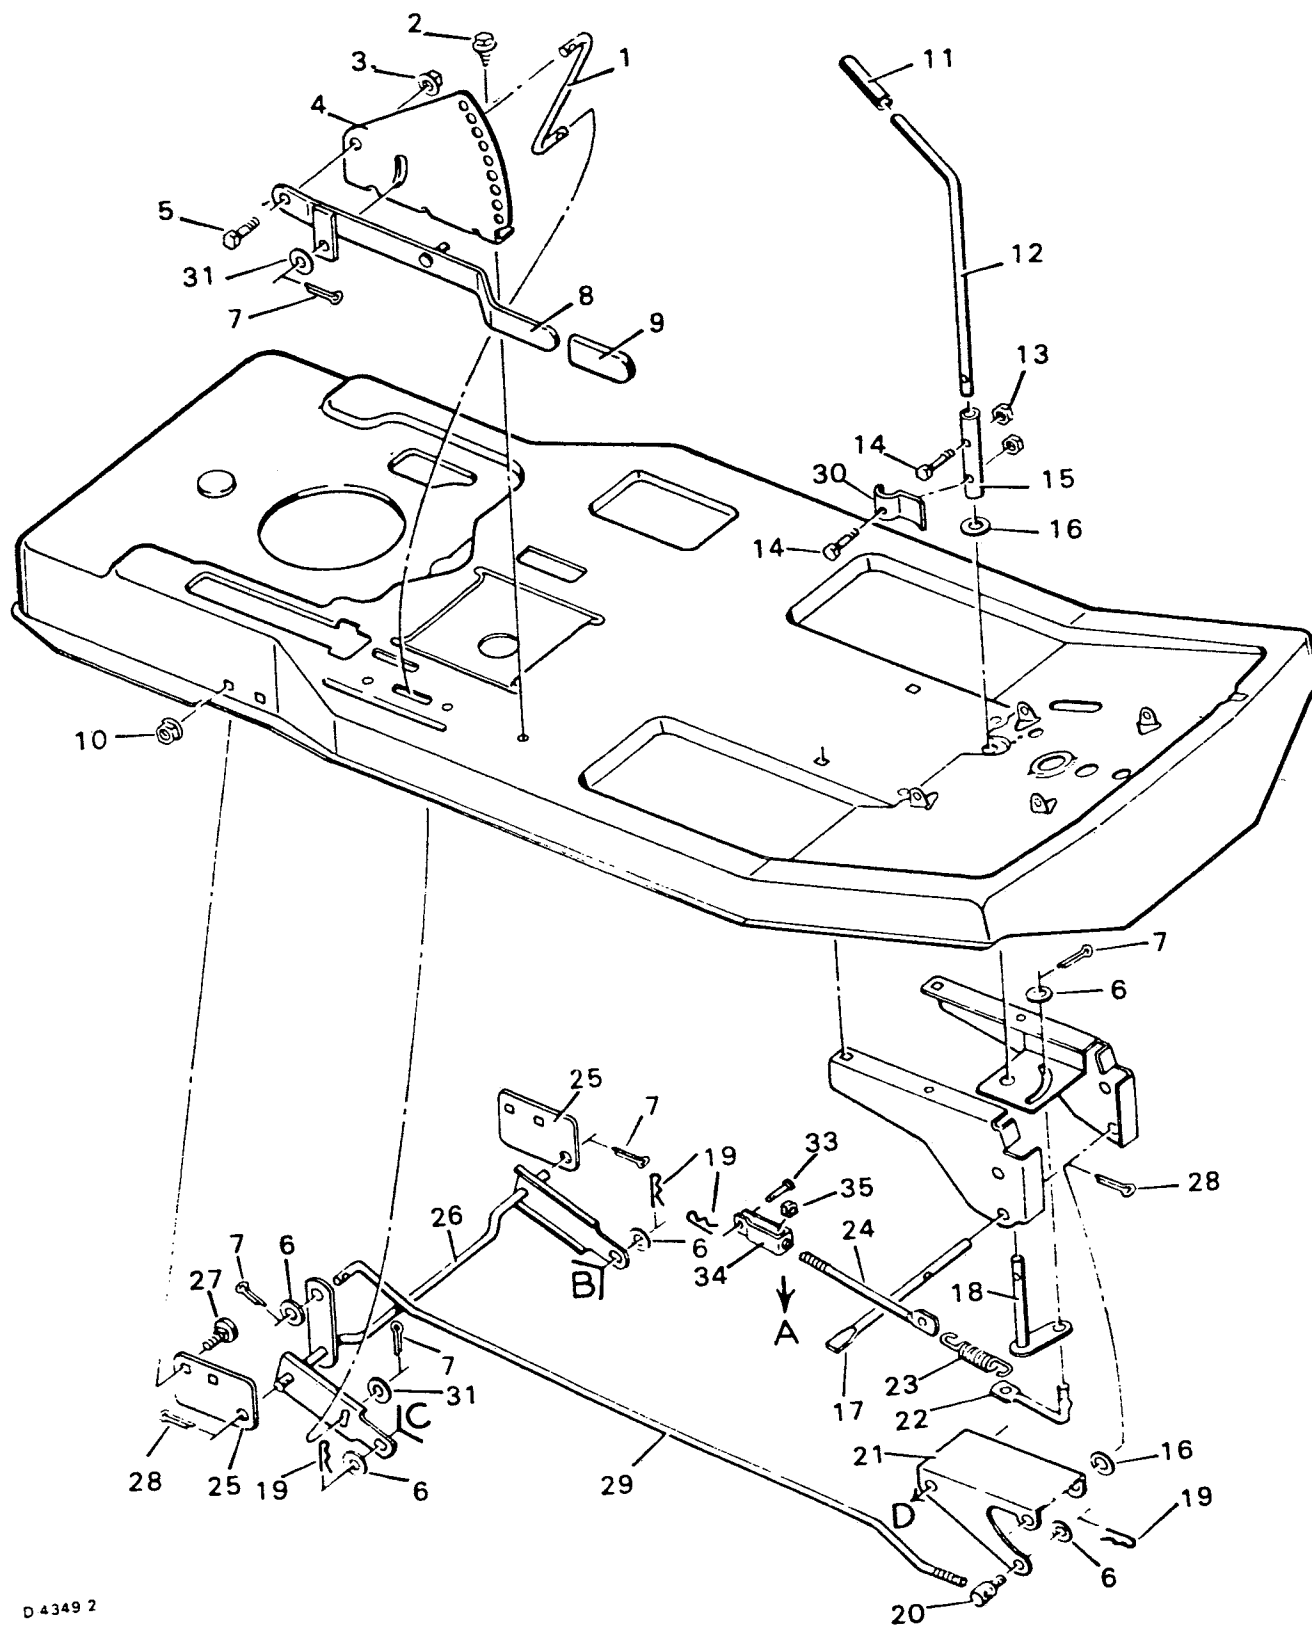

D 4349 2


KEY NO.	DESCRIPTION	PART NO.
1	Lifter Rod	55133
2	Tapping Screw	26X49
3	Flange Locknut 3/8"-16	15X84
4	Index Plate	55143
5	Shoulder Bolt 3/8"-16	9X9Z
6	Washer	17X53Z
7	Cotter Pin	30X20
8	Lifter Lever Assembly	55129
9	Grip - Lifter Lever	21249
11	Grip-Blade Lever	20476
12	Blade Lever	55089Z
13	Flange Locknut 1/4"-20	15X89
14	Hex Bolt 1/4"-20X1	1X76
15	Tube, Blade Lever	55088
16	Washer	17X67Z
17	Suspension Pin	55141Z
18	Rod & Arm Assembly	55085
19	Hair Pin	20692
20	Adjusting Nut	21920
21	Bracket, Front Suspension	55139
22	Front Link	55179
23	Extension Spring-Blade Clutch	165X7
24	Blade Drive Link	55219Z
25	Lifter Mounting Plate	55134
26	Suspension Rod Assembly	55125
27	Carriage Bolt 5/16"-18X5/8"	2X53
28	Cotter Pin	30X49
29	Linkage Rod	55140Z
30	Switch Bracket	55191
31	Washer	17X57Z
33	Clevis Pin	29X99
34	Clevis	21915Z
35	Hex Nut	15X2



MODEL 4-25501**BLADE HOUSING — BOTTOM HALF PARTS LIST**

KEY NO.	DESCRIPTION	PART NO.
1	Jackshaft	24578
2	Woodruff Key #6	20062
3	Flange Locknut 3/8"-16	15X84
4	Belt-Blade Drive	37X36
5	Idler Pulley	20613
6	Pulley	23538
7	Cotter Pin	30X20
8	Washer	17X53Z
9	Hair Pin	20692
10	Extension Spring-Blade Brake	165X43
11	Shoulder Bolt 3/8"-16X7/8"	9X15Z
12	Blade Idler Assembly	55077
13	Flange Locknut 5/16"-18	15X88
14	Idler Support Bracket	55095
15	Idler Link	55094Z
16	Pivot Rod & Bracket Assembly*	55071
17	Adjusting Nut	21920
18	Rear Bracket & Bolt Assembly*	55135
19	Flange Hex Nut 5/16"-18*	15X79
20	Jackshaft Spacer	24533Z
21	Belt Guide	55096Z
22	Hex Bolt 5/16"-18X5/8"*	1X45
23	Push On Cap	28X23
24	Deflector Rod	21197Z
25	Rear Deflector Bracket*	21181
26	Front Deflector Bracket*	21186
27	Hex Nut #10-24*	15X51
28	Torsional Spring	166X4
29	Machine Screw #10-24X5/8"*	4X21
30	Carriage Bolt 5/16"-18X5/8"*	2X53
31	Chute Deflector	21151
32	Blade Housing Assembly	55106
33	Pull Pin	55142Z
34	Washer	17X67Z
35	Front Bracket*	55144
36	Keps Nut 1/4"-20*	15X66
37	Machine Screw 1/4"-20X1/2"*	4X25
38	Jackshaft Housing Assembly	24384
39	Hex Bolt 5/16"-18X1	1X84
40	Blade Adapter	20617
42	Blade-25"	20083
43	Washer	21673Z
44	Blade Washer	20663Z
45	Spring Lockwasher	18X27
46	Hex Nut-Blade Mount	15X72
47	Horn Guard*	20581
48	Carriage Bolt 1/4"-20X9/16"*	2X39
49	Flange Locknut 1/4"-20*	15X82

NOTE: These numbers are included with key no. 32.

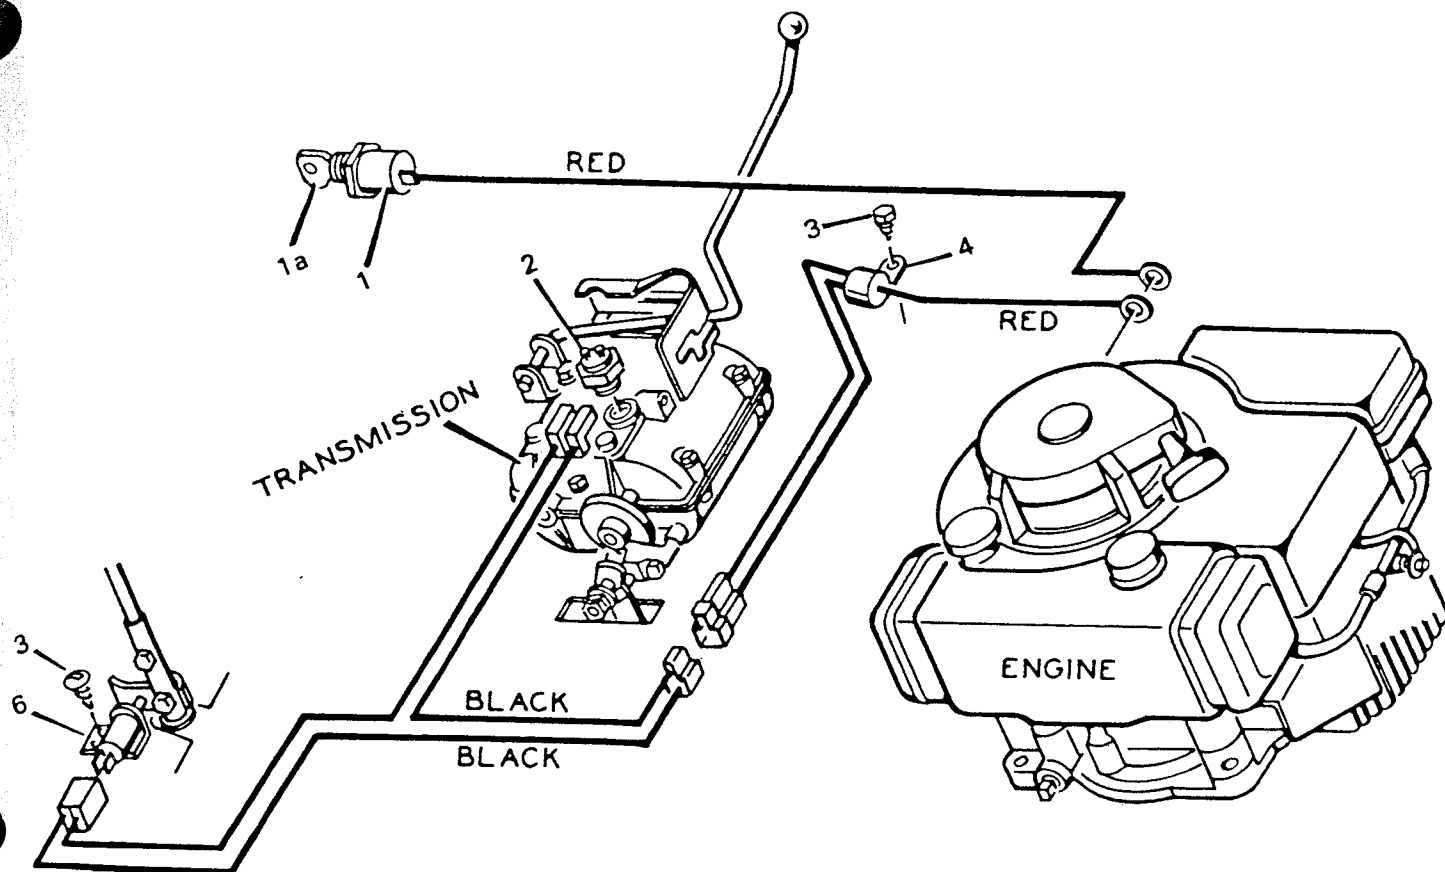

KEY NO.	DESCRIPTION	PART NO.
1	Ignition Switch Assy.	23665PA
1a	Key Only	20729
2	Transmission Limit Switch	23479
3	Screw	26X185
4	Solid State Module	21361
6	Limit Switch	24273
*	Wiring Harness	55187
*	Wire Clamp	21980

*Not Illustrated