


## BODY PARTS

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Seat	90477	33	Self Tapping Screw	26X186
2	Seat Support	90032	34	Battery Cover	407309
3	Flange Locknut 3/8"-16	15X84	35	Self Tapping Screw	26X214
4	Shoulder Bolt 3/8"-16X7/8"	9X15	36	Self Tapping Screw	26X197
5	Hex Bolt 5/16"-18X5/8"	1X45	37	Flange Nut 5/16" 18	15X79Z
6	Seat Pivot Bracket	90031	38	Side Plate Assembly, Right	23292
7	Washer	17X47Z	39	Side Plate Assembly, Left	24239
8	Lockwasher	18X16	40	Battery Clamp Rod	21762Z
9	Screw	26X49	41	Battery Clamp	21761Z
10	Seat Deck	90659	42	Flange Locknut 1/4" 20	15X82
11	Seat Deck Trim, Plastic	21789	43	Battery Tray	24157
12	Hex Bolt 5/16" 18X5/8"	1X45	44	Running Board Bracket, Left	23391
13	Spring	164X13	45	Bracket	23372
14	Spring Retainer	90014	46	Mat, Running Board	21710
15	Hood Trim Vinyl*	21765	47	Running Board, Left	21935
16	Machine Screw No. 10 24X5/8"*	4X21	48	Frame Channel	402052
17	Grip, Hood Latch*	21434	49	Front Axle Hanger	23829
18	Hood Latch, Right*	21798Z	50	Carriage Bolt 5/16" 18X5/8"	2X53
	Hood Latch, Left*	21799Z	51	Carriage Bolt 3/8" 24X3/4"	2X60
19	Washer*	17X17Z	52	Pivot Pin	21469
20	Hex Nut No. 10 24*	15X81	53	Front Axle Assembly	21441
21	Hood Assembly, Complete (See Note)	24084	54	Belt Guide, Stack Pulley	23789Z
22	Reflector	90009C	55	Keps Nut 1/4" 20	15X66
23	Lens	90082	56	Belt Guide	23826Z
24	Trim, Headlight	90654C	57	Running Board Support, Front	23832
25	Grille Insert	23302C	58	Hex Bolt 1/4" 20X5/8"	1X38
26	Grille Assembly, Complete	90667	59	Flange Locknut 5/16" 18	15X88
27	Pivot Bar	23046	60	Running Board, Right	23394
28	Screw	26X202	61	Running Board Bracket, Right	23390
29	Throttle Control	24011PA		Parts List	F-6824
30	Control Panel	24456		Instruction Book	F-6823
31	Self Tapping Screw	26X159		Parts Bag	90555
32	Bearing, Steering Post	21707			

NOTE: These parts shown with an (\*) are included when ordering key no. 21.

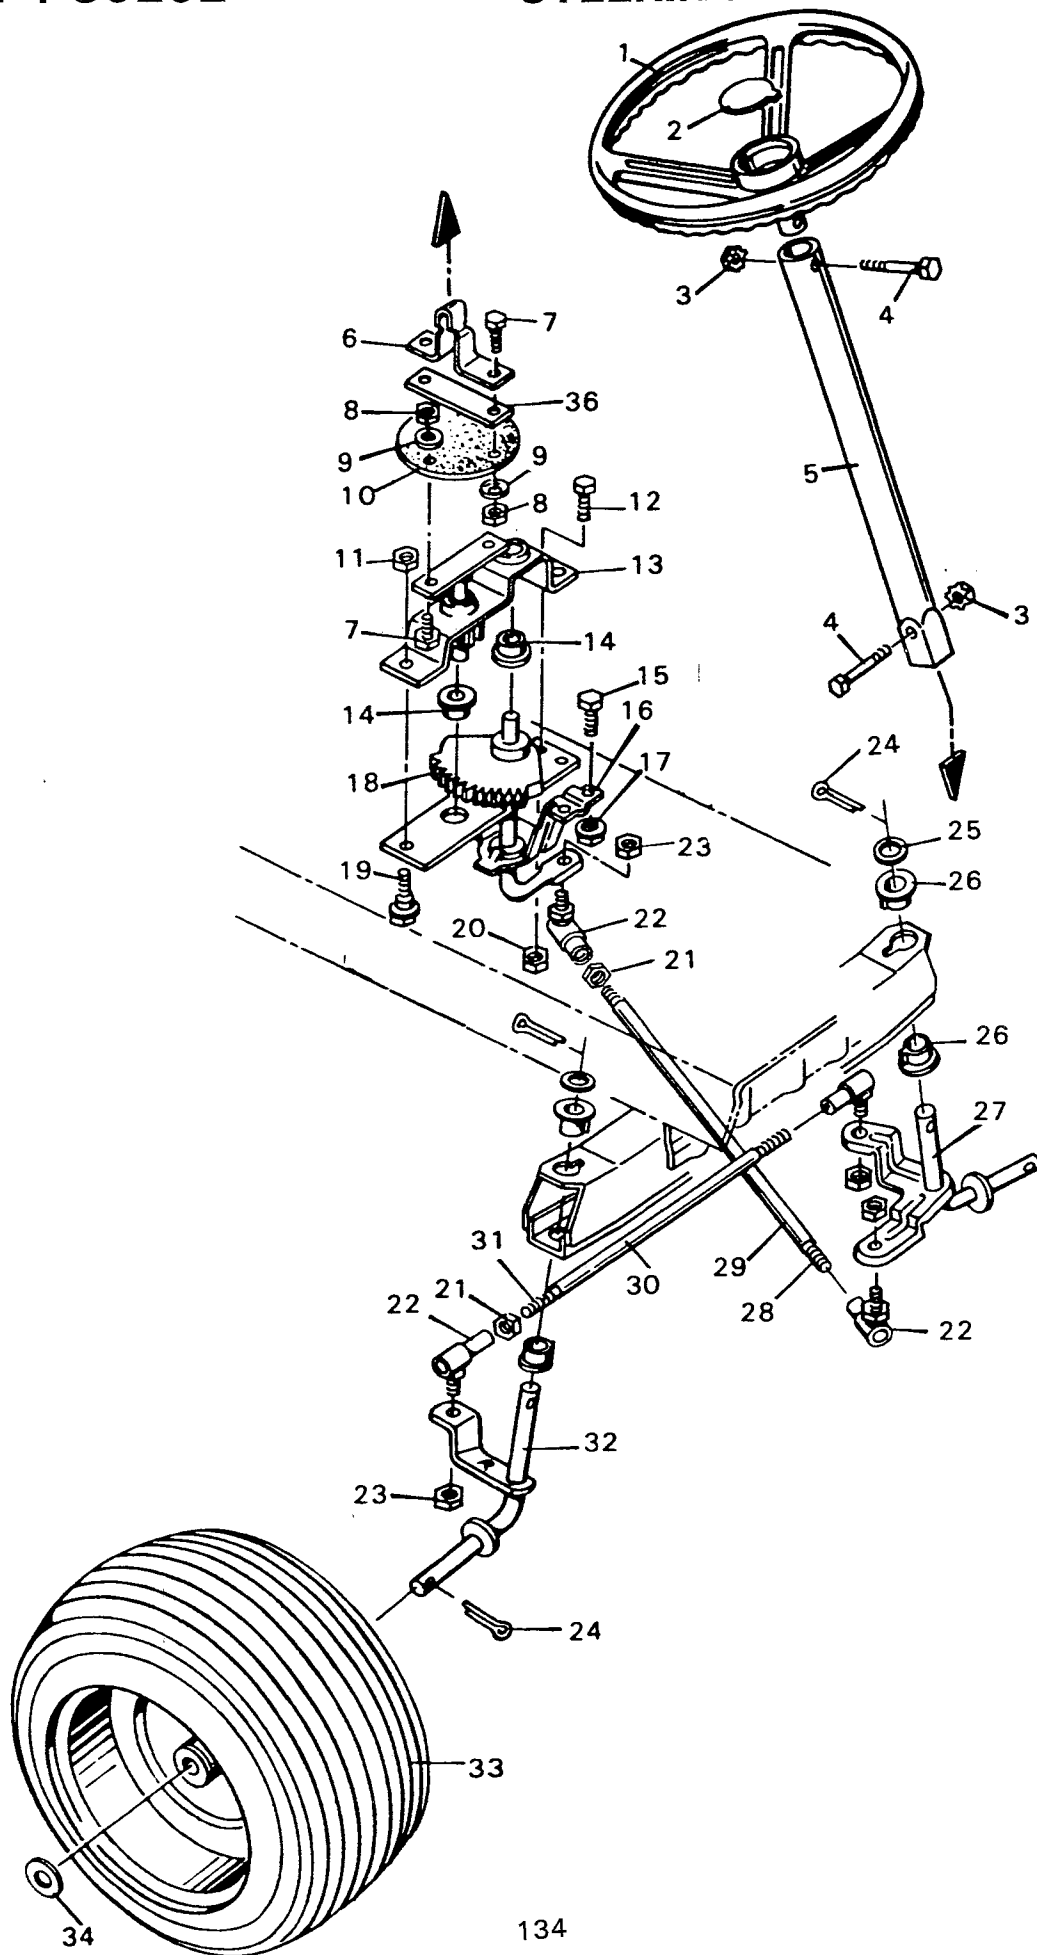

D 6001 3

F-7101


34

134

## STEERING PARTS

KEY NO.	DESCRIPTION	PART NO.
1	Steering Wheel	21688
2	Cap, Steering Wheel	24350
3	Keps Nut 5/16" 18	15X76
4	Hex Bolt 5/16" 18X1 3/4"	1X75
5	Steering Post	24345C
6	Uper Steering Coupling	21489
7	Hex Bolt 1/4" 20X7/8"	1X95
8	Locknut 1/4" 20	15X67
9	Formed Washer	23039
10	Steering Disc	21532
11	Flange Locknut 3/8" 16	15X84
12	Hex Bolt 5/16" 18X5/8"	1X45
13	Steering Gear Bracket Assembly	21492
14	Bearing	20587
15	Hex Bolt 5/16" 18X5/8"	1X45
16	Steering Bracket	21693
17	Flange Locknut 5/16" 18	15X79
18	Steering Gear Assembly	21692
19	Shoulder Bolt	9X12
20	Flange Locknut 5/16" 18	15X88
21	Hex Nut	15X61
22	Steering Ball Joint	21031
23	Flange Locknut 3/8" 24	15X87
24	Cotter Pin	30X49
25	Washer	17X83Z
26	Spindle Bearing	23820
27	Left Spindle Assembly	24229
28	Drag Link Rod	21482
29	Sleeve, Tie Rod	156X1
30	Sleeve, Drag Link Rod	156X2
31	Tie Rod	21475
32	Right Spindle Assembly	24228
33	Wheel and Tire Assembly	24378
*	Wheel (Only)	24355E
*	Tire (Only)	24376
*	Valve Stem and Cap	24373
*	Wheel Bearing	24367
*	Tire Tube	407047
34	Washer	17X83Z
36	Coupling Plate	21490

\*NOTE: These parts are included with key no. 33. For replacement parts, always give the name on the side of the tire so that the tire tread pattern will be the same.

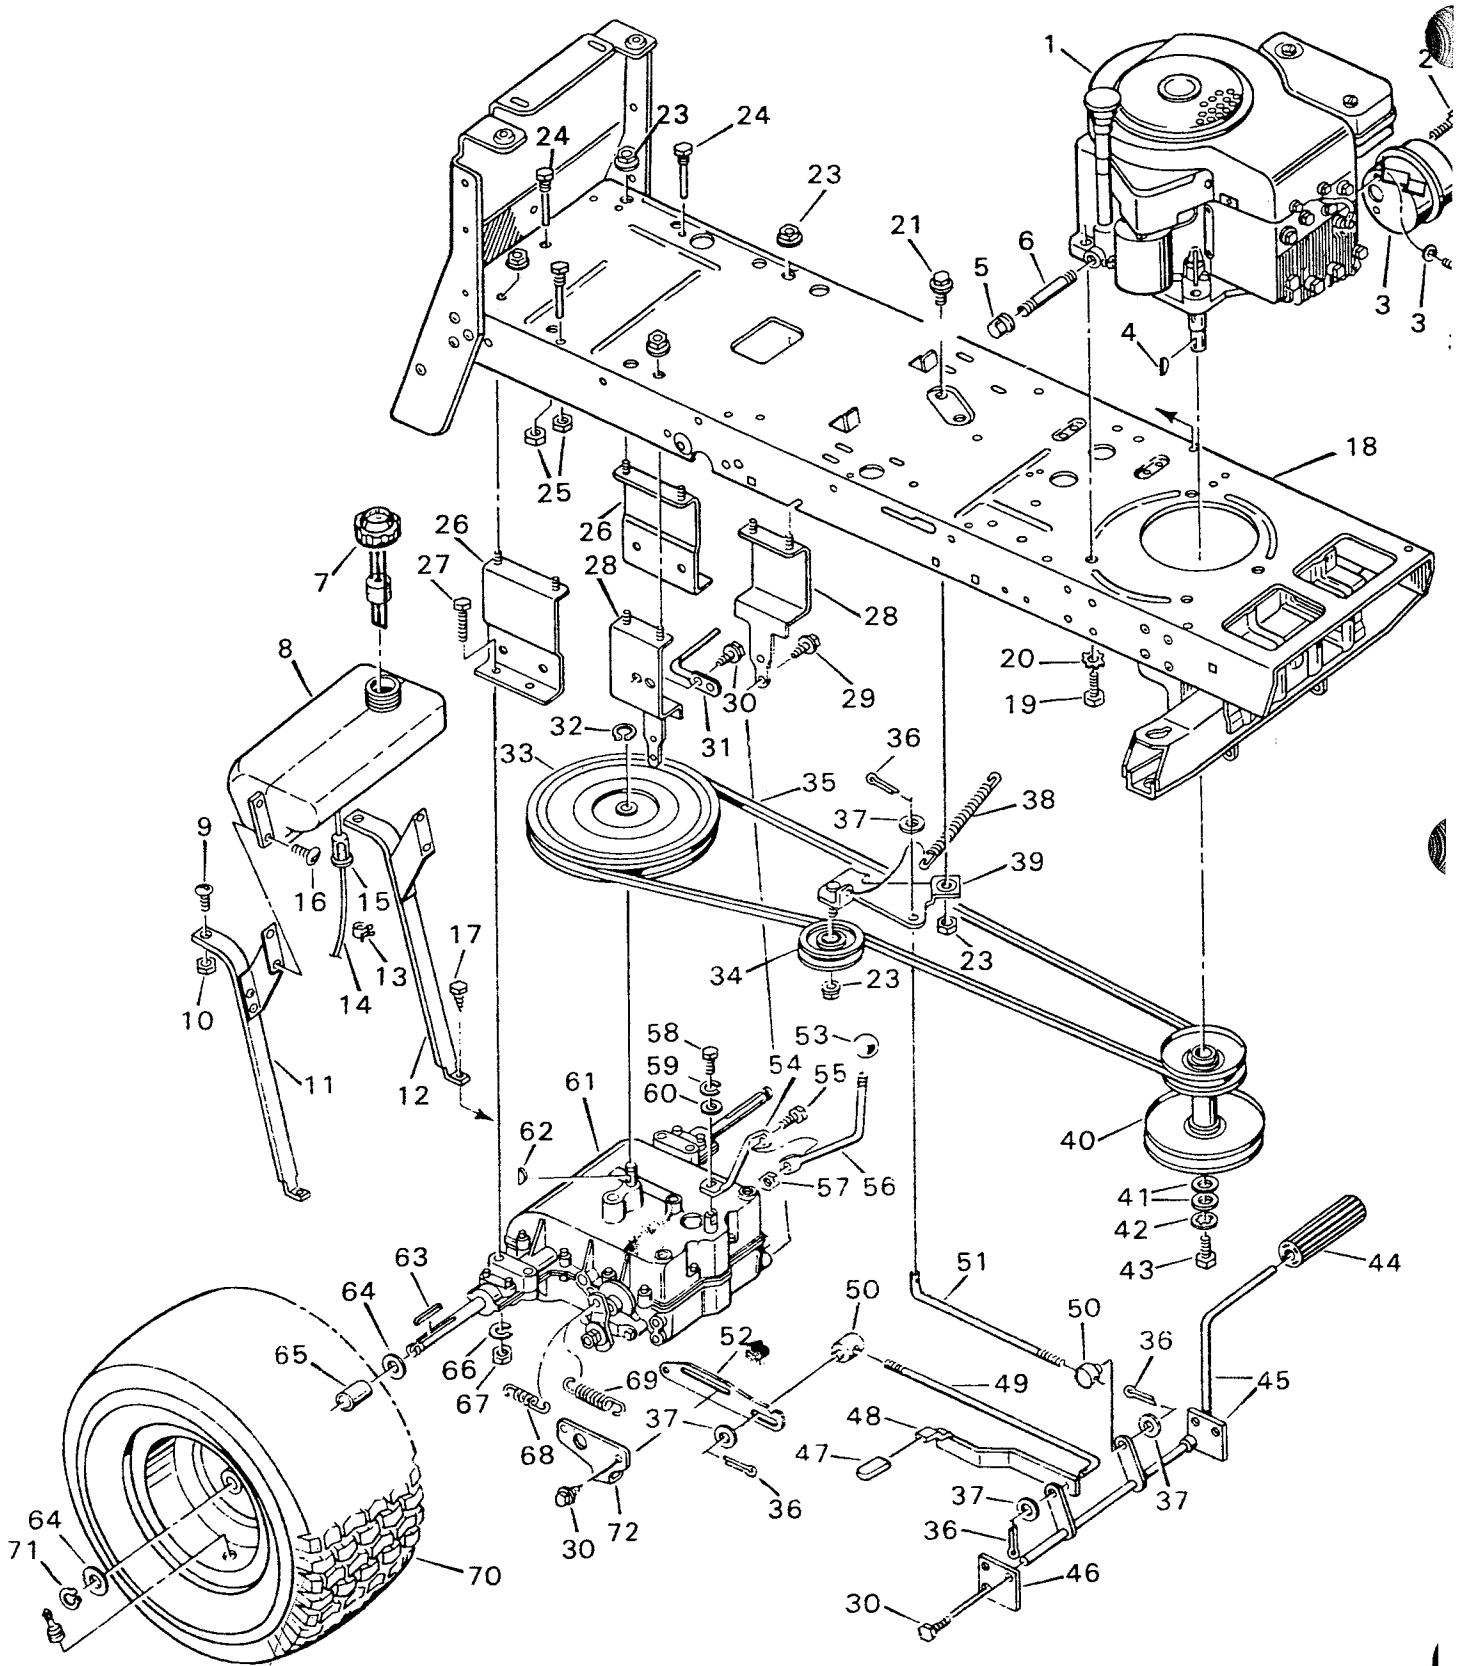

D 5399


## DRIVE PARTS

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Engine***	—	39	Idler Bracket Assembly	24035Z
2	Hex Bolt 5/16" 18X3 1/4"	1X118	40	Engine Stack Pulley	90329Z
3	Muffler	90330PA	41	Washer	10851Z
4	Woodruff Key No. 6	20062	42	Star Washer	19X39
5	Oil Drain Cap	21651	43	Hex Bolt 3/8" 24X1"	1X20
6	Oil Drain Extension	24066	44	Pedal, Clutch/Brake	21544
7	Fuel Cap	24064	45	Lever Assembly, Clutch/Brake	23389
8	Fuel Tank	23300	46	Support Bracket	23358
9	Carriage Bolt 1/4" 20X3/4"	2X67	47	Grip, Parking Brake	24235
10	Flange Locknut 1/4" 20	15X89	48	Parking Brake Arm	24201Z
11	Right Fuel Tank Support	24334	49	Brake Rod	23375Z
12	Left Fuel Tank Support	24335	50	Adjustable Nut	21920
13	Hose Clamp	23713	51	Clutch Rod	24431Z
14	Fuel Line	90671	52	Brake Link Plate	24425Z
15	Fuel Filter	24159	53	Knob, Shift Lever	20739
16	Tap Screw 1/4"X1/2"	26X214	54	Lower Shift Lever	23157Z
17	Tap Screw 5/16"X3/4"	26X197	55	Hex Bolt 5/16" 18X1"	1X84
18	Frame Channel	402052	56	Upper Shift Lever	23720Z
19	Engine Mount Bolt	20103	57	Flange Locknut 5/16" 18	15X88
20	Star Washer	19X8	58	Hex Bolt 1/4" 28X5/8"	1X82
21	Shoulder Bolt 3/8" 16X7/8"	9X15	59	Lockwasher	18X32
23	Flange Locknut 3/8" 16	15X84	60	Washer	17X32Z
24	Guide Bolt	20619	61	Transaxle Peerless**	801-013
25	Flange Nut 5/16" 18	15X79	62	Woodruff Key No. 9	20697
26	Rear Transaxle Bracket	23154	63	Square Key 3/16"	21553
27	Hex Bolt 5/16" 18X2 3/8"	1X99	64	Washer	21521
28	Front Transaxle Bracket	24036E	65	Rear Axle Tube	87X63Z
29	Formed Screw 5/16"X1"	26X207	66	Lockwasher	18X15
30	Tap Screw 5/16" X 1/2"	26X49	67	Hex Nut 5/16" 18	15X2
31	Belt Guide	24030Z	68	Extension Spring	165X20
32	Retainer Ring	11X7	69	Extension Spring	165X41
33	Drive Pulley	75073	70	Rear Wheel and Tire	24429
34	Backside Idler	23339	*	Wheel (Only)	24351E
35	Drive Belt	37X11	*	Tire Tube	407065
36	Cotter Pin	30X20	*	Tire (Only)	24430
37	Washer	17X53Z	*	Valve Stem and Cap	24373
38	Extension Spring	165X17	71	E Ring	11X3
			72	Link Plate Support	24426

\*NOTE: The engine model, type, and code numbers are on the engine. All parts to the engine are available from a Briggs and Stratton Authorized Service Center. See the yellow pages under, "Engines, Gasoline" or "Gasoline Engines" in the telephone directory.

\*\*NOTE: Replacement parts for the transmission are available from a Tecumseh Authorized Service Center. See the yellow pages under, "Engines, Gasoline" or "Gasoline Engines" in the telephone directory.

\*NOTE: These parts are included with key no. 70. For replacement parts, always give the name on the side of the tire so that the tire tread will be the same.

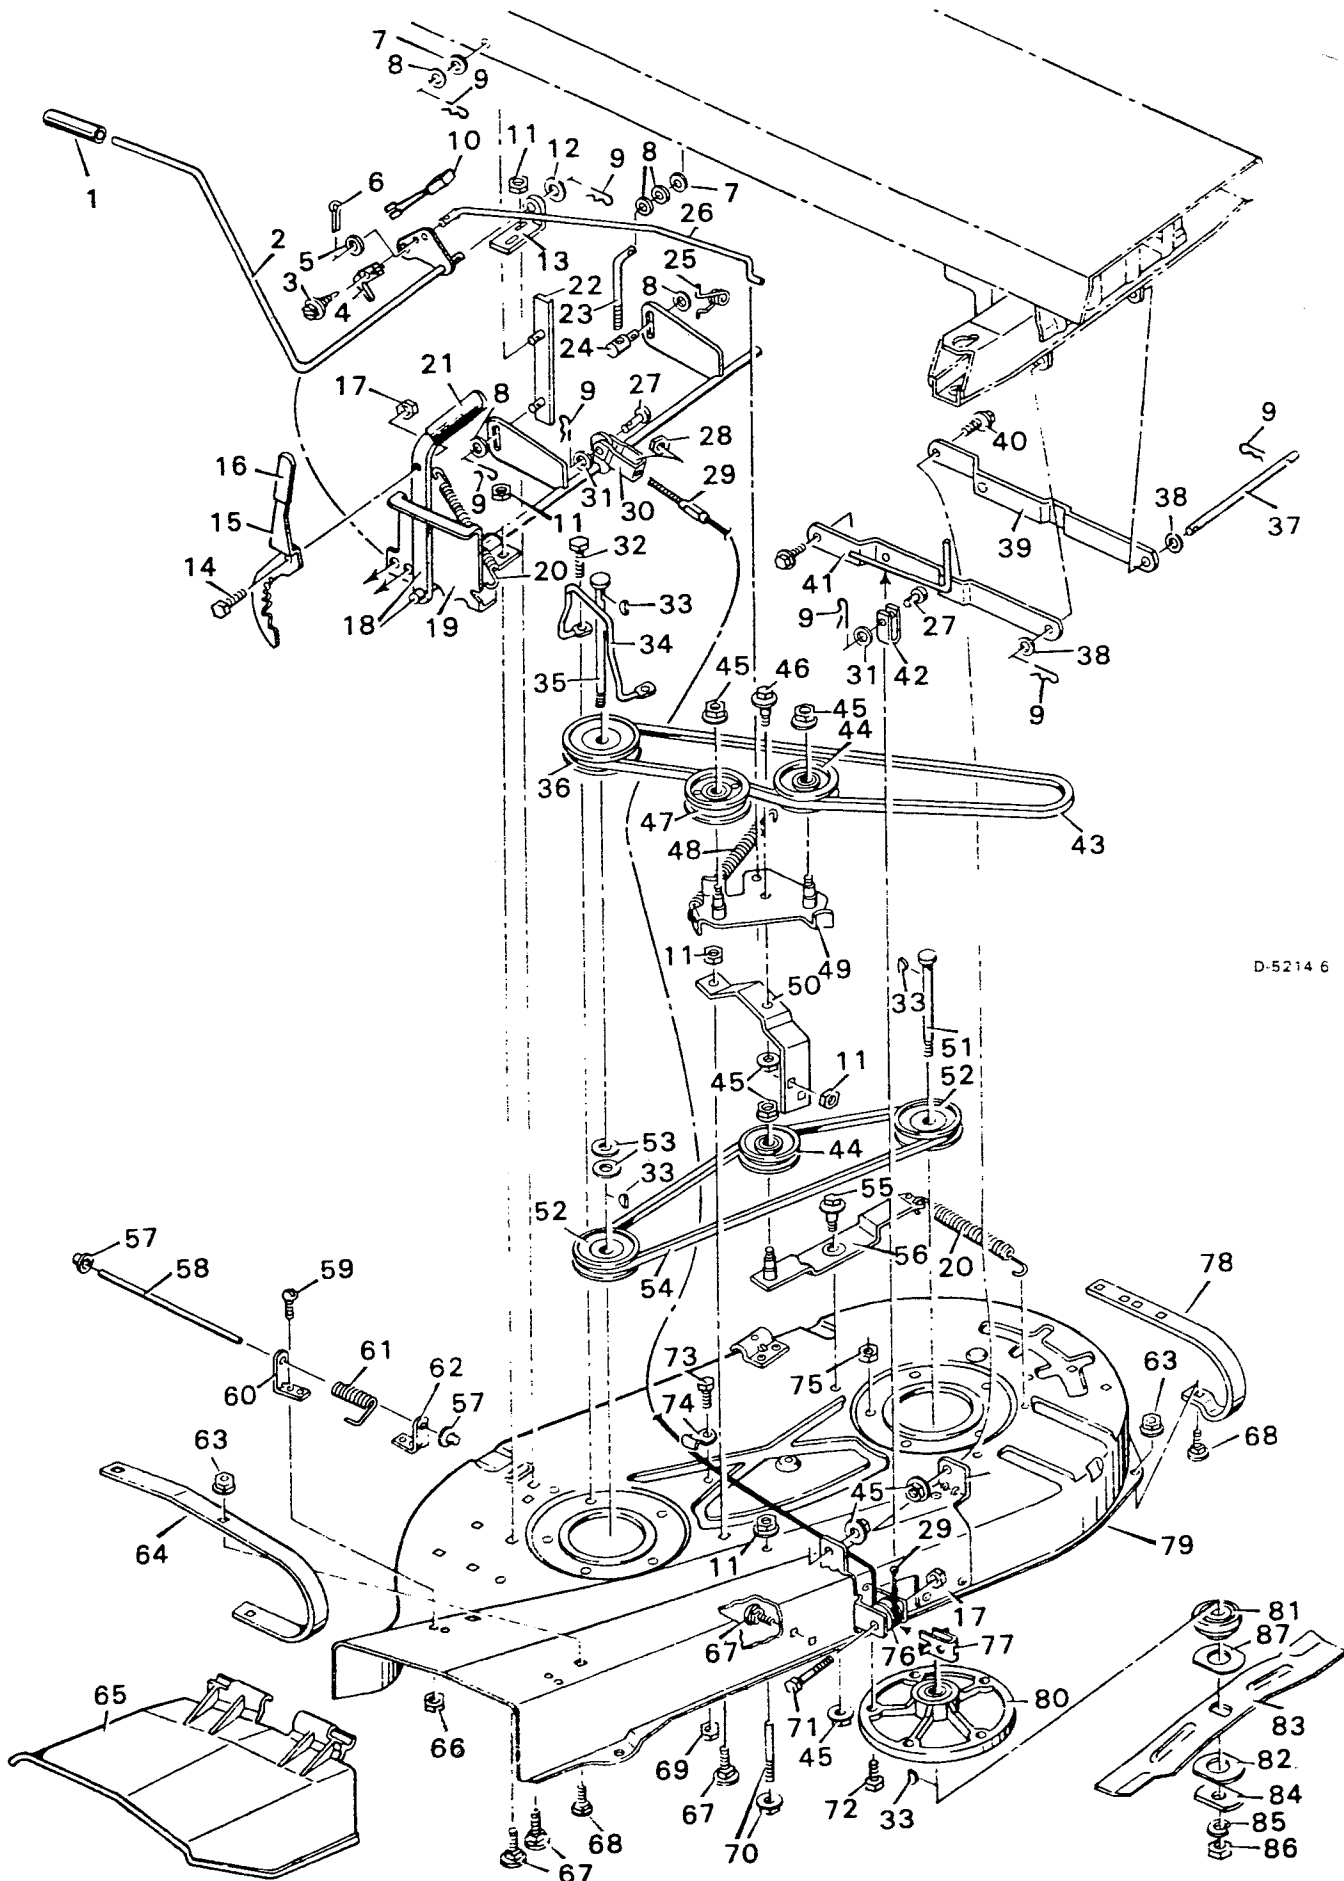

D-5214 6

## 36 INCH BLADE HOUSING


KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Grip, Blade Drive Lever	20476	45	Flange Locknut 3/8" 16	15X84
2	Blade Drive Lever Assembly	24439C	46	Shoulder Bolt 3/8" 16X7/8"	9X12
3	Tap Screw No. 10X1"	26X211	47	Idler Pulley	21409
4	Limit Switch	24527	48	Extension Spring	165X43
6	Cotter Pin	30X20	49	Blade Drive Idler Assembly	24343
7	Washer	10851Z	50	Bracket, Idler Support*	21496
8	Washer	17X124	51	Jackshaft, Short	20616
9	Hair Pin	20692	52	Jackshaft Pulley	21022
10	Jumper Wire	23984	53	Washer	17X87Z
11	Flange Nut 5/16" 18*	15X79	54	Cross Drive Belt	37X3
12	Washer	17X67Z	55	Shoulder Bolt 3/8" 16X7/8"	9X15
13	Bracket*	20934	56	Cross Drive Idler Bracket	21139Z
14	Shoulder Bolt 1/4" 20X7/16"	6X46	57	Push on Cap	28X23
15	Lifter Latch	21591Z	58	Deflector Rod	21198Z
16	Grip, Lifter Latch	20476	59	Machine Screw No. 10 24X1/4"*	4X68
17	Locknut 1/4" 20	15X67	60	Rear Deflector Bracket*	21187
18	Lifter Assembly*	21906	61	Torsional Spring	166X4
19	Lifter Bracket*	21500	62	Front Deflector Bracket*	21186
20	Extension Spring	165X2	63	Flange Locknut 1/4" 20*	15X82
21	Grip, Lifter Assembly	21249	64	Right Skid*	90392
22	Right Hanger Bracket	23251Z	65	Deflector, Blade Housing	21154
23	Adjuster Rod	21918Z	66	Hex Nut No. 10 24*	15X81
24	Adjustable Nut	21920	67	Carriage Bolt 5/16" 18X5/8"*	2X53
25	Torsional Spring	166X16	68	Carriage Bolt 1/4" 20X9/16"*	2X39
26	Clutch Rod Assembly	24449Z	69	Keps Nut 1/4"-20	15X66
27	Clevis Pin	29X93	70	Belt Guide Assembly	24178
28	Hex Nut 5/16" 18	15X2	71	Hex Bolt 1/4" 20X1 3/4"	1X90
29	Lifter Cable	21913	72	Hex Bolt 5/16" 18X1"	1X84
30	Adjustable Clevis	21915Z	73	Hex Bolt 1/4" 20X5/8"	1X38
31	Washer	17X47Z	74	Cable Guide	21953Z
32	Hex Bolt 5/16" 18X1 1/2"	1X102	75	Flange Locknut 5/16" 18	15X88
33	Woodruff Key No. 6	20062	76	Nylon Pulley	21916
34	Belt Guide	23769Z	77	Cable Guide	21917Z
35	Jackshaft, Long	21024	78	Left Skid*	90353
36	Pulley	23538	79	Blade Housing	90388
37	Pull Pin	21912Z	80	Jackshaft Housing Assembly	24384
38	Washer	17X57Z	81	Blade Adapter	20617
39	Support Arm	21911	82	Washer	21673Z
40	Shoulder Bolt 3/8" 16X7/8"	9X14Z	83	Blade 36 Inch	20930
41	Support Arm Assembly	23256	84	Washer	20663Z
42	Clevis	24073Z	85	Lockwasher	18X27
43	Blade Drive Belt	37X24	86	Hex Nut 1/2" 20	15X72
44	Idler Pulley	20613	87	Washer	24614Z
				Complete Blade Housing, Keys 1 to 87	40313Z

\*NOTE: These parts are included with key no. 79.



**MODEL 4-36202**

**WIRING DIAGRAM AND REPLACEMENT PARTS**

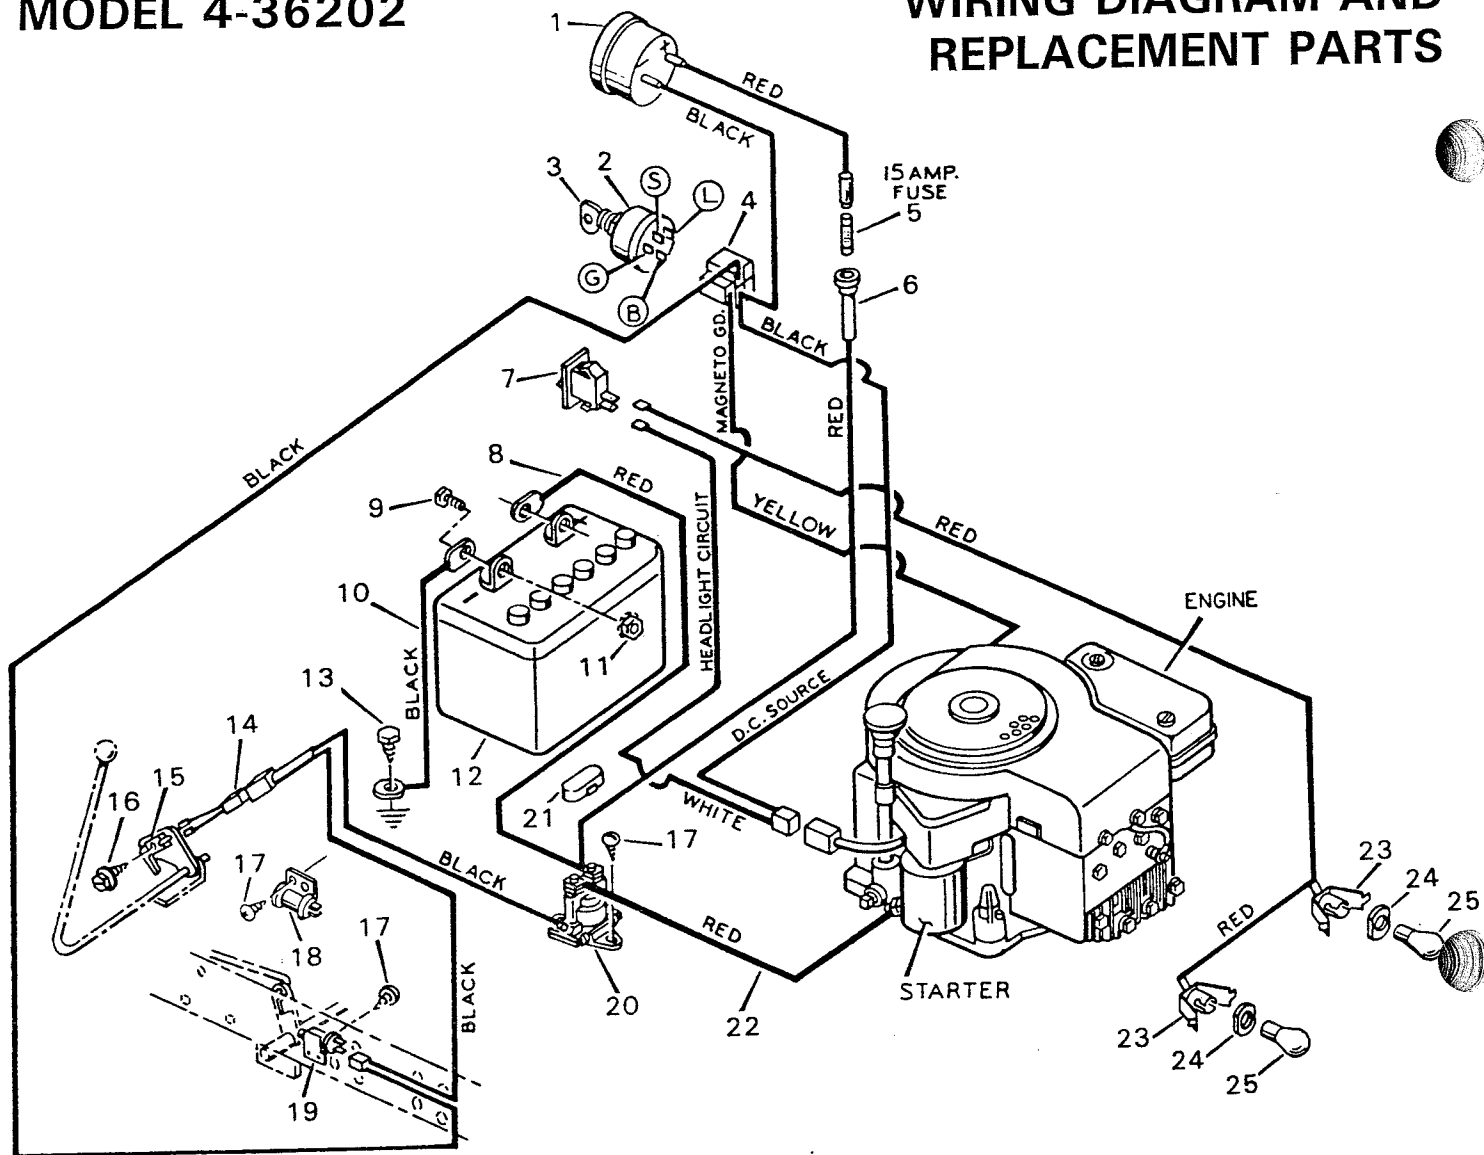

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Ammeter Assembly	21057PA	13	Screw	26X49
2	Ignition Switch and Key	21064PA	14	Jumper Wire	23984
3	Key Only	20729	15	Limit Switch, Blade Housing	24527
4	Wiring Harness	24459	16	Screw	26X211
	Wiring Harness Clamp	21980	17	Screw	26X185
5	Fuse	23752	18	Limit Switch Frame	23029
6	Fuse Holder	407058	19	Limit Switch, Clutch	21549
7	Light Switch	90647	20	Solenoid	24285
8	Battery Cable with Fuse Wire (Red)	24X20	21	Cover, Solenoid	90565
9	Hex Bolt 1/4" 20X5/8"	1X38	22	Solenoid Wire (Red)	24X12
10	Battery Cable (Black)	24X6	23	Light Socket Assembly	90155
11	Keps Nut 1/4" 20	15X66	24	Washer, Light Socket	90228
12	Battery 30 AMP Hour Electrolyte (Battery Acid) Battery Caps	21075 90665 400262	25	Headlight Bulb	90084