


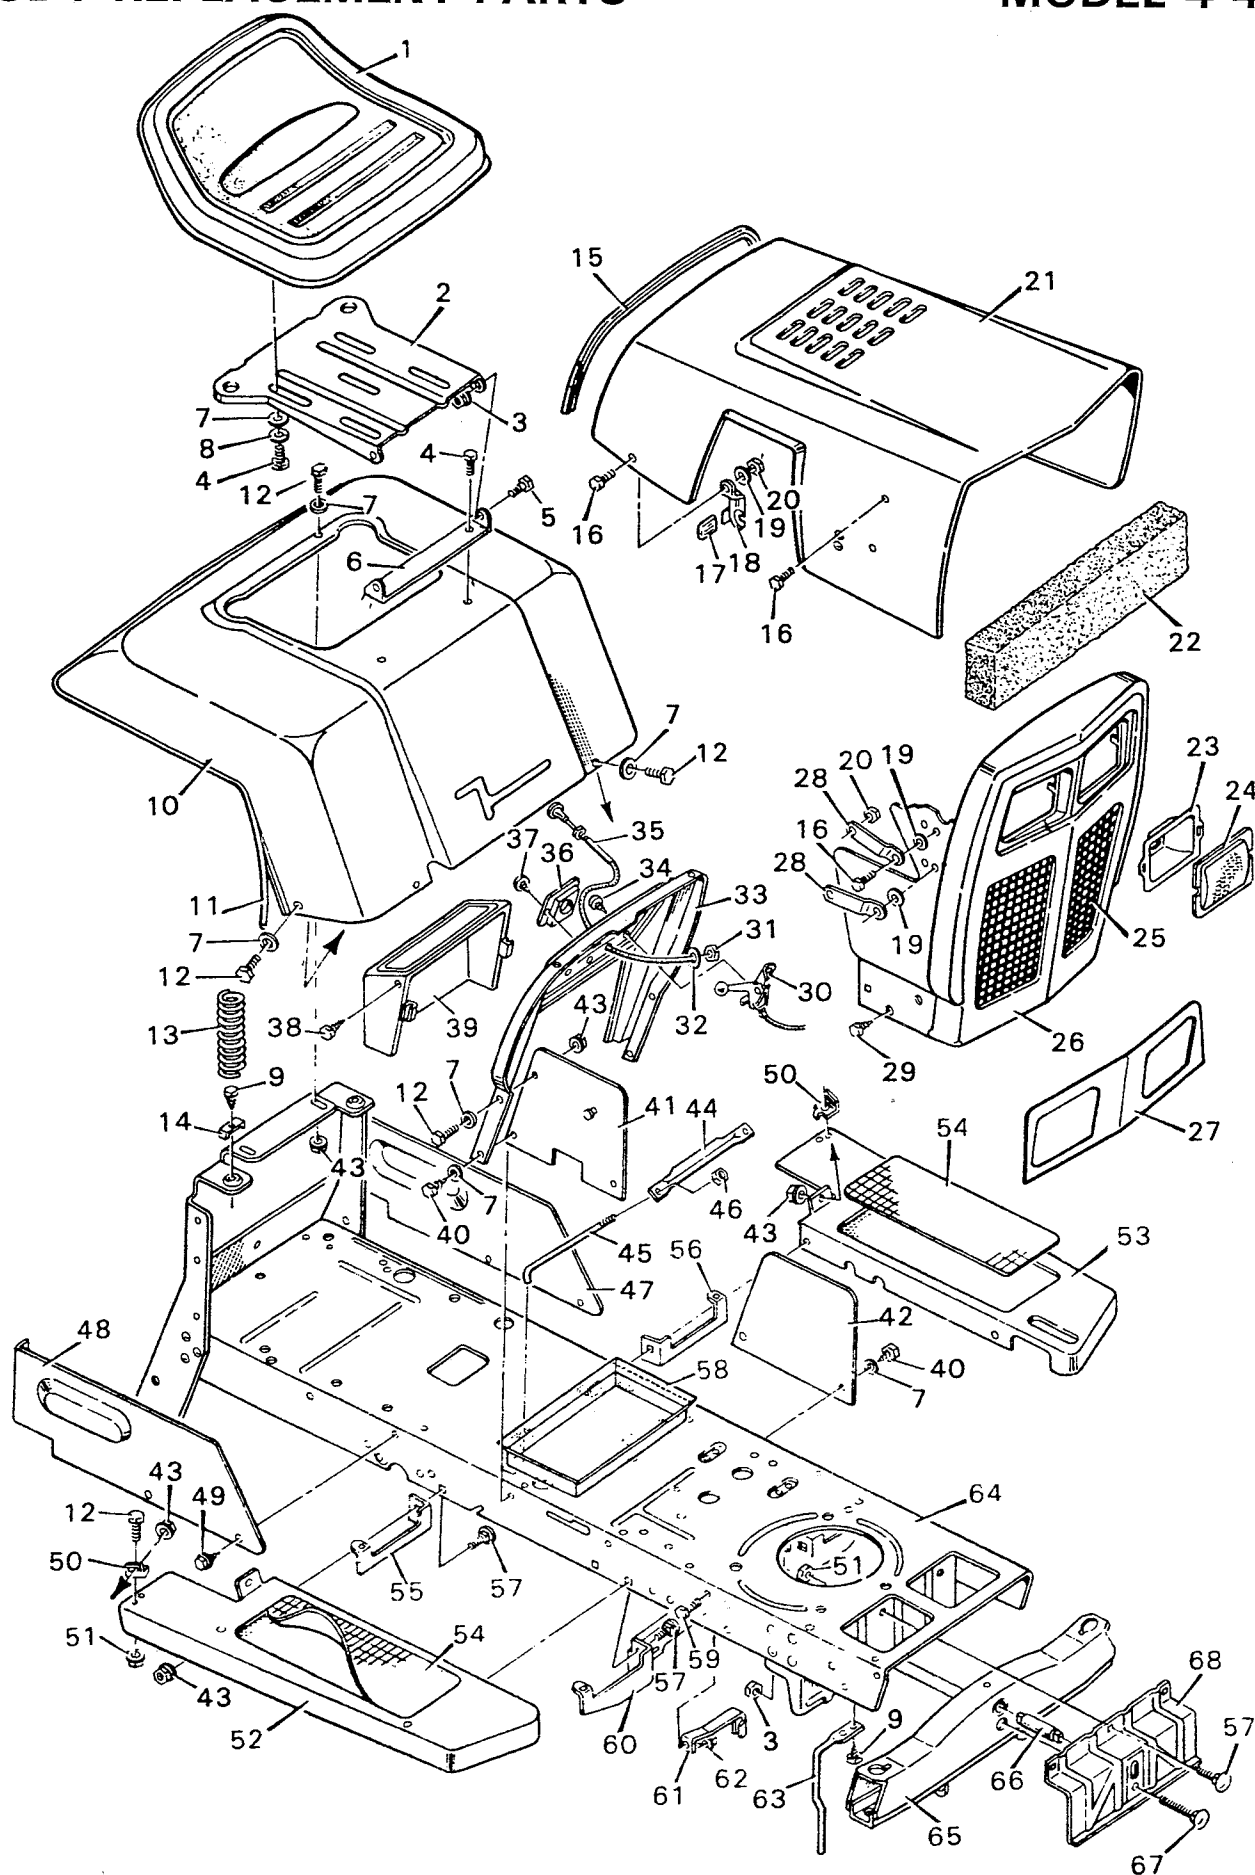


D-5402

MODEL 4-42204**BODY REPLACEMENT PARTS**

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Seat	90477	34	Screw	26X159
2	Seat Support	90032	35	Choke Cable	23780
3	Flange Locknut 3/8"-16	15X84	36	Bearing Steering Post	21707
4	Hex Bolt 5/16" 18X5/8"	1X45	37	Screw	26X186
5	Shoulder Bolt 3/8" 16X7/8"	9X15	38	Screw	26X214
6	Seat Pivot Bracket	90031	39	Battery Cover	407309
7	Washer	17X47Z	40	Screw	26X197
8	Lockwasher	18X16	41	Side Plate Assembly, Right	23292
9	Screw	26X49	42	Side Plate Assembly, Left	24239
10	Seat Deck	90659	43	Flange Nut 5/16" 18	15X79Z
11	Seat Deck Trim, Plastic	21789	44	Battery Clamp	23779Z
12	Hex Bolt 5/16" 18X5/8"	1X45	45	Battery Clamp Rod	21762Z
13	Spring	164X13	46	Flange Locknut 1/4" 20	15X62Z
14	Spring Retainer	90014	47	Side Panel, Left	24447
15	Hood Trim, Vinyl*	21765	48	Side Panel, Right	24446
16	Machine Screw No. 10 24X5/8"*	4X21	49	Screw	26X185
17	Grip, Hood Latch*	21434	50	Bracket	23372
18	Hood Latch, Right*	21798Z	51	Flange Locknut 5/16" 18	15X88
	Hood Latch, Left*	21799Z	52	Running Board, Right	23394
19	Washer*	17X17Z	53	Running Board, Left	21935
20	Hex Nut No. 10 24*	15X81	54	Mat, Running Board	21710
21	Hood Assembly	24087	55	Running Board Bracket, Right	23390
22	Heat Baffle, Foam	403154	56	Running Board Bracket, Left	23391
23	Reflector	90009C	57	Carriage Bolt 5/16" 18X5/8"	2X53
24	Lens	90082	58	Battery Tray	24156
25	Grille Screen, Left	24254E	59	Hex Bolt 1/4" 20X5/8"	1X38
	Grille Screen, Right	24089E	60	Running Board Support, Front	24105
26	Grille Assembly, Complete	90668	61	Belt Guide	23826Z
27	Trim, Headlight	90654C	62	Keps Nut 1/4" 20	15X66
28	Pivot Bar	23046	63	Belt Guide, Stack Pulley	23789Z
29	Screw	26X202	64	Frame Channel	402053
30	Throttle Control	23844PA	65	Front Axle Assembly	21441
31	Hex Nut	15X33	66	Pivot Pin	21469
32	Lockwasher	18X31	67	Carriage Bolt 3/8" 16X3/4"	2X60
33	Control Panel	24457	68	Front Axle Hanger	23829
				Parts List	F-6828
				Instruction Book	F-6827
				Tractor Parts Bag	24467
				42" Mower Parts Bag	23242

NOTE: These parts, shown with an (*), are included with key number 21.


A line drawing of a hand saw. Label 1 points to the handle, and label 2 points to the blade.

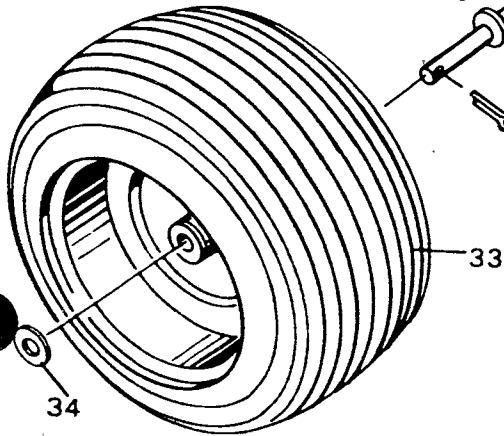

MODEL 4-42204**STEERING REPLACEMENT PARTS**

KEY NO.	DESCRIPTION	PART NO.
1	Steering Wheel	21688
2	Cap, Steering Wheel	24350
3	Keps Nut 5/16" 18	15X76
4	Hex Bolt 5/16" 18X1 3/4"	1X75
5	Steering Post	24345C
6	Upper Steering Coupling	21489
7	Hex Bolt 1/4" 20X7/8"	1X95
8	Locknut 1/4" 20	15X67
9	Formed Washer	23039
10	Steering Disc	21532
11	Flange Locknut 3/8" 16	15X84
12	Hex Bolt 5/16" 18X5/8"	1X45
13	Steering Gear Bracket Assembly	21492
14	Bearing	20587
15	Hex Bolt 5/16" 18X5/8"	1X45
16	Steering Bracket	21693
17	Flange Locknut 5/16" 18	15X79
18	Steering Gear Assembly	21692
19	Shoulder Bolt	9X12
20	Flange Locknut 5/16" 18	15X88
21	Hex Nut	15X61
22	Steering Ball Joint	21031
23	Flange Locknut 3/8" 24	15X87
24	Cotter Pin	30X49
25	Washer	17X83Z
26	Spindle Bearing	23820
27	Left Spindle Assembly	24229
28	Drag Link Rod	21482
29	Sleeve, Tie Rod	156X1
30	Sleeve, Drag Link Rod	156X2
31	Tie Rod	21475
32	Right Spindle Assembly	24228
33	Wheel and Tire Assembly	24378
*	Wheel (Only)	24355E
*	Tire (Only)	24376
*	Valve Stem and Cap	24373
*	Wheel Bearing	24367
*	Tire Tube	407047
34	Washer	17X83Z
36	Coupling Plate	21490

*NOTE: These parts are included with key no. 33. For replacement parts, always give the name on the side of the tire so that the tire tread pattern will be the same.

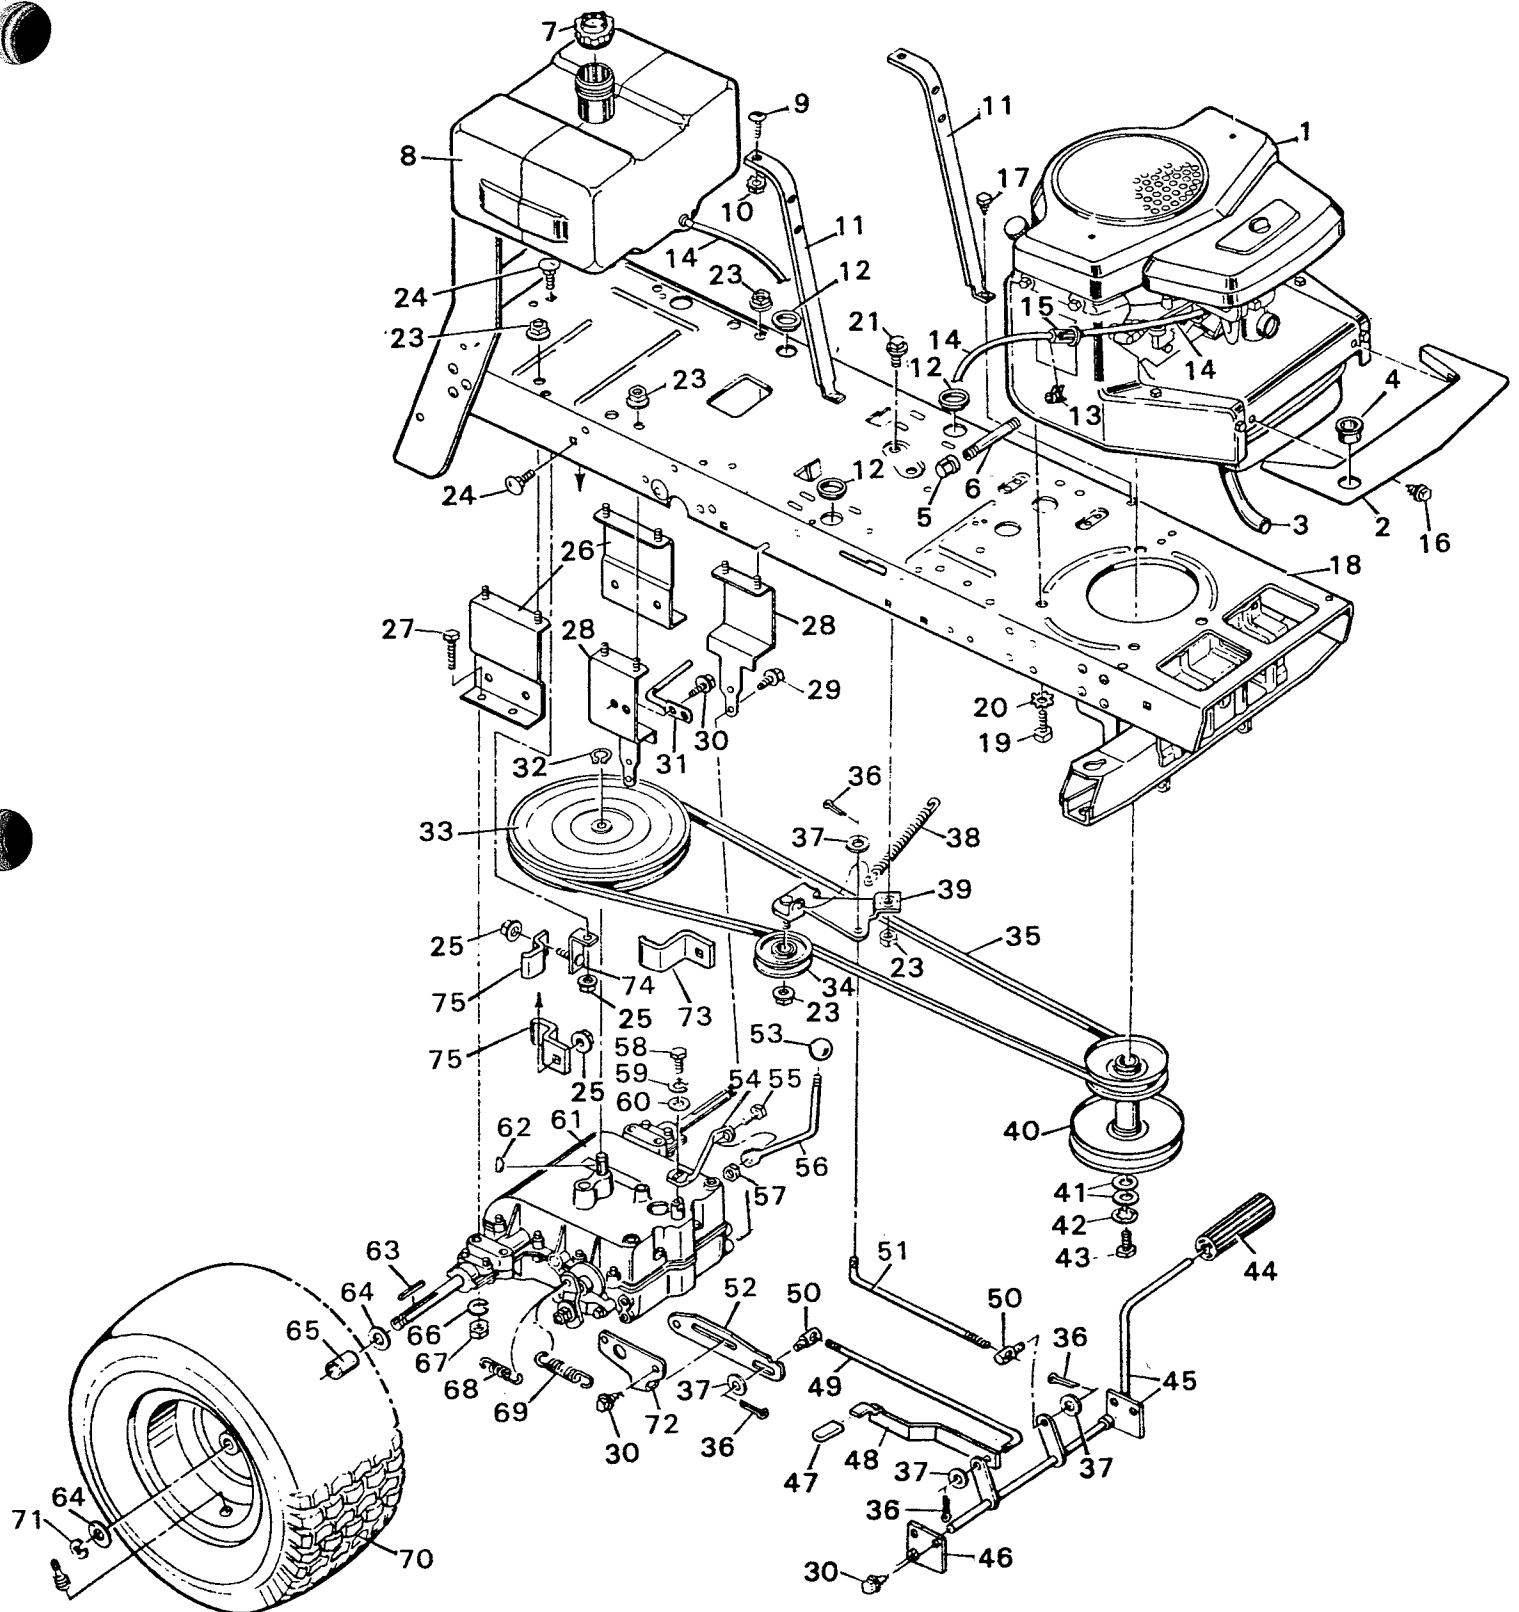

D-5151-3

MODEL 4-42204


DRIVE REPLACEMENT PARTS

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Engine***	----	41	Washer	10851Z
2	Baffle	23869	42	Star Washer	19X39
3	Exhaust Pipe	23743	43	Hex Bolt 3/8" 24X1"	1X20
4	Bushing	23857	44	Pedal, Clutch/Brake	21544
5	Oil Drain Cap	21651	45	Lever Assembly, Clutch/Brake	23389
6	Oil Drain Extension	23783	46	Support Bracket	23358
7	Fuel Cap	23787	47	Grip, Parking Brake	24235
8	Fuel Tank	23396	48	Parking Brake Arm	24201Z
9	Carriage Bolt 1/4" 20X3/4"	2X67	49	Brake Rod	23375Z
10	Flange Locknut 1/4" 20	15X89	50	Adjustable Nut	21920
11	Support, Fuel Tank	24331	51	Clutch Rod	24431Z
12	Grommet	21268	52	Brake Link Plate	24425Z
13	Hose Clamp	23713	53	Knob, Shift Lever	20739
14	Fuel Line	90671	54	Lower Shift Lever	23157Z
15	Fuel Filter	24159	55	Hex Bolt 5/16" 18X1"	1X84
16	Tap Screw 1/4"X1/2"	26X214	56	Upper Shift Lever	23720Z
17	Tap Screw 5/16"X3/4"	26X197	57	Flange Locknut 5/16" 18	15X88
18	Frame Channel	402053	58	Hex Bolt 1/4" 28X5/8"	1X82
19	Engine Mount Bolt	20103	59	Lockwasher	18X32
20	Star Washer	19X8	60	Washer	17X32Z
21	Shoulder Bolt 3/8" 16X7/8"	9X15	61	Transaxle Peerless	801-013
23	Flange Locknut 3/8" 16	15X84	62	Woodruff Key No. 9	20697
24	Carriage Bolt	2X53	63	Square Key 3/16"	21553
25	Flange Nut 5/16" 18	15X79	64	Washer	21521
26	Rear Transaxle Bracket	23154	65	Rear Axle Tube	87X63Z
27	Hex Bolt 5/16" 18X2 3/8"	1X99	66	Lockwasher	18X15
28	Front Transaxle Bracket	24036E	67	Hex Nut 5/16" 18	15X2
29	Formed Screw 5/16"X1"	26X207	68	Extension Spring	165X20
30	Tap Screw 5/16"X1/2"	26X49	69	Extension Spring	165X41
31	Belt Guide	24030Z	70	Rear Wheel and Tire	24429
32	Retainer Ring	11X7	†	Wheel (Only)	24351Z
33	Drive Pulley	75073	†	Tire Tube	407065
34	Backside Idler	23339	†	Tire (Only)	24430
35	Drive Belt	37X11	†	Valve Stem and Cap	24373
36	Cotter Pin	30X20	71	E Ring	11X3
37	Washer	17X53Z	72	Link Plate Support	24426
38	Extension Spring	165X17	73	Belt Guide	24469
39	Idler Bracket Assembly	24035Z	74	Bracket, Belt Guide	23808
40	Engine Stack Pulley	90329Z	75	Belt Guide	24468

***NOTE: The engine model, type, and code numbers are on the engine. All parts to the engine are available from a Briggs and Stratton Authorized Service Center. See the yellow pages under, "Engines, Gasoline" or "Gasoline Engines" in the telephone directory.

**NOTE: Replacement parts for the transmission are available from a Tecumseh Authorized Service Center. See the yellow pages under, "Engines, Gasoline" or "Gasoline Engines" in the telephone directory.


NOTE: These parts, shown with an (†), are included with key number 70. For replacement parts, always give the name on the side of the tire so that the tire tread pattern will be the same.

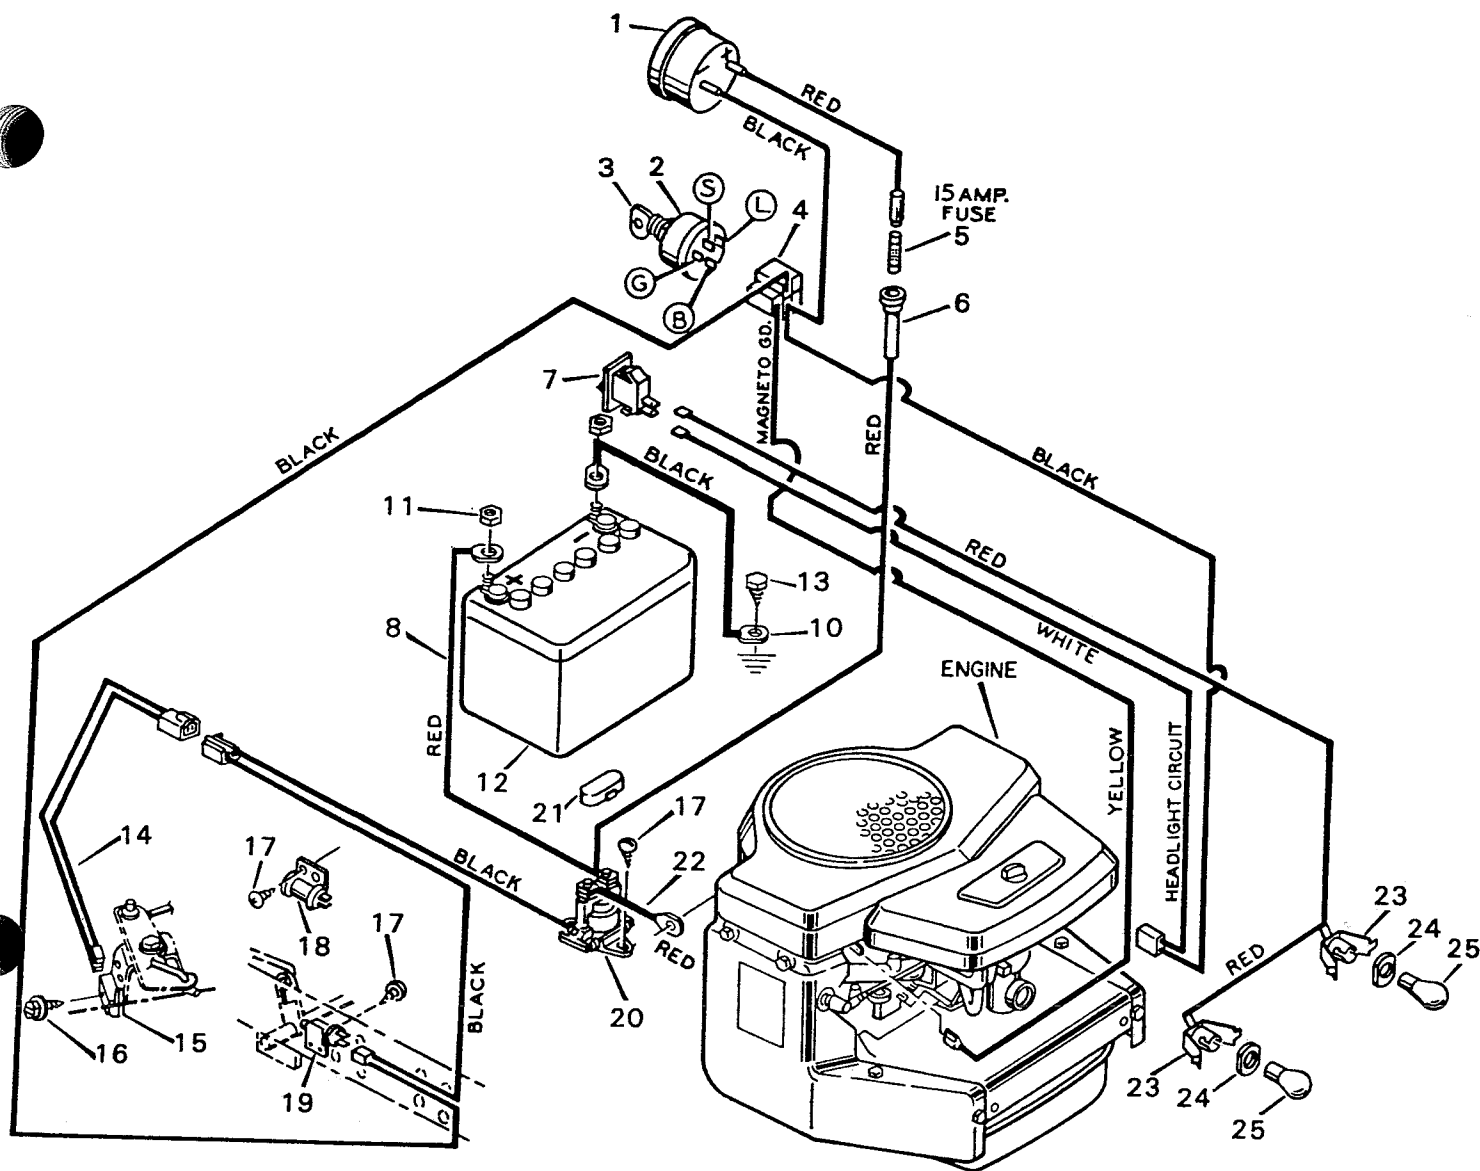

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Ammeter Assembly	21057PA		Battery Caps	400262
2	Ignition Switch and Key	21064PA	13	Screw	26x49
3	Key Only	20729	14	Jumper Wire	23983
4	Wiring Harness	24460	15	Limit Switch, Blade Housing	24527
	Wiring Harness Clamp	21980	16	Screw	26x211
5	Fuse	23752	17	Screw	26x185
6	Fuse Holder	407058	18	Limit Switch, Frame	23029
7	Light Switch	90647	19	Limit Switch, Clutch	21549
8	Battery Cable with Fuse Wire (Red)		20	Solenoid	24285
		24x21	21	Cover, Solenoid	90565
10	Battery Cable (Black)	24x6	22	Solenoid Wire (Red)	24x16
11	Keps Nut 1/4" 20	15x66	23	Light Socket Assembly	90155
12	Battery 39 AMP Hour Electrolyte (Battery Acid)	24106	24	Washer, Light Socket	90228
		90665	25	Headlight Bulb	90084

MODEL 24036

BLADE HOUSING DRAWING

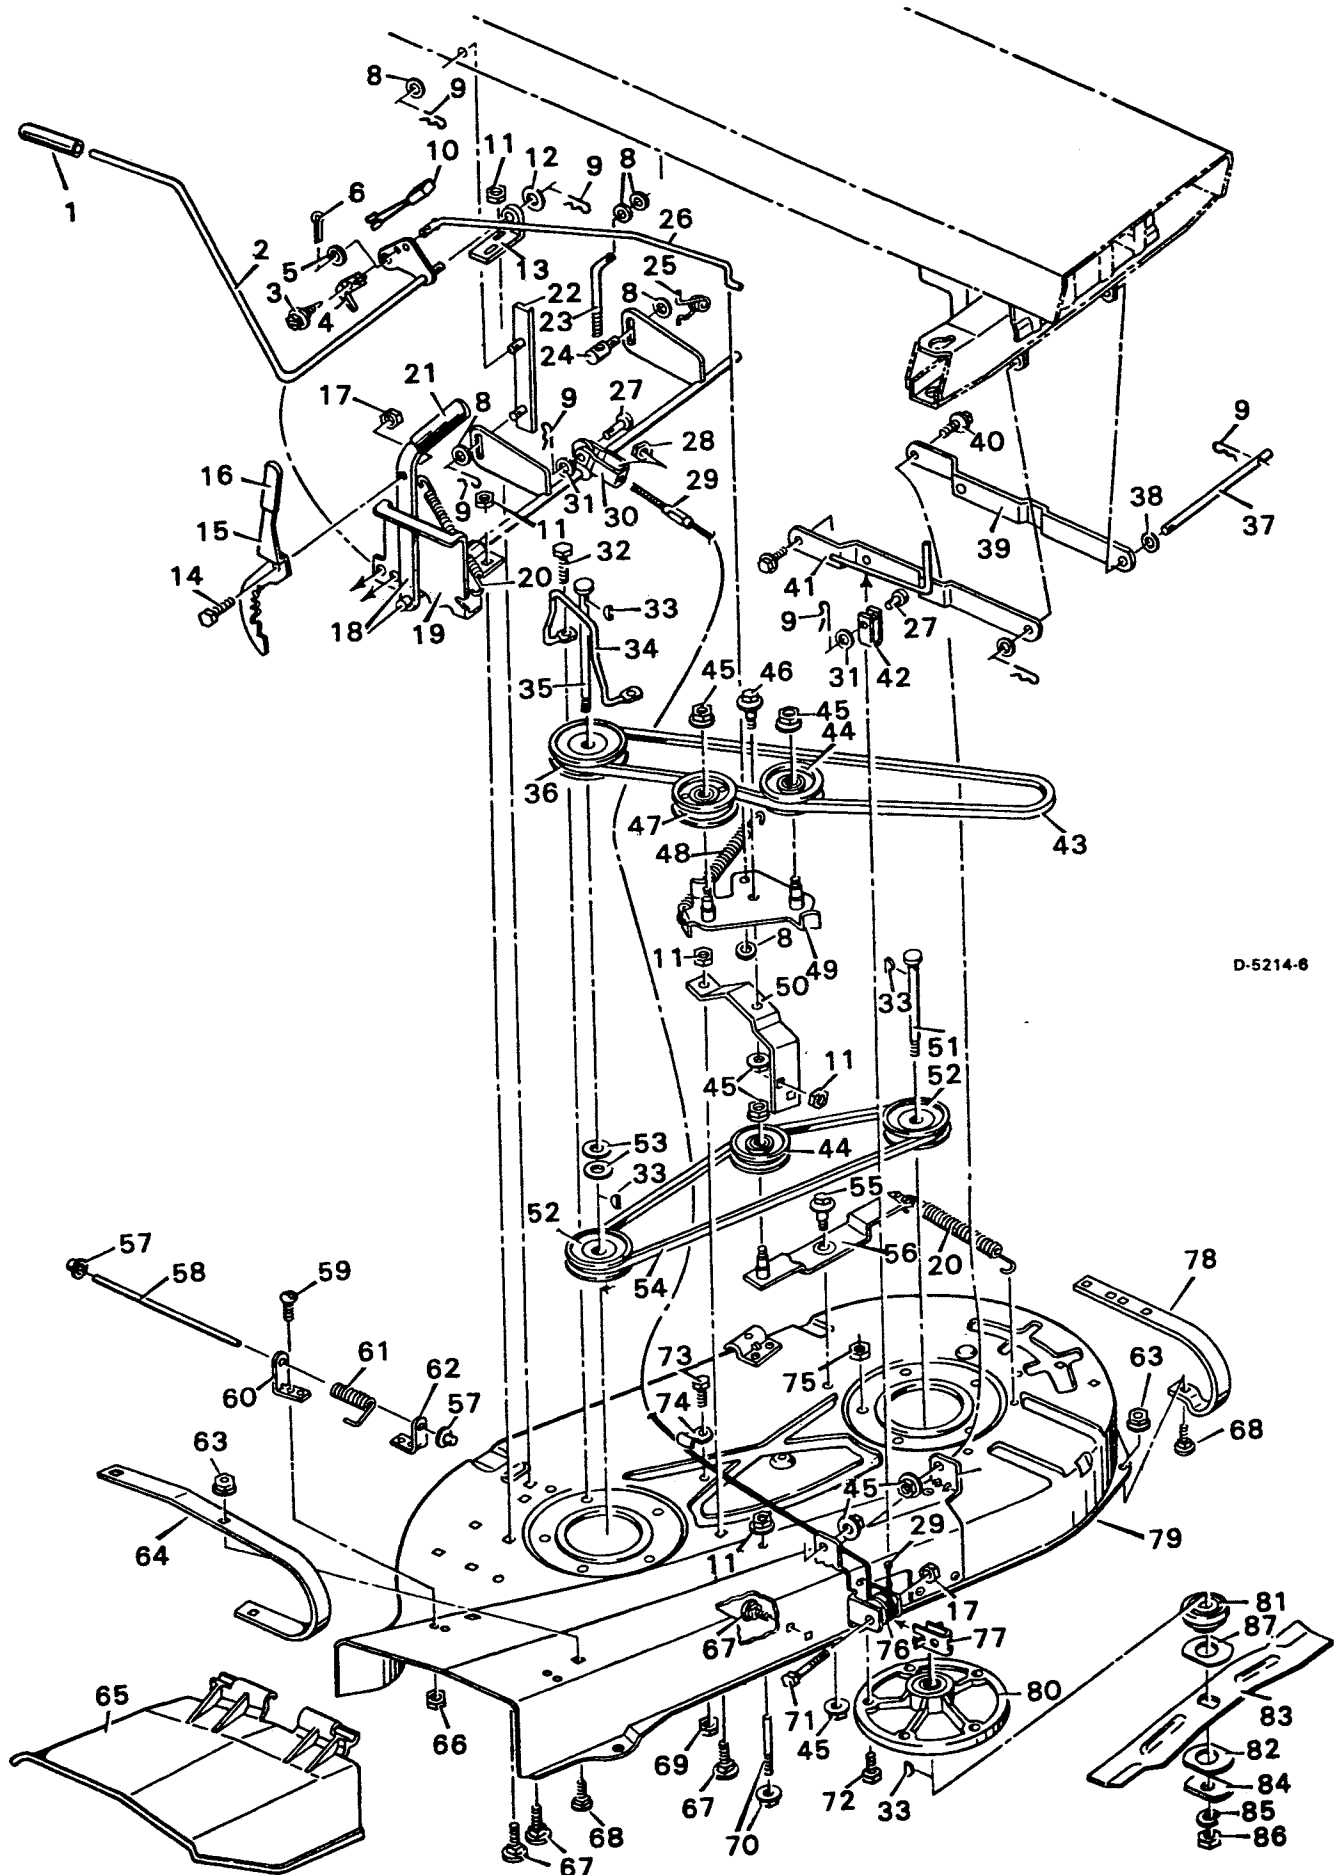


D-5214-6

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Grip-Blade Drive Lever	20476	46	Shoulder Bolt 3/8"-16X7/8"	9X12
2	Blade Drive Lever Assembly	24439C	47	Idler Pulley	21409
3	Tap Screw #10X1"	26X211	48	Extension Spring	165X43
4	Limit Switch	24527	49	Blade Drive Idler Assembly	24343
5	Washer	17X53Z	50	Bracket-Idler Support*	21496
6	Cotter Pin	30X20	51	Jackshaft-Short	20616
8	Washer	17X124	52	Jackshaft Pulley	21022
9	Hair Pin	20692	53	Washer	17X87Z
10	Jumper Wire	23984	54	Belt-Cross Drive	37X3
11	Flange Nut 5/16"-18*	15X79	55	Shoulder Bolt 3/8"-16X7/8"	9X15
12	Washer	17X67Z	56	Cross Drive Idler Bracket	21139Z
13	Bracket*	20934	57	Push On Cap	28X23
14	Shoulder Bolt 1/4"-20X7/16"	6X46	58	Deflector Rod	21198Z
15	Lifter Latch	21591Z	59	Machine Screw #10-24X1/4"*	4X68
16	Grip-Lifter Latch	20476	60	Deflector Bracket-Rear*	21187
17	Hex Locknut 1/4"-20	15X67	61	Torisional Spring	166X4
18	Lifter Assembly*	21906	62	Deflector Bracket-Front*	21186
19	Lifter Bracket*	21500	63	Flange Locknut 1/4"-20*	15X82
20	Extension Spring	165X2	64	Skid-R.H.*	90392
21	Grip-Lifter Assembly	21249	65	Chute Deflector	21154
22	Hanger Bracket-R.H.	23252Z	66	Hex Nut #10-24*	15X81
23	Adjusting Rod	21919Z	67	Carriage Bolt 5/16"-18X5/8"*	2X53
24	Adjusting Nut	21920	68	Carriage Bolt 1/4"-20X9/16"*	2X39
25	Torisional spring	166X16	69	Keps Nut 1/4"-20	15X66
26	Clutch Rod Assembly	24449Z	70	Belt Guide Assembly	24178
27	Clevis Pin	29X93	71	Hex Bolt 1/4"-20X1 3/4"	1X90
28	Hex Nut 5/16"-18	15X2	72	Hex Bolt 5/16"-18X1"	1X84
29	Lifter Cable	21913	73	Hex Bolt 1/4"-20X5/8"	1X38
30	Adjusting Clevis	21915Z	74	Cable Guide	21953Z
31	Washer	17X47Z	75	Flange Locknut 5/16"-18	15X88
32	Hex Bolt 5/16"-18X1 1/2"	1X102	76	Nylon Pulley	21916
33	Woodruff Key No. 6	20062	77	Cable Guide	21917Z
34	Belt Guide	23769Z	78	Skid-L.H.*	90353
35	Jackshaft-Long	21024	79	Blade Housing	90388
36	Pulley	23538	80	Jackshaft Housing	24384
37	Pull Pin	21912Z	81	Blade Adapter	20617
38	Washer	17X57Z	82	Washer	21673Z
39	Support Arm	21911	83	Blade	20930
40	Shoulder Bolt 3/8"-16X7/8"	9X14Z	84	Washer	20663Z
41	Support Arm Assembly	23256	85	Spring Lockwasher	18X27
42	Clevis	24073Z	86	Hex Nut 1/2"-20	15X72
43	Belt-Blade Drive	37X24	87	Washers	24614Z
44	Idler Pulley	20613		Parts Bag	23086
45	Flange Locknut 3/8"-16	15X84		Instruction Book	F-6637
				Complete Housing Ass'y	403132

** NOTE: These key numbers are included with key no. 79.

REPLACEMENT PARTS TOP HALF BLADE HOUSING

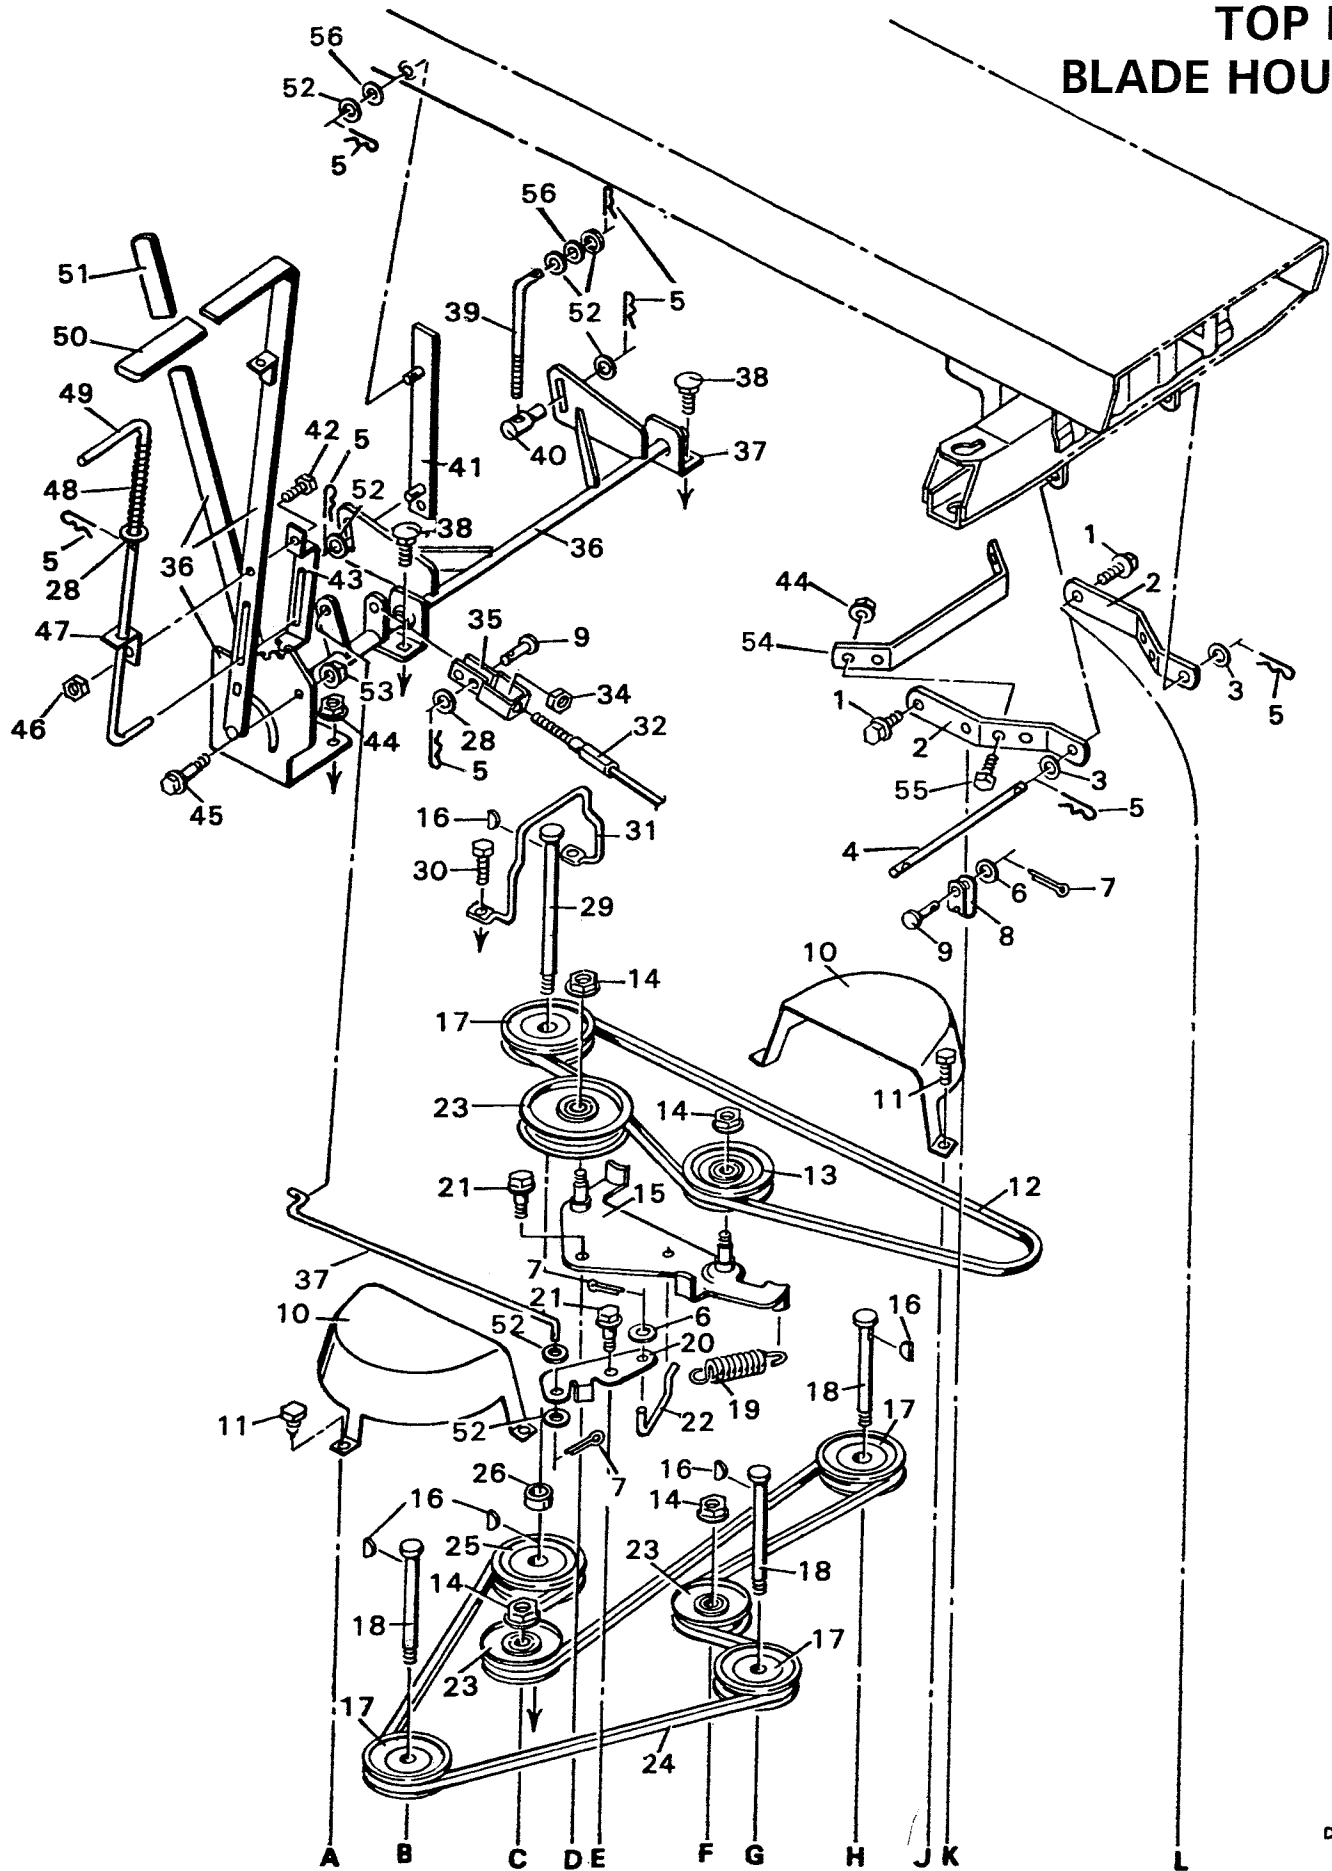

D-5113-3


REPLACEMENT PARTS BLADE HOUSING TOP HALF

MODEL 4-24042

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Shoulder Bolt	9X14	31	Belt Guide	23751Z
2	Support Arm	23185	32	Lifter Cable	24470
3	Washer	17X57Z	34	Hex Nut 5/16" 18	15X2
4	Pull Pin	21912Z	35	Adjusting Clevis	24471Z
5	Hair Pin	20692	36	Lifter Assembly †	24260
6	Washer	17X47Z	37	Lifter Support †	23184
7	Cotter Pin	30X20	38	Carriage Bolt 5/16" 18X3/4" †	2X53
8	Clevis	24073Z	39	Adjuster Rod, 7 5/16" Long	23824Z
9	Clevis Pin	29X93		Adjuster Rod, 6 1/4" Long	23275Z
10	Pulley Cover	23231	40	Adjustable Nut	21920
11	Screw	26X214	41	Right Hanger Bracket, 6 3/8" Long	23204Z
12	Belt, Blade Drive; For 11hp Tractor	37X21		Right Hanger Bracket, 5 1/2" Long	23188Z
	Belt, Blade Drive; For 16hp & 18hp	37X40	42	Hex Bolt 1/4" 20X7/8"	1X95
13	Idler Pulley	23211	43	Guide Bracket	23192Z
14	Flange Locknut 3/8"-16	15X84	44	Flange Locknut 5/16" 18 †	15X88
15	Blade Drive Idler Assembly	23179Z	45	Shoulder Bolt 3/8" 16	9X13
16	Woodruff Key No. 6	20062	46	Keps Nut 1/4" 20	15X66
17	Jackshaft Pulley	20615	47	Guide Bracket	23193Z
18	Jackshaft, Short	20616	48	Lifter Spring	164X4
19	Spring, Blade Drive	165X43	49	Lifter Latch	23194Z
20	Engagement Link	23226Z	50	Grip, Lifter Latch	23222
21	Shoulder Bolt 3/8"-16X7/8"	9X12	51	Grip, Engagement Lever	21249
22	Engagement Link Rod	23228Z	52	Washer	17X124
23	Idler Pulley, Backside	23238	53	Flange Nut 3/8" 16	15X68Z
24	Belt, Cross Drive	37X22	54	Hanger Brace	24472Z
25	Jackshaft Pulley	23739	55	Hex Bolt 5/16" 18X3/4"	1X91
26	Spacer	23213Z	56	Washer	10851Z
27	Link Rod	23232Z			
28	Washer	17X53Z			
29	Jackshaft	23180			
30	Hex Bolt 5/16" 18X1"	1X84			

NOTE: These parts, shown with an (†) in the description, are included with the blade housing. See the Lower Half of the Blade Housing.

**REPLACEMENT PARTS
BLADE HOUSING
LOWER HALF**

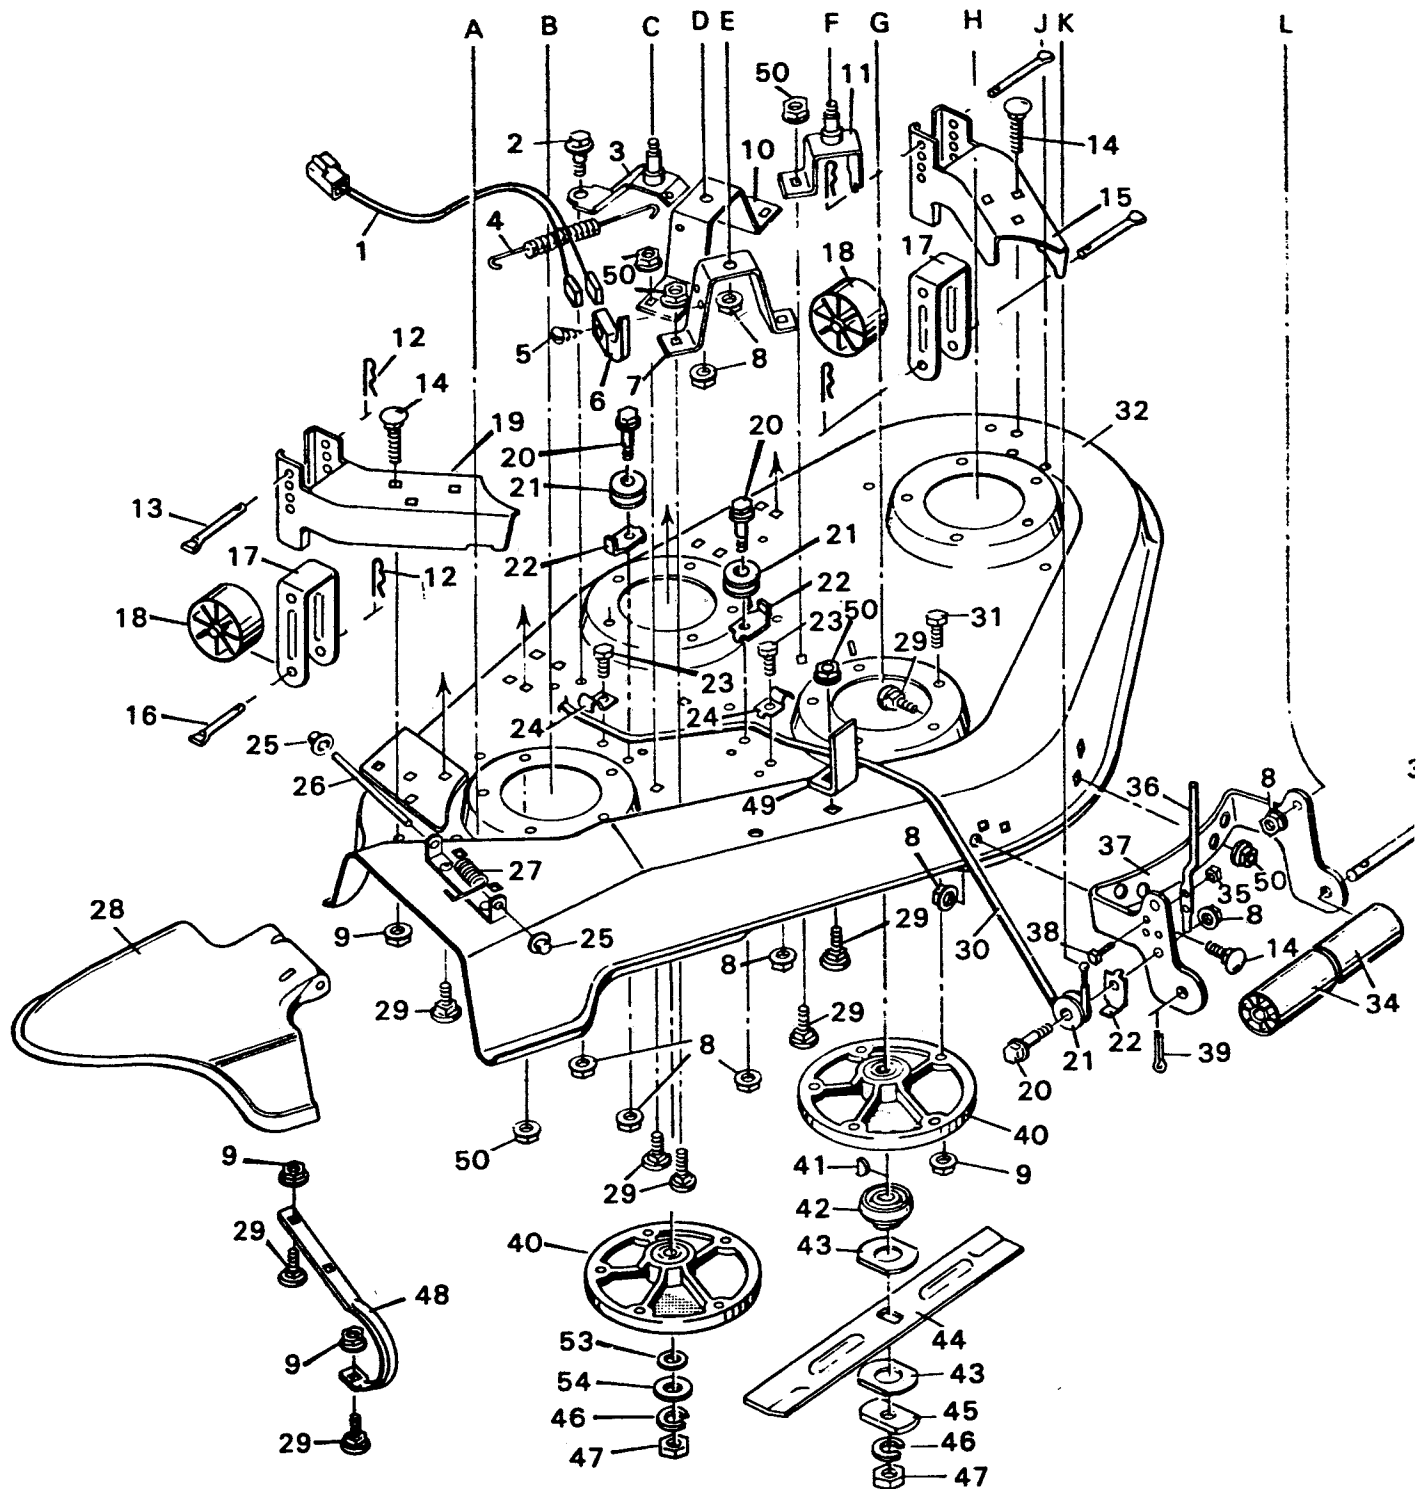

D-5118-4

REPLACEMENT PARTS

BLADE HOUSING

LOWER HALF

MODEL 4-24042

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Jumper Wire	23983	31	Hex Bolt 5/16" 18X3/4"	1X84
2	Shoulder Bolt 3/8"-16X7/8"	9X15	32	Blade Housing Assembly; with gauge wheels	24307
3	Cross Drive Idler Assembly	23178Z		Blade Housing Assembly; no guage wheels	24261
4	Spring, Cross Drive	165X19	33	Roller Axle	23186Z
5	Screw	26X211	34	Roller	23203
6	Limit Switch	24527	35	Flange Locknut 1/4" 20	15X89
7	Engagement Link Support †	23241	36	Belt Guide, Curved	24071Z
8	Flange Locknut 3/8"-16	15X84		Belt Guide, Straight	23790Z
9	Flange Locknut 5/16"-18 †	15X88	37	Roller Support †	24009
10	Idler Support †	23240	38	Hex Bolt 1/4" 20X7/8"	1X95
11	Fixed Idler Assembly †	23177	39	Cotter Pin	30X49
12	Hair Pin	20692	40	Jackshaft Housing	24384
13	Long Axle, Gauge Wheel	23259Z	41	Woodruff Key, Number 6	20062
14	Carriage Bolt 5/16"-18X2 1/2" †	2X58	42	Blade Adapter	20617
15	Bracket, Left Gauge Wheel †	23279	43	Washer	21673Z
16	Short Axle, Gauge Wheel	23258Z	44	Blade	24458
17	Retainer, Gauge Wheel	23260Z	45	Blade Washer	20663
18	Gauge Wheel	23257	46	Lockwasher	18X27
19	Bracket, Right Gauge Wheel †	23278	47	Hex Nut 1/2" 20	15X72
20	Shoulder Bolt 3/8" 16	9X13	48	Skid †	24070
21	Nylon Pulley	23187	49	Deck Stop †	23782
22	Cable Guide	23191Z	50	Flange Nut 5/16" 18 †	15X79
23	Screw	26X214	53	Washer	17X140
24	Cable Guide	21953Z	54	Washer	17X141
25	Push On Cap	28X23		Blade Housing Complete, Top and Bottom	403134
26	Deflector Rod	23173Z		Parts Bag	23242
27	Torsional Spring	166X4		Instruction Book	F-6829
28	Deflector, Blade Housing	23224			
29	Carriage Bolt 5/16" 18X3/4" †	2X53			
30	Lifter Cable	24470			

NOTE: These parts, shown with an (†) in the description, are included when ordering key number 32.