

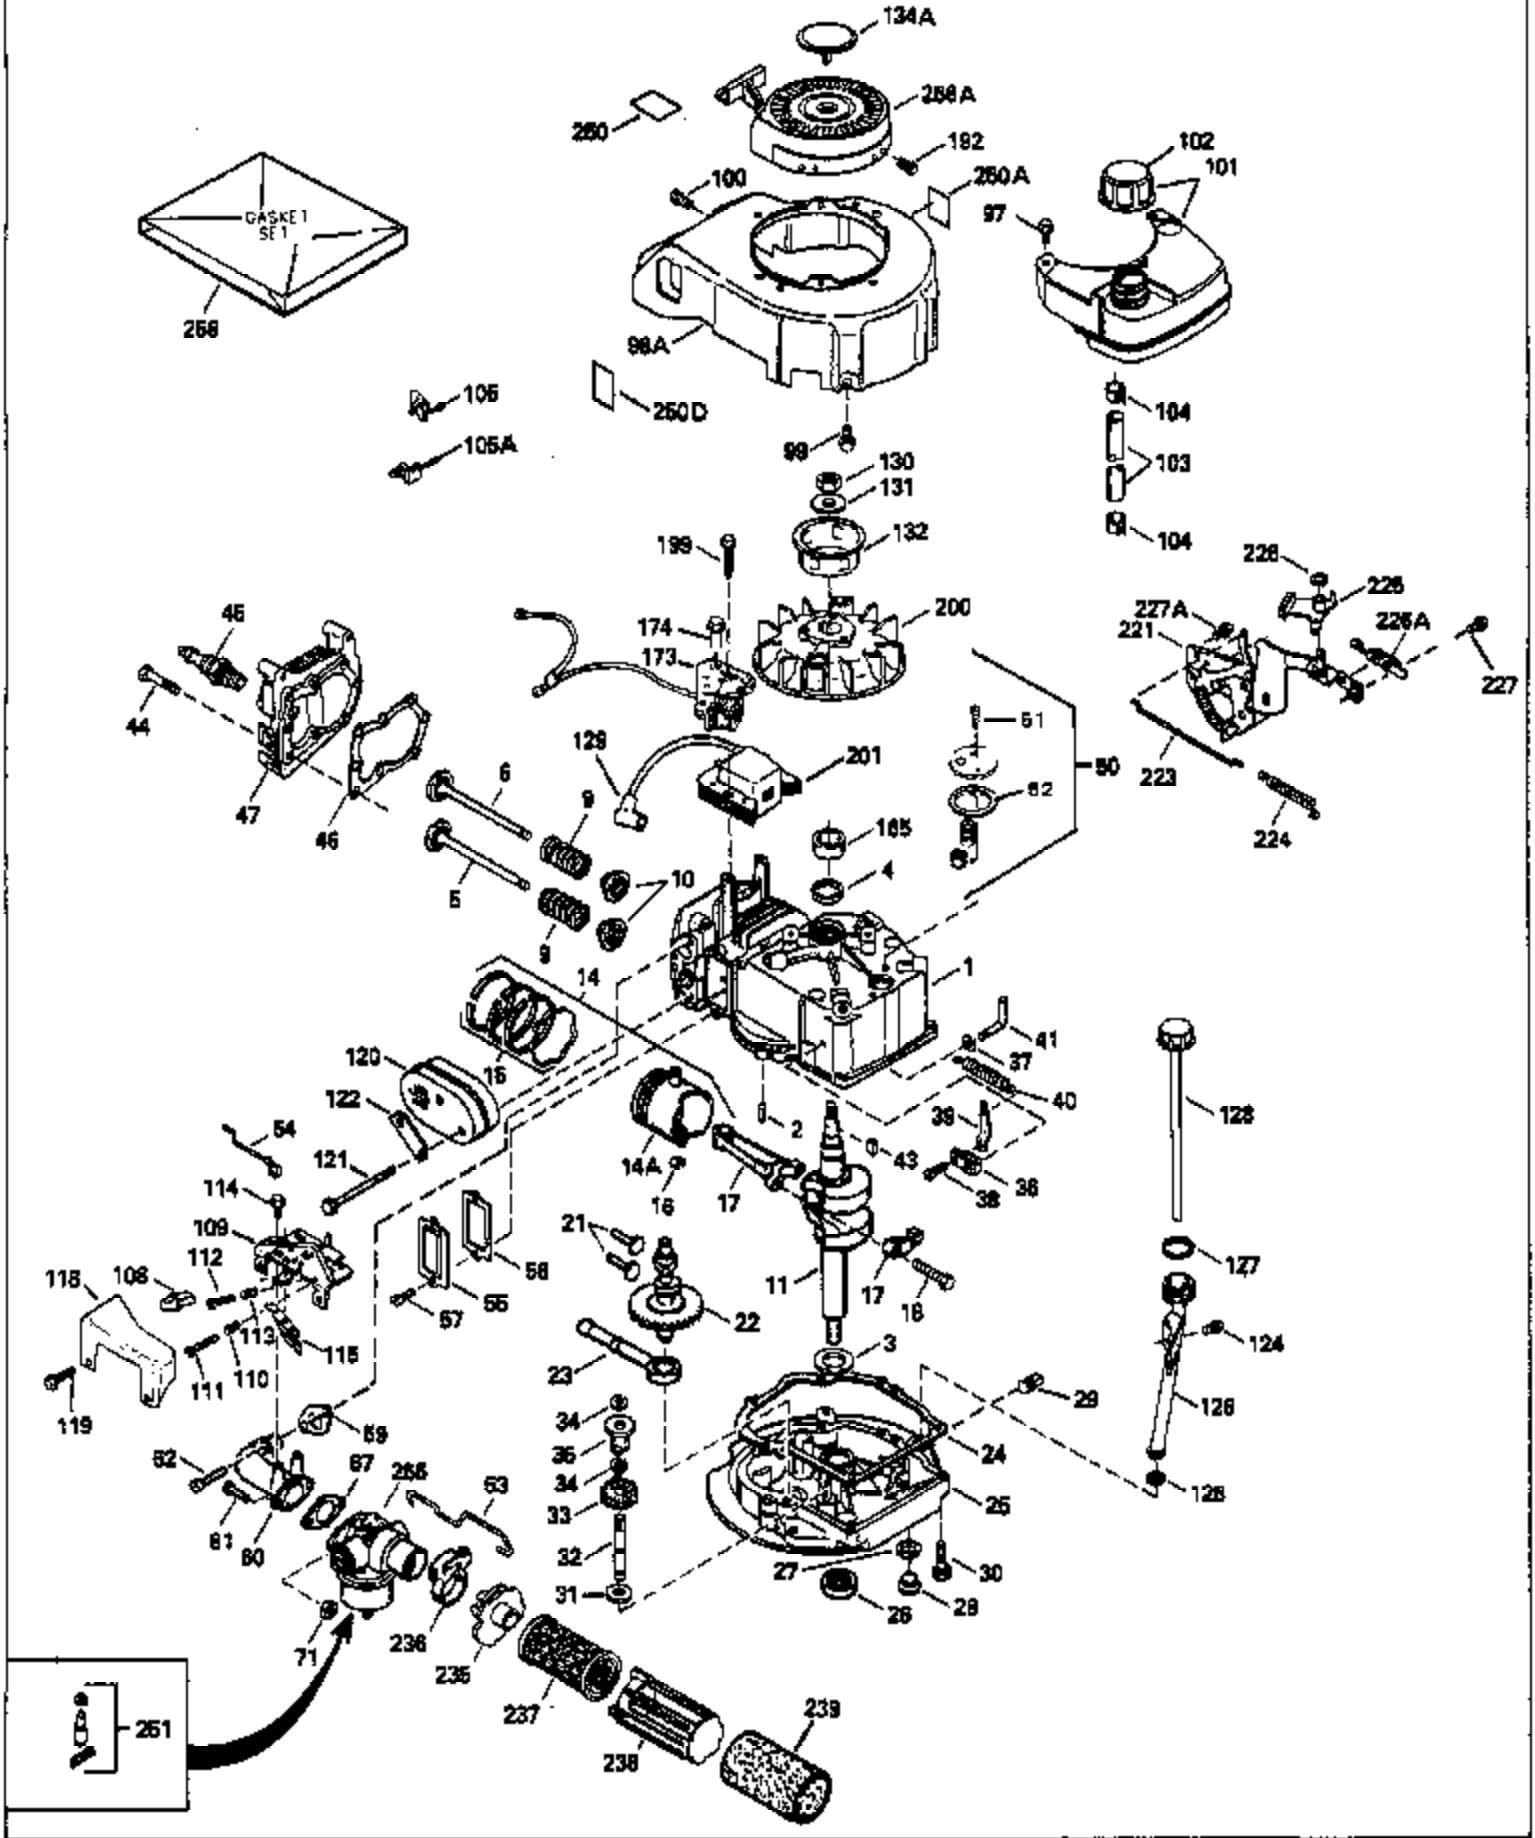
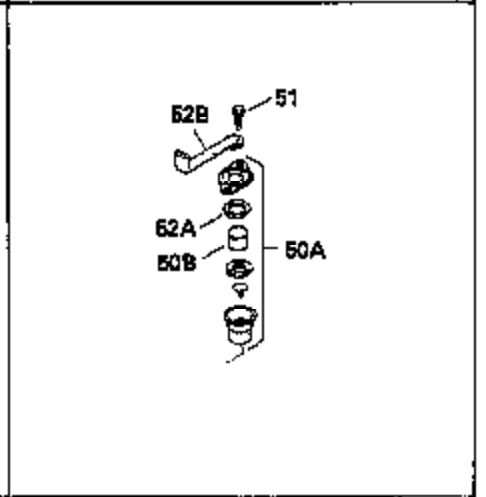
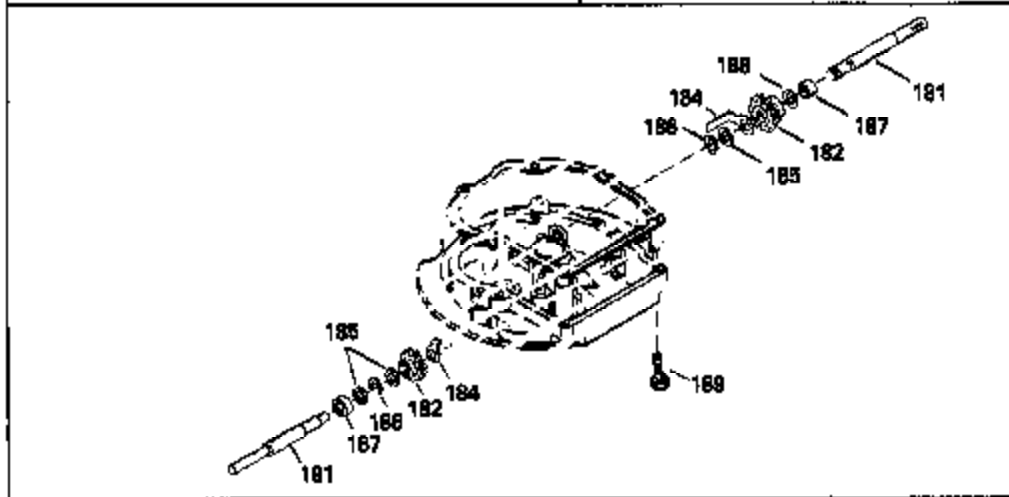
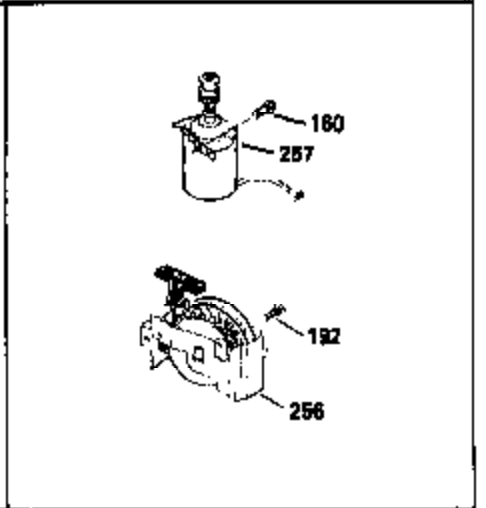
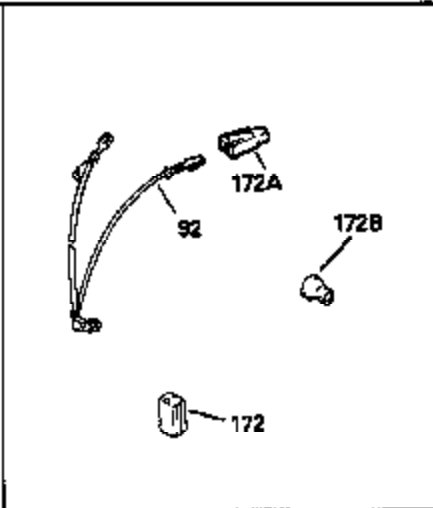


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

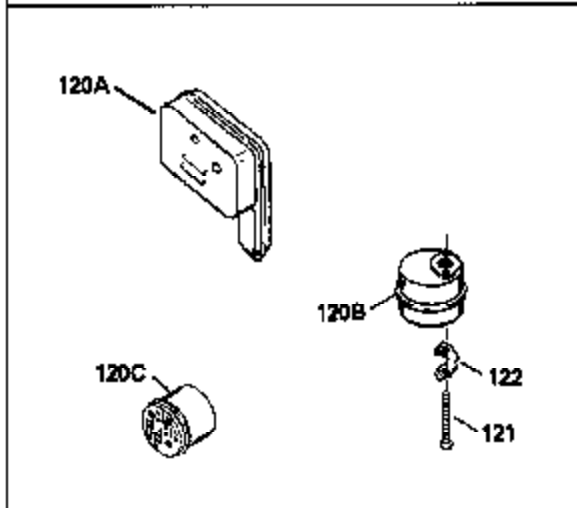

Ref #	Part Number	Qty	Description
1	35180		Cylinder (Incl. 2 & 4) (2-5/8" Bore)
2	26727		Pin, Dowel
3	32323		Washer, Thrust
4	32600		Seal, Oil
5	29313C		Exhaust Valve (Std.) (Incl. 10) (Conventional Ports)
5	29315C		Exhaust Valve (1/32" OS) (Incl. 10) (Conventional Ports)
6	29314B		Intake Valve (Std.) (Incl. 10) (Conventional Ports)
6	29315C		Intake Valve (1/32" OS) (Incl. 10) (Conventional Ports)
9	31672		Spring, Valve
10	31673		Cap, Lower valve spring
11	35175		Crankshaft
14A	32603B		Piston & Pin Ass'y.(Incl.16)(Std.)(2- 5/8")
14A	32604B		Piston & Pin Ass'y. (Incl. 16) (.010" OS)
14A	32605B		Piston & Pin Ass'y. (Incl. 16) (.020" OS)
14	34851		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34852		Piston, Pin & Ring Set (.010" OS)
14	34853		Piston, Pin & Ring Set (.020" OS)
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	20381		Ring, Piston pin retaining
17	30963B		Rod Assy., Connecting (Incl. 18)
18	32610A		Bolt, Connecting rod
21	27241		Lifter, Exhaust valve
22	33553		Camshaft (MCR)
23	29914		Pump Assy.
24	35261		* Gasket, Mounting flange
25	34311B		Flange Ass'y. (Incl. 26, 28, 29 & 32)
26	27897		Seal, Oil
27	28833		* Drain Plug Gasket (Not req. w/plastic plug)
28	30572		Plug, Oil drain
30	650488		Screw, 1/4-20 x 1-1/4"
31	30590A		Washer, Flat
32	30574		Shaft, Mechanical governor
33	30591		Gear Assy., Governor (Incl. 31)
34	29193		Ring, Retaining
35	30588A		Spool, Governor
36	31335		Clamp, Governor lever
37	28277		Washer, Flat
38	650548		Screw, 8-32 x 5/16"
39	31383A		Lever, Governor
40	31361		Spring, Governor
41	30589		Rod, Governor (Incl. 37)
43	611004		Key, Flywheel
44	6021A		Screw, 5/16-18 x 1-1/2"
45	35395		Resistor Spark Plug (RJ-19LM)
46	33015		* Gasket, Cylinder head
47	34342		Head, Cylinder
50	34215		Breather Assy. (Incl. 51 & 52)
51	30200		Screw, 10-24 x 9/16"
52	32760		* Gasket, Breather
53	34336		Link, Governor-to-throttle
54	34337		Link, Governor spring
55	32755		Cover, Valve spring box
56	27234		* Gasket, Valve spring cover
57	650128		Screw, 10-24 x 1/2"
59	34690		* Gasket, Intake
60	31384A		Pipe, Intake (Incl. 59)

Ref #	Part Number	Qty	Description
61	6201		Screw, 1/4-28 x 7/8"
62	650451		Screw, 1/4-20 x 1"
67	26756		* Gasket, Carburetor
71	29752		Nut & Lockwasher, 1/4-28
97	28763		Screw, 10-32 x 19/32"
99	650831		Screw, 1/4-20 x 1/2"
100	30200		Screw, 10-24 x 9/16"
101	34369A		Fuel Tank (Incl. 102 & 104)
102	35355		Fuel Cap
103	30705		Fuel Line (Braided 16")
104	26460		Clamp, Fuel line
108	32410		Knob, Speed control
109	33205A		Control Bracket (Incl. 110,111,112,113 & 115)
110	33802		Spring, Compression
111	650777		Screw, 6-32 x 17/32"
112	650549		Screw, 6-50 x 7/16"
113	31342		Spring, Compression
114	30200		Screw, 10-24 x 9/16"
118	35176		Cover, Speed control
119	650807		Screw, 10-32 x 7/16"
121	650869		Screw 1/4-20 x 2-3/4"
122	35171		Plate, Lock
124	650562		Screw, 10-32 x 1/2"
125	34265		Gasket, Oil fill tube
126	35577		Tube Assy., Oil filler
127	35499		"O" Ring
128	35578		Dipstick, Oil
129	610118		Cover, Spark plug
130	650816		Nut, Flywheel
131	650815		Washer, Belleville
132	35000		Hub, Starter
134A	35392		Plug, Starter
165	34080		Spacer, Flywheel Key
173	35365		Coil Assy., Alternator
174	650767		Screw, 8-36 x 5/8"
192	650884		Screw, 8-32 x 1/2"
199	650814		Screw, 10-24 x 1"
200	611044		Flywheel
201	34443A		Solid State Assy.
221	35015A		Bracket Assy., S.E. Brake
223	34966		Link, Control
224	34965		Spring, Extension
225	34968		Lever, Brake
226	32309		Ring, Retaining
226A	610973		Terminal Assy.
235	35067		Collar, Air cleaner
236	35068		Clamp, Air cleaner
237	35066		Element, Air cleaner
238	35065		Cover, Air cleaner
239	35435		Filter, Pre-air (Use as required) (Po ly)
251	631021		Inlet Needle, Seat & Clip Assy.
255	632389		Carburetor (Incl. 67) (Refer to Division 5, Section A, page 196 for breakdown)
256A	590621		Rewind Starter (Refer to Division 5, Section C, page 34 for breakdown)
258	33238B		* Gasket Set (Incl. items marked *)

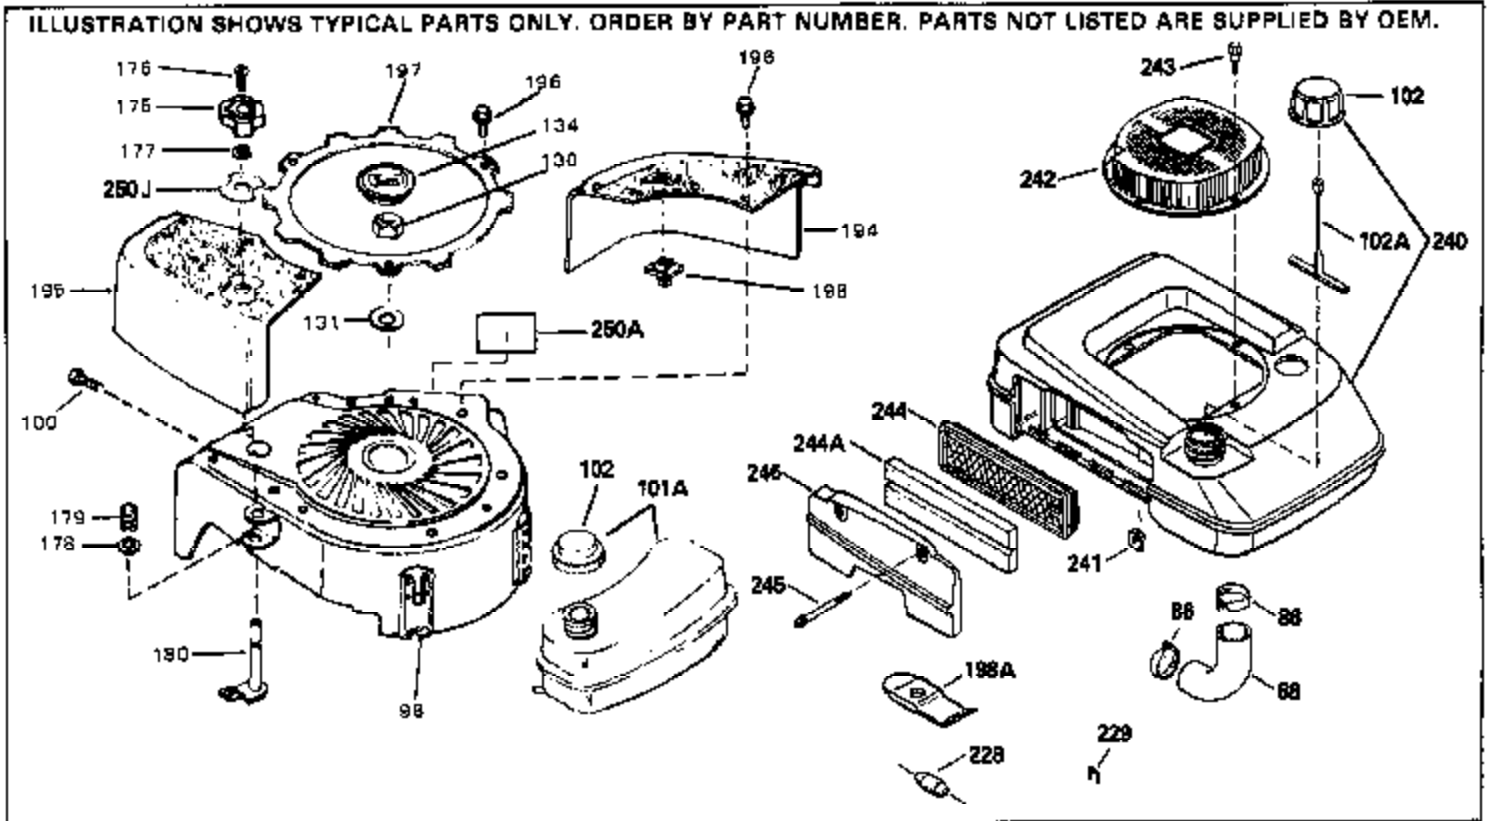

Ref #	Part Number	Qty	Description
51	30200		Screw, 10-24 x 9/16"
92	34961		Ground Wire
92	35356		Ground Wire
98	35494		Housing, Blower
100	30200		Screw, 10-24 x 9/16"
102A	35480		Retainer, Fuel cap
102	35355		Fuel Cap
120B	35172		Muffler (Incl. 122)
121	650869		Screw 1/4-20 x 2-3/4"
122	35171		Plate, Lock
130	650816		Nut, Flywheel
131	650815		Washer, Belleville
160	650831		Screw, 1/4-20 x 1/2"
172B	35587		Seal, Connector
172	610921		Connector
172	34977		Connector
192	650884		Screw, 8-32 x 1/2"
198A	35168		BracketAssy., Rope guide
228	34985		Rope Stop & Staple Assy.
257	34934		Starter Motor (12 Volt Power Restart) (Refer to Division 5, Section D, page 18 for breakdown)