

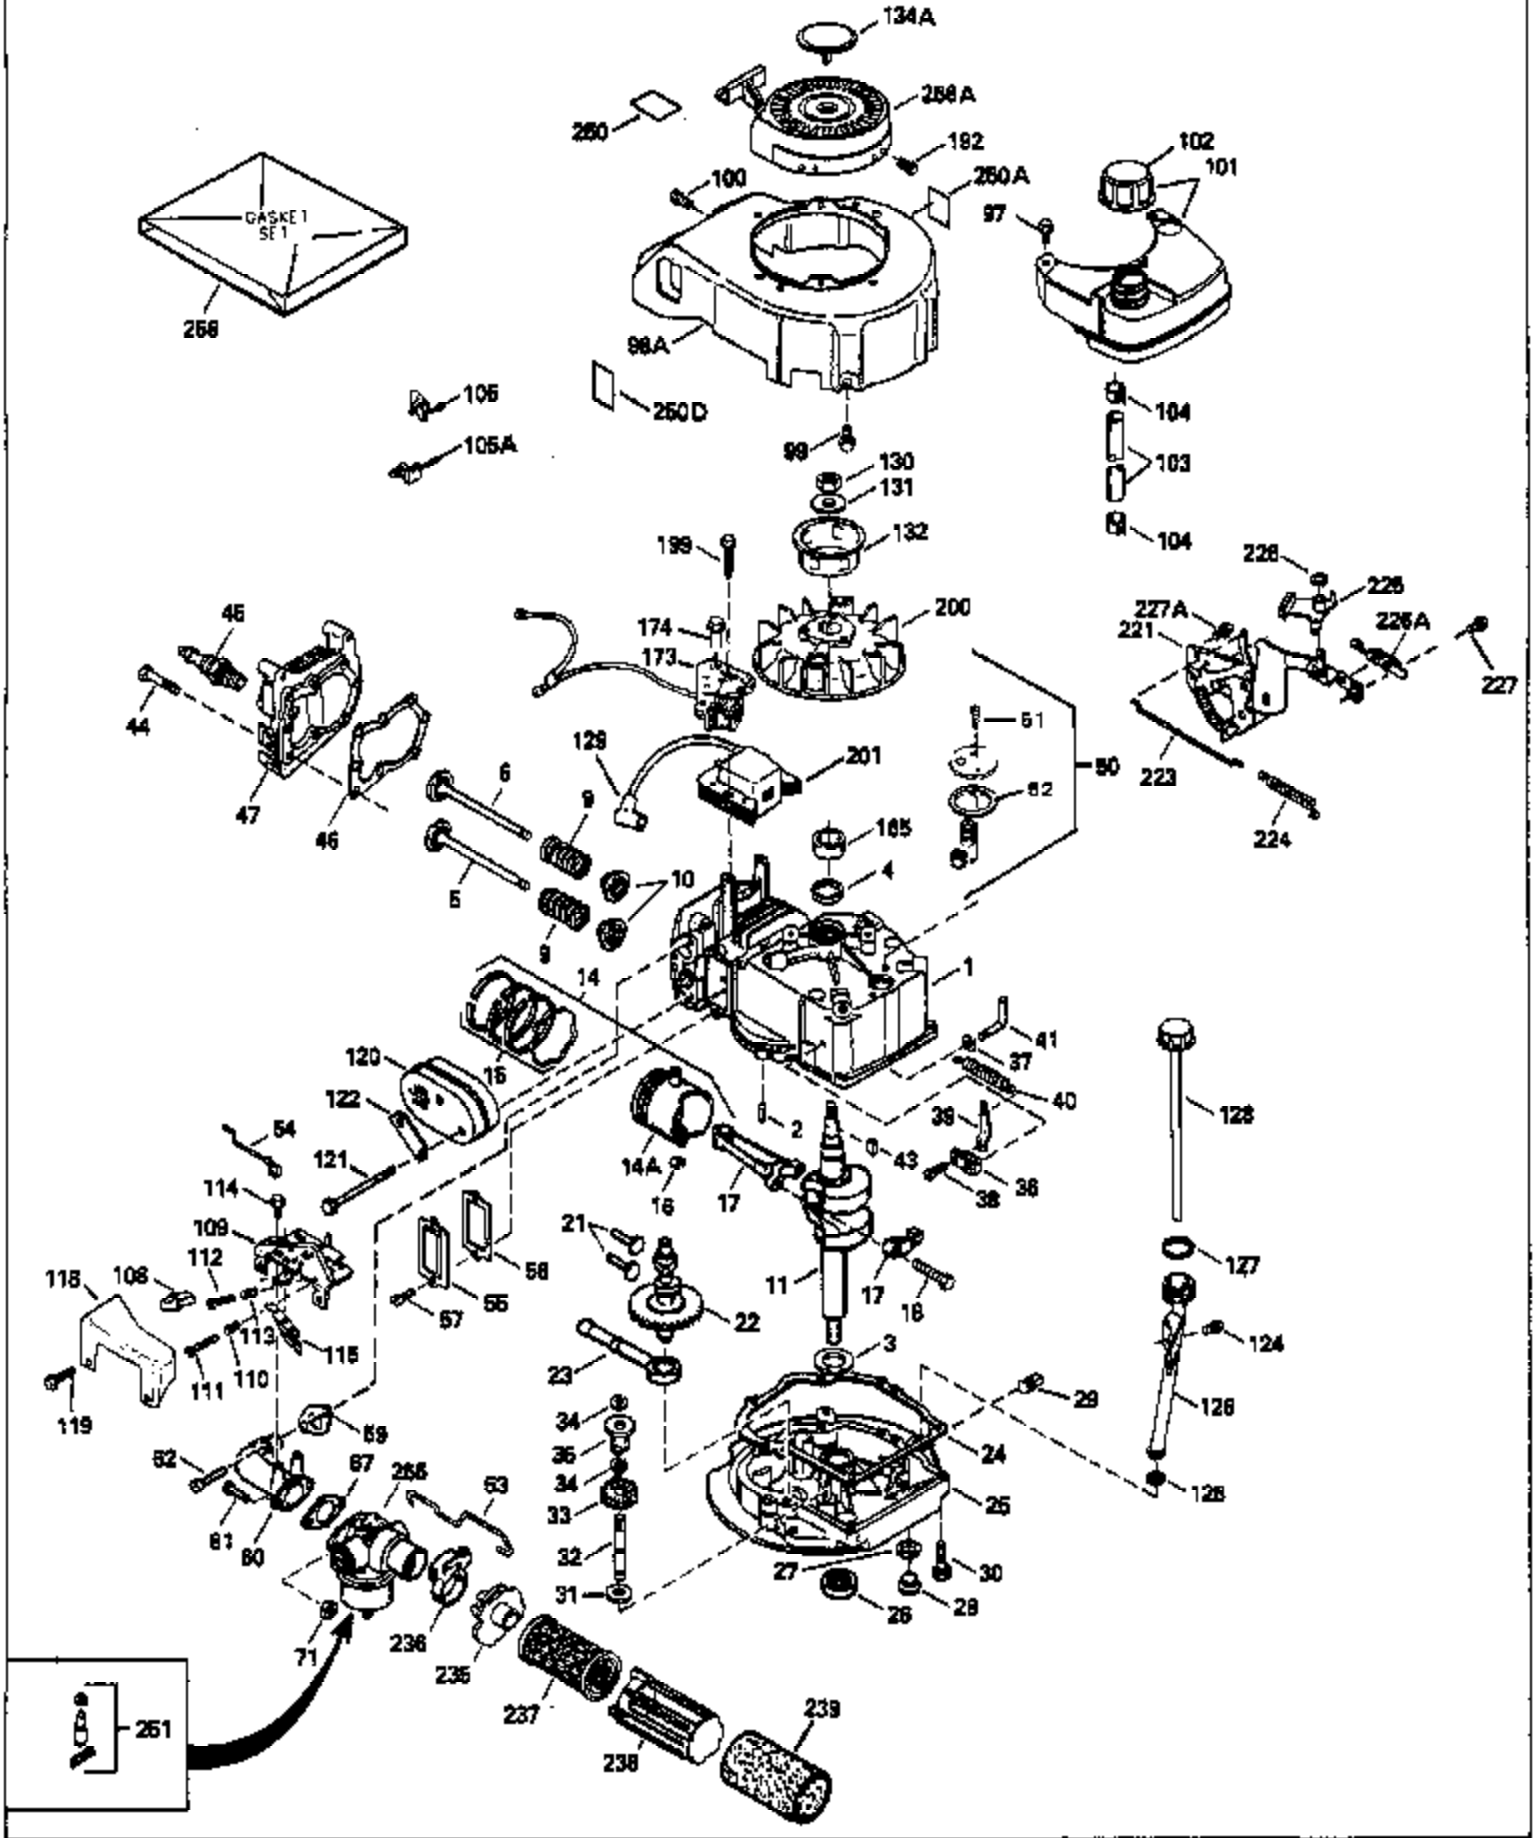
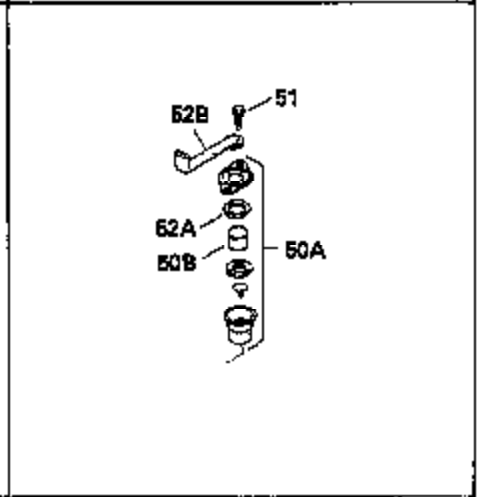
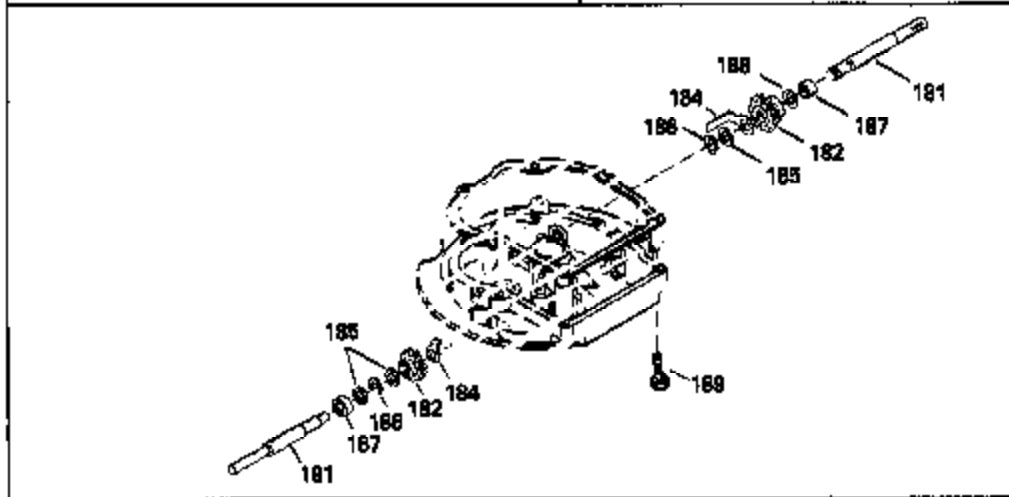
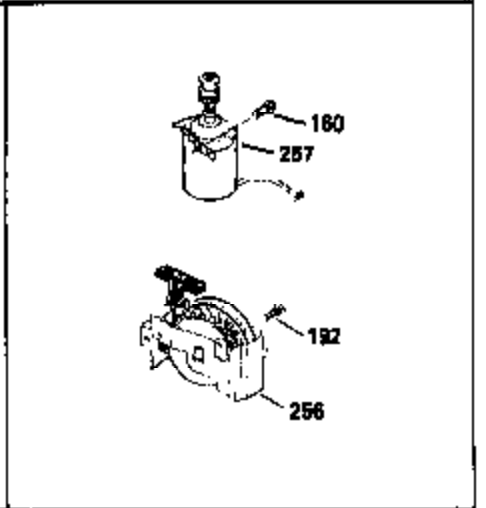
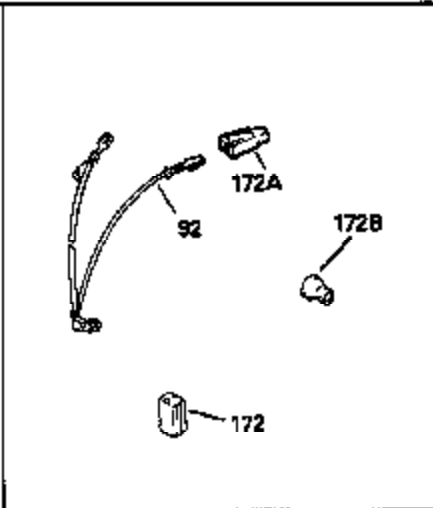


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

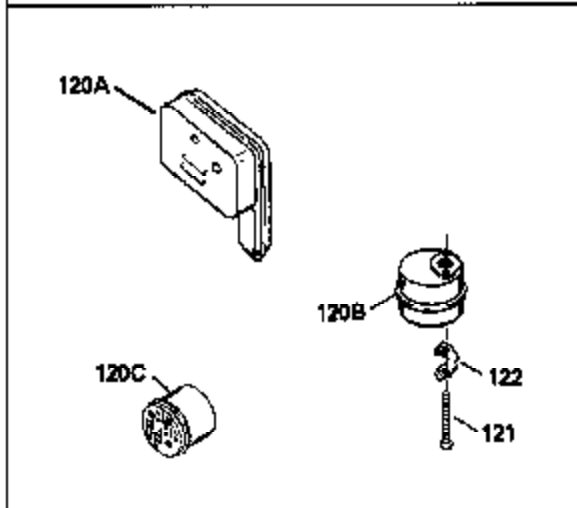

Ref #	Part Number	Qty	Description
1	34959		Cylinder Ass'y. (Incl. 2, 4, 50, 51 & 52)
2	26727		Dowel Pin
4	32600		Oil Seal
5	29313C		Exhaust Valve (Std.) (Incl.10)
5	29315C		Exhaust Valve (1/32" OS) (Incl. 10)
6	29314B		Intake Valve (Std.) (Incl. 10)
6	29315C		Intake Valve (1/32" OS) (Incl. 10)
9	31672		Valve Spring
10	31673		Lower Valve Spring Cap
11	34451		Crankshaft
14A	35541		Piston & Pin Ass'y. (Std.) (Incl. 16)
14A	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 16)
14A	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 16)
14	35544		Piston, Pin & Ring Set (Std.)
14	35545		Piston, Pin & Ring Set (.010 OS)
14	35546		Piston, Pin & Ring Set (.020 OS)
15	35547		Ring Set (Std.)
15	35548		Ring Set (.010 OS)
15	35549		Ring Set (.020 OS)
16	20381		Piston Pin Retaining Ring
17	30963B		Connecting Rod (Incl. 18)
18	32610A		Connecting Rod Bolt
21	27241		Valve Lifter
22	33148A		Camshaft (Compression Release)
23	29914		Oil Pump Ass'y.
24	35261		* Mounting Flange Gasket
25	33521C		Mounting Flange (Incl. 26 thru 29, 32 & 187)
26	26208		Oil Seal
28	27244		Oil Drain Plug
30	650488		Screw, 1/4-20 x 1-1/4"
31	35479		Washer
32	30574		Governor Shaft
33	30591		Governor Gear Ass'y. (Incl. 31)
34	29193		Retaining Ring
35	30588A		Governor Spool
36	31335		Governor Lever Clamp
37	28277		Washer
38	650548		Screw, 8-32 x 5/16"
39	31383A		Governor Lever
40	31361		Extension Spring
41	31513		Governor Rod
43	611004		Flywheel Key
44	6021A		Screw, 5/16-18 x 1-1/2"
45	35395		Resistor Spark Plug (RJ19LM)
46	32643A		* Cylinder Head Gasket
47	34335		Cylinder Head
50	34215		Breather Ass'y. (Incl. 51 & 52)
51	30200		Screw, 10-24 x 9/16"
52	32760A		* Breather Gasket
53	34336		Throttle Link
54	34337		Governor Link
55	32755		Valve Spring Box Cover
56	27234A		* Valve Spring Cover Gasket
57	650128		Screw, 10-24 x 1/2"
59	34690A		* Intake Pipe Gasket
60	31384A		Intake Pipe (Incl. 59)
61	6201		Screw, 1/4-28 x 7/8"
62	650451		Screw, 1/4-20 x 1"

Ref #	Part Number	Qty	Description
67	26756		* Carburetor Gasket
71	29752		Nut, 1/4-28
92A	34084		Ground Wire
97	28763		Screw, 10-32 x 19/32"
99	650831		Screw, 1/4-20 x 15/32"
100	30200		Screw, 10-24 x 9/16"
101	34369A		Fuel Tank (Incl. 102 & 104)
102	35355		Fuel Cap
103	30705		Fuel Line
104	26460		Fuel Line Clamp
105	34246		Wire Clip
105A	29443		Spring Clip
108	32410		Control Knob
109	35727		Control Bracket (Incl. 110 thru 115)
110	33802		Compression Spring
111	650777		Screw, 6-32 x 21/32"
112	650549		Screw, 5-40 x 7/16"
113	31342		Compression Spring
114	30200		Screw, 10-24 x 9/16"
115	610973		Terminal
118	35177		Speed Control Cover
119	650807		Screw, 10-32 x 7/16"
121	792005		Screw, 1/4-20 x 2-1/2"
122	33753		Locking Plate
124	650562		Screw, 10-32 x 1/2"
125	34265		Fill Tube Gasket
126	35577		Oil Fill Tube
127	35499		"O" Ring
128	35578		Dipstick
129	610118		Spark Plug Cover
130	650816		Flywheel Nut
131	650815		Belleville Washer
165	34080		Flywheel Key Spacer
192	650802		Screw, 1/4-20 x 5/8"
199	650814		Screw, 10-24 x 1"
200	611046A		Flywheel
201	34443A		Solid State Ignition
235	35067		Air Cleaner Collar
236	35068		Air Cleaner Clamp
237	35066		Air Cleaner Filter
238	35065		Air Cleaner Cover
250	34442A		Instruction Decal
255	632389		Carburetor (Incl. 67)
258	33238D		Gasket Set (Incl. items marked *)

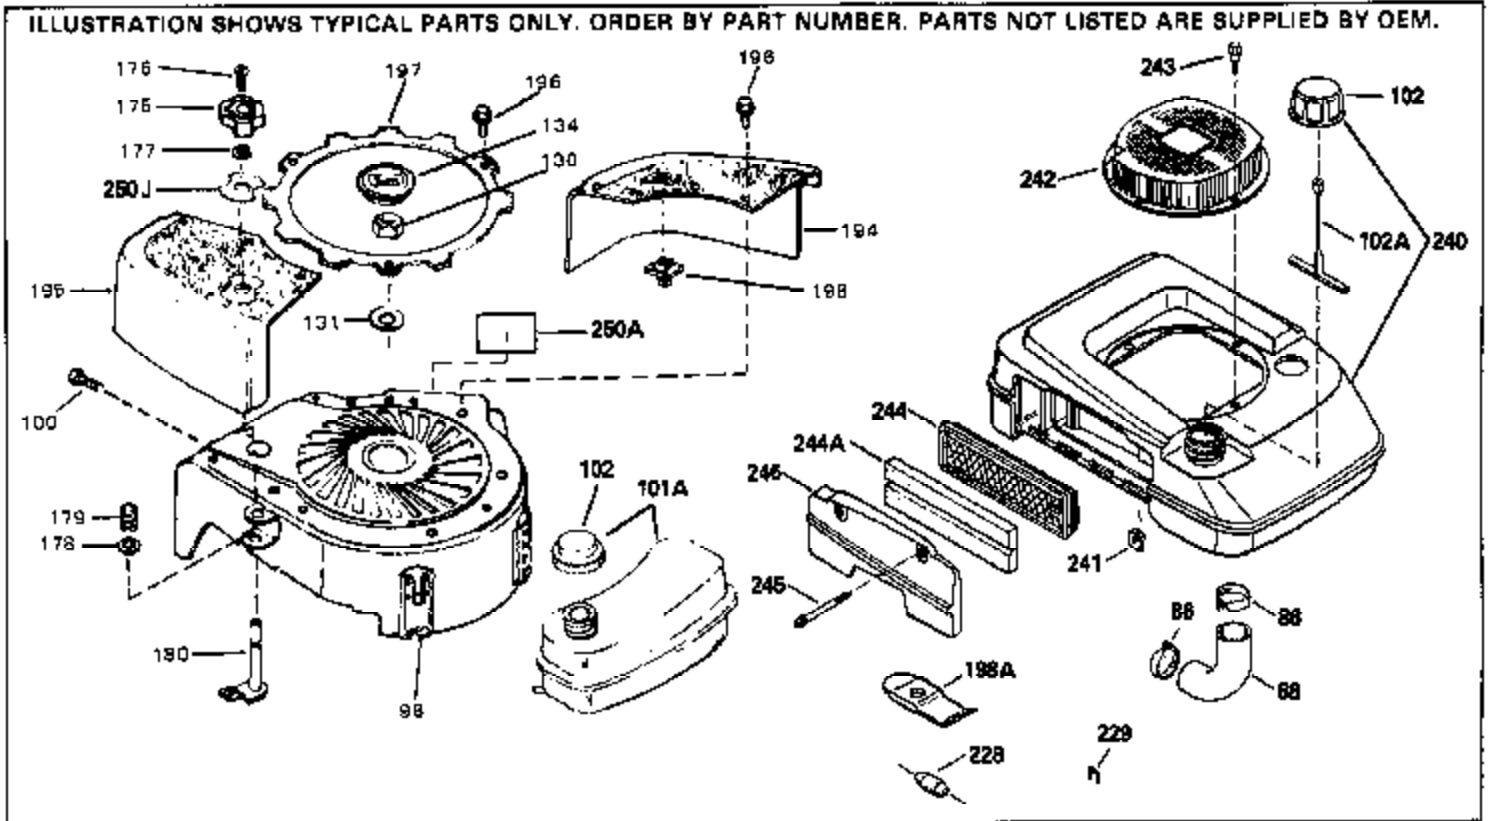

Ref #	Part Number	Qty	Description
51	30200		Screw, 10-24 x 9/16"
92	34231		Ground Wire
92A	34084		Ground Wire
98	34480		Blower Housing
100	30200		Screw, 10-24 x 9/16"
102	35355		Fuel Cap
120A	33566		Muffler
121	792005		Screw, 1/4-20 x 2-1/2"
122	33753		Locking Plate
130	650816		Flywheel Nut
131	650815		Belleville Washer
134	34113		Blower Housing Plug
181	31748		P.T.O. Shaft
182	31746		Worm Gear
184	31745		Washer
185	31787		Washer
186	31749		Retaining Ring
187	31744		Oil Seal
188	31747		Washer
189	650492		Screw, 1/4-20 x 2-1/4"
192	650802		Screw, 1/4-20 x 5/8"
256	590531		Side Mount Starter