








ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

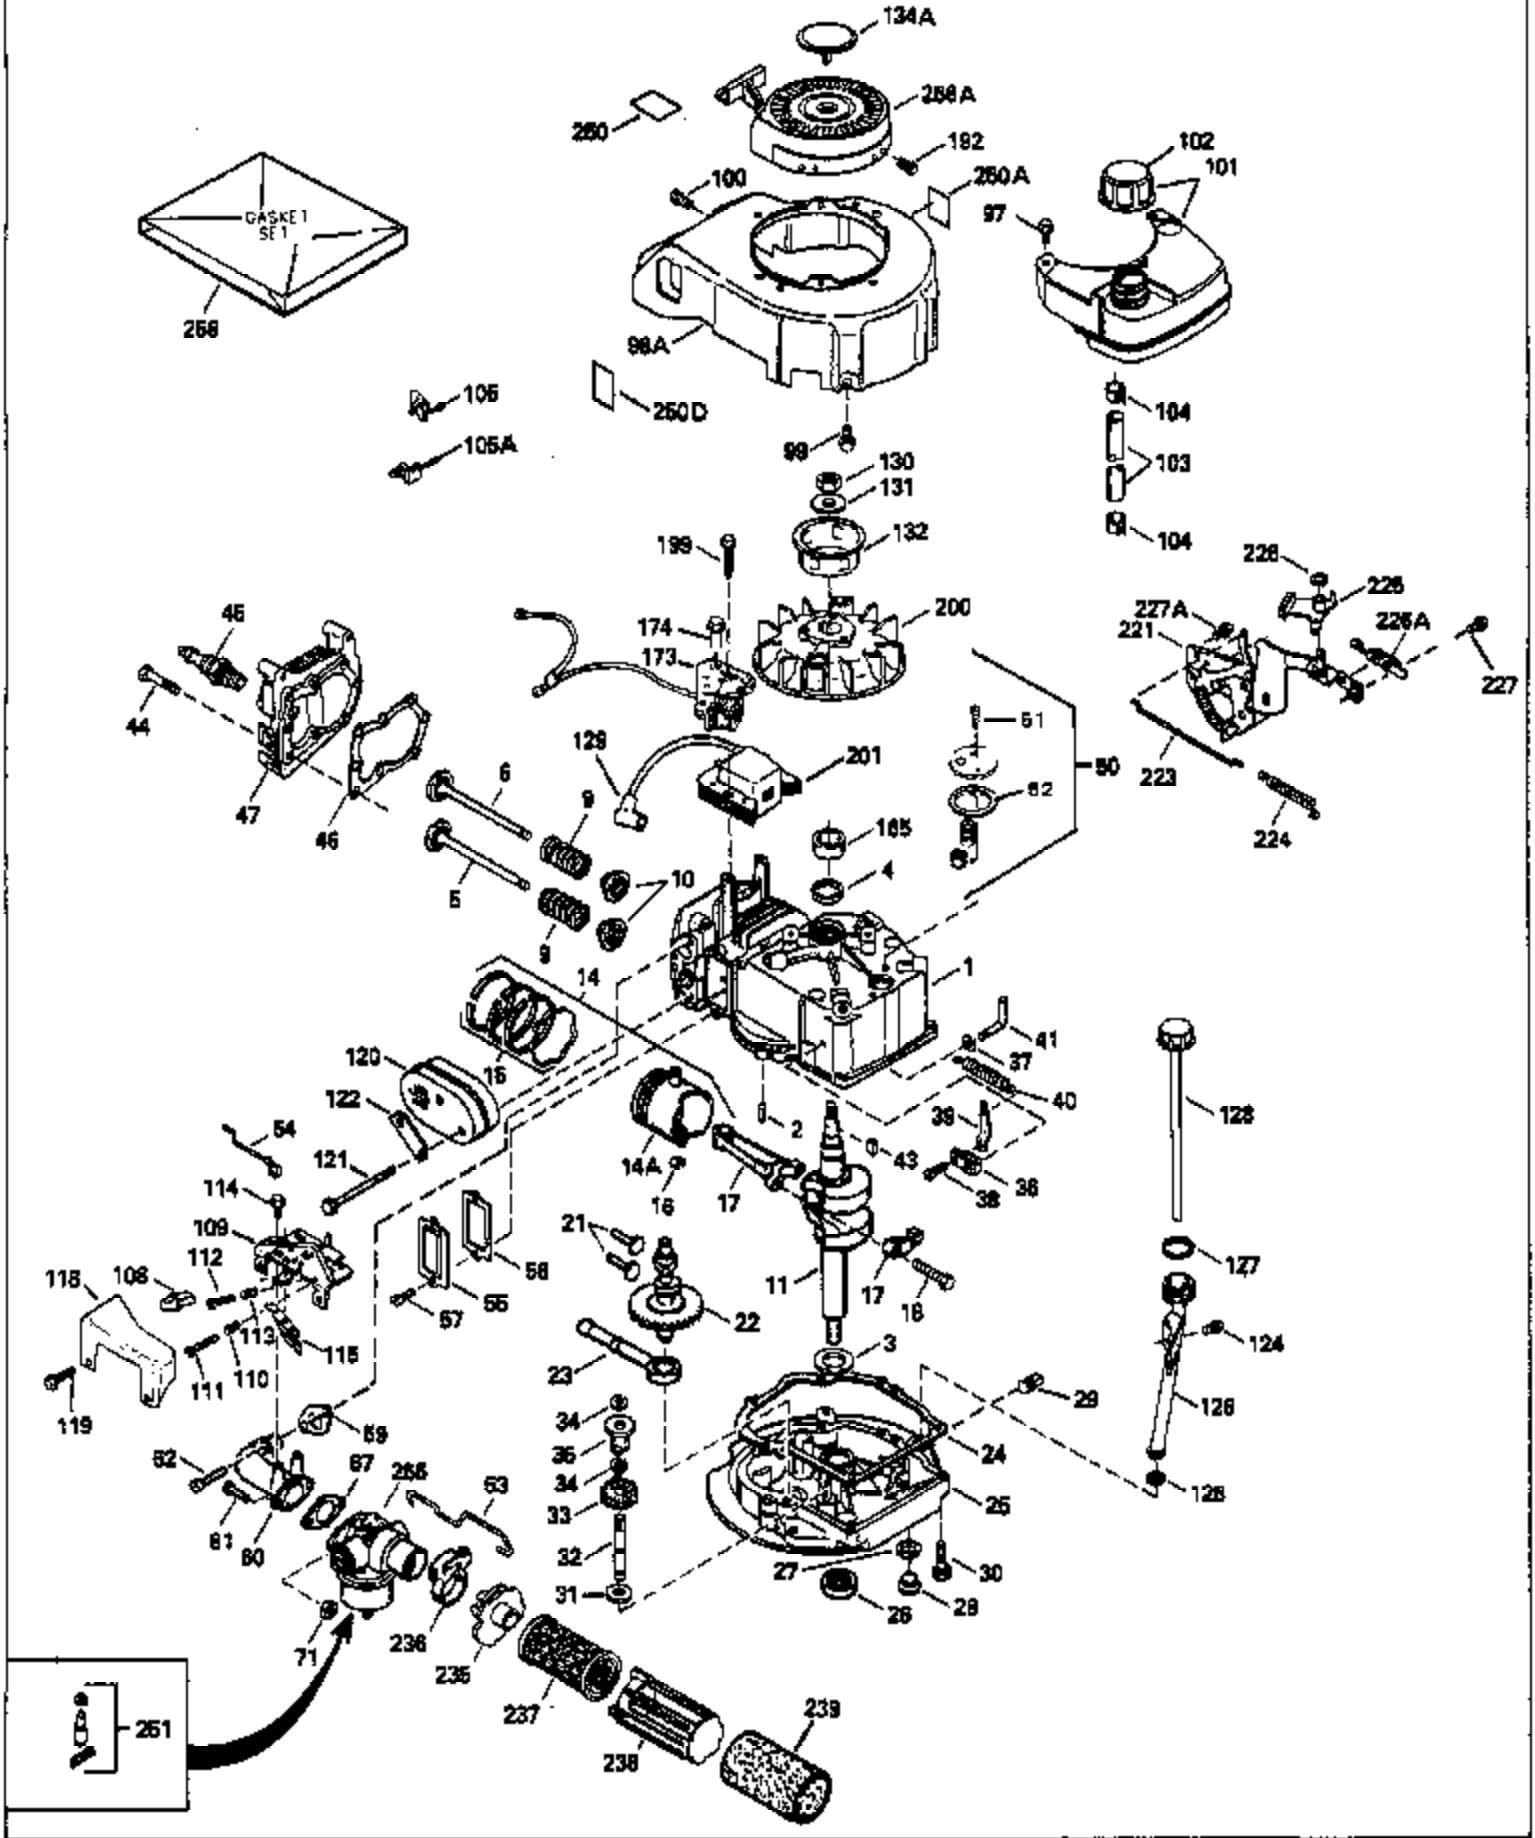

## Engine Parts List #1

Ref #	Part Number	Qty	Description
1	35513		Cylinder Ass'y. (Incl. 2 & 4)
2	26727		Dowel Pin
3	32323		Washer
4	32600		Oil Seal
5	29313C		Exhaust Valve (Std.) (Incl.10)
5	29315C		Exhaust Valve (1/32" OS) (Incl. 10)
6	29314B		Intake Valve (Std.) (Incl. 10)
6	29315C		Intake Valve (1/32" OS) (Incl. 10)
9	31672		Valve Spring
10	31673		Lower Valve Spring Cap
11	35173		Crankshaft
14A	35541		Piston & Pin Ass'y. (Std.) (Incl. 16)
14A	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 16)
14A	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 16)
14	35544		Piston, Pin & Ring Set (Std.)
14	35545		Piston, Pin & Ring Set (.010 OS)
14	35546		Piston, Pin & Ring Set (.020 OS)
15	35547		Ring Set (Std.)
15	35548		Ring Set (.010 OS)
15	35549		Ring Set (.020 OS)
16	20381		Piston Pin Retaining Ring
17	30963B		Connecting Rod (Incl. 18)
18	32610A		Connecting Rod Bolt
21	27241		Valve Lifter
22	33553		Camshaft (Mech. Compression Release)
23	29914		Oil Pump Ass'y.
24	35261		* Mounting Flange Gasket
25	35179		Mounting Flange (Incl. 26, 28 & 32)
26	27897		Oil Seal
27	28833		* Drain Plug Gasket
28	30572		Oil Drain Plug
30	650488		Screw, 1/4-20 x 1-1/4"
31	35479		Washer
32	30574		Governor Shaft
33	30591		Governor Gear Ass'y. (Incl. 31)
34	29193		Retaining Ring
35	30588A		Governor Spool
36	31335		Governor Lever Clamp
37	28277		Washer
38	650548		Screw, 8-32 x 5/16"
39	31383A		Governor Lever
40	31361		Extension Spring
41	30589		Governor Rod (Incl. 37)
43	610961		Flywheel Key
44	6021A		Screw, 5/16-18 x 1-1/2"
45	35395		Resistor Spark Plug (RJ19LM)
46	33015A		* Cylinder Head Gasket
47	34342		Cylinder Head
51	30200		Screw, 10-24 x 9/16"
53	34336		Throttle Link
54	34337		Governor Link
55	32755		Valve Spring Box Cover
56	27234A		* Valve Spring Cover Gasket
57	650128		Screw, 10-24 x 1/2"
59	34690A		* Intake Pipe Gasket
60	31384A		Intake Pipe (Incl. 59)
61	6201		Screw, 1/4-28 x 7/8"
62	650451		Screw, 1/4-20 x 1"

Ref #	Part Number	Qty	Description
67	26756		* Carburetor Gasket
71	29752		Nut, 1/4-28
98A	35497		Blower Housing
99	650831		Screw, 1/4-20 x 15/32"
100	30200		Screw, 10-24 x 9/16"
102	35355		Fuel Cap
103	30705		Fuel Line
104	26460		Fuel Line Clamp
108	35511		Control Knob
109	33205A		Control Bracket (Incl. 110 thru 113)
110	33802		Compression Spring
111	650777		Screw, 6-32 x 21/32"
112	650549		Screw, 5-40 x 7/16"
113	31342		Compression Spring
114	30200		Screw, 10-24 x 9/16"
115	610973		Terminal
120	34613		Muffler
121	650795		Screw, 1/4-20 x 2-1/4"
122	33753		Locking Plate
124	650562		Screw, 10-32 x 1/2"
125	34265		Fill Tube Gasket
126	35498		Oil Fill Tube
127	35499		"O" Ring
128	35611		Dipstick
129	610118		Spark Plug Cover
130	650816		Flywheel Nut
131	650815		Belleville Washer
132	35000		Starter Cup
165	34080		Flywheel Key Spacer
192	650884		Screw, 8-32 x 1/2"
199	650814		Screw, 10-24 x 1"
200	611123		Flywheel
201	34443A		Solid State Ignition
255	632468		Carburetor (Incl. 67)
256A	590637		Rewind Starter
258	33238D		Gasket Set (Incl. items marked *)

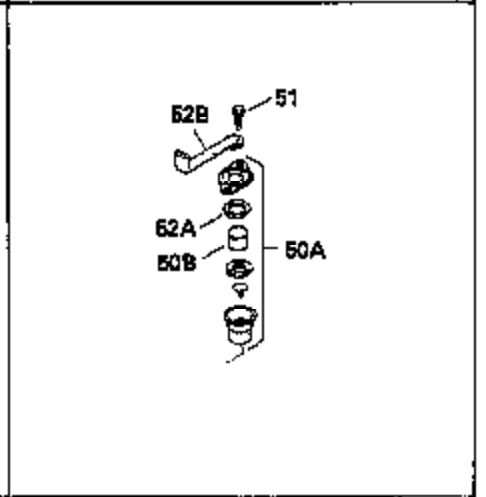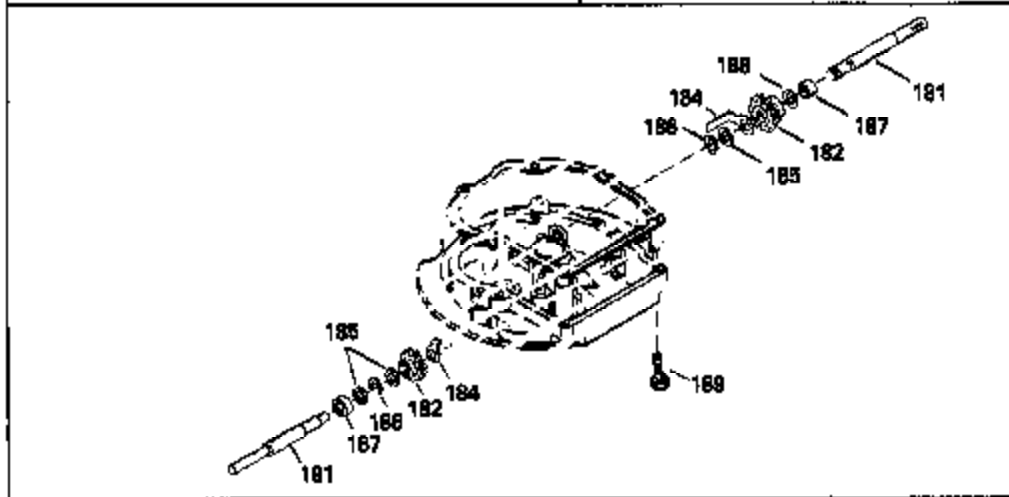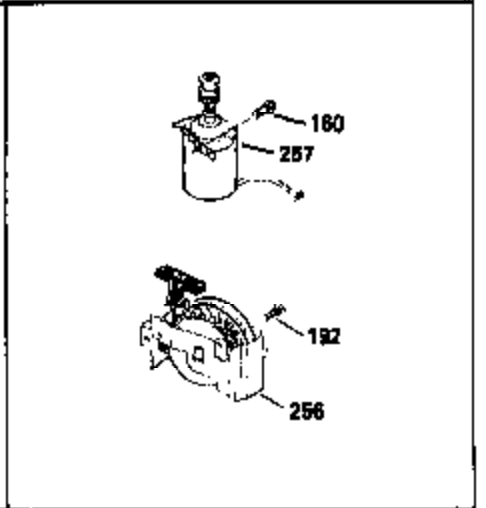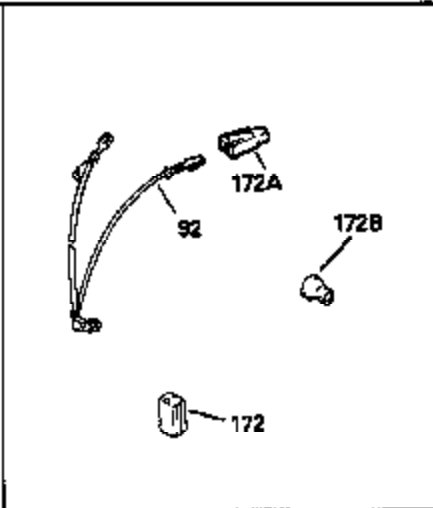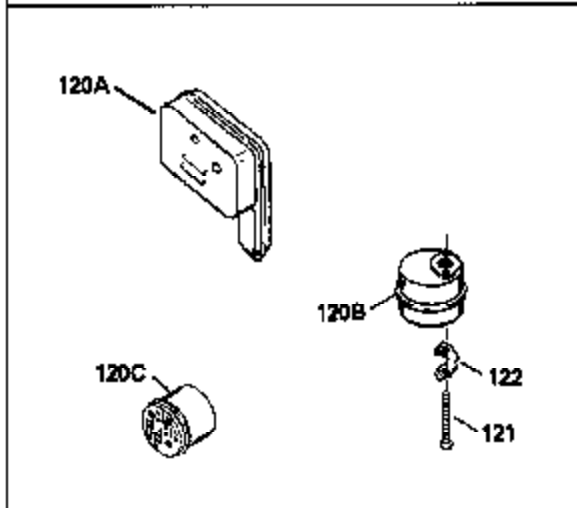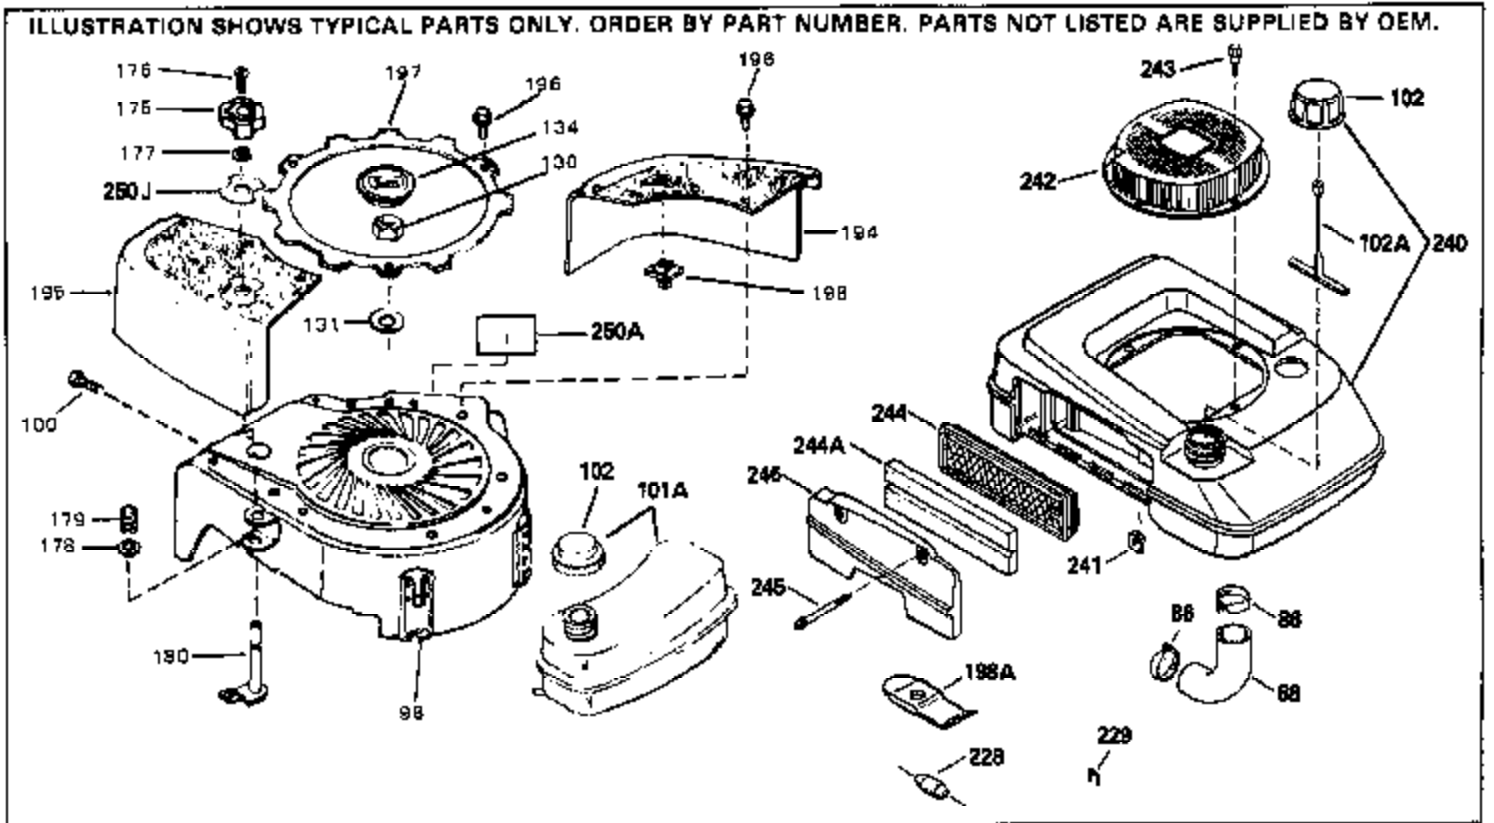

Ref #	Part Number	Qty	Description
50A	34214A		Breather Ass'y. (Incl. 50B, 51 & 52A)
50B	33734		Breather Element
51	30200		Screw, 10-24 x 9/16"
52A	33735		* Breather Gasket
52B	35496		Breather Tube
86	35505		Air Cleaner Tube Clamp
88	35504		Air Cleaner Tube
92	35518		Ground Wire
100	30200		Screw, 10-24 x 9/16"
102A	35480		Fuel Cap Retainer
102	35355		Fuel Cap
121	650795		Screw, 1/4-20 x 2-1/4"
122	33753		Locking Plate
130	650816		Flywheel Nut
131	650815		Belleville Washer
172A	611119		Body Connector
192	650884		Screw, 8-32 x 1/2"
198A	35168		Rope Guide Bracket
228	34985		Starter Rope Retainer
240	35631		Fuel Tank (Incl. 102 & 241)
241	650900		"U" Type Nut Clip, 10-32
242	35510		Recoil Grill
243	650898		Screw, 10-32 x 27/32"
244A	35705		Air Cleaner Filter (Poly)
244	35500		Air Cleaner Filter
245	650899		Screw, 10-32 x 2-3/32"
246	35531		Air Cleaner Cover