
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEML

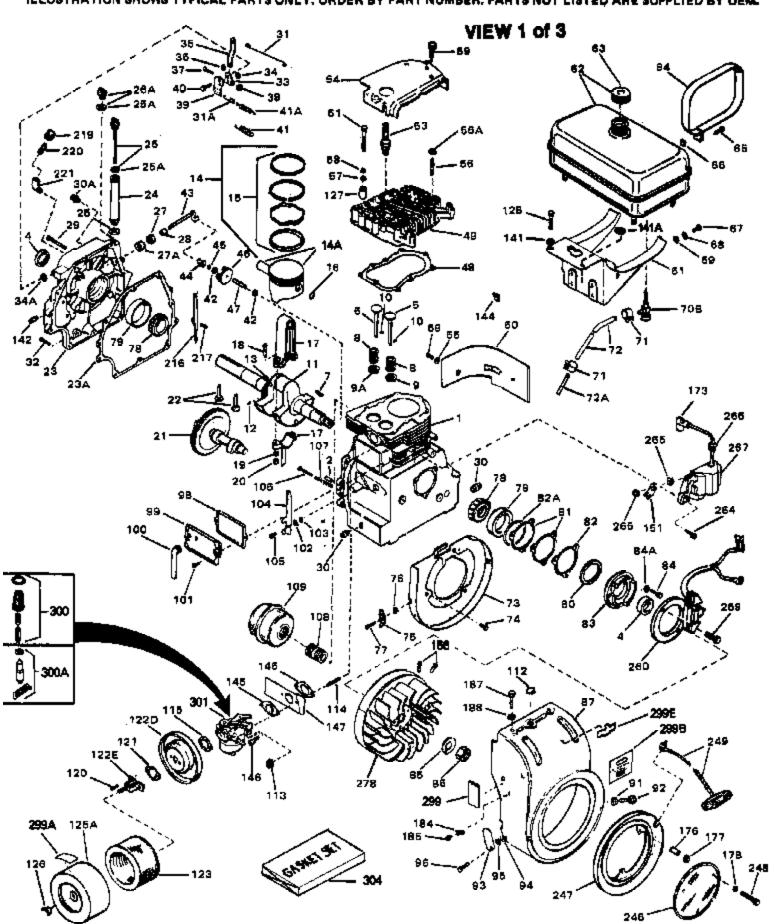

www.mymowerparts.com

Ref # Part Number Qty 1 33040	Description
	Cylinder (Incl. 2, 4, 30 & 47) (3-5/1 6" Bore)
2 27652	Pin, Dowel
4 31950	Seal, Oil
5 31940	Intake Valve (Std.)
5 31941	Intake Valve (1/32" OS) (Incl. 9)
6 31942	Exhaust Valve (Std.)
6 31943	Exhaust Valve (1/32" OS) (Incl. 9)
7 650592	Key, Flywheel
8 31944	Spring, Valve
9 31946	Cap, Lower valve spring (1/32" OS)
9 31945	Cap, Lower valve spring (Std.)
9A 31945	Cap, Lower valve spring (Std.)
9A 31946	Cap, Lower valve spring (3.2" OS)
10 20810	Pin, Valve spring retainer
11 33397A	Crankshaft (Incl. 12, 13, 78 & 79)
12 29783	Pin, Crankshaft gear
13 31931	Gear, Crankshaft
14 34508	Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14 34509	Piston, Pin & Ring Set (3td.) (3-3/10 Bore)
14 34510	Piston, Pin & Ring Set (.010 OS)
14 34850	, ,
14 34523	Piston, Pin & Ring Set (.030" OS)
14 34525 14 32620B	Piston, Pin & Ring Set (.040" OS)
	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
14A 32001C 14A 32002B	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32003B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A 32619B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
15 32004 15 33005	Ring Set (Std.) (3-5/16" Bore)
15 32005	Ring Set (.010" OS)
15 32006 15 33633	Ring Set (.020" OS)
15 32623	Ring Set (.030" OS)
15 32624	Ring Set (.040" OS)
15 32321	Re-Ringing Set, Piston
16 31919 17 330034	Ring, Piston pin retaining
17 33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17 34383 17 34304	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384 19 33077	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077	Bolt, Connecting rod
19 26073	Washer, Connecting rod
20 28264	Nut Assy., Lock
21 32150	Camshaft (MCR)
22 31939 33A 31056A	Lifter, Valve
23A 31956A	* Gasket, Cylinder cover
23 32444	Cover, Cylinder (For point ignition)
24 32352 35 30673	Oil Fill Tube
25 29673 25A 20085	* Gasket, Oil fill tube
25A 29985	"O" Ring
25A 35499	"O" Ring
26 33068 38 33436	Dipstick (Incl. 25A)
28 32426	Spacer, Governor rod
29 650588	Screw, 1/4-20 x 2"
30 32902	Oil Drain Plug
31 31968	Link, Governor
32 650451	Screw, 1/4-20 x 1"
33 31964	Clamp, Governor lever
34 29193	Ring, Retaining
35 31963 36 650518	Lever, Governor adjusting Lockwasher
KO DOUBLE	LOCKWASOAF

www.mymowerparts.com


Dof #	Part Number Qty	Description
	650544	Description
		Screw, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
	30312	Screw, 10-32 x 1/2"
	31967	Spring, Governor
	30590A	Washer, Flat
	32425	Rod Assy., Governor
	31948	Spool, Governor
	29193	Ring, Retaining
	31947	Gear Assy., Governor
	31930	Shaft, Mechanical Governor
	32000A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A	Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650714	Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650692	Screw, 5/16-18 x 1-3/4" (Use as requi red)
	650603	Screw, 5/16-18 x 5/8" (Use as require d)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug (RJ-17LM)
	33035	Cover, Cylinder head
	28537	Washer, Plain
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	8274	Washer, Lock (Use as required)
	650128	Screw, 10-24 x 1/2"
	31976	Extension, Blower housing
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
67	650517	Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	26460	Clamp, Fuel line (Use as required)
	29774	Fuel Line (Braided) (8.25") (Use as r equired)
	30705	Fuel Line (Braided) (16") (Use as req uired)
	30962	Fuel Line (Braided) (32") (Use as req uired)
	30965	Fuel Line (Braided) (48") (Use as req uired)
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
30		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as required
		ao 104aoa

\$ 31971 **Gasket, Shim (,004,005 thick) NOTE: Determine the gap between the cover and the machined surface on the o (plinder which can be from .001"up to .007" in which case no shim gasket will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req. **R2A 32599 **Sasket, Shim (,005,007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req. **83 32577 **Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat ***A 792028 **A 792	Ref #	Part Number Qty	Description
between the cover and the machined surface on the cylindre which can be form .001" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 82A 32599 "O" Ring " Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be form .001" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 83 32577 Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat 84 792028 84 792028 85 Screw, 516-18 x 7.8" 86 600679 86 600694 80 Screw, 516-18 x 7.8" 87 30044A 80 Screw, 516-18 x 7.8" 80 Screw, 516-24 x 38" 81 93 31953 81 Gasket, Elseather 83 31953 83 195 Screw, 516-24 x 916" 94 31954 95 31957 96 600624 97 Screw, 516-24 x 916" 97 30344 98 31958 99 31957 99 31957 90 31957 90 31957 91 3274 92 3274 93 31958 94 31958 95 31958 96 31958 97 31958 98 31959 99 31957 99 31957 90 31957 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31957 90 31958 90 31957 90 31957 90 31958 90 31957 90 31958 90 31957 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31957 90 31958 90 31958 90 31959 90 31957 90 31958 90 31958 90 31959 90 31957 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 31958 90 319			
which can be from .001"up to .007" in which case no shim gaskets will be inequired. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req	01	0.07.1	
gaskets Will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 82A 32599 82 31972 **Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .00" typ to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 83 32577 Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .00" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat 84 790028 84 790028 84 790028 85 650679 86 650694 87 33044A 89 650699 80 650694 80 650694 80 650694 80 650694 80 650694 80 650695 80 650624 80			
combined total of .010" thick. Steel spacersmust be used as req 82A 32599 82 31972 **Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 83 32577 **Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat **A 792028 **A 792028 **Sorew, 5/16-18 x 7/8" **Lockwasher, 5/16" (Use as required) **Washer, Lock **B 650699 **Lockwasher, 5/16" (Use as required) **Washer, Lock **B 650694 **Nut, Flywheel, 3/4-16 **Blower Hsg, (Incl.73) (For electric s tarter) **Washer, Lock **B 650694 **Sorew, 5/16-24 x 3/8" **Washer, Lock **B 650694 **Sorew, 5/16-24 x 3/8" **Washer, Lock **B 733044 **B 8060691 **Sorew, 5/16-24 x 1/2" **Washer, Wave 10 3350 10 650128 **Sorew, 10-24 x 1/2" **Washer, Wave 10 33039 11 330399 11 330399 11 300399 11 300399 11 300399 11 300399 11 300399 12 30039 13 29752 14 650671 **Sorew, 10-24 x 5/8" **Sorew, 5/16-18 x 7/8" (Use as require d) **Sorew, 5/16-18 x 7/8" (Us			•
as req 10" Ring 231972 32599 10" Ring 325848, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .00" by 10 .00" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req 20" Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .00" up to .00" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat 24 792028 24 792028 25 80679 25 80689 26 80679 26 80679 26 80699 27 80689 28 80799 28 80799 28 80799 28 80799 28 80799 29 80799 20			
82A 32599 82 31972 *Gasket, Shim (,005,007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from ,001*up ,007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of ,010" thick. Steel spacersmust be used as req 83 32577 Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which case he shim gaskets will be required. Use of gasket must be limited to a combined total of ,010" thick. Steel spacersmust be used as required. Use of gasket must be limited to a combined total of ,010" thick. Steel spacersmust be used as required to eliminat 84 792028 85 850569 86 850569 87 83044A 88 85 85 85 85 85 85 85 85 85 85 85 85 8			•
** Gasket, Shim (,005/,007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001*up to .007*in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as req. **3 32577** **Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001*up to .007*in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as required to eliminat **B4 79,0028** **Screw, 51/6-18 x 7/8** **S6066** **Screw, 51/6-18 x 7/8** **Lockwasher, 51/6* (Use as required) **Washer, Lock **S60595** **S60595** **S60595** **Screw, 51/6-24 x 38** **Washer, Lock **Screw, 51/6-34 x 18** **Washer, Lock **Screw, 10-24 x 12** **Washer, Lock **Screw, 10-24 x 12** **Washer, Lock **Screw, 10-24 x 18** **Washer, Lock **Screw, 10-24 x 18** **Washer, 10-24 x 18**			as req
between the covier and the machined surface on the cylinder which can be from 1001**up to 107**up t	82A	32599	"O" Ring
between the cover and the machined surface on the cylinder which can be from Jorff up to JOP in thic case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010° thick. Steel spacersmust be used as req 83 32577 Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001° up to .007° in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010° thick. Steel spacersmust be used as required to eliminat 84 792028 Screw, 5/16-18 x 7/8° 85 66066 Washer Lock 86 66059 Lodkwasher, 5/16° (Use as required) 87 33044A Blover Hsg. (Incl.73) (For electric s tarter) 88 660669 Lodkwasher, 5/16° (Use as required) 88 7 33044A Blover Hsg. (Incl.73) (For electric s tarter) 89 18274 Washer, Lock 80 650595 Screw, 5/16-24 x 3/8° 80 650595 Screw, 5/16-24 x 3/8° 80 56064 Screw, 5/16-24 x 3/8° 81958 "Gasket, Breather 89 31958 "Gasket, Breather 99 31957 Breather Assy. 100 35350 Tube, Breather 101 660128 Screw, 10-24 x 1/2° 102 28558 Washer, Wave 103 31996 Bushing, Control lever 104 31994A Lover, Control 105 30309 Pug, Buton (Use as required) 112 30309 Pug, Buton (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650567 Screw, 10-24 x 5/8° 115 27727 Gasket, Air cleaner 125 32009 Cover, Air cleaner 126 660513 Nut, Wing 127 30073 Washer, Flat (Use as required) 128 650713 Screw, 10-24 x 1/2° 140 2073 Washer, Flat (Use as required) 141 20073 Washer, Flat (Use as required) 142 20783 Pin 145 1960 "Gasket, Carburetor 147 31969 Baffel, Air	82	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
which can be from .001*up to .007*in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as req. Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .00*up to .007* in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Siteel spacersmust be used as required to eliminat 84 792028 Screw, 576-18 x 78" 4AA 650679 Screw, 576-18 x 78" Lockwasher, 5766* (Use as required) Washer, Lock 86 650594 Nuf, Frywheel, 3/4-16 Blower Hsg, (Incl.73) (For electric s tarter) Washer, Lock 92 650595 Screw, 576-24 x 3/8" Washer, Lock 93 31938 *Gasket, Breather 9 31957 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 25558 103 31966 Bushing, Control lever Lever, Control 106 650591 Screw, 10-24 x 5/8" 107 33009 Spring 112 30038 Plug, Button (Use as required) Nuf, Wing 128 650713 Screw, 10-24 x 5/8" Screw, 5/6-18 x 5/8" (Use as require d) Screw, 5/6-18 x 5/8" (
gaskets will be required. Use of gasket must be limited to a combined total of .010° thick. Steel spacersmust be used as req Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001° up to .007° in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010° thick. Steel spacersmust be used as required to eliminat 84 792028 Screw, 5/16-18 x 7/8° Lockwasher, 5/16° (Use as required) 85 650666 Washer, Lock 86 650594 Nut, Flywheel, 3/4-16 87 3044A4 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock 96 650694 Nut, Flywheel, 3/4-16 80 8074 97 8074 98 650695 Screw, 5/16-24 x 3/8° Washer, Lock 98 31958 \$1958 \$20 8074 \$3 31958 \$3 3958 \$4 \$3 3958 \$5 \$3 \$3 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4 \$4			
combined total of .010" thick. Steel spacersmust be used as req Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case not in gaskets with gasket			
83 32577 Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001*up to .007* in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as required to eliminat 84 792028 Screw, 5/16-18 x 7/8* 84A 650679 Lockwasher, 5/16* (Use as required) Washer, Lock 86 650594 Nut, Plywheel, 3/4-16 87 33044A Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Vasher, Lock Vasher, Lock 96 650595 Screw, 5/16-24 x 3/8* Vasher, Lock 98 31958 Screw, 5/16-24 x 3/8* Vasher, Lock 98 31958 100 33350 Tube, Breather 101 650128 Screw, 5/16-24 x 1/2* Vasher, Wave 102 28558 Washer, Wave 103 31966 104 31984A Lever, Control lever Lever, Control lever Lever, Control (Sos) 107 33099 \$112 33038 Plug, Button (Use as required) Nut & Lockwasher Assy. 115 27272 120 650399 121 30767 Spacer, Air cleaner 128 650713 Screw, 5/16-18 x 5/8* (Use as require d) Screw, 5/16-18 x 3/4* (Use as require d) Screw, 5/16-18			
Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001'up to .007' in which cas no shim gaskets will be required. Use of gasket must be limited to a combined total of .010' thick. Steel spacersmust be used as required to eliminat 84 792028			•
and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat 84 792028			·
	83	32577	
required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminal 84 792028 Screw, 5/16-18 x 7/8" 84A 650679 Lookwasher, 5/16" (Use as required) 85 650666 Washer, Look 86 650594 Nut, Flywheel, 3/4-16 87 33044A Blower Hsg. (Incl.73) (For electric s tarter) 91 8274 Washer, Look 92 650595 Screw, 5/16-24 x 3/8" 93 8274 Washer, Look 96 650624 Screw, 5/16-24 x 3/8" 97 31957 Breather Assy. 100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 5/8" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut, & Lookwasher Assy. 114 650687 Screw, 10-24 x 5/8" 115 27277 "Gasket, Air cleaner 126 650513 Nut, & Lookwasher Assy. 127 128 650429 Screw, 10-32 x 5/8" 128 650713 Screw, 10-32 x 5/8" 129 129 30767 Space, Air cleaner 120 650513 Nut, Wing 121 860429 Screw, 10-32 x 5/8" (Use as require d) 122 860711 Screw, 5/16-18 x 5/8" (Use as require d) 124 860429 Screw, 5/16-18 x 5/8" (Use as require d) 126 850711 Screw, 5/16-18 x 5/8" (Use as require d) 127 31959 Baffle, Air			and the machined surface on the cylinder which can be from
of .010" thick. Steel spacersmust be used as required to eliminat 84 792028			.001"up to .007" in which case no shim gaskets will be
of .010" thick. Steel spacersmust be used as required to eliminat 84 792028			required. Use of gasket must be limited to a combined total
eliminat 84 792028 84A 650679 85 650666 86 650594 87 33044A 89 Blower Hsg, (Incl.73) (For electric s tarter) 88 650595 89 8274 80 650628 80 650624 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650628 80 650638 80 6506			
84A 650679			
84A 650679	0.4	700000	C 5/4C 40 7/0!!
85 650666 86 650594 87 33044A 87 33044A 81 8274 91 8274 92 650595 8274 93 8274 94 Washer, Lock 86 650624 87 33058 89 31958 89 31957 81958 89 31957 8100 35350 8101 850128 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8103 31986 8104 31984A 8105 850597 8106 650597 8106 650597 8106 650591 8112 33038 8113 29752 8114 650587 8115 27772 8116 650587 8117 27772 8118 8108 8108 8108 8108 8108 8108 8108			
86 650594 87 33044A 81 Blower Hsg. (Incl.73) (For electric s tarter) 91 8274 Washer, Lock 92 650595 Screw, 5/16-24 x 3/8" Washer, Lock 96 650624 Washer, Breather 98 31958 99 31957 Breather Assy. 100 33350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" Washer, Wave 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring 115 27272 * Gasket, Air cleaner 125A 32009 Cover, Air cleaner 126 650713 Screw, 10-32 x 5/8" Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d)			
87 33044A 91 8274 92 650595 92 650595 93 8274 Washer, Lock Washer, Lock Washer, Lock Washer, Lock Washer, Lock Washer, Lock Screw, 5/16-24 x 9/16" 94 31958 95 8274 Washer, Lock Screw, 5/16-24 x 9/16" 95 31957 Breather 99 31957 Breather Assy. 100 35350 Tube, Breather Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. Stud, Carburetor 115 27272 "Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" Spacer, Air cleaner 120 650513 Nut, Wing 128 650713 Screw, 10-32 x 5/8" (Use as require d) 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 129 850711 Screw, 5/16-18 x 7/8" (Use as require d) 120 850711 Screw, 5/16-18 x 7/8" (Use as require d) 124 850711 Screw, 5/16-18 x 7/8" (Use as require d) 125 850711 Screw, 5/16-18 x 7/8" (Use as require d) 126 850711 Screw, 5/16-18 x 7/8" (Use as require d) 127 92028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 129 7830 Pin 145 31960 147 31959 Baffle, Air			·
91 8274 92 650595 95 8274 Washer, Lock 96 650624 96 650624 97 Gasket, Breather 98 31958 99 31957 100 35350 101 650128 102 2858 103 31966 104 31984A 105 650591 106 650591 107 33099 112 33038 113 29752 114 650587 115 27272 116 650399 117 30767 117 Space, Air cleaner 126 650513 128 650713 128 650713 128 650713 128 650711 128 65071 129 Farsh Air Cleaner 120 650391 121 8792028 122 Screw, 10-24 x 5/8" 123 650713 124 650713 125 Screw, 10-24 x 5/8" 126 65071 127 Space, Air cleaner 126 650513 127 Space, Air cleaner 127 Space, Air cleaner 128 650713 129 Screw, 5/16-18 x 5/8" (Use as require d) 128 650711 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 120 Screw, 5/16-18 x 3/4" (Use as require d) 127 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 120 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (
92 650595 95 8274 Washer, Lock 96 650624 Screw, 5/16-24 x 9/16" 98 31958 99 31957 Breather Assy. 100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650687 Screw, 10-32 x 5/8" 126 650399 Screw, 10-32 x 5/8" 127 3270 Screw, 10-32 x 5/8" 128 650713 Screw, 5/16-18 x 5/8" (Use as required) 128 792028 Screw, 5/16-18 x 3/4" (Use as required) 129 Screw, 5/16-18 x 3/4" (Use as required) 120 Screw, 5/16-18 x 3/4" (Use as required) 121 Screw, 5/16-18 x 3/4" (Use as required) 122 Screw, 5/16-18 x 3/4" (Use as required) 123 Screw, 5/16-18 x 3/4" (Use as required) 124 66071 Screw, 5/16-18 x 3/4" (Use as required) 125 Screw, 5/16-18 x 3/4" (Use as required) 126 Screw, 5/16-18 x 3/4" (Use as required) 127 Screw, 5/16-18 x 3/4" (Use as required) 128 F92028 Screw, 5/16-18 x 3/4" (Use as required) 129 Screw, 5/16-18 x 3/4" (Use as required) 120 Screw, 5/16-18 x 3/4" (Use as required) 121 Screw, 5/16-18 x 3/4" (Use as required) 122 Screw, 5/16-18 x 3/4" (Use as required) 123 Screw, 5/16-18 x 3/4" (Use as required) 124 Screw, 5/16-18 x 3/4" (Use as required) 125 Screw, 5/16-18 x 3/4" (Use as required) 126 Screw, 5/16-18 x 3/4" (Use as required) 127 Screw, 5/16-18 x 3/4" (Use as required) 128 Screw, 5/16-18 x 3/4" (Use as required) 129 Screw, 5/16-18 x 3/4" (Use as required) 141 Screw, 5/16-18 x 3/4" (Use as required) 142 Screw, 5/16-18 x 3/4" (Use as required) 143 Screw, 5/16-18 x 3/4" (Use as required) 144 Screw, 5/16-18 x 3/4" (Use as required) 145 31960 147 31959 148 Screw, 5/16-18 x 3/4" (Use as required) 147 31959 149 Saffle, Air			• • • • • • • • • • • • • • • • • • •
95 8274 96 650624 97 650624 98 31958 98 31957 99 31957 Breather Assy. 100 35350 100 650128 101 650128 102 28558 103 31966 104 31984A 105 650597 106 650591 107 33099 118 30398 119 30398 111 329752 114 650587 115 27272 120 650399 121 30767 125 32009 126 650513 128 650713 129 65039 120 65039 121 65039 122 650429 123 650713 124 65057 125 792028 126 650711 127 792028 128 650711 129 65073 141 8274 142 29783 145 31960 147 31959 146 67084 147 31959 147 31959 148 67084 147 31959 148 8274 149 29783 146 31960 147 31959 148 8274 149 29783 146 31960 147 31959 148 8274 149 29783 146 31960 147 31959 148 8274 149 29783 146 31960 147 31959			·
96 650624 98 31958 99 31957 Breather Assy. 100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650597 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Strew, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Screw, 5/16-18 x 5/8" (Use as require d) 128 650713 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 3/4" (Use as require d) 129 Screw, 5/16-18 x 3/4" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 127 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 129 Screw, 5/16-18 x 7/8" (Use as require d) 129 Screw, 5/16-18 x 7/8" (Use as require d) 120 Screw, 5/16-18 x 7/8" (Use as require d) 127 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 129 Screw, 5/16-18 x 7/8" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 7/8" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 128 650711 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 120 Screw, 5/16-18 x 5/8" (Use as require d) 121 Screw, 5/16-18 x 5/8" (Use as require d) 122 Screw, 5/16-18 x 5/8" (Use as require d) 123 Screw, 5/16-18 x 5/8" (Use as require d) 124 Screw, 5/16-18 x 5/8" (Use as require d) 125 Screw, 5/16-18 x 5/8" (Use as require d) 126 Screw, 5/16-18 x 5/8" (Use as require d) 127 Screw, 5/16-18 x 5/8" (Use as require d) 128 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 129 Screw, 5/16-18 x 5/8" (Use as require d) 120 Screw, 5/1			
98 31958 * Gasket, Breather 99 31957 Breather Assy. 100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 792028 Screw, 5/16-18 x 3/4" (Use as required) 141			·
99 31957 100 35350 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650714 Screw, 5/16-18 x 3/4" (Use as require d) 129 65073 Vasher, Flat (Use as require d) 120 65073 Vasher, Flat (Use as require d) 121 8650711 Screw, 5/16-18 x 3/4" (Use as require d) 122 65073 Vasher, Flat (Use as require d) 123 650711 Screw, 5/16-18 x 7/8" (Use as require d) 124 65073 Vasher, Flat (Use as required) 125 65071 Vasher, Flat (Use as required) 126 65073 Vasher, Flat (Use as required) 127 Screw, 10-24 x 1/2" Vasher, Flat (Use as required) 128 650711 Vasher, Flat (Use as required) 129783 Pin 141 31959 Baffle, Air			Screw, 5/16-24 x 9/16"
100 35350 Tube, Breather 101 650128 Screw, 10-24 x 1/2" 102 28558 Washer, Wave 103 31986 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 125 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650713 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required)<			·
101 650128 102 28558 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 125A 32009 Screw, 10-32 x 5/8" (Use as require d) 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 65071 Screw, 5/16-18 x 7/8" (Use as require d) 128 65071 Screw, 5/16-18 x 7/8" (Use as require d) 128 65071 Screw, 5/16-18 x 7/8" (Use as require d) 128 65071 Screw, 5/16-18 x 7/8" (Use as require d) 129 792028 Screw, 5/16-18 x 7/8" (Use as require d) 120 Screw, 5/16-18 x 7/8" (Use as require d) 127 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 142 29783 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			Breather Assy.
102 28558 Washer, Wave 103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 7/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 129 65073 Washer, Flat (Use as require d) 120 65073 Washer, Flat (Use as require d) 121 26073 Washer, Flat (Use as required) 122 29783 Pin 145 31960 * Gasket, Carburetor 147 31959			Tube, Breather
103 31966 Bushing, Control lever 104 31984A Lever, Control 105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141 8274 Lockwasher, Split (Use as required) 142 29783 145 31960 * Gasket, Carburetor 147 31959			Screw, 10-24 x 1/2"
104 31984A	102	28558	
105 650597 Screw, 10-24 x 5/8" 106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 125 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	103	31966	Bushing, Control lever
106 650591 Screw, 10-24 x 2" 107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 144 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	104	31984A	Lever, Control
107 33099 Spring 112 33038 Plug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 144A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 45 31960 * Gasket, Carburetor 147 31959 Baffle, Air	105	650597	Screw, 10-24 x 5/8"
112 33038 Piug, Button (Use as required) 113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	106	650591	Screw, 10-24 x 2"
113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	107	33099	Spring
113 29752 Nut & Lockwasher Assy. 114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	112	33038	Plug, Button (Use as required)
114 650587 Stud, Carburetor 115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	113	29752	
115 27272 * Gasket, Air cleaner 120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air	114	650587	•
120 650399 Screw, 10-32 x 5/8" 121 30767 Spacer, Air cleaner 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
121 30767 125A 32009 Cover, Air cleaner 126 650513 Nut, Wing 128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 7/8" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Spacer, Air cleaner Cover, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Screw, 10-24 x 1/2" Washer, Flat (Use as required) Fin * Gasket, Carburetor Baffle, Air			
125A 32009			•
126 650513			•
128 650713 Screw, 5/16-18 x 5/8" (Use as require d) 128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			·
128 650429 Screw, 5/16-18 x 3/4" (Use as require d) 128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
128 792028 Screw, 5/16-18 x 7/8" (Use as require d) 128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
128 650711 Screw, 10-24 x 1/2" 141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
141 26073 Washer, Flat (Use as required) 141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
141A 8274 Lockwasher, Split (Use as required) 142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
142 29783 Pin 145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
145 31960 * Gasket, Carburetor 147 31959 Baffle, Air			
147 31959 Baffle, Air			
·			
130 730201 Tilgger Pin Kit (Use as required)			· · · · · · · · · · · · · · · · · · ·
	100	730201	riiggei Fili Nii (Use as requireu)

www.mymowerparts.com

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $_{\rm Page\ 5\ of\ 9}$ Engine Parts List #1


Ref #	Part Number Qt	y Description
173	610118	Cover, Spark plug (Use as required)
176	32426	Spacer, Screen
177	650675	Washer, Flat 1/4"
177	8345	Washer, 1/4 plain (Use as required)
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
246	33776	Screen, Starter pulley
248	650670	Screw, 1/4-20 x 3/4"
249	32046	Rope Assy., Starter (Use as required)
278	610746	Solid State Flywheel
299	34346	Decal, Instruction
299B	32374	Decal, Long life
300	32255A	Valve, Seat, Spring & Gasket Assy.
301	631564	Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94
		for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

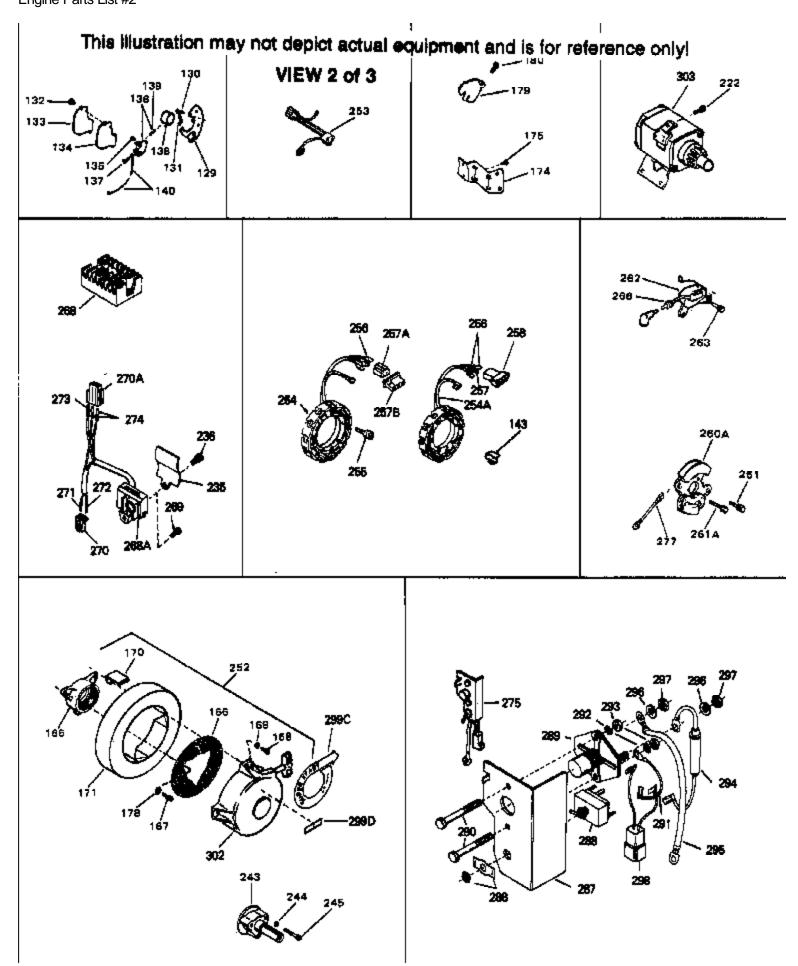

www.mymowerparts.com

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $\,$ Page 7 of 9 Engine Parts List #2

		Qty	Description
	31935		Yoke, Cam adjusting
	31936		Rivet, Yoke
	31937		Spring, Cam adjusting
	650128		Screw, 10-24 x 1/2"
	31954		Cover, Breaker box
	31955		* Gasket, Breaker box
	650596		Screw, 8-32 x 5/16"
	32011A		Breaker Pt. & Push Rod Assy.(Incl.137,139)
	610302		Screw, Breaker
	31938		Cam, Breaker
	31952		Rod, Ignition push
	33061		Wire, Primary
	27070		Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	650701		Screw, 8-18 x 7/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
	610829		Alternator Coil (10 Amp)(Incl. 256 & 257A)
255	650416		Screw, 10-32 x 1"
256	610822		Terminal, Male
257A	610823		Connector, Pyramid (For male terminal s)
257B	610824		Flat Connector (Female terminals) (As req.)
275	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

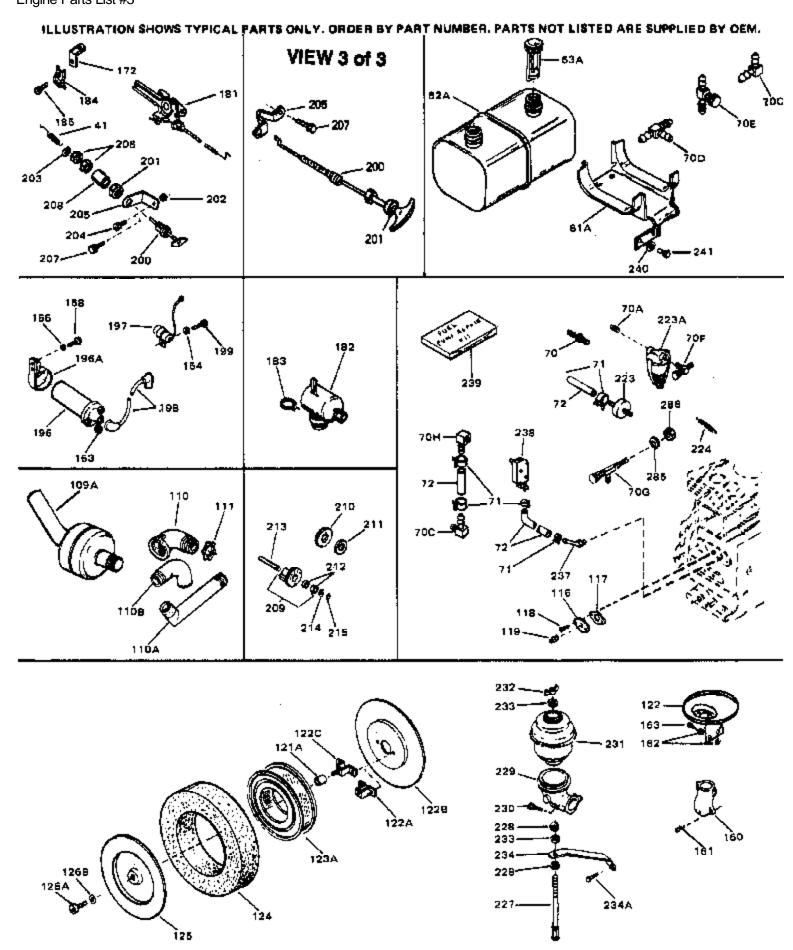

www.mymowerparts.com

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $\,$ Page 9 of 9 Engine Parts List #3

Ref #	Part Number (Qty Description
	31967	Spring, Governor
	29634	Fitting, Fuel line
	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
110B	32690	90 Degree Exhaust Elbow
111	650590	Nut, Conduit
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
123A	32008	Element, Air cleaner
153	33450	Nut, Hex
154	650675	Washer, Flat
155	8345	Washer, Flat
158	650561	Screw, 1/4-20 x 5/8"
162	650583	Washer, Plain
163	28788	Screw, 8-32 x 1/2"
172	31990	Bracket, Choke control
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
196A	32144	Clamp, Coil
	32080	Coil, Ignition
197	32079	Condenser
198	33060	Wire Assy., Coil
199	30063	Screw, 1/4-20 x 1/2"