

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.









## Engine Parts List #1

Ref #	Part Number	Qty	Description
1	34429A		Cylinder (Incl. 2 & 4)
2	26727		Dowel Pin
4	32600		Oil Seal
5	30589		Governor Rod (Incl. 6)
6	28277		Washer
7	32651		Governor Lever
8	31335		Governor Lever Clamp
9	650548		Screw, 8-32 x 5/16"
10	34440		Crankshaft
13A	35541		Piston & Pin Ass'y. (Std.) (Incl. 14)
13A	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 1 4)
13A	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 1 4)
13	35544		Piston, Pin & Ring Ass'y. (Std.)
13	35545		Piston, Pin & Ring Ass'y. (.010 OS)
13	35546		Piston, Pin & Ring Ass'y. (.020 OS)
14	20381		Piston Pin Retaining Ring
15	35547		Ring Set (Std.)
15	35548		Ring Set (.010 OS)
15	35549		Ring Set (.020 OS)
16	30963B		Connecting Rod (Incl. 17)
17	32610A		Connecting Rod Bolt
20	27241		Lifter Valve
21	33553		Camshaft (Mech. Compression Release)
22	29914		Oil Pump
24	35261		* Mounting Flange Gasket
25	35651B		Mounting Flange (Incl. 27 thru 30)
27	30572		Oil Drain Plug
28	26208		Oil Seal
30	30574		Governor Shaft
31	30590A		Washer
32	30591		Governor Gear (Incl. 31)
33	30588A		Governor Spool
34	29193		Retaining Ring
35	650488		Screw, 1/4-20 x 1-1/4"
36	29314B		Intake Valve (Std.) (Incl. 40)
36	29315C		Intake Valve (1/32" OS) (Incl. 40)
37	29313C		Exhaust Valve (Std.) (incl. 40)
37	29315C		Exhaust Valve (1/32" OS) (Incl. 40)
39	31672		Valve Spring
40	31673		Lower Valve Spring Cap
42	610118		Spark Plug Cover
45	611004		Flywheel Key
46	34214A		Breather Ass'y. (Incl. 47 thru 51)
47	33735		* Breather Gasket
48	33734		Breather Element
49	30200		Screw, 10-24 x 9/16"
50	33886		Breather Tube
51	33887		Breather Clip
52	34961		Ground Wire
53	30200		Screw, 10-24 x 9/16"
54	650561		Screw, 1/4-20 x 5/8"
55	33891B		Blower Housing
56	650802		Screw, 1/4-20 x 5/8"
57	33015A		* Cylinder Head Gasket
58	34342		Cylinder Head
60	6021A		Screw, 5/16-18 x 1-1/2"
64	35395		Resistor Spark Plug (RJ19LM)
65	27234A		* Valve Spring Box Gasket

Ref #	Part Number	Qty	Description
66	32755		Valve Spring Box Cover
67	650128		Screw, 10-24 x 1/2"
68	34690A		* Intake Pipe Gasket
69	33004A		Intake Pipe (Incl. 68)
70	650451		Screw, 1/4-20 x 1"
71	31688A		* Carburetor Gasket
72	6201		Screw, 1/4-28 x 7/8"
73	29752		Lock Nut, 1/4-28
76	34310		R.P.M. Adjusting Lever
77	33889A		Control Bracket (Incl. 76 & 79)
79	650804		Screw, 10-24 x 9/16"
80	27793		Conduit Clip
80A	28942		Screw, 10-32 x 3/8"
81	34336		Throttle Link
82	33151		Governor Link
83	33890		Extension Spring
86A	30081A		* Exhaust Gasket
87	34265		Fill Tube Gasket
88	650562		Screw, 10-32 x 1/2"
89	35581		Oil Fill Tube
90	35582		Dipstick
91	35499		"O" Ring
92	33895		Air Cleaner Body
93	33896		Air Cleaner Filter
94	33897		Air Cleaner Cover
95	650762		Screw, 10-32 x 1-29/32"
96	650804		Screw, 10-24 x 9/16"
97	33051		* Air Cleaner Gasket
100	30705		Fuel Line
101	26460		Fuel Line Clamp
102	29443		Spring Clip
103	35028		Fuel Tank (Incl. 100 & 101)
104	28763		Screw, 10-32 x 19/32"
105	34443A		Solid State Ignition
106A	34080		Flywheel Key Spacer
106	650814		Screw, 10-24 x 1"
107	611046A		Flywheel
123	650815		Belleville Washer
124	650816		Flywheel Nut
140	632050A		Carburetor (Incl. 71)
142	590532		Side Mount Rewind Starter
144	33906B		Gasket Set (Incl. items marked *)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

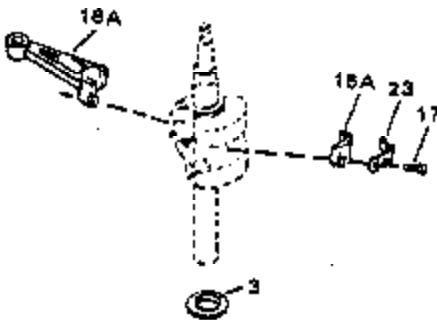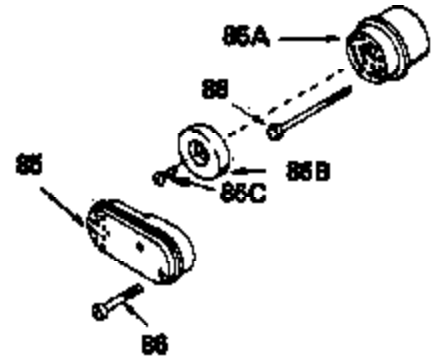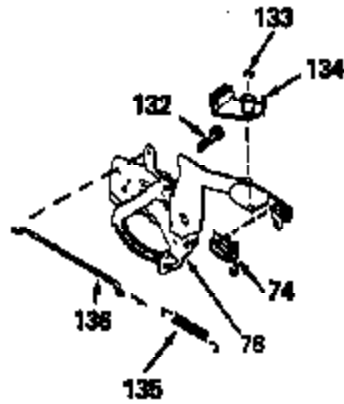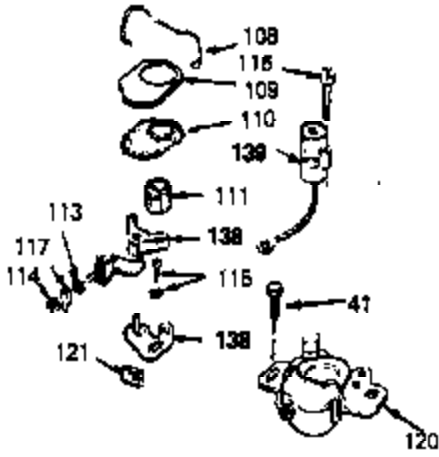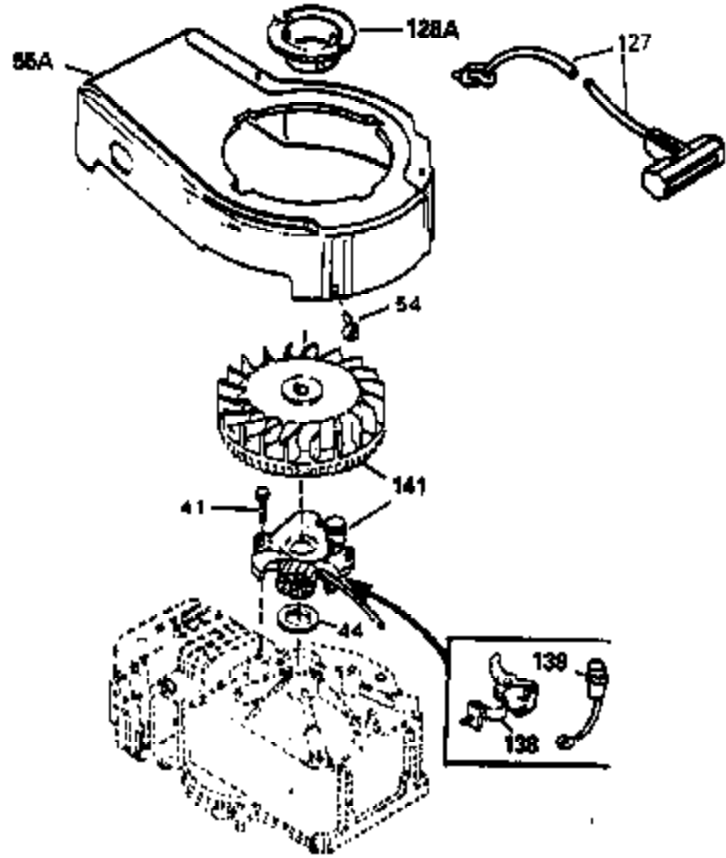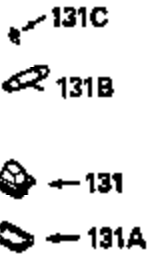

Ref #	Part Number	Qty	Description
17	32610A		Connecting Rod Bolt
54	650561		Screw, 1/4-20 x 5/8"
78	35015B		S.E. Brake Bracket
131A	34984		Pulley Retainer
131B	34985		Rope Stop & Staple (Incl. 131C)
131C	35025		Stop Retainer Staple
131	34983		Starter Pulley
132	650837		Screw, 10-32 x 1/4"
133	32309		Retaining Ring
134	34968		Brake Lever
135	34965		Extension Spring
136	34966		Control Link