


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL
NUMBERS HERE







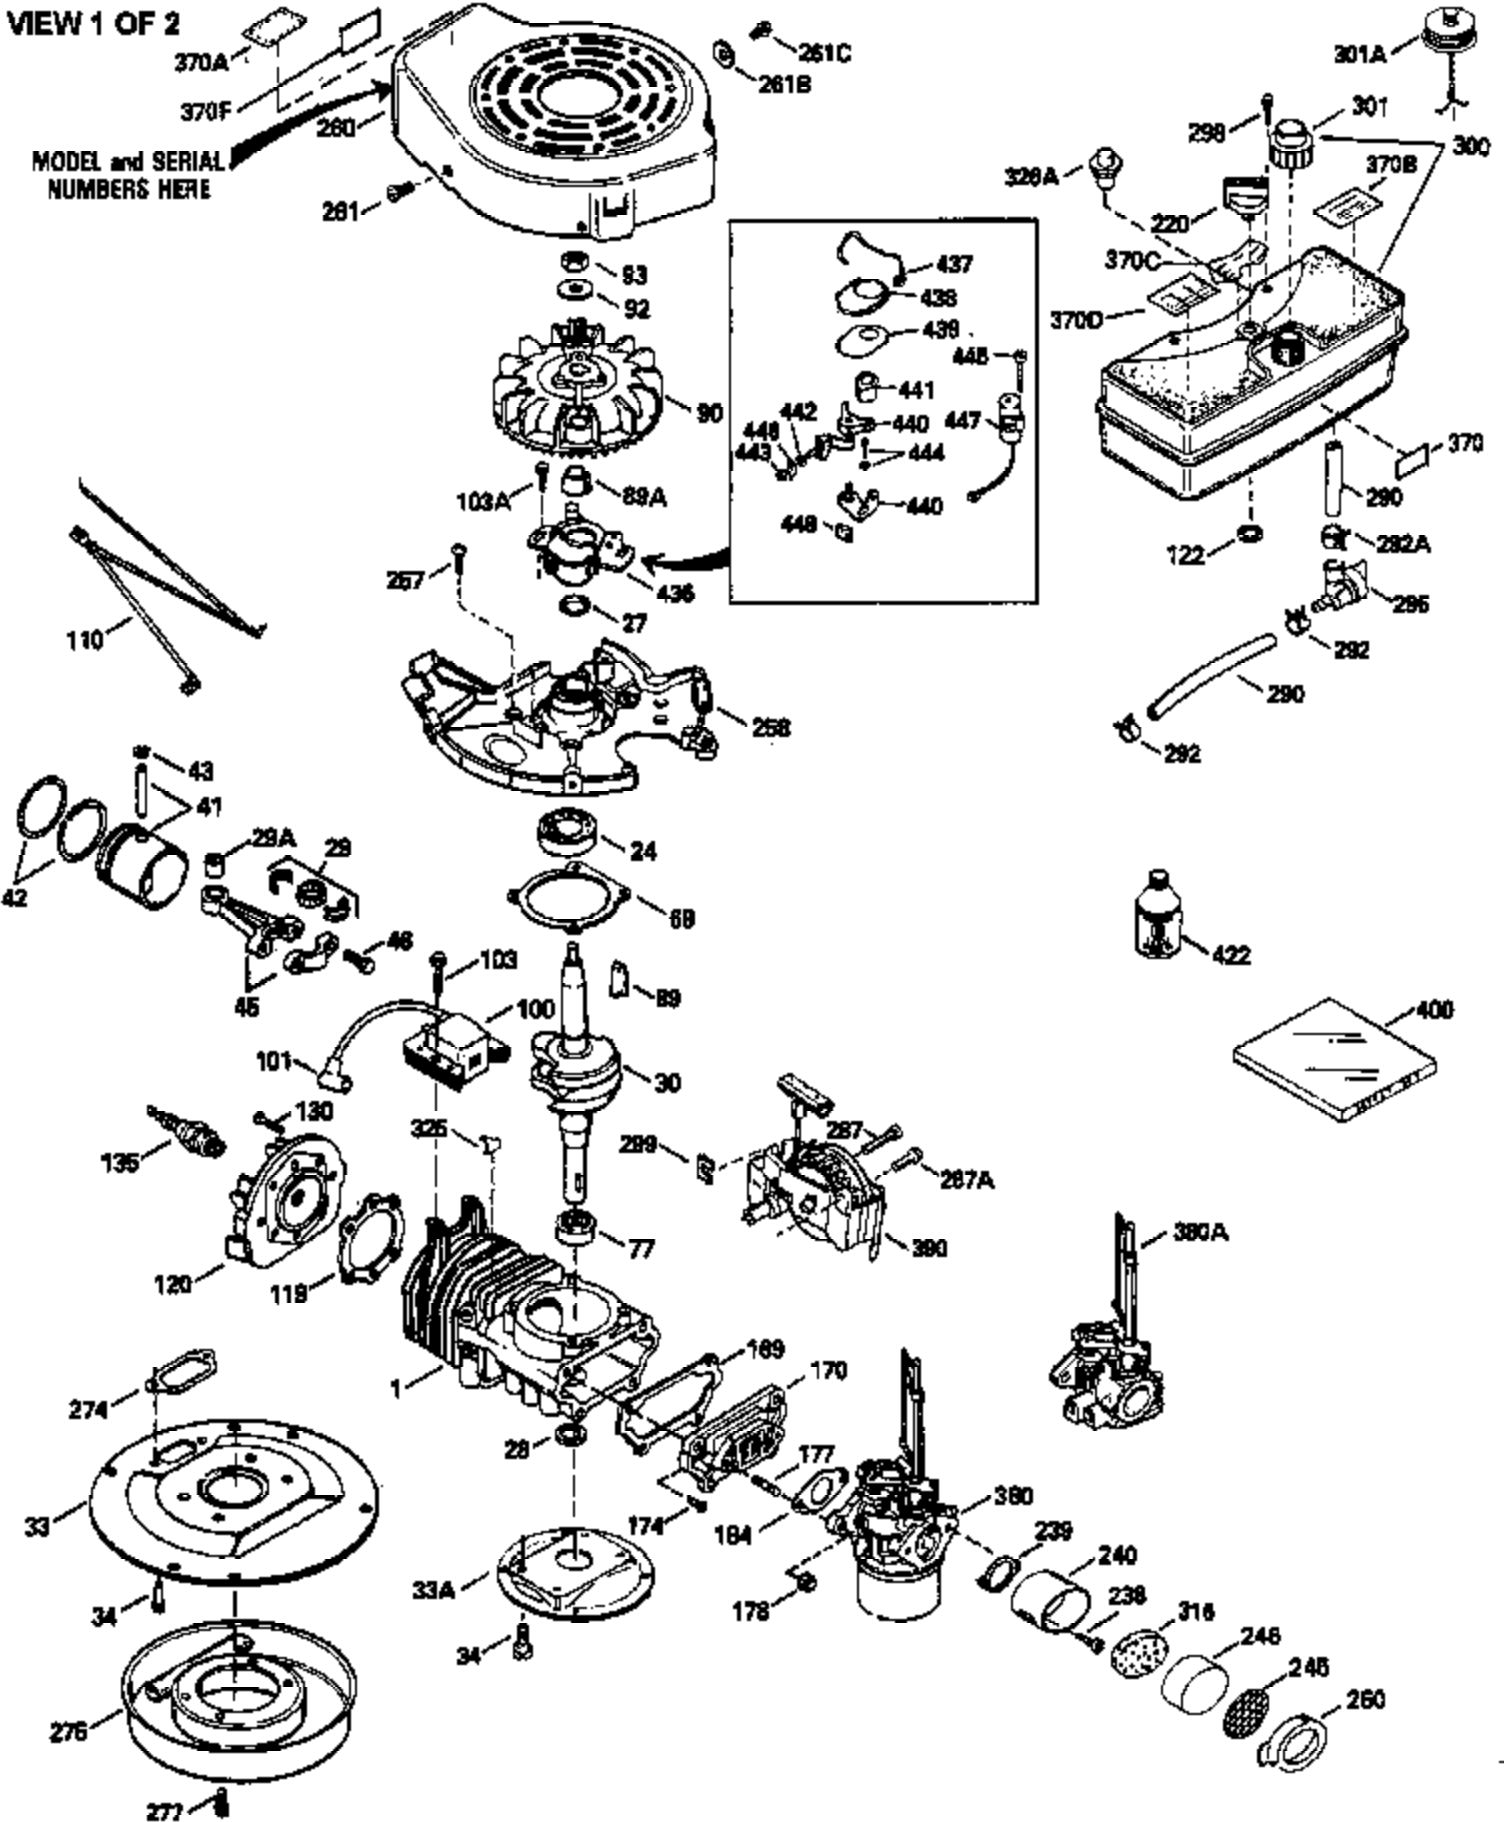


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
	24 530110		Ball Bearing
	27 510319		Oil Seal
	28 28427		Oil Seal
	29 530151		Needle Bearing & Liner Set (30 Needle s)
	29A 530104A		Cartridge Bearing
	30 290579		Crankshaft & Rod Ass'y. (Incl. 45)
	33 330175		Adapter Plate (8" B.C.)
	34 650797		Screw, 5/16-18 x 1/2"
	41 310272A		Piston & Pin Ass'y. (.010" OS)
	41 310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
	42 310190		Ring Set (Std.)
	42 310273		Ring Set (.010" OS)
	43 310167		Piston Pin Retaining Ring
	45 310263		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
	46 650633		Connecting Rod Bolt
	69 510292A		* Cylinder Cover Gasket
	77 780097		Cartridge Bearing
	89A 611014A		Adapter Sleeve
	90 611046A		Flywheel
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	100 34431		Lamination & Coil Ass'y. (This coil has been superseded to 730207 solid state conversion kit.)
	100 730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
	101 610118		Spark Plug Cover
	103A 650747		Screw, 1/4-20 x 3/4"
	110 611018		Ground Wire
	119 510274A		* Cylinder Head Gasket
	120 250240B		Cylinder Head
	122 570641		Retaining Ring
	130 650477		Screw, Torx T-30, 1/4-20 x 3/4"
	135 33636		Resistor Spark Plug
	169 510323A		* Cover Plate Gasket
	170 470152A		Reed & Cover Plate (Incl. 178)
	174 650579		Screw, Torx T-25, 10-24 x 1/2"
	178 650456		Nut, 1/4-20
	184 510110A		* Carburetor Gasket
	220 570640		Control Knob
	257 650561		Screw, 1/4-20 x 5/8"
	258 350408		Blower Housing Base (Incl. 27)
	260 350403		Blower Housing
	261 650958		Screw, 1/4-20 x 7/16"
	261B 650854		Washer
	274 510314		Exhaust Gasket
	275 390297		Muffler
	277 650911		Screw, Torx T-30, 1/4-20 x 5/8"
	287A 650561		Screw, 1/4-20 x 5/8"
	287 30646		Screw, 1/4-20 x 1-3/8"
	290 29774		Fuel Line
	292 26460		Fuel Line Clamp
	298 650803		Screw, 10-32 x 7/8"
	300 410241		Fuel Tank (Incl. 301)
	301 410238		Fuel Cap
	316 450233		Mesh Screen

Ref #	Part Number	Qty	Description
370C	550214		Choke Fast-Stop Decal
370B	550213		Warning Decal
370A	34686		Name Decal
370D	550212		Fuel Mix Decal
380	632132A		Carburetor (Incl. 184) (Refer to 632335 carburetor except use 632188 float bowl nut, Division 5, Section A, page A1-42 or Fiche 23B, Grid F-13 for breakdown)
390	590552		Side Mount Rewind Starter (Refer to Division 5, Section C, page 32 or Fiche 23B, Grid G-13for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)
436	611006		Stator Plate Ass'y. (Incl. 437 thru 4 48)
437	30551		Breaker Box Cover Spring
438	610947		Dust Cover
439	610948		Dust Cover Gasket
440	30547A		Breaker Contact
441	30552		Breaker Cam
442	610385		Washer
443	610408		Nut, 8 32
444	29181		Breaker Point Screw
445	610593		Screw, 8-32 x 13/16"
446	33356		Ground Terminal
447	30548B		Condenser
448	30549		Felt Cam Wiper

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

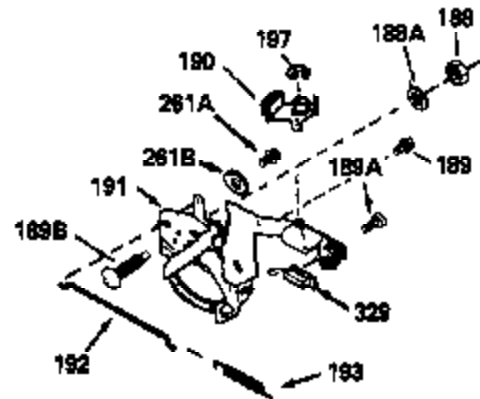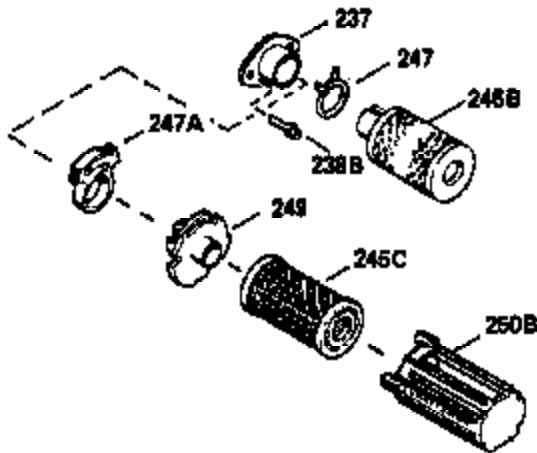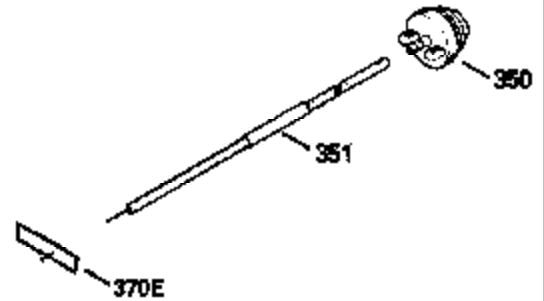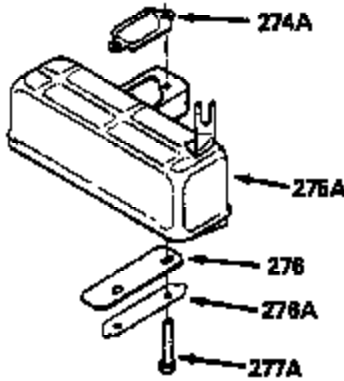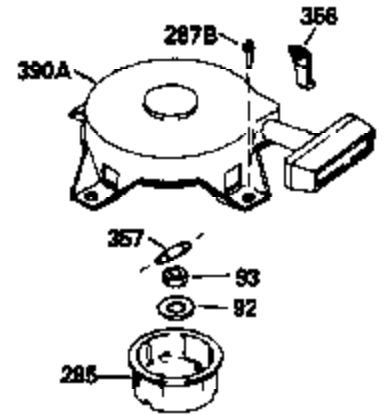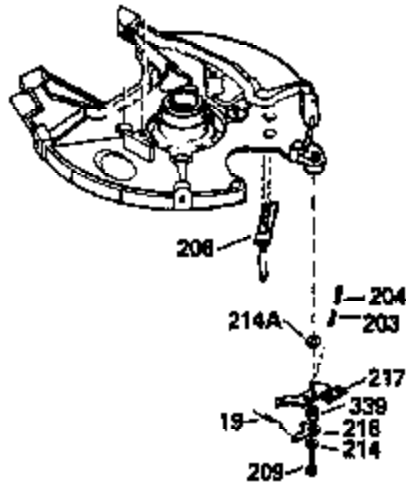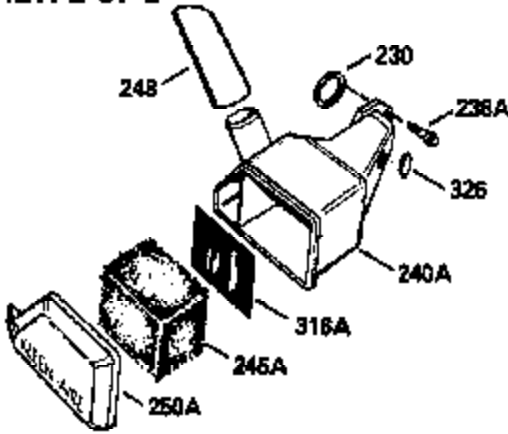

Ref #	Part Number	Qty	Description
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
189A	650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
230	34338		Air Cleaner Gasket
238A	650806		Screw, 10-32 x 5/8"
240A	450234		Air Cleaner Body
245A	450236		Air Cleaner Element
248	33008		Air Cleaner Tube
250A	33007		Air Cleaner Cover
261B	650854		Washer
316A	450235		Mesh Screen
326	450237		Button Plug