


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL  
NUMBERS HERE







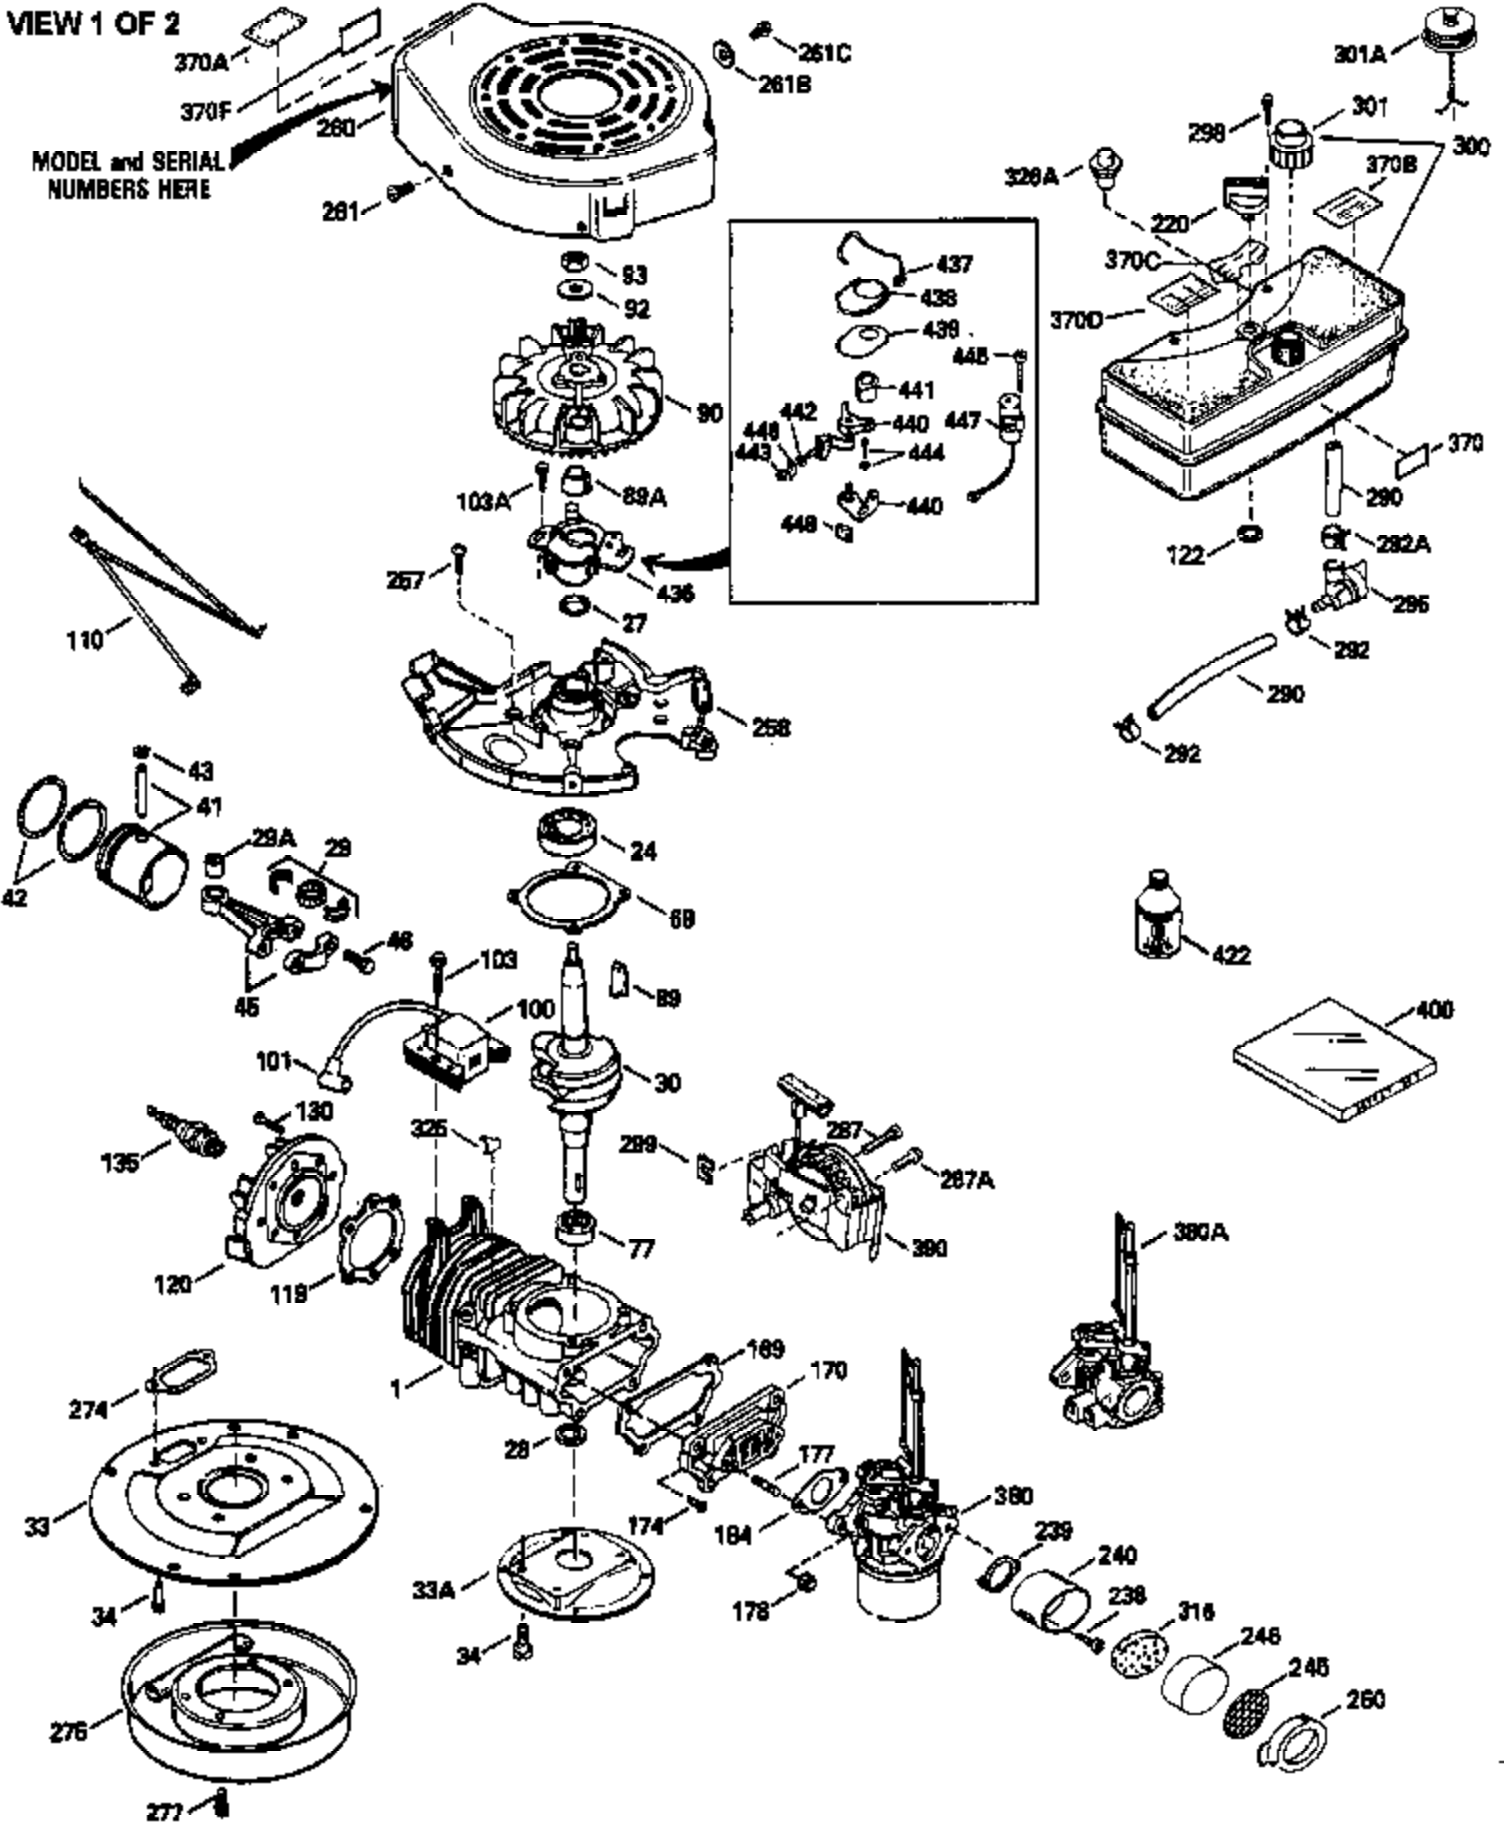


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
24	530110		Ball Bearing
27	510319		Oil Seal
28	28427		Oil Seal
29A	530104A		Cartridge Bearing
29	530151		Needle Bearing & Liner Set (30 Needle s)
30	290579		Crankshaft & Rod Ass'y. (Incl. 45)
30	330177		Adapter Plate (8" B.C.)
34	650797		Screw, 5/16-18 x 1/2"
41	310272A		Piston & Pin Ass'y. (.010" OS)
41	310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
42	310190		Ring Set (Std.)
42	310273		Ring Set (.010" OS)
43	310167		Piston Pin Retaining Ring
45	310263		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
46	650633		Connecting Rod Bolt
69	510292A		* Cylinder Cover Gasket
77	780097		Cartridge Bearing
89A	611032		Adapter Sleeve
90	611046A		Flywheel
92	650815		Belleville Washer
93	650390		Flywheel Nut
100	34443A		Solid State Ignition (Incl. 101)
100	730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
110	611059		Ground Wire
119	510274A		* Cylinder Head Gasket
120	250240B		Cylinder Head
122	570641		Retaining Ring
130	650477		Screw, Torx T-30, 1/4-20 x 3/4"
135	33636		Resistor Spark Plug
169	510323A		* Cover Plate Gasket
170	470152A		Reed & Cover Plate (Incl. 178)
174	650579		Screw, Torx T-25, 10-24 x 1/2"
178	650456		Nut, 1/4-20
184	510110A		* Carburetor Gasket
192	34966		Brake Control Link
220	570657		Control Knob
257	650561		Screw, 1/4-20 x 5/8"
258	350427		Blower Housing Base (Incl. 27)
260	350418		Blower Housing
261	650958		Screw, 1/4-20 x 7/16"
261B	650854		Washer
261C	650773		Screw, 1/4-20 x 1/2"
274	510314		Exhaust Gasket
275	390300		Muffler
277	650911		Screw, Torx T-30, 1/4-20 x 5/8"
290	29774		Fuel Line
292	26460		Fuel Line Clamp
298	650803		Screw, 10-32 x 7/8"
300	410241		Fuel Tank (Incl. 301)
301	410238		Fuel Cap
370D	550212		Fuel Mix Decal
370C	550224		Control Decal

Ref #	Part Number	Qty	Description
370B	550213		Warning Decal
380	632326		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-42 or Fiche 23B, Grid F-13 for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

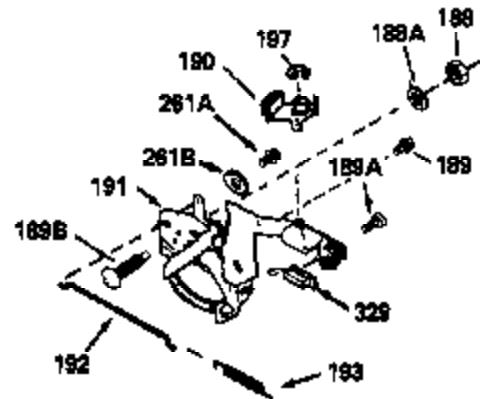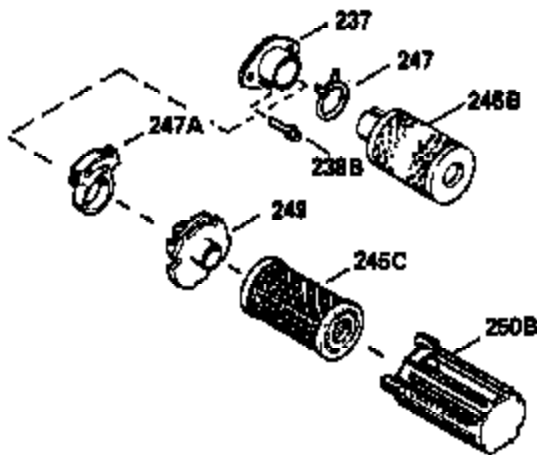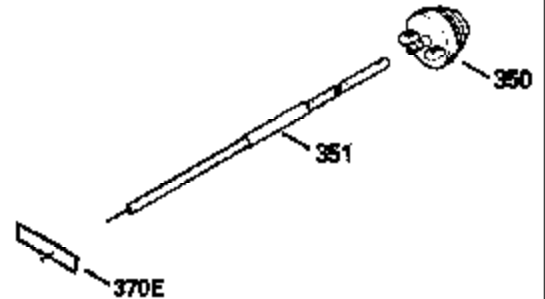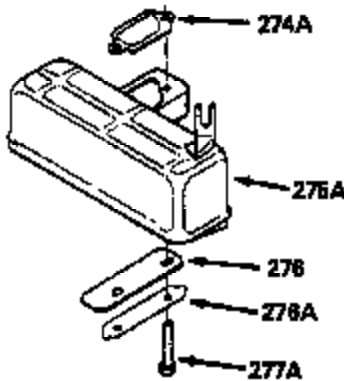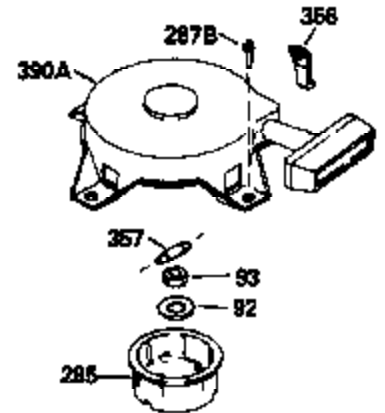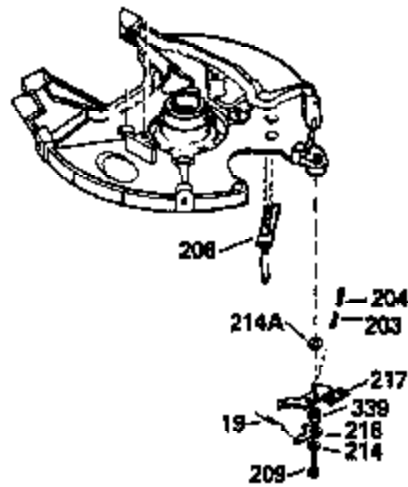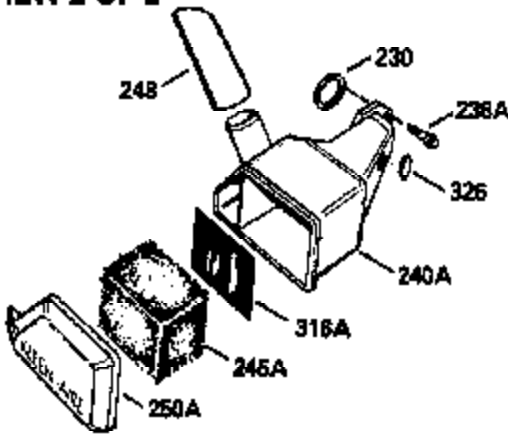

Ref #	Part Number	Qty	Description
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	188A 650861		Nut
	188 650580		Lock Nut, 10-24
	189B 650860		Screw, 10-24 x 59/64"
	189 650773		Screw, 1/4-20 x 1/2"
	189A 650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
	190 35831		Brake Lever
	191 570658A		S.E. Brake Bracket
	192 34966		Brake Control Link
	193 34965		Brake Spring
	197 32309		Retaining Ring
	230 34338		Air Cleaner Gasket
	238A 650806		Screw, 10-32 x 5/8"
	240A 450234		Air Cleaner Body
	245A 450236		Air Cleaner Element
	248 33008		Air Cleaner Tube
	250A 33007		Air Cleaner Cover
	261A 650853		Screw, Torx T-30, 1/4-20 x 1/2"
	261B 650854		Washer
	285 590551		Starter Cup
	287B		Rivet (Can be purchased locally)
	316A 450235		Mesh Screen
	326 450237		Button Plug
	329 610973		Terminal
	350 570682		Primer Bulb
	351 570656		Primer Line
	370E 36260		Primer Decal
	390A 590557		Rewind Starter (Refer to Division 5, Section C, page 25 or Fiche 23B, Grid G-11 for breakdown)