


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

MODEL and SERIAL
NUMBERS HERE




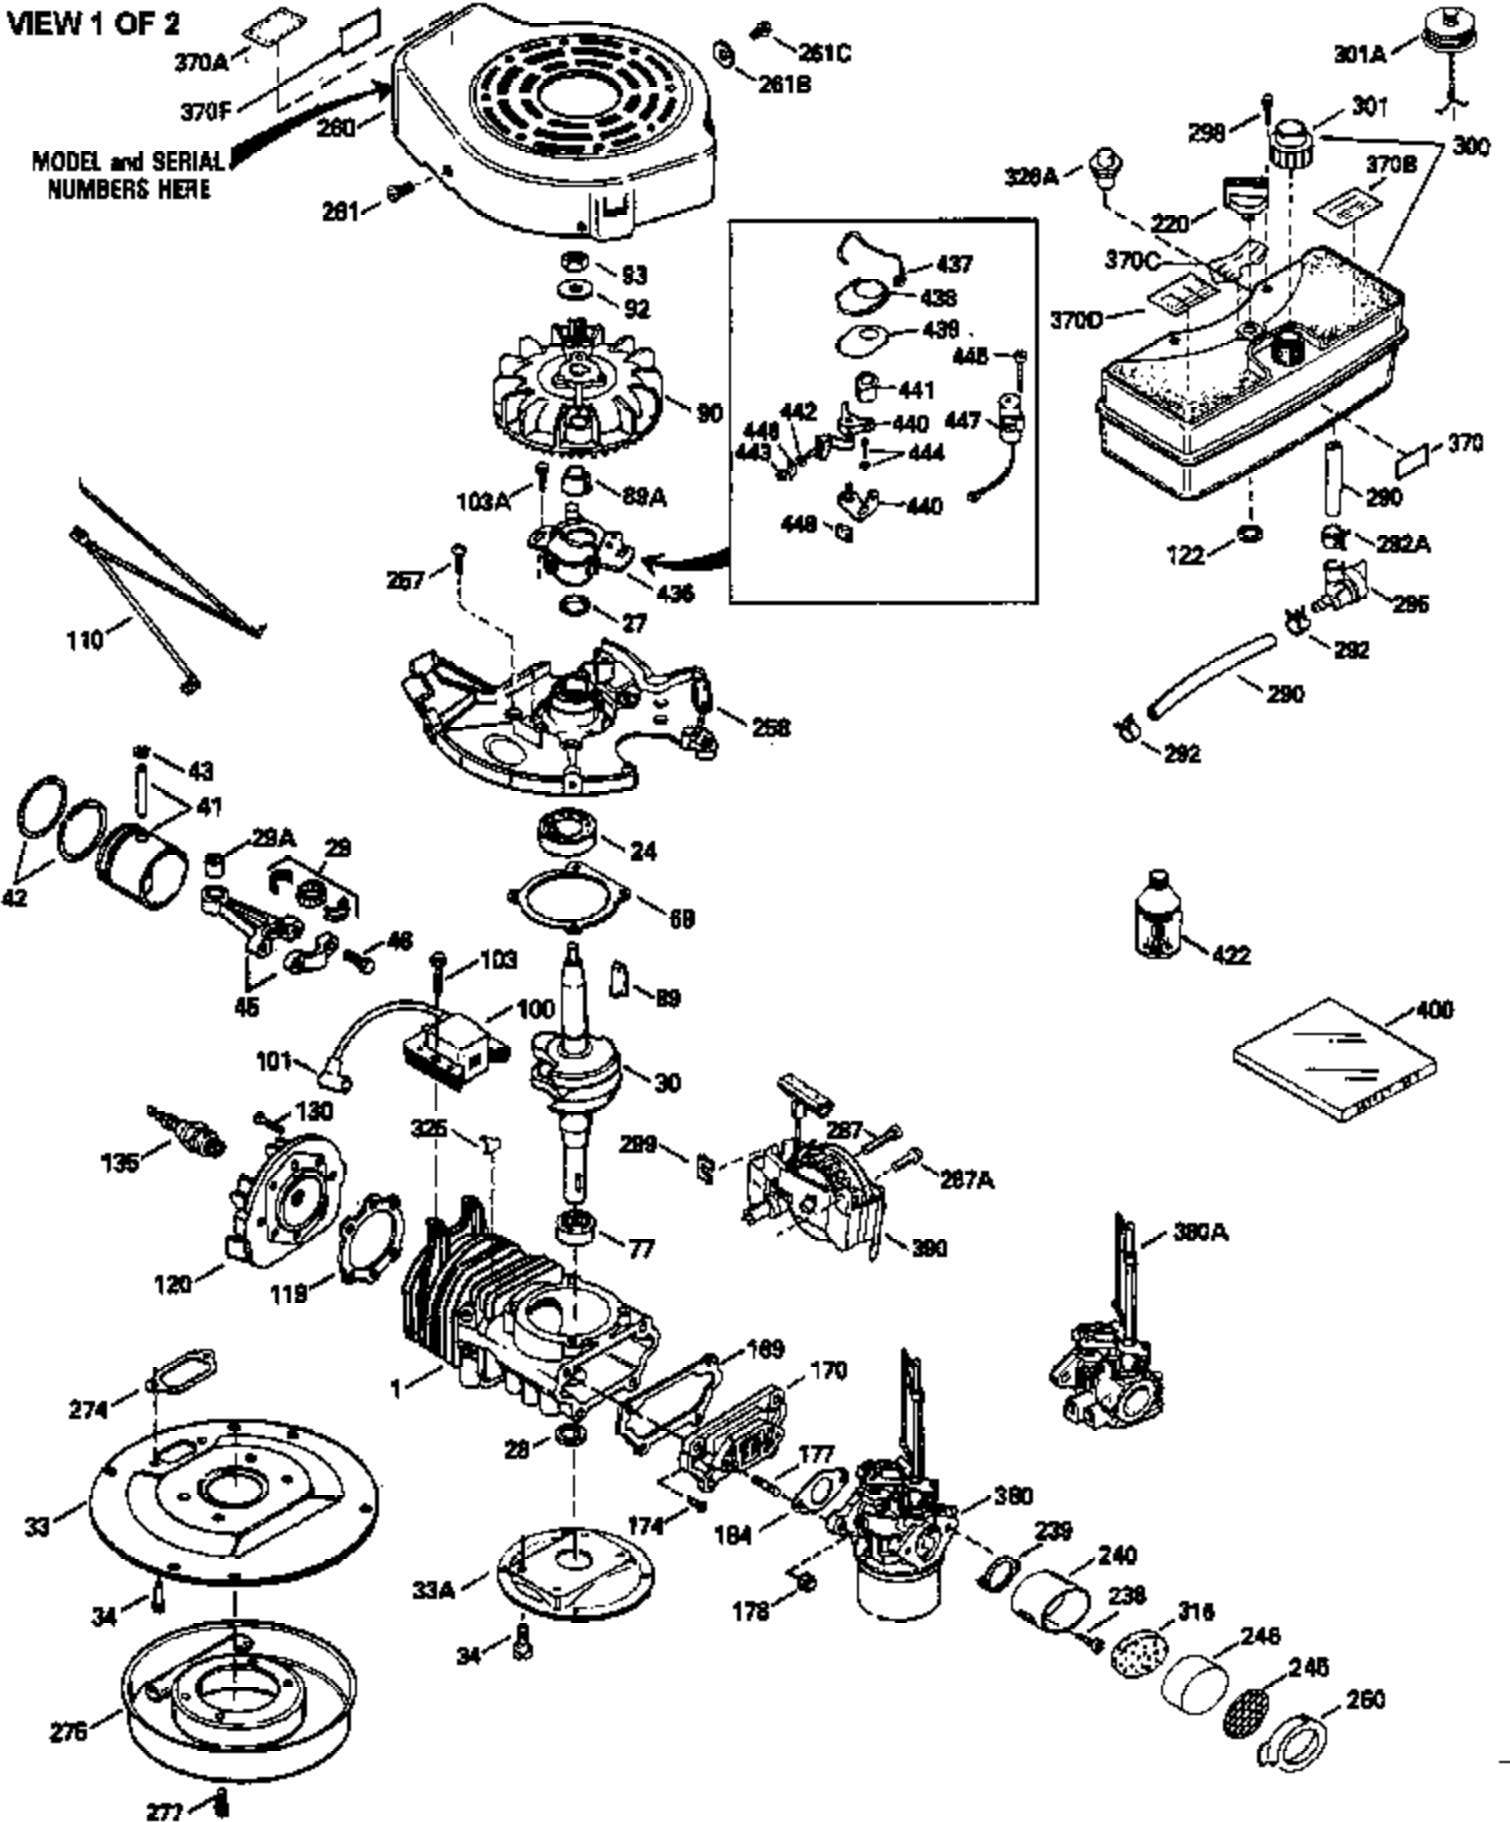


Ref #	Part Number	Qty	Description
	1		Cylinder (Order s/b if replacement is req.)
	24 530110		Ball Bearing
	27 510319		Oil Seal
	28 28427		Oil Seal
	29 530150		Needle Bearing & Liner Set (37 Needle s)
	29A 530104A		Cartridge Bearing
	30 290548		Crankshaft
	41 310283A		Piston & Pin Ass'y. (Std.)(Incl. 43)
	41 310272A		Piston & Pin Ass'y. (.010" OS)
	42 310273		Ring Set (.010" OS)
	42 310190		Ring Set (Std.)
	43 310167		Piston Pin Retaining Ring
	45 310235B		Connecting Rod Ass'y. (Incl. 29, 29A & 46)
	46 650633		Connecting Rod Bolt
	69 510292A		* Cylinder Cover Gasket
	77 780097		Cartridge Bearing
	89A 611032		Adapter Sleeve
	90 611046A		Flywheel
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
	100 34443A		Solid State Ignition (Incl. 101)
	100 730207		Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions.)(Use as required on external ignition engines only.)
	101 610118		Spark Plug Cover
	103 650814		Screw, Torx T-15, 10-24 x 1"
	110 611061		Ground Wire
	119 510274A		* Cylinder Head Gasket
	120 250240B		Cylinder Head
	130 650477		Screw, Torx T-30, 1/4-20 x 3/4"
	135 33636		Resistor Spark Plug
	169 510323A		* Cover Plate Gasket
	170 470152A		Reed & Cover Plate (Incl. 178)
	174 650579		Screw, Torx T-25, 10-24 x 1/2"
	178 650456		Nut, 1/4-20
	184 510110A		* Carburetor Gasket
	192 34966		Brake Control Link
	239 510206A		Air Cleaner Gasket
	257 650561		Screw, 1/4-20 x 5/8"
	258 350427		Blower Housing Base (Incl. 27)
	260 350403		Blower Housing
	261C 650773		Screw, 1/4-20 x 1/2"
	261 650773		Screw, 1/4-20 x 1/2"
	261B 650854		Washer
	287 30646		Screw, 1/4-20 x 1-3/8"
	287A 650561		Screw, 1/4-20 x 5/8"
	290 29774		Fuel Line
	292 26460		Fuel Line Clamp
	295 430228		Fuel Shut-Off Valve
	298 650803		Screw, 10-32 x 7/8"
	300 410241		Fuel Tank (Incl. 301)
	301A 410224		Fuel Cap
	326A 570663		Fuel Tank Plug
	370B 550213		Warning Decal
	370D 550212		Fuel Mix Decal
	380 632356		Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-42 or Fiche 23B,Grid F-13 for breakdown)

Ref #	Part Number	Qty	Description
390	590552		Side Mount Rewind Starter (Refer to Division 5, Section C, page 32 or Fiche 23B, Grid G-13for breakdown)
400	510295A		* Gasket Set (Incl. items marked *)
422	730227A		2-Cycle Oil (8 oz.)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

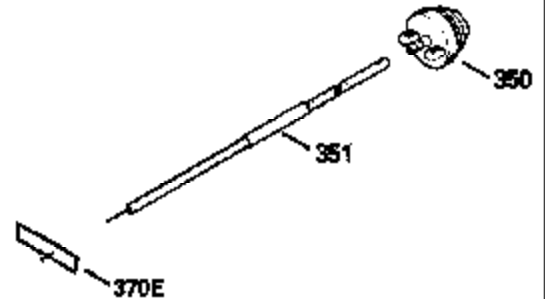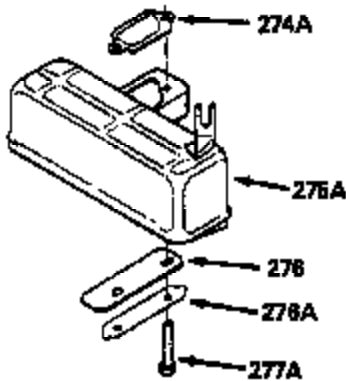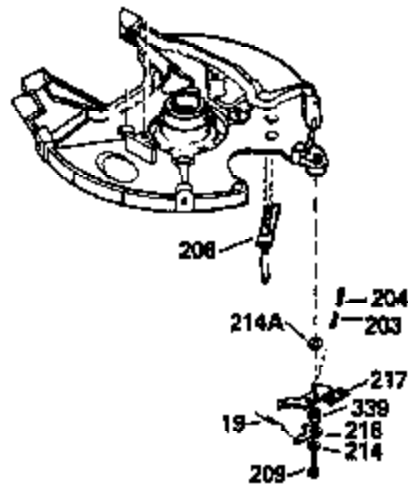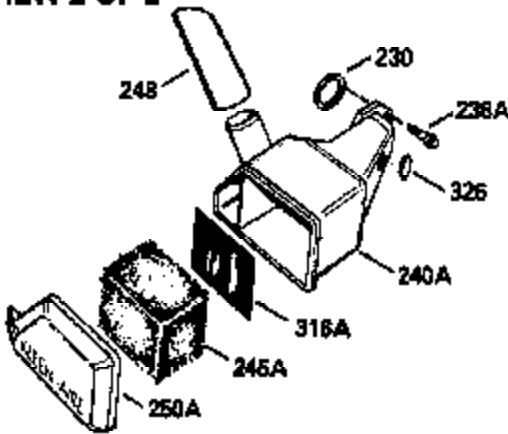

Ref #	Part Number	Qty	Description
	92 650815		Belleville Washer
	93 650390		Flywheel Nut
189A	650911		Screw, Torx T-30, 1/4-20 x 5/8" (As r eq.)
189	650773		Screw, 1/4-20 x 1/2"
190	35831		Brake Lever
191	570671		S.E. Brake Bracket
192	34966		Brake Control Link
193	34965		Brake Spring
197	32309		Retaining Ring
261A	650853		Screw, Torx T-30, 1/4-20 x 1/2"
261B	650854		Washer
274A	510257		Exhaust Gasket
275A	390310		Muffler
276A	390312		Locking Plate
276	390311		Support Plate
277A	650488		Screw, 1/4-20 x 1-1/4"
329	610973		Terminal
350	570682		Primer Bulb
351	570656		Primer Line
370E	36260		Primer Decal