


BV720r 41AJBV-A054
General Assembly

Page 1 of 2

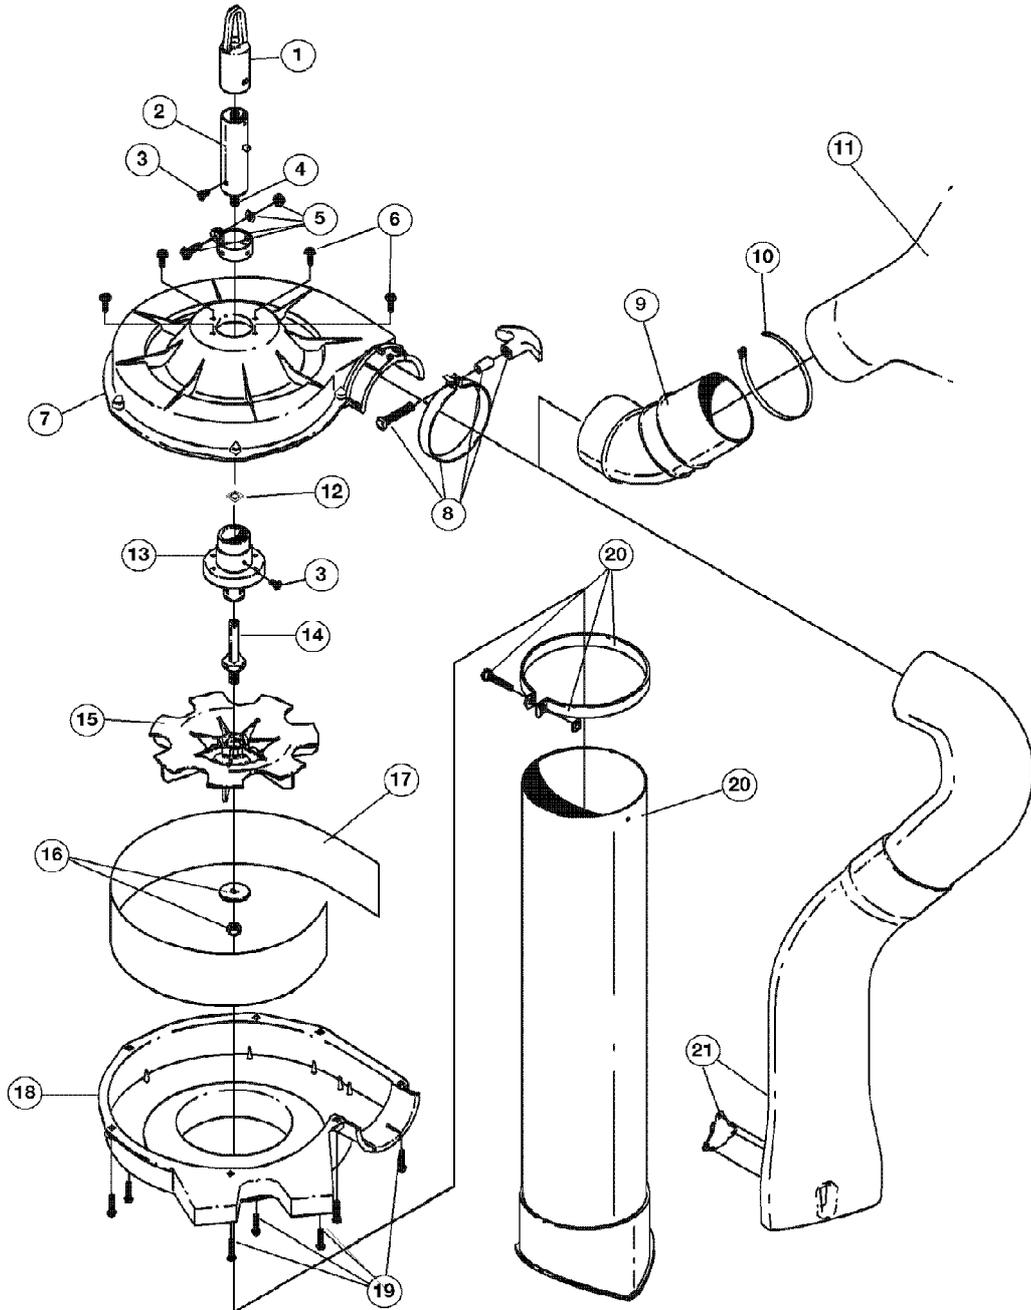

BV720r 41AJBV-A054
General Assembly

Page 2 of 2

Ref #	Part Number	Qty	S/P/F	Description
1	791-612605	1	/P	Hanger
2	791-180917	1		Boom Assembly
3	791-145569	1	/P	Anti-Rotation Screw
4	791-683882	1		Drive Shaft Assembly
5	791-153597	1		Lower Clamp Assembly (Incl. Ref No. 3)
6	791-181853	1		Mounting Screw
7	791-180874	1		Upper Housing
8	791-683884	1		Clamp Assembly
9	791-612929	1		Adapter
10	791-612930	1		Clamp
11	791-180108	1	/P	Vacuum Bag Assembly (Incl. Ref No. items 9 and 10)
12	753-04348	1	/P	Palnut
13	791-181636	1		Bushing Housing Assembly
14	791-612931	1		Impeller Shaft
15	791-180197	1		Impeller
16	791-683887	1		Nut and Washer Assembly
17	791-181586	1		Shield
18	791-180875	1		Lower Housing
19	791-181345	1	/P	Mounting Screw
20	753-1215	1		Vacuum Tube Assembly
21	791-181641	1		Blower Tube Assembly