


TB20CS 41BDT20C711
Boom and Trimmer

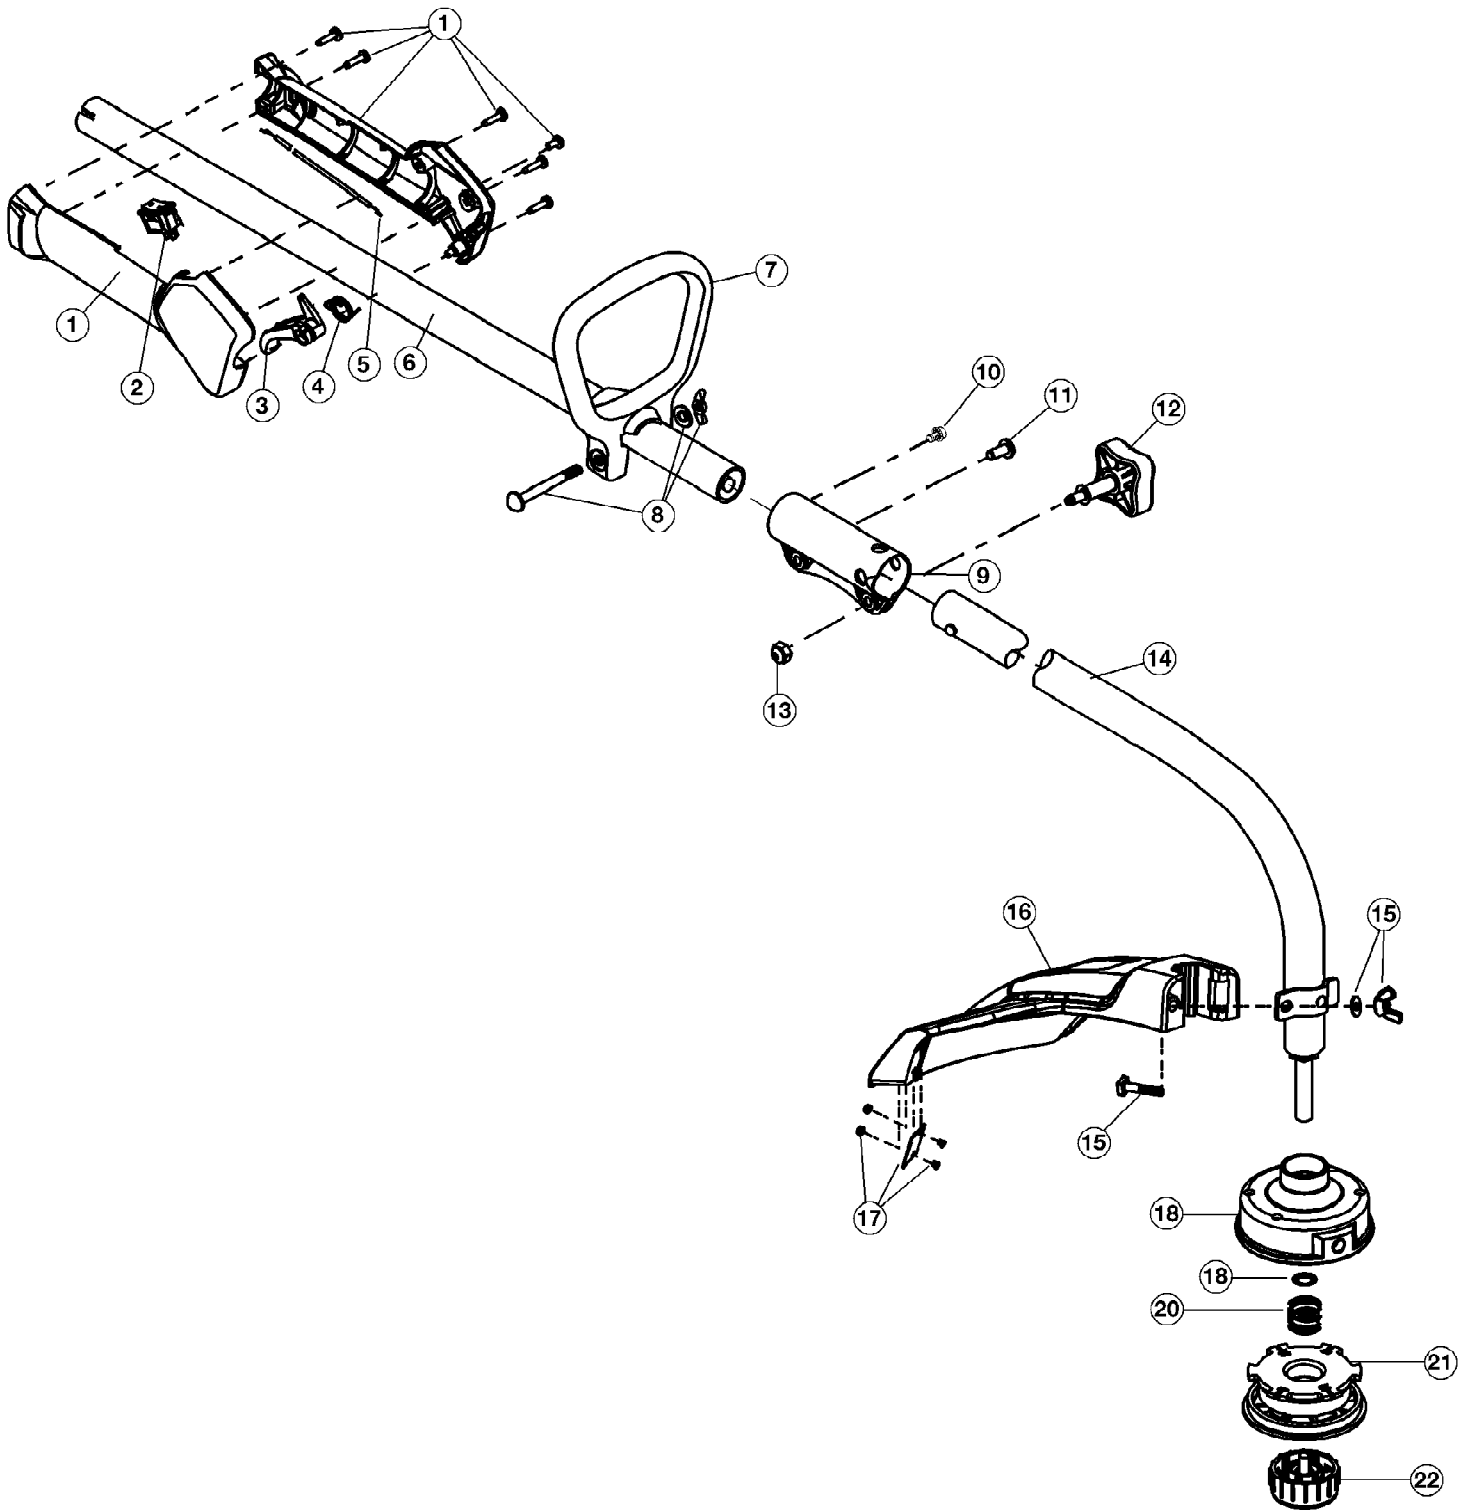


TB20CS 41BDT20C711
Boom and Trimmer

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04829	1		Throttle Housing Assembly (includes 2-4)
2	791-182405	1	/P	Switch
3	753-04119	1	/P	Throttle Trigger
4	791-182690	1		Throttle Trigger Spring
5	753-04405	1	S	Throttle Cable
6	753-04236	1	/P	Upper Drive Shaft Housing Assembly
7	791-153064	1	/P	D-Handle (includes 8)
8	791-153317	1	S	Handle Hardware
9	753-1190	1	/P	Split Boom Coupler (includes 10-13)
10	791-182057	1		Screw
11	791-181617	1		Bolt
12	791-181981	1		Adjustment Knob
13	753-04386	1	S	Knob Retaining Nut
14	753-04508	1		Lower Drive Shaft Housing Assembly
15	753-04282	1		Guard Mounting Hardware
16	753-04283	1		Guard (includes 17)
17	791-180553	1		Blade Assembly
18	753-04284	1		Outer Spool Assembly (includes 19)
19	791-610660	1		Retainer
20	791-610317B	1	/P	Spring
21	753-1155	1	/P	Inner Reel
22	791-153066B	1	/P	Bump Head Knob Assembly

TB20CS 41BDT20C711
Engine Parts

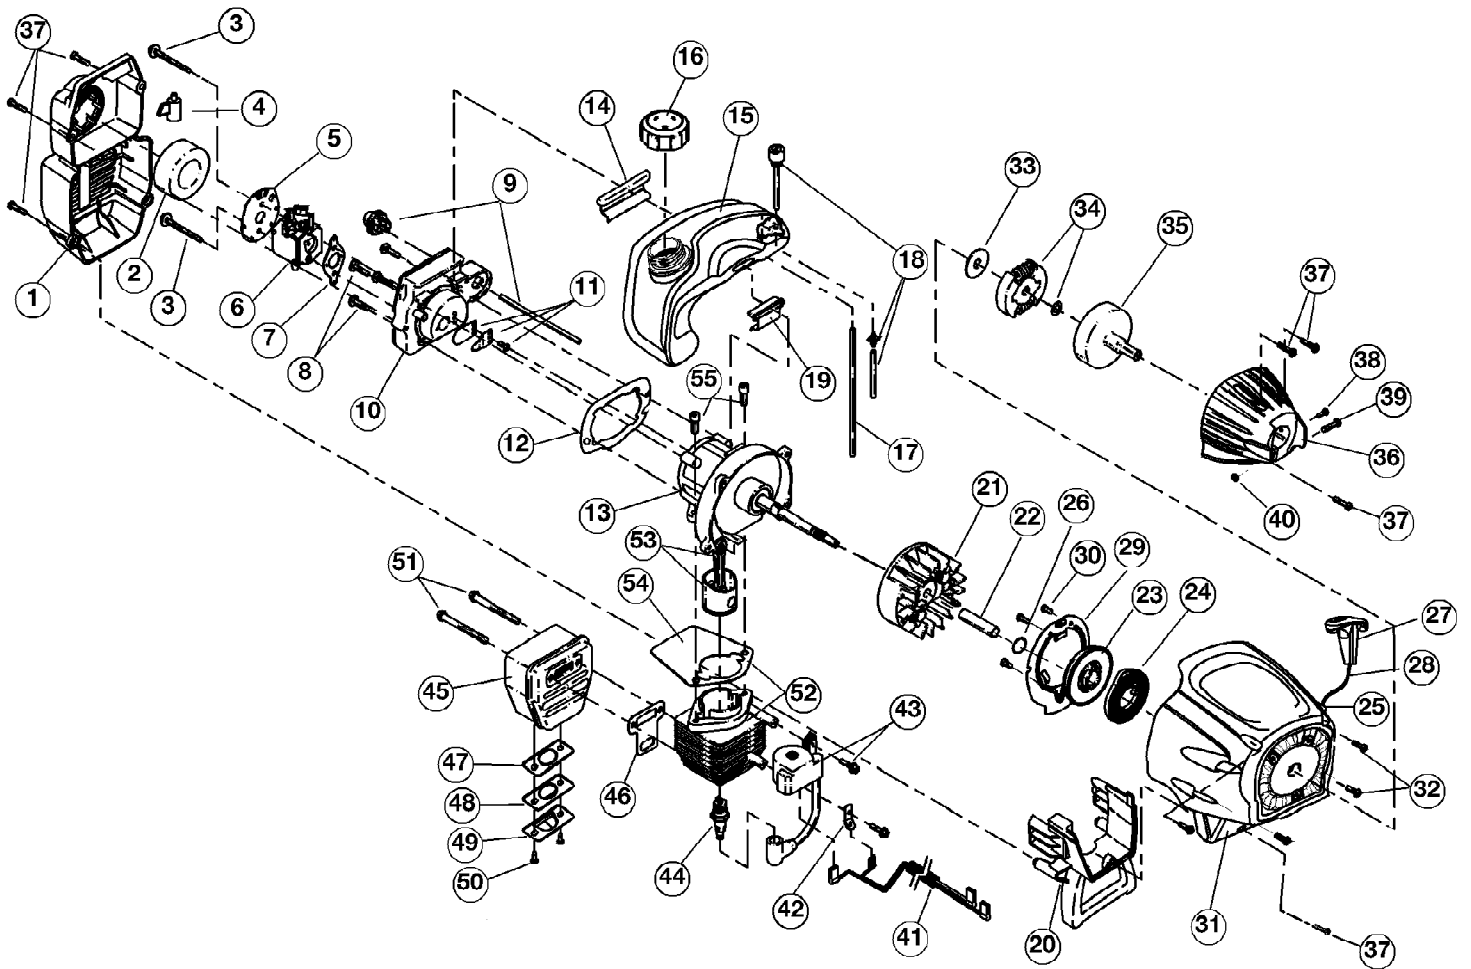

TB20CS 41BDT20C711
Engine Parts

Page 4 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04810	1		Air Cleaner Cover Assembly (includes 2 & 37)
2	791-180350B	1	/P	Air Cleaner Filter
3	791-180351	1		Carburetor Mounting Screw Assembly
4	753-04227	1	/P	Choke Extension
5	753-1194	1	S	Choke Plate
6	753-04318	1	S	Carburetor Assembly (includes 7 & 18)
7	791-610675	1		Carburetor Gasket
8	791-181860	1		Carb Mount Screw
9	791-683974B	1	/P	Primer & Hose Assembly
10	753-1196	1	/P	Carb Mount Assembly (includes 8, 11 & 12)
11	791-684451	1		Reed Assembly
12	753-1208	1	/P	Carburetor Mount Gasket
13	753-04401	1		Crankcase Service Assembly (includes 8)
14	791-612134	1		Rear Mounting Pad
15	753-04307	1	/P	Fuel Tank Assembly (includes 16-18)
16	753-04084	1	/P	Fuel Cap Assembly
17	791-181086	1	/P	Fuel Return Line
18	753-04233	1		Fuel Line Assembly
19	791-145308	1		Front Mounting Pad
20	753-04702	1		Shroud Extension & Stand
21	791-182736	1	S	Flywheel Assembly
22	791-181525	1		Spacer
23	753-04459	1	/P	Recoil Pulley Assembly (includes 24, 26 & 28)
24	753-04286	1		Recoil Spring
25	753-1200	1		Rope Guide
26	791-181247	1	S	Pulley Retainer
27	791-181079	1	S	Pull Handle
28	791-613103	1		Rope
29	753-04417	1	/P	Pressure Plate Assembly
30	753-1202	1		Plate Screw
31	753-04402	1		Starter Housing Assembly (includes 23-30, 32 & 37)
32	791-181862	1	/P	Housing Screw
33	791-182368	1	S	Clutch Washer
34	791-182369	1	S	Clutch Rotor Assembly
35	791-153592	1	/P	Clutch Drum Assembly
36	753-1204	1		Clutch Cover Assembly (includes 37-40)
37	791-181345	1	/P	Cover Screw
38	791-182519	1		Anti-Rotation Screw
39	753-04003	1		Clamping Screw
40	791-180217	1	S	Clamping Nut
41	791-182798	1		Wire Leads and Sleeve
42	791-611063	1	/P	Ground Tab
43	753-04336	1		Module Assembly (includes 42)
44	791-610311B	1	/P	Spark Plug
45	753-04618	1	S	Muffler Assembly (includes 46-51)
46	753-04619	1	/P	Exhaust Gasket
47	753-04689	1		Spark Arrestor Screen
48	753-04690	1		Exhaust Hood Diverter
49	753-04691	1		Exhaust Hood
50	753-04315	1	S	Screws
51	753-04620	1	S	Muffler Mounting Bolts
52	753-04323	1	S	Cylinder Assembly (includes 54 & 55)

TB20CS 41BDT20C711
 Engine Parts

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
53	753-04367	1	/P	Piston and Rod Assembly
54	753-04182	1		Cylinder Gasket
55	791-182723	1		Cylinder Bolt
	753-1209	1		Piston Ring Set
	753-04812	1	/P	Short Block Assembly (includes 8, 13,& 52-55)
	791-181599	1		Clutch Springs (Qty. 2)