


TB465SS 41ADT46C711
Boom and Trimmer parts TB465SS

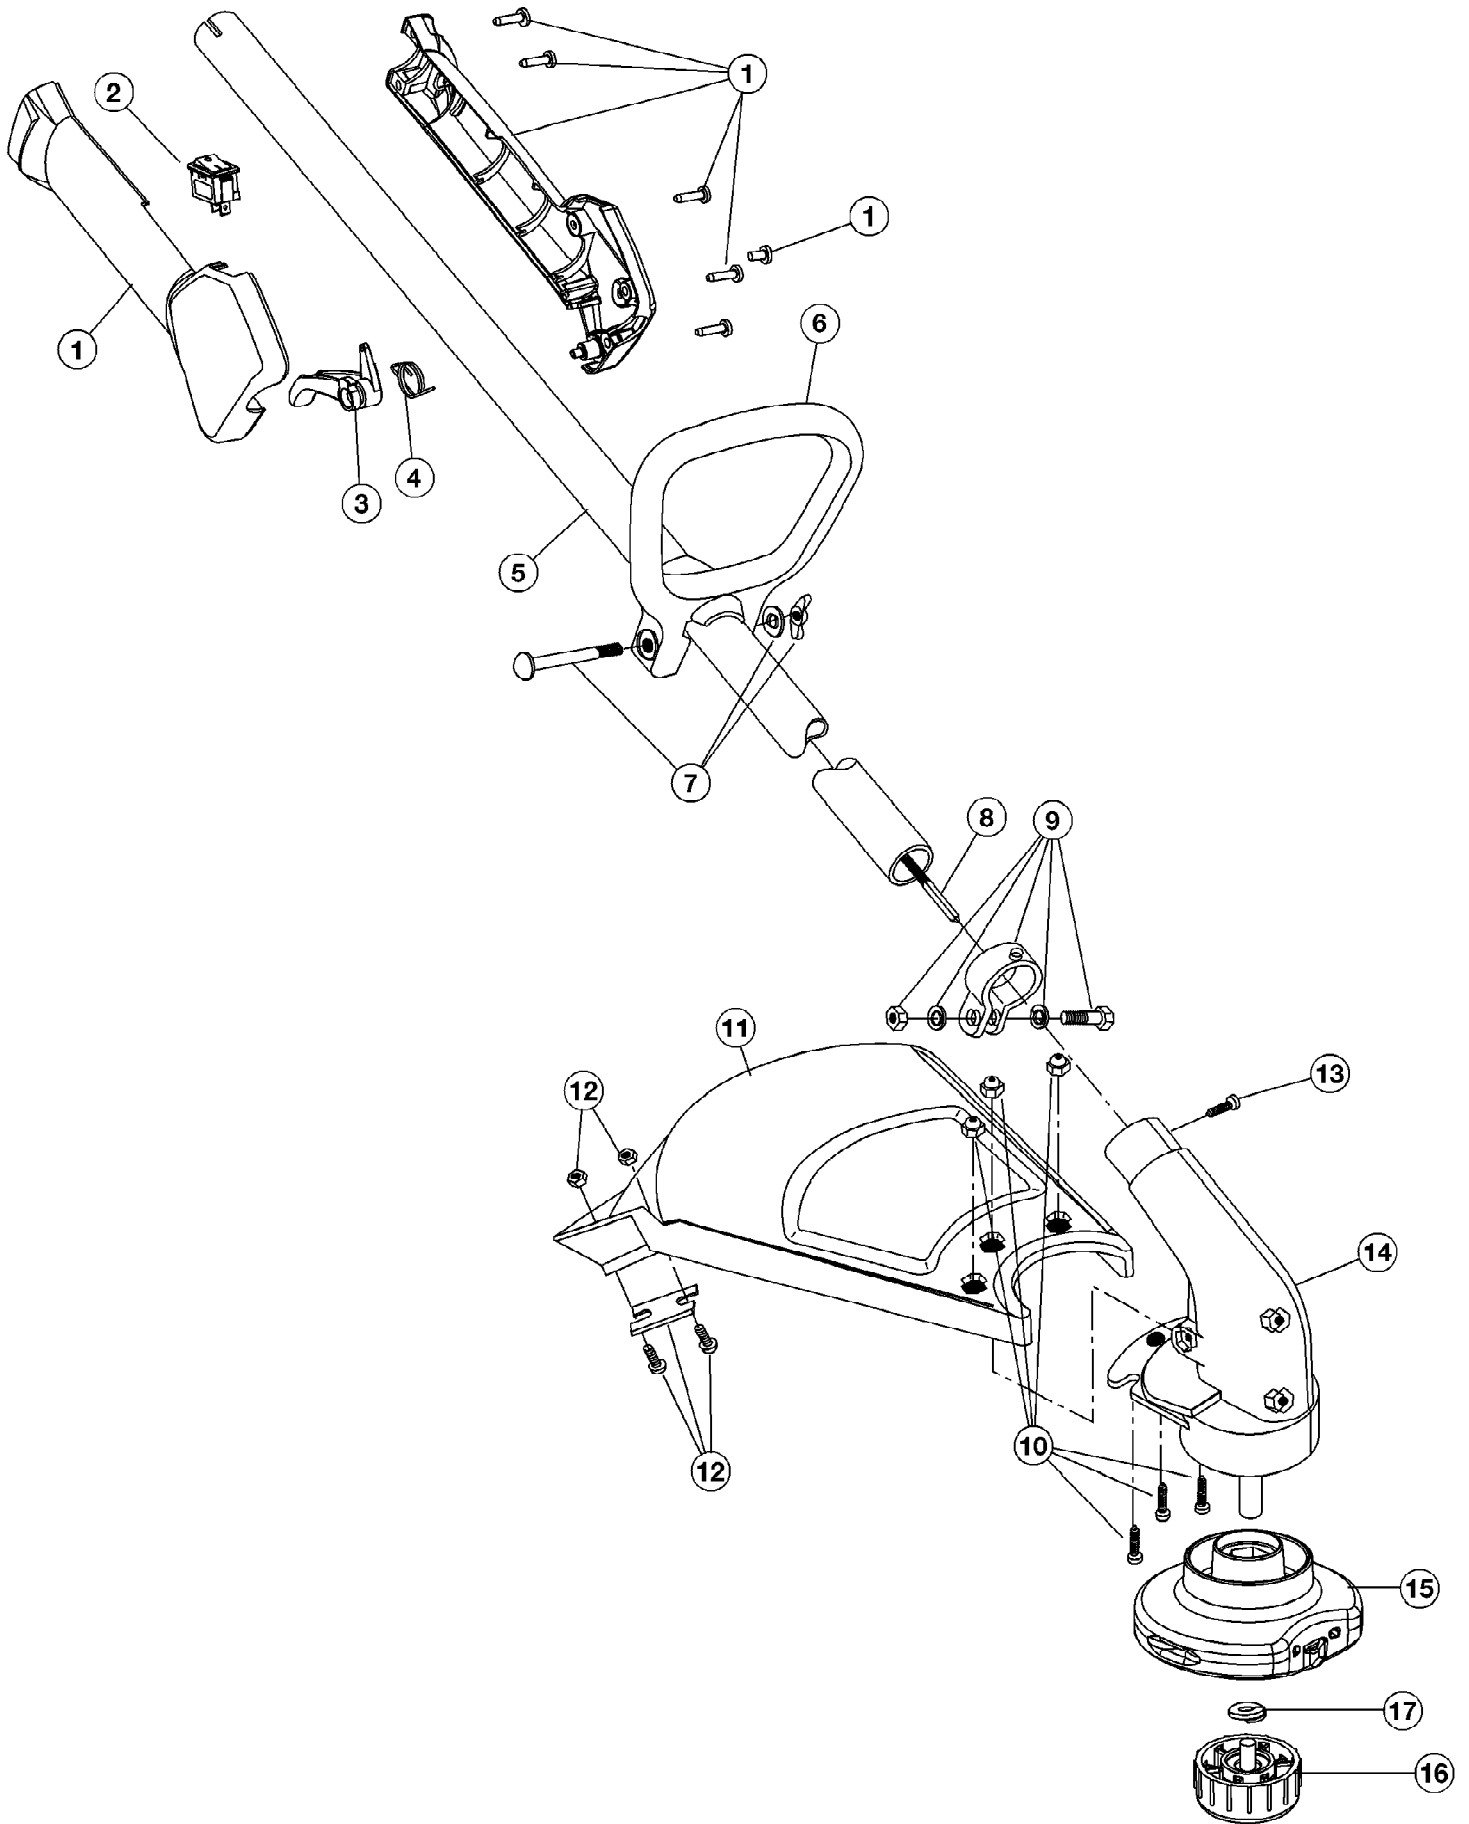


TB465SS 41ADT46C711
 Boom and Trimmer parts TB465SS

Page 2 of 5

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|--|
| 1 | 753-04234 | 1 | | Throttle Housing Assembly (includes 2-4) |
| 2 | 791-182405 | 1 | /P | Switch |
| 3 | 753-04119 | 1 | /P | Throttle Trigger |
| 4 | 791-182690 | 1 | | Throttle Trigger Spring |
| 5 | 753-05166 | 1 | | Drive Shaft Housing Assembly (includes 8) |
| 6 | 791-153064 | 1 | /P | D-Handle (includes 7) |
| 7 | 791-181587 | 1 | /P | D-Handle Hardware Assembly |
| 8 | 753-05167 | 1 | | Flexible Drive Shaft |
| 9 | 791-153597 | 1 | | Lower Clamp Assembly (includes 13) |
| 10 | 791-180547 | 1 | | Guard Mounting Screw Assembly |
| 11 | 791-180548 | 1 | /P | Guard Assembly (includes 12) |
| 12 | 791-180553 | 1 | | Blade Assembly |
| 13 | 791-145569 | 1 | /P | Anti-Rotation Screw |
| 14 | 753-05168 | 1 | | Gearbox Assembly |
| 15 | 753-05165 | 1 | | Fixed HD Line Assembly |
| 16 | 791-153066B | 1 | /P | Bump Head Knob Assembly |
| 17 | 791-182413 | 1 | S | Lock Washer |
| | 753-05164 | 1 | S | Replacement Line (Optional Accessories) (not shown) |

TB465SS 41ADT46C711
Engine Parts

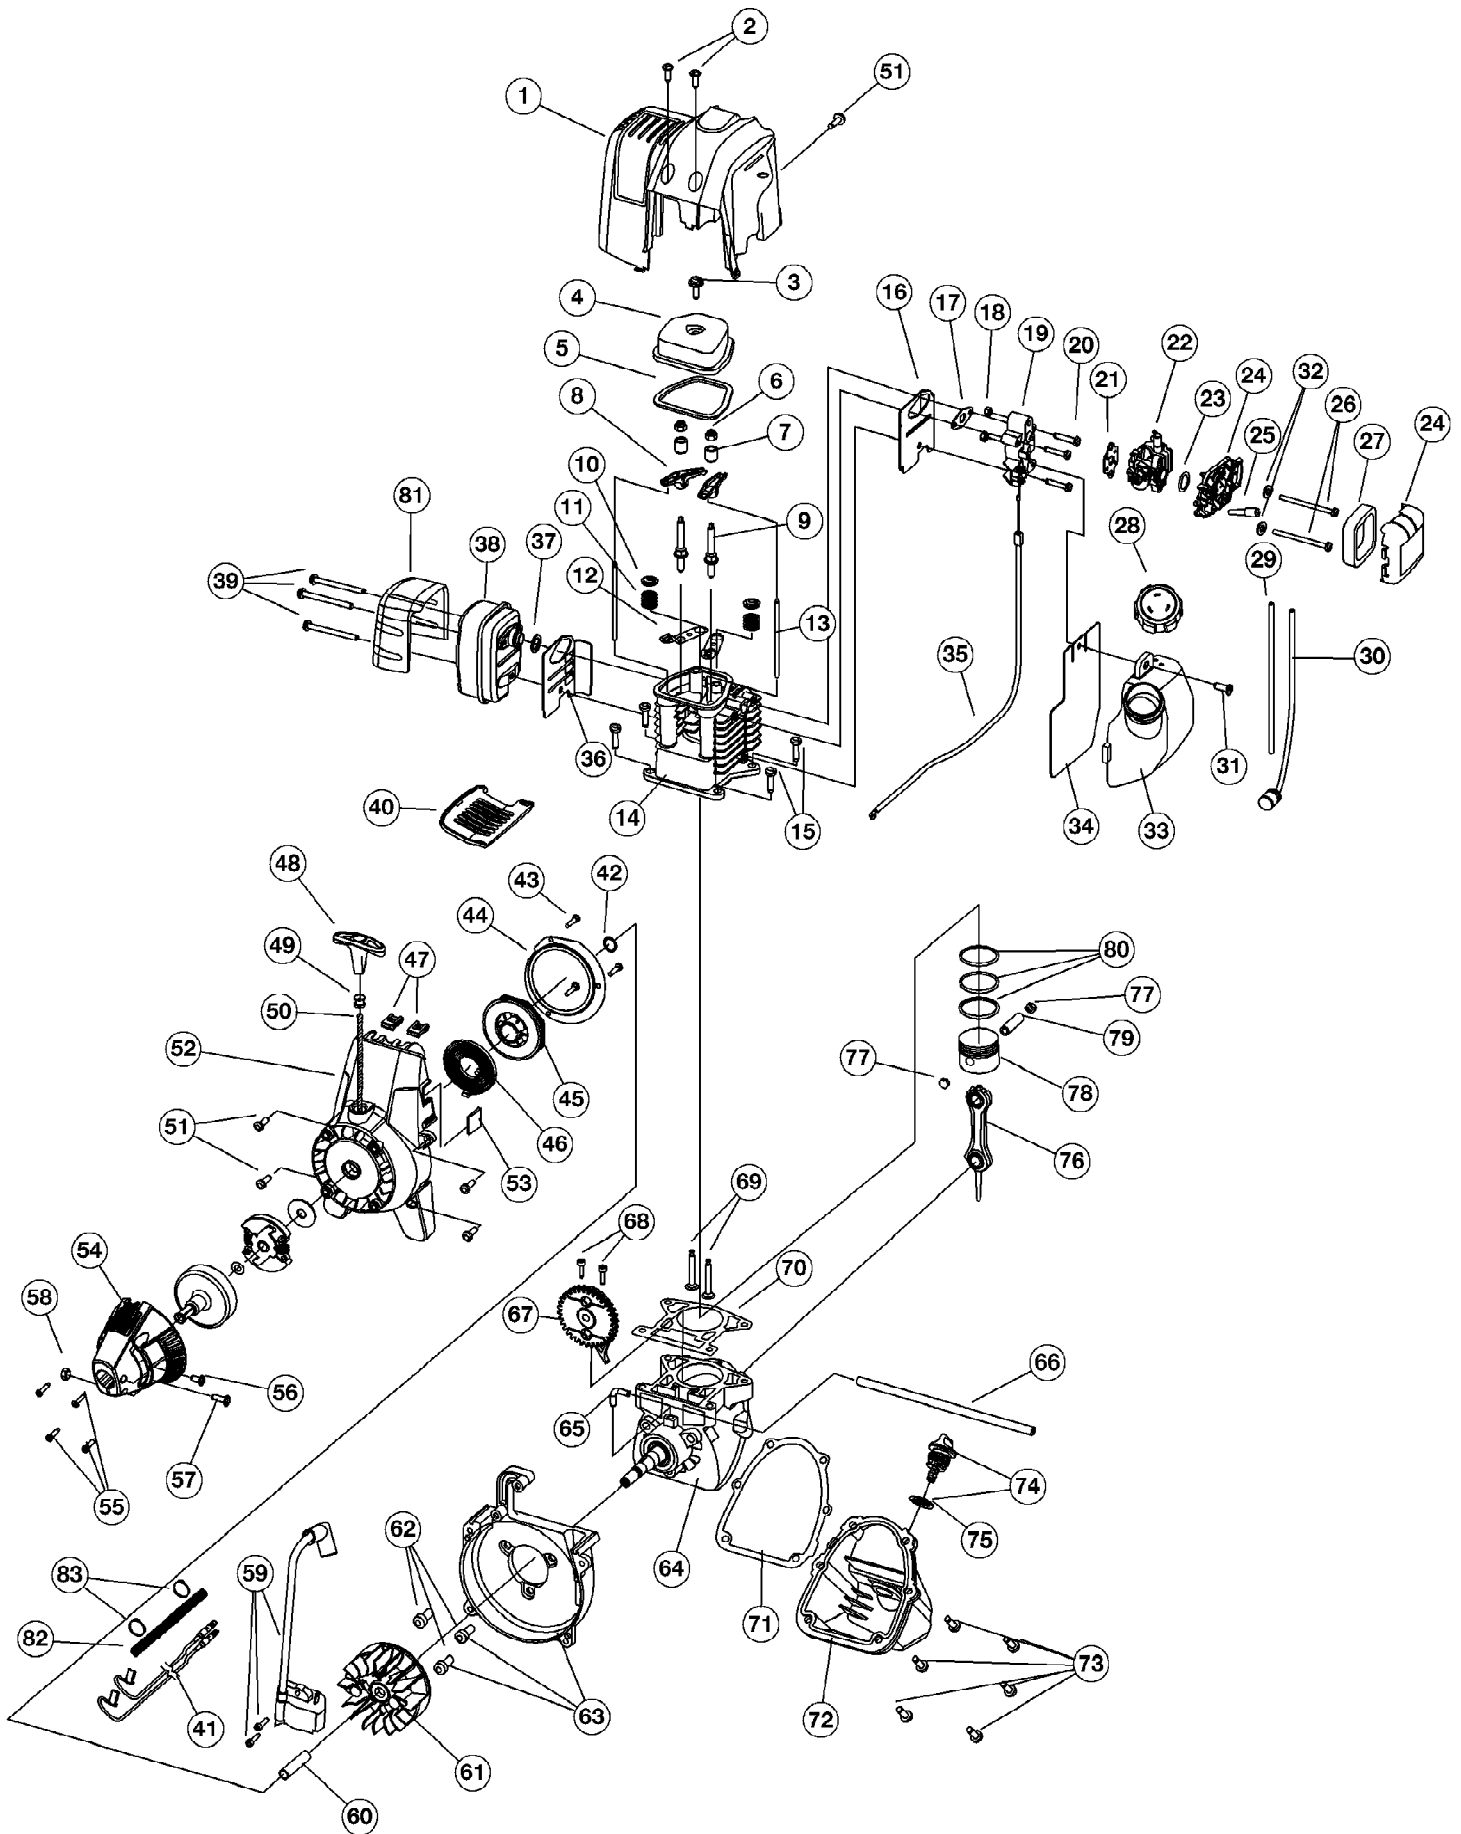

TB465SS 41ADT46C711
Engine Parts

Page 4 of 5

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|--|
| 1 | 753-04083 | 1 | | Engine Cover |
| 2 | 791-181930 | 1 | | Engine Cover Screws |
| 3 | 791-181025 | 1 | | Valve Cover Screw |
| 4 | 791-182098 | 1 | | Valve Cover |
| 5 | 791-182099 | 1 | /P | Valve Cover Gasket |
| 6 | 791-182340 | 1 | | Rocker Adjustment Nut |
| 7 | 791-182101 | 1 | /P | Rocker Arm Pivot |
| 8 | 791-182100 | 1 | | Rocker Arm |
| 9 | 791-182341 | 1 | | Rocker Arm Stud |
| 10 | 791-182103 | 1 | | Valve Spring Retainer |
| 11 | 791-181038 | 1 | | Valve Spring |
| 12 | 791-182102 | 1 | | Push Rod Guide |
| 13 | 791-181033 | 1 | | Push Rod |
| 14 | 753-04816 | 1 | /P | Cylinder Assembly (includes 9-12, 15, 69 & 70) |
| 15 | 791-181003 | 1 | /P | Cylinder Screw |
| 16 | 791-182345 | 1 | | Intake Baffle |
| 17 | 791-182749 | 1 | | Carburetor Mount Gasket |
| 18 | 791-181034 | 1 | S | Nut |
| 19 | 791-182347 | 1 | | Carburetor Mount (includes 18) |
| 20 | 791-182348 | 1 | | Carburetor Mount Screw |
| 21 | 791-182732 | 1 | /P | Carburetor Gasket |
| 22 | 753-1225 | 1 | | Carburetor w/Primer |
| 23 | 791-181751 | 1 | | O-Ring, Carburetor |
| 24 | 753-04223 | 1 | | Air Filter Cover Assembly (includes 25 & 27) |
| 25 | 791-182097 | 1 | | Breather Tube |
| 26 | 791-181750 | 1 | | Air Filter Mounting Screw |
| 27 | 791-181757 | 1 | | Air Filter |
| 28 | 753-1229 | 1 | | Fuel Cap |
| 29 | 791-182352 | 1 | | Fuel Return Line |
| 30 | 791-182353 | 1 | | Fuel Pick-Up Line with Filter |
| 31 | 753-04510 | 1 | S | Screw |
| 32 | 791-182409 | 1 | | Washer |
| 33 | 753-1230 | 1 | | Fuel Tank Assembly (includes 28-30) |
| 34 | 791-182356 | 1 | | Fuel Tank Shield |
| 35 | 753-1231 | 1 | | Throttle Cable |
| 36 | 791-182358 | 1 | | Muffler Baffle |
| 37 | 791-181048 | 1 | | Muffler Gasket |
| 38 | 791-182359 | 1 | /P | Muffler (includes 37) |
| 39 | 791-182361 | 1 | | Muffler Mounting Screw |
| 40 | 753-04092 | 1 | | Muffler Cover |
| 41 | 791-182804 | 1 | | Switch Wire Assembly |
| 42 | 753-04288 | 1 | /P | Palnut |
| 43 | 753-1202 | 1 | | Plate Screw |
| 44 | 753-05074 | 1 | | Pressure Plate Assembly (includes 43) |
| 45 | 753-05072 | 1 | | Recoil Pulley Assembly (includes 42 & 50) |
| 46 | 753-04286 | 1 | | Recoil Spring |
| 47 | 791-182366 | 1 | | Nut Clip |
| 48 | 753-05011 | 1 | S | Pull Handle |
| 49 | 791-611061 | 1 | | Rope Guide |
| 50 | 791-182661 | 1 | | Rope |
| 51 | 791-181020 | 1 | | Housing Screw |
| 52 | 753-05158 | 1 | | Starter Housing Assembly (includes 42-51) |

TB465SS 41ADT46C711
Engine Parts

Page 5 of 5

| Ref # | Part Number | Qty | S/P/F | Description |
|-------|-------------|-----|-------|--|
| 53 | 791-182537 | 1 | | Wire Grommet |
| 54 | 753-05159 | 1 | S | Cover Assembly (includes 55-58) |
| 55 | 791-181345 | 1 | /P | Cover Screw |
| 56 | 791-182519 | 1 | | Anti-Rotation Screw |
| 57 | 753-05077 | 1 | S | Screw |
| 58 | 791-180217 | 1 | S | Nut |
| 59 | 791-182725 | 1 | | Ignition Module with Screws |
| 60 | 791-610303 | 1 | | Square Nut Drive |
| 61 | 791-182736 | 1 | S | Flywheel |
| 62 | 791-181861 | 1 | | Screw |
| 63 | 791-182743 | 1 | /P | Shroud Assembly (includes 62) |
| 64 | 753-05160 | 1 | | Crankcase Assembly (includes 65 & 66) |
| 65 | 791-182375 | 1 | | 90° Elbow |
| 66 | 791-182379 | 1 | /P | Breather Hose |
| 67 | 753-04919 | 1 | | Cam Bracket Assembly |
| 68 | 791-181012 | 1 | | Cam Bracket Screw |
| 69 | 791-181040 | 1 | | Valves, Intake and Exhaust |
| 70 | 791-182374 | 1 | | Cylinder Gasket |
| 71 | 791-181018 | 1 | | Oil Pan Gasket |
| 72 | 791-182377 | 1 | | Oil Pan (includes 71 & 73) |
| 73 | 791-181020 | 1 | | Oil Pan Screw |
| 74 | 753-04041 | 1 | S | Dipstick Assembly (includes 75) |
| 75 | 791-182290 | 1 | | O-Ring |
| 76 | 791-181009 | 1 | | Connecting Rod |
| 77 | 791-181008 | 1 | | Wrist Pin Button |
| 78 | 753-04878 | 1 | /P | Piston (includes 80) |
| 79 | 753-05176 | 1 | | Wrist Pin |
| 80 | 753-04801 | 1 | | Piston Ring Set |
| 81 | 791-182360 | 1 | | Heat Shield |
| 82 | 753-04098 | 1 | | Wire Lead Cover |
| 83 | 791-160428 | 1 | | Cable Clamp (Parts not shown) |
| | 791-180890 | 1 | | Spark Arrestor (Parts not shown) |
| | 791-180852B | 1 | /P | Spark Plug (Parts not shown) |
| | 753-05161 | 1 | | Short Block Assembly (includes 3-15, 64-80) (Parts not shown) |