


TB525ES 41CDT52C966
Engine Assembly

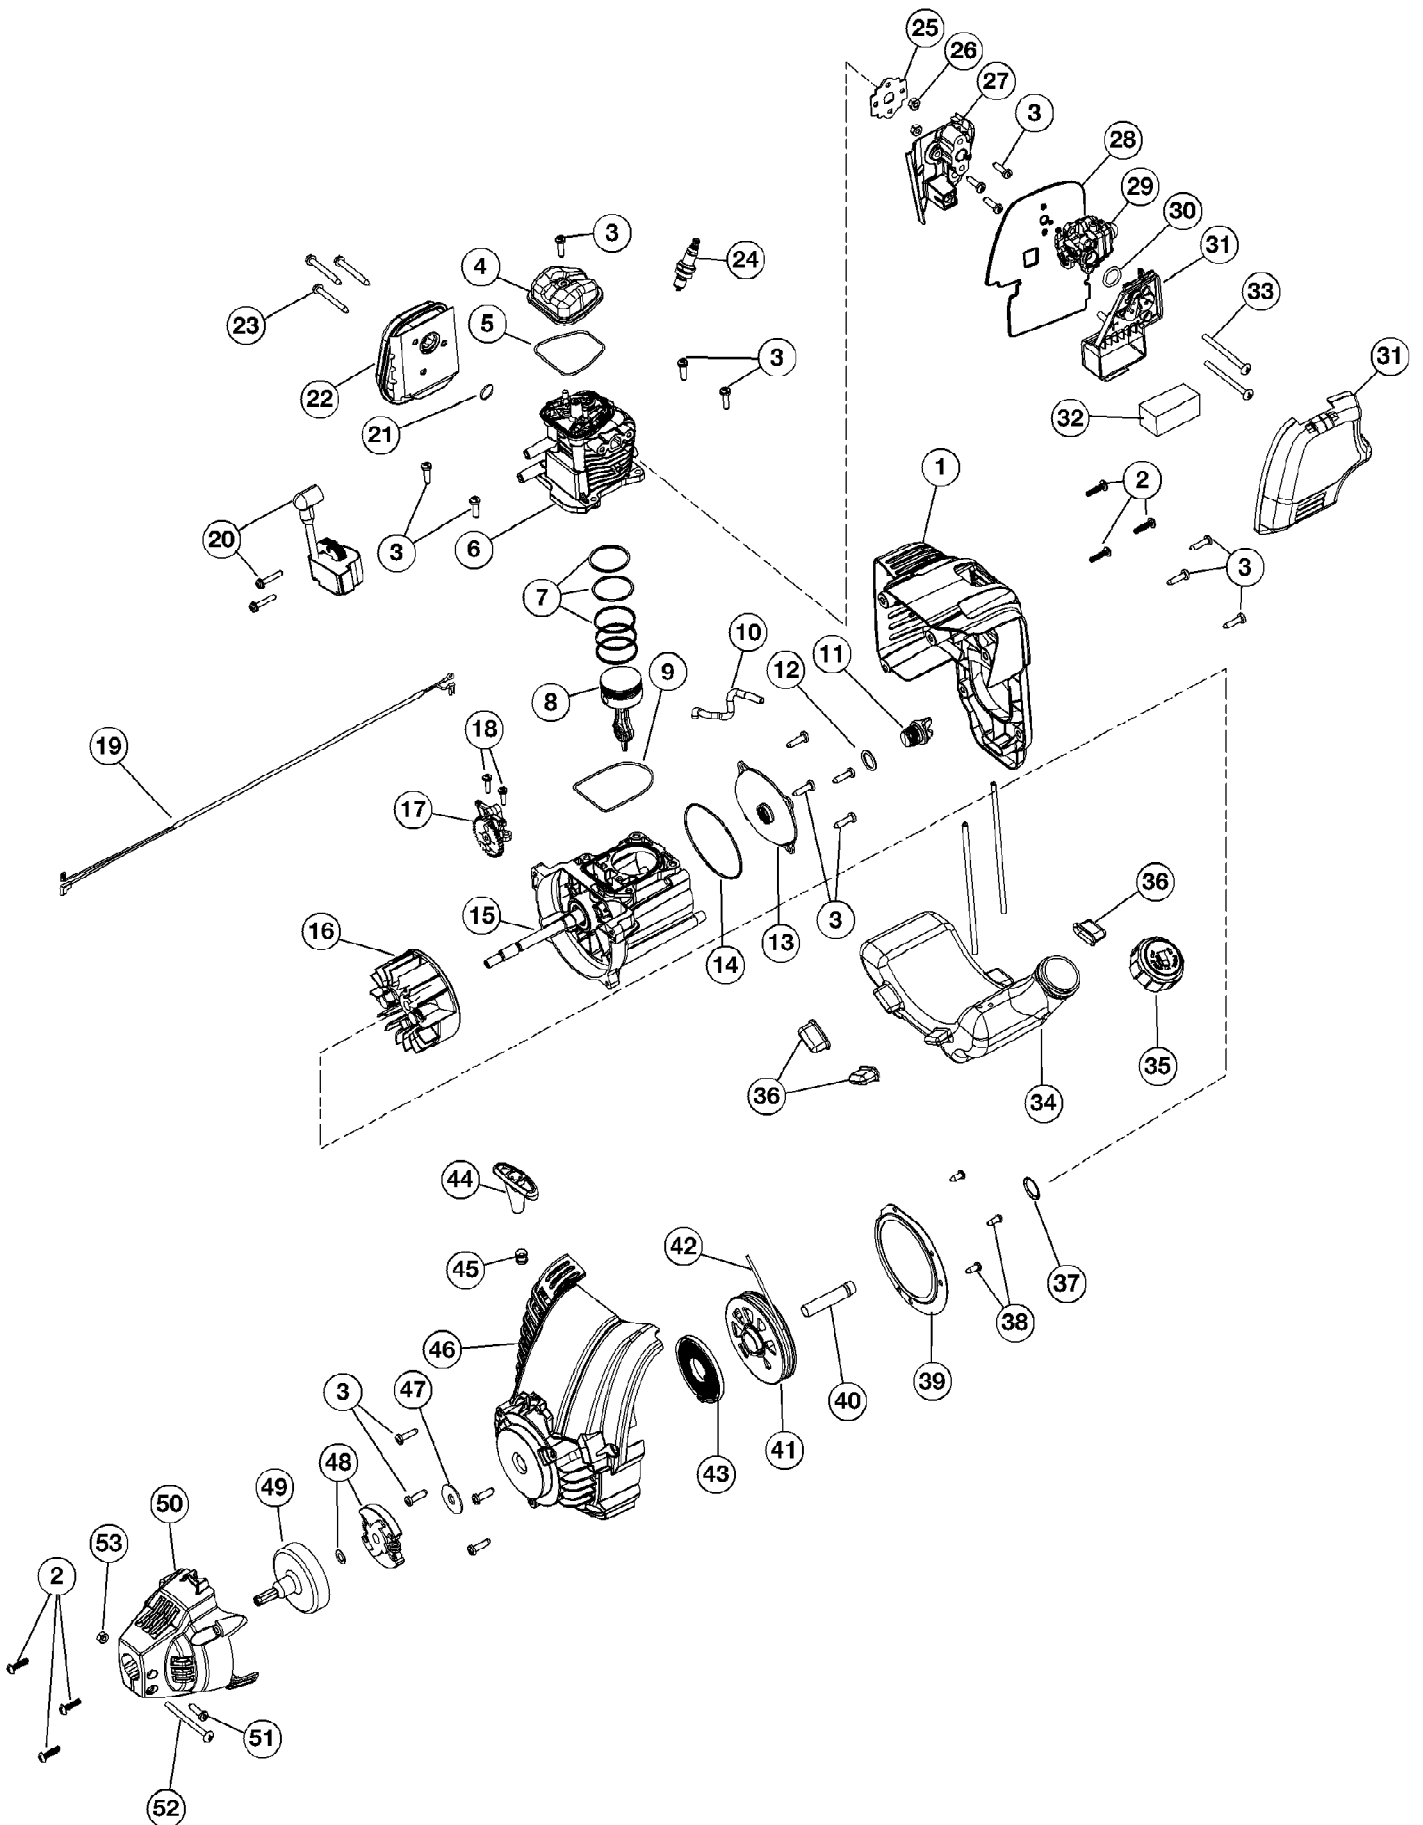

TB525ES 41CDT52C966
Engine Assembly

Page 2 of 5


Ref #	Part Number	Qty	S/P/F	Description
1	753-06134	1		Engine Cover Assembly (Incl. Ref No. 2 & 3)
2	710-04194	1	/P	Cover Screw
3	791-181003	1	/P	Screw
4	753-05209	1		Rocker Cover
5	721-04132	1	/P	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (Incl. Ref No. 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (Incl. Ref No. 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05408	1	/P	Oil Plug (Incl. Ref No. 12)
12	791-182290	1		Oil Plug O-Ring
13	753-06111	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-06110	1	/P	Crankcase Assembly (Incl. Ref No. 9, 10 & 14)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
17	753-05241	1		Cam Bracket Assembly (Incl. Ref No. 18)
18	710-04584	1	/P	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (Incl. Ref No. 21 & 23)
23	710-04487	1	/P	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	712-04099	1	/P	Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (Incl. Ref No. 32)
32	753-05254	1		Air Filter
33	710-04517	1	/P	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (Incl. Ref No. 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	712-04096	1	/P	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (Incl. Ref No. 38)
40	750-04434	1	/P	Spacer
41	753-05435	1	/P	Starter Assembly (Incl. Ref No. 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	631-04164	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (Incl. Ref No. 3 & 37-45)
47	9162-1	1	/P	Washer
48	753-1238	1		Clutch & Clutch Washer

TB525ES 41CDT52C966
 Engine Assembly

Page 3 of 5

Ref #	Part Number	Qty	S/P/F	Description
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover (Incl. Ref No. 2)
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not Shown
	753-06114	1		Shortblock Assembly (Incl. Ref No. 3-12, 14, 15, 17 & 24) Not Shown

TB525ES 41CDT52C966
General Assembly

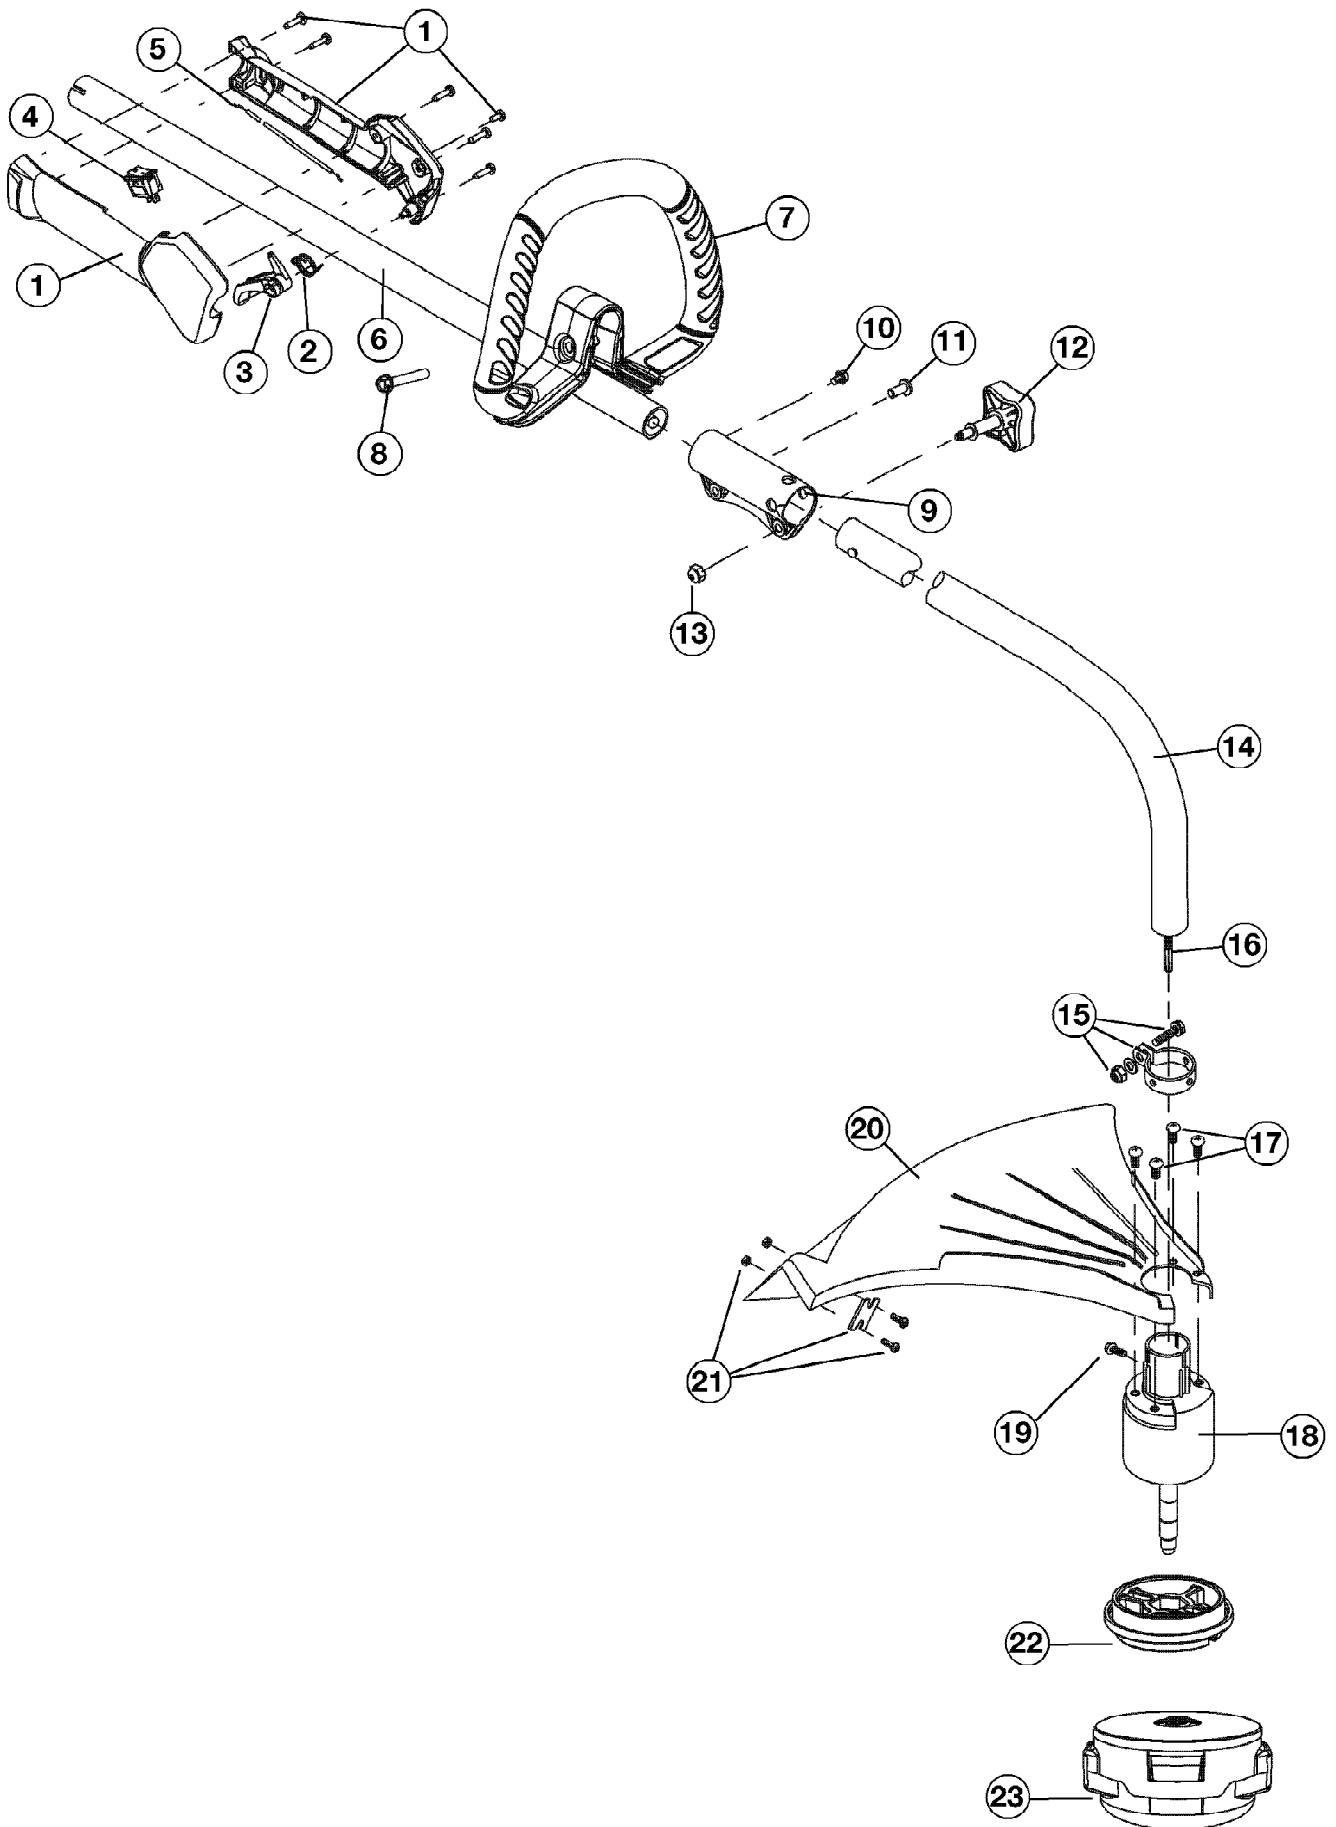

TB525ES 41CDT52C966
General Assembly

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (Incl. Ref No. 2-4)
2	791-182690	1		Throttle Trigger Spring
3	753-04119	1	/P	Throttle Trigger
4	791-182405	1	/P	Switch
5	753-05266	1		Throttle Cable Assembly
6	753-04236	1	/P	Upper Drive Shaft Housing Assembly
7	753-06039	1		D-Handle Assembly (Incl. Ref No. 8)
8	753-06040	1		Bolt
9	753-1190	1	/P	Split boom Coupler (Incl. Ref No. 10-13)
10	791-182057	1		Screw
11	791-181617	1		Bolt
12	791-181618B	1	/P	Adjustment Knob (Incl. Ref No. 13)
13	712-04018A	1	/P	Knob Retaining Nut
14	791-182387	1		Lower Drive Shaft Housing Assembly (Incl. Ref No. 16)
15	791-153597	1		Lower Clamp Assembly (Incl. Ref No. 19)
16	791-181852	1	/P	Lower Flexible Drive Shaft
17	791-181858	1	/P	Shield Mounting Screw
18	753-05050	1		Bushing Housing Assembly
19	791-145569	1	/P	Anti-Rotation Screw
20	791-181659	1	/P	Shield Assembly (Incl. Ref No. 21)
21	753-06048	1	/P	Blade Assembly
22	753-05034	1	/P	Adapter
23	753-06130	1		Spool Assembly
	753-06149	1		Kit, Speed Spool Not Shown, Kit contains head cover, spring and 4 eyelets for 753-06130 assembly.