


TB146EC 21AK146G966
Engine Assembly version 1

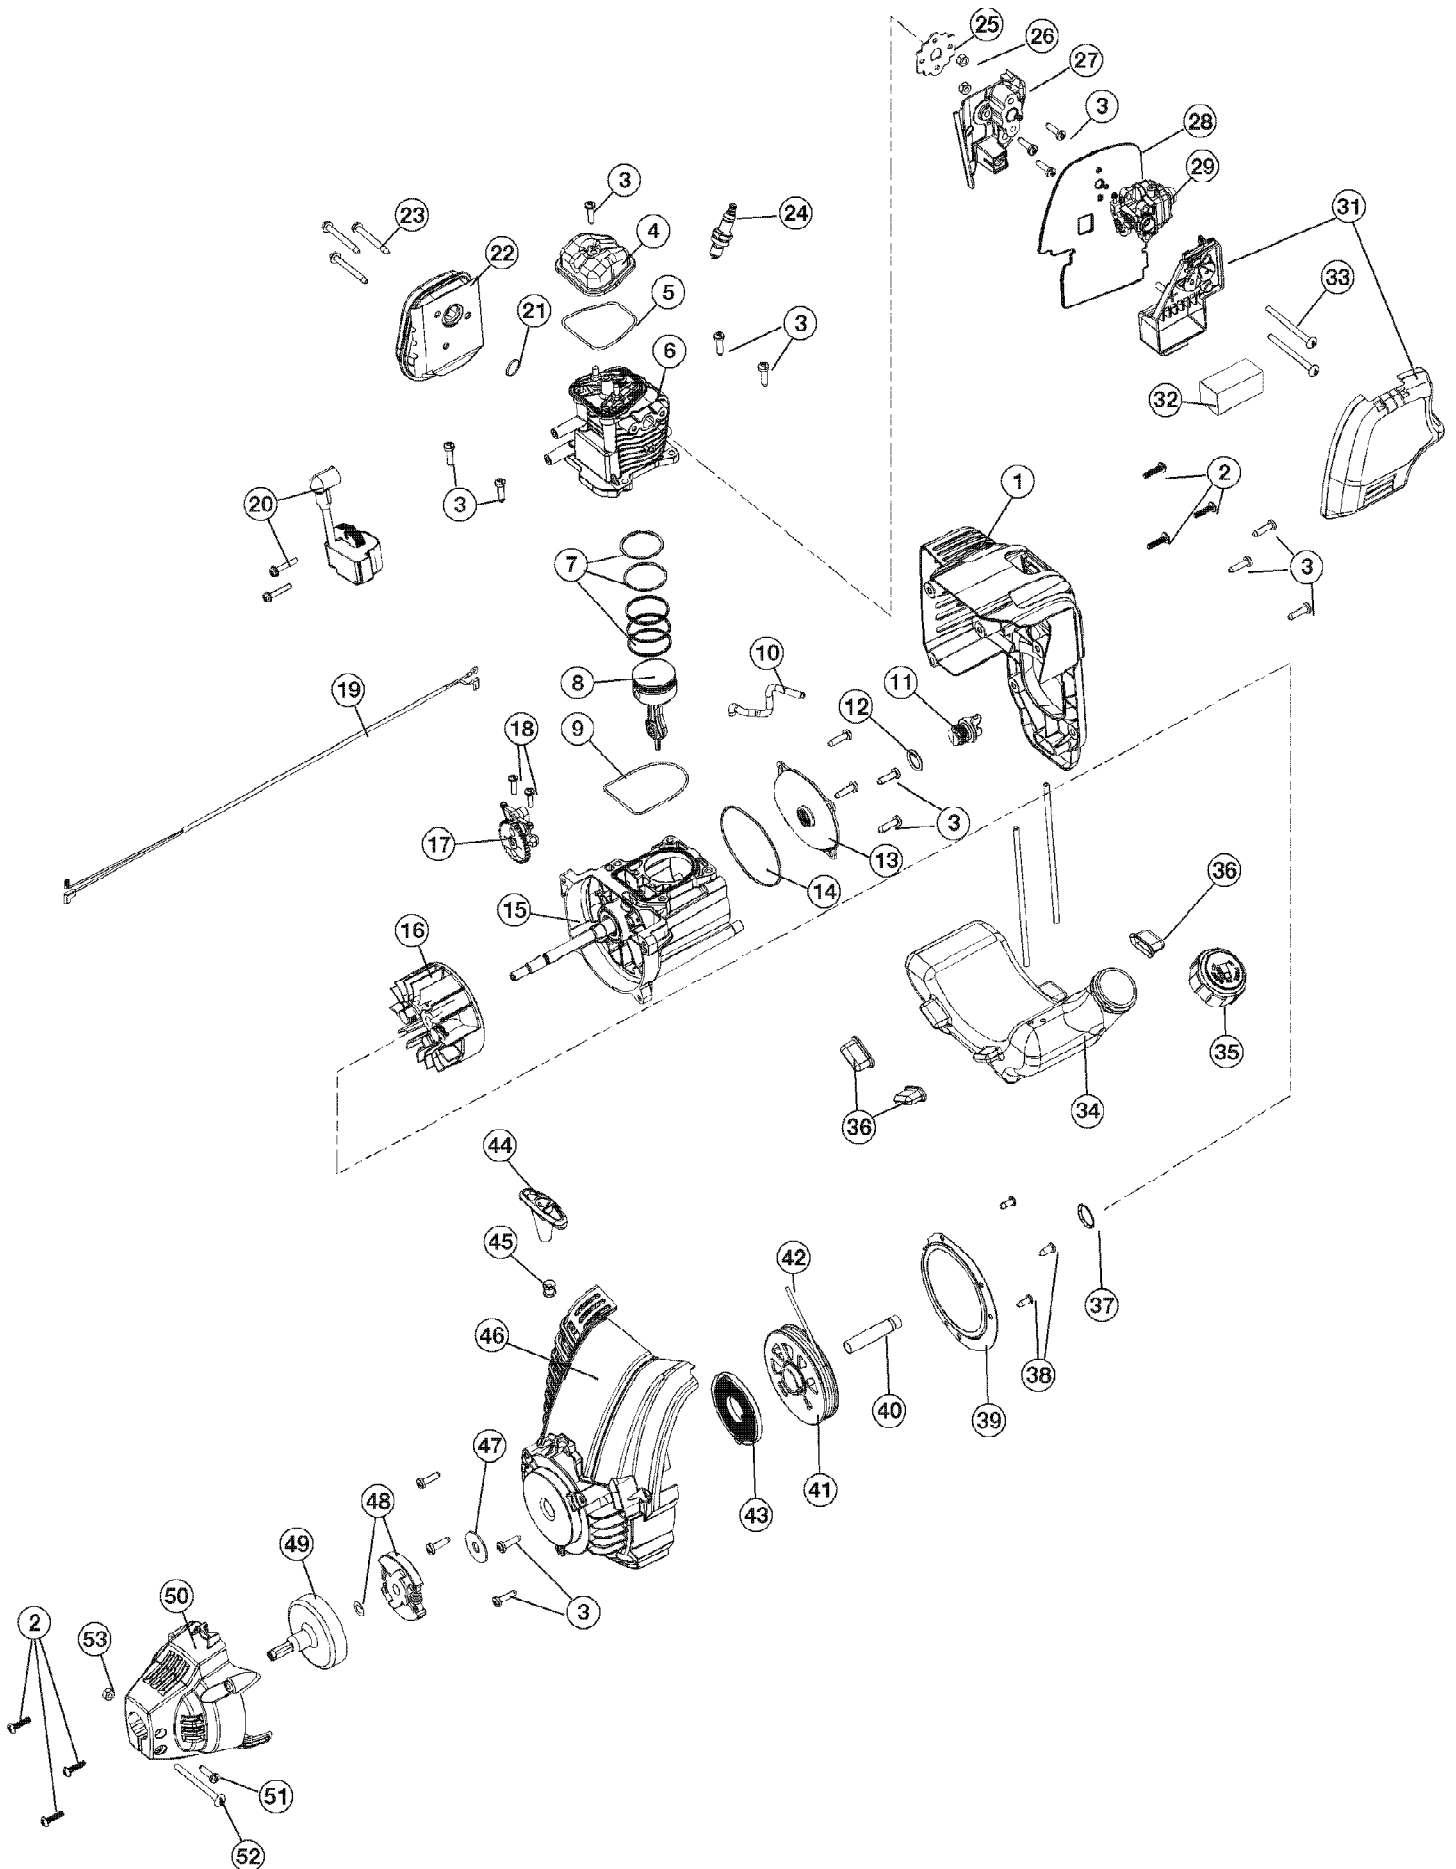


Ref #	Part Number	Qty	S/P/F	Description
1	753-06237	1		Engine Cover Assembly (Incl. Ref No. 2 & 3)
2	710-04194	1	/P	Cover Screw
3	791-181003	1	/P	Screw
4	753-05209	1		Rocker Cover
5	721-04132	1	/P	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (Incl. Ref No. 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (Incl. Ref No. 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05408	1	/P	Oil Plug (Incl. Ref No. 12)
12	791-182290	1		Oil Plug O-Ring
13	753-06111	1		Crank Case Cover
14	753-05238	1		Crank Case Cover O-Ring
15	753-06262	1		Crank Case Assembly (Incl. Ref No. 9-10 & 14)
16	753-05240	1	/P	Flywheel Assembly
17	753-05241	1		Cam Bracket Assembly (Incl. Ref No. 18)
18	710-04584	1	/P	Cam Bracket Screw
19	753-05785	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-06238	1		Muffler Assembly (Incl. Ref No. 21 & 23)
23	710-04487	1	/P	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	712-04099	1	/P	Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
31	753-05995	1		Air Cleaner Cover Assembly (Incl. Ref No. 32)
32	753-05996	1		Air Filter
33	710-04645	1	/P	Screw
34	753-06240	1		Fuel Tank Assembly w/ Fuel Lines (Incl. Ref No. 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	753-04288	1	/P	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (Incl. Ref No. 38)
40	750-04434	1	/P	Spacer
41	753-06051	1		Starter Assembly (Incl. Ref No. 42)
42	753-06076	1		Rope
43	753-04907	1		Recoil Spring
44	631-04164A	1	/P	Handle
45	791-611061	1		Rope Guide
46	753-06239	1		Starter Housing Assembly (Incl. Ref No. 3 & 37-45)
47	9162-1	1	/P	Washer
48	753-1238	1		Clutch & Clutch Washer

TB146EC 21AK146G966
Engine Assembly version 1


Page 3 of 7

Ref #	Part Number	Qty	S/P/F	Description
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover (Incl. Ref No. 2)
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not shown
	753-06261	1		Shortblock Assembly Not shown (Incl. Ref No. 3-12, 14-15, 17 & 24), Engine AC 3
	49M2027P953	1	S	Electric Starter Not shown
	49MESCBP953	1		Power Start Bit Not shown

TB146EC 21AK146G966
Engine Assembly version 2

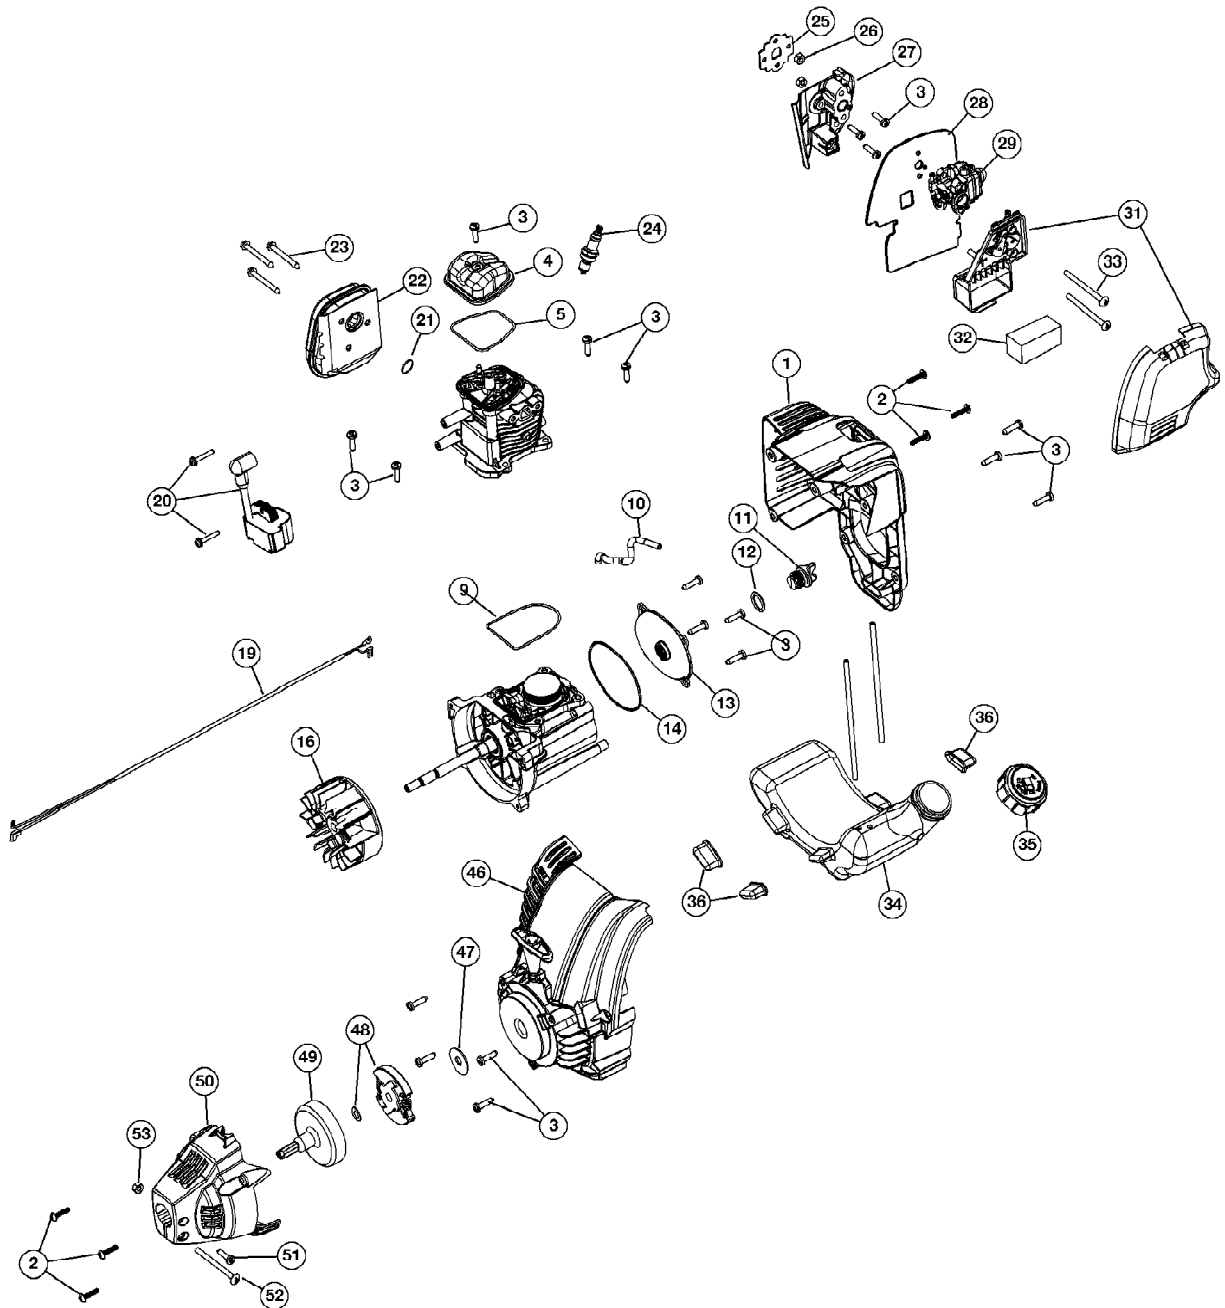

Ref #	Part Number	Qty	S/P/F	Description
1	753-06237	1		Engine Cover Assembly (includes 2 & 3)
2	710-04194	1	/P	Cover Screw
3	791-181003	1	/P	Starter Screw
4	753-05209	1		Rocker Cover
5	721-04132	1	/P	Rocker Cover O-Ring
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05408	1	/P	Oil Plug (includes 12)
12	791-182290	1		Oil Plug O-Ring
13	753-06111	1		Crank Case Cover
14	753-05238	1		Crank Case Cover O-Ring
16	753-06221	1		Flywheel Assembly
19	753-05785	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-06238	1		Muffler Assembly (includes 21 & 23)
23	710-04487	1	/P	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	712-04099	1	/P	Insulator Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
31	753-05995	1		Air Cleaner Cover Assembly (includes 32)
32	753-05996	1		Air Filter
33	710-04645	1	/P	Air Filter Screw
34	753-06240	1		Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
46	753-06239	1		Starter Housing Assembly (includes 3)
47	9162-1	1	/P	Washer
48	753-1238	1		Clutch & Clutch Washer
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover (includes 2)
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	712-0161	1	/P	Clamp Nut
	753-05297	1	/P	Spark Arrestor Assembly Not shown
	753-06225	1		Shortblock Assembly Not shown (includes 3-12, 14, 24), Engine AC 3.1
	49M2027P953	1	S	Electric Starter Not shown
	49MESCBP953	1		Power Start Bit Not shown

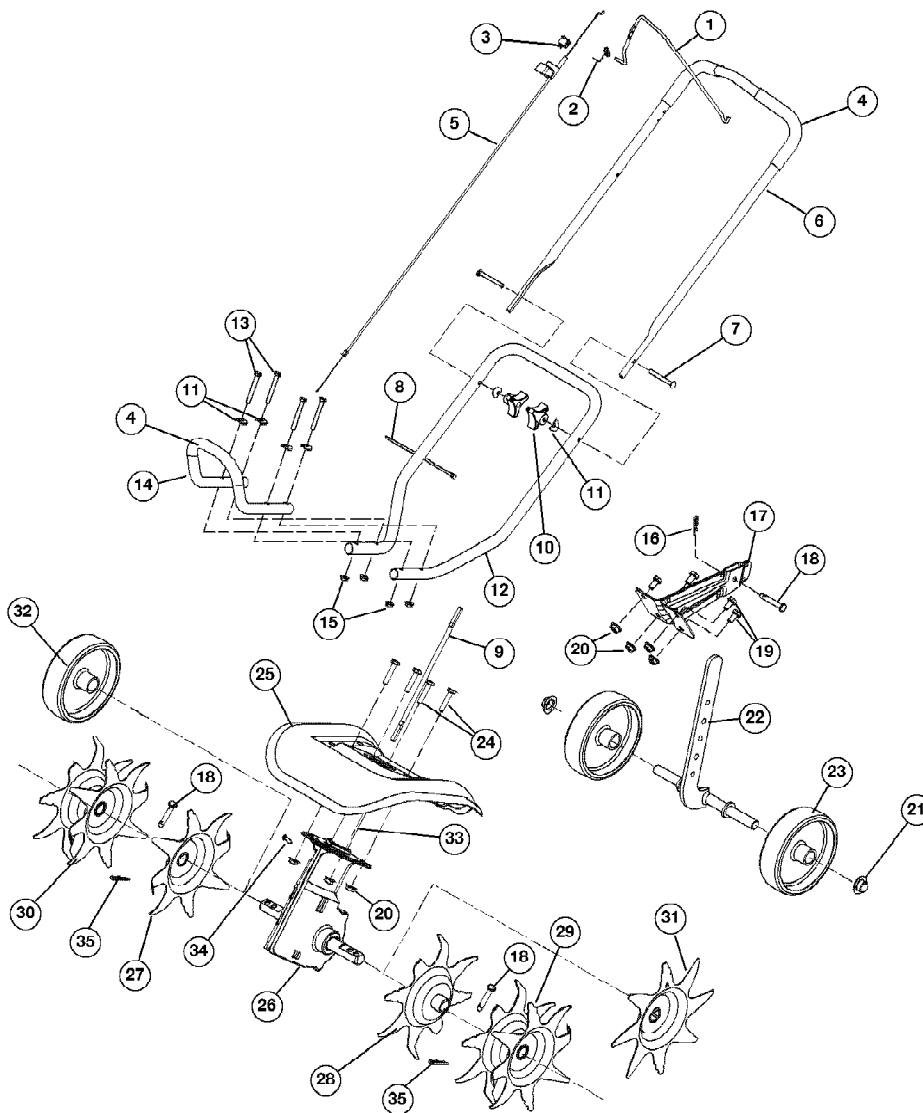

TB146EC 21AK146G966
General Assembly

Page 7 of 7

Ref #	Part Number	Qty	S/P/F	Description
1	753-04042	1	/P	Throttle Control
2	753-05940	1		Torsion Spring
3	791-182673	1		On/Off Switch
4	720-0294	1	/P	Foam Grip
5	753-06050	1		Throttle Cable
6	749-04080-0637	1	S	Upper Handle
7	791-182899	1		Bolt
8	725-0157	1	/P	Cable Tie
9	753-04499	1		Flex Shaft
10	791-182677	1		Knob
11	936-0451	1	/P	Shoulder Washer
12	749-1295A-0637	1	/P	Lower Handle
13	710-0805	1	/P	Screw
14	753-04055	1	/P	Front Handle
15	712-3004A	1	/P	Lock Nut
16	914-0104	1	/P	Clip
17	753-04058	1	/P	Tailpiece Bracket Assembly
18	711-1017	1	/P	Cotter Pin
19	710-3013	1	/P	Cap Screw
20	912-3027	1	/P	Lock Nut
21	726-0299	1	/P	Cap Push
22	753-04063	1	/P	Wheel Support Bracket Assembly
23	1917754	1	/P	Wheel
24	6109	1	/P	Cap Screw
25	753-06010	1		Tine Shield
26	753-06063	1		Gear Box Assembly
27	753-05986	1		Tine (Right Inner)
28	753-05987	1		Tine (Left Inner)
29	753-06015	1		Tine (Left Outer)
30	753-06016	1		Tine (Right Outer)
31	753-05988	1		Edger Tine
32	753-04068	1	/P	Edger Wheel
33	753-06242	1		Drive Shaft Housing
34	791-180288	1	/P	Sleeve Retaining Bolt
35	753-06013	1		Bow Clip