FOREWORD

This Arctic Cat Service Manual contains service, maintenance, and troubleshooting information for certain 2009 Arctic Cat UTV (Utility Terrain Vehicle) models (see cover). The complete manual is designed to aid service personnel in service-oriented applications.

Arctic Cat offers an additional publication (when it becomes available) to aid in servicing the other UTV model. To service the model not included in this manual, please refer to the following publication:

• 2009 UTV Service Manual - Prowler XTZ

This manual is divided into sections. Each section covers a specific vehicle component or system and, in addition to the standard service procedures, includes disassembling, inspecting, and assembling instructions. When using this manual as a guide, the technician should use discretion as to how much disassembly is needed to correct any given condition.

The service technician should become familiar with the operation and construction of each component or system by carefully studying this manual. This manual will assist the service technician in becoming more aware of and efficient with servicing procedures. Such efficiency not only helps build consumer confidence but also saves time and labor.

All Arctic Cat publications and decals display the words Warning, Caution, Note, and At This Point to emphasize important information. The symbol \triangle **WARNING** identifies personal safety-related information. Be sure to follow the directive because it deals with the possibility of severe personal injury or even death. The symbol \triangle **CAUTION** identifies unsafe practices which may result in vehicle-related damage. Follow the directive because it deals with the possibility of the vehicle. The symbol \blacksquare **NOTE:** identifies supplementary information worthy of particular attention. The symbol \blacksquare **AT THIS POINT** directs the technician to certain and specific procedures to promote efficiency and to improve clarity.

At the time of publication, all information, photographs, and illustrations were technically correct. Some photographs used in this manual are used for clarity purposes only and are not designed to depict actual conditions. Because Arctic Cat Inc. constantly refines and improves its products, no retroactive obligation is incurred.

All materials and specifications are subject to change without notice.

Keep this manual accessible in the shop area for reference.

Product Service and Warranty Department Arctic Cat Inc.



TABLE OF CONTENTS

Click on the blue text to go.

4

6

8

Foreword

- **1. General Information/Specifications**
- 2. Periodic Maintenance/Tune-Up
- 3. Engine/Transmission
- 4. Fuel/Lubrication/Cooling
- 5. Electrical System
- 6. Drive System
- 7. Suspension
- 8. Steering/Frame
- 9. Controls/Indicators

SECTION 1 - GENERAL INFORMATION

TABLE OF CONTENTS

General Specifications	1-2
Torque Specifications	1-2
Torque Conversions (ft-lb/N-m)	1-3
Tightening Torque (General Bolts)	1-3
Break-In Procedure	1-4
Gasoline - Oil - Lubricant	1-4
Genuine Parts	1-5
Preparation For Storage	1-5
Preparation After Storage	1-6



General Specifications*

СНА	
Dry Weight (approx)	526 kg (1160 lb)
Length (overall)	292 cm (115 in.)
Height (overall)	197 cm (77.5 in.)
Width (overall)	156 cm (61.3 in.)
Suspension Travel (front) (rear)	25.4 cm (10 in.) 25.4 cm (10 in.)
Brake Type	Hydraulic
Wheelbase	190 cm (75 in.)
Tire Size (front) (rear)	26 x 9-14 26 x 11-14
Tire Inflation Pressure	0.70 kg/cm² (10 psi)
MISCE	LLANY
Gas Tank Capacity (rated)	31 L (8.2 U.S. gal.)
Coolant Capacity	2.9 L (3.0 U.S. qt)
Differential Capacity	275 ml (9.3 fl oz)**
Rear Drive Capacity	250 ml (8.5 fl oz)**
Engine Oil Capacity	2.5 L (2.6 U.S. qt) - Overhaul 1.9 L (2.0 U.S. qt) - Change
Gasoline (recommended)	87 Octane Regular Unleaded
Engine Oil (recommended)	Arctic Cat ACX All Weather Syn- thetic
Front Differential Lubricant	SAE Approved 80W-90 Hypoid
Rear Drive Lubricant (Prowler/XT)	SAE Approved 80W-90 Hypoid
Rear Differential Lubricant (XTX)	Arctic Cat 80W-90 Hypoid Friction Modified
Belt Width	35.0 mm (1.38 in.)
Brake Fluid	DOT 4
Taillight/Brakelight	12V/8W/27W
Headlight	12V/27W (2)
Starting System	Electric

* Specifications subject to change without notice.

** Visible at plug threads.

Torque Specifications

EXHAUST COMPONENTS						
Part	Part Bolted To	Torc ft-lb				
Exhaust Pipe	Cylinder Head	20	27			
Spark Arrester	Muffler	48 inlb	5			
ELECTRIC	CAL COMPONENTS					
Coil*	Frame	8	11			
Ground Wire	Engine	8	11			
STEERI	STEERING COMPONENTS					
Steering Wheel Shaft**	Steering Wheel	25	34			
Steering Wheel Shaft****	Intermediate Shaft (Upper)	36	49			
Intermediate Shaft (Lower)****	Steering Pinion Shaft	36	49			
Rack and Pinion Assembly	Frame	50	68			
Tie Rod**	Rack	74	100			
Tie Rod End**	Knuckle	30	41			
Jam Nut	Tie Rod End	8	11			

www.mymowerparts.com

SUSPENSION	N COMPONENTS (Front)		
SUSPENSION	COMPONENTS (FIOIL)	Torc	IIIe
Part	Part Bolted To	ft-lb	N-m
A-Arm	Frame	33	45
Ball Joint Cap Screw	Knuckle	35	48
Shock Absorber (Upper)	Frame	33	45
Shock Absorber (Lower)	Upper A-Arm	33	45
Knuckle	A-Arm	33	45
SUSPENSIO	N COMPONENTS (Rear)		
Sway Bar Bracket	Frame	33	45
A-Arm	Frame	33	45
Shock Absorber (Upper)	Frame	33	45
Shock Absorber (Lower)	Lower A-Arm	20	27
Knuckle	A-Arm	33	45
Cargo Box Hinge	Cargo Box Frame	20	27
Cargo Box	Cargo Box Frame	20	27
Latch Pivot Bushing	Cargo Box Frame	15	20
Latch Striker	Cargo Box Liner	5	7
BRAK	E COMPONENTS		
Brake Disc**	Hub	15	20
Brake Hose	Caliper	20	27
Brake Hose	Master Cylinder	20	27
Master Cylinder	Frame	25	34
Parking Brake Mechanism	Frame	20	27
Hydraulic Caliper Holder	Knuckle	20	27
Rear Driveline Brake Caliper	Rear Differential/Gear Case	20	27
Driveline	Rear Drive Input Flange	12	16
Parking Brake Actuator Lever	Caliper	35	48
Parking Brake Caliper Assembly	Rear Drive Housing	20	27
CHASSIS/CA	NOPY ASSEMBLY		
Shift Lever*	Shift Axle	20	27
Front/Rear Canopy Tube	Arm Rest/Steering Post Support	20	27
Top Canopy Support	Front/Rear Canopy Tubes	8	11
Rear Canopy Tube	Lower Canopy Support	8	11
DRIVE TR	RAIN COMPONENTS	-	
Rear Differential/Gear Case	Frame	38	48
Drive Coupler	Drive Flange	40	54
Front Engine Mounting Bracket	Mounting Stud	25	34
Rear Engine Mounting Bracket	Mounting Stud	25	34
Front Differential	Frame/Differential Bracket	38	52
Rear Output Flange	Rear U-Joint Flange	40	54
Pinion Housing	Differential Housing	23	31
Differential Housing Cover***	Differential Housing	23	31
Drive Bevel Gear Nut***	Shaft	87	118
Lock Collar	Differential Housing	125	170
Hub Nut	Front/Rear Shaft/Axle (min)	200	272
Oil Drain Plug	Front Differential - Rear Drive/Differential	45 inlb	5
Oil Fill Plug	Front Differential - Rear Drive/Differential	16	22
Oil Drain Plug	Engine	16	22
Wheel	Hub	45	61
Front Input Drive Flange	Front U-Joint	20	27

* w/Blue Loctite #243 ** w/Red Loctite #271





^{***} w/Green Loctite #609 **** w/Green Loctite #270

ENGINE/TRANSMISSION					
Devt	Part Bolted To	Torq	ue		
Part	Part Bolted To	ft-lb	N-m		
Clutch Shoe**	Crankshaft	221	300		
Clutch Cover/Housing Assembly	Crankcase	8	11		
Crankcase Half (6 mm)	Crankcase Half	10	14		
Crankcase Half (8 mm)	Crankcase Half	20	27		
Cylinder Head (Cap Screw)	Crankcase	40	54		
Cylinder Head Nut (6 mm)	Cylinder	8	11		
Cylinder Head Nut (8 mm)	Cylinder	18	24		
Cylinder Head Cover	Cylinder Head	8.5	11.5		
Driven Pulley Nut	Driveshaft	80	109		
Movable Drive Face Nut**	Driveshaft	165	224		
Ground Wire	Engine	8	11		
Magneto Cover	Crankcase	8	11		
Tappet Cover	Valve Cover	9	12		
Crankshaft Spacer	Crankshaft	28	38		
Oil Pump Drive Gear**	Crank Balancer Shaft	62	84		
Output Shaft Flange Nut	Output Shaft**	62	84		
Outer Magneto Cover	Magneto Cover	8	11		
Magneto Rotor Nut**	Crankshaft	105	143		
Cam Sprocket**	Camshaft	11	15		
V-Belt Cover	Crankcase	8	11		
Output Yoke Nut	Secondary Driven Output Shaft	74	100		

* w/Blue Loctite #243

** w/Red Loctite #271

*** w/Green Loctite #609

Torque Conversions (ft-lb/N-m)

ft-lb	N-m	ft-lb	N-m	ft-lb	N-m	ft-lb	N-m
1	1.4	26	35.4	51	69.4	76	103.4
2	2.7	27	36.7	52	70.7	77	104.7
3	4.1	28	38.1	53	72.1	78	106.1
4	5.4	29	39.4	54	73.4	79	107.4
5	6.8	30	40.8	55	74.8	80	108.8
6	8.2	31	42.2	56	76.2	81	110.2
7	9.5	32	43.5	57	77.5	82	111.5
8	10.9	33	44.9	58	78.9	83	112.9
9	12.2	34	46.2	59	80.2	84	114.2
10	13.6	35	47.6	60	81.6	85	115.6
11	15	36	49	61	83	86	117
12	16.3	37	50.3	62	84.3	87	118.3
13	17.7	38	51.7	63	85.7	88	119.7
14	19	39	53	64	87	89	121
15	20.4	40	54.4	65	88.4	90	122.4
16	21.8	41	55.8	66	89.8	91	123.8
17	23.1	42	57.1	67	91.1	92	125.1
18	24.5	43	58.5	68	92.5	93	126.5
19	25.8	44	59.8	69	93.8	94	127.8
20	27.2	45	61.2	70	95.2	95	129.2
21	28.6	46	62.6	71	96.6	96	130.6
22	29.9	47	63.9	72	97.9	97	131.9
23	31.3	48	65.3	73	99.3	98	133.3
24	32.6	49	66.6	74	100.6	99	134.6
25	34	50	68	75	102	100	136

Tightening Torque (General Bolts)

Type of Bolt	Thread Diameter A (mm)	Tightening Torque
(Conventional or 4 Marked Bolt)	5	12-36 inlb
	6	36-60 inlb
	8	7-11 ft-lb
	10	16-25 ft-lb
(7 Marked Bolt)	5	24-48 inlb
	6	6-8 ft-lb
	8	13-20 ft-lb
	10	29-43 ft-lb



www.mymowerparts.com



Back to TOC

Break-In Procedure

A new vehicle and an overhauled engine require a "break-in" period. The first 10 hours (or 200 miles) are most critical to the life of this vehicle. Proper operation during this break-in period will help assure maximum life and performance from the vehicle.

During the first 10 hours (or 200 miles) of operation, always use less than 1/2 throttle. Varying the engine RPM during the break-in period allows the components to "load" (aiding the mating process) and then "unload" (allowing components to cool). Although it is essential to place some stress on the engine components during break-in, care should be taken not to overload the engine too often. Do not pull a trailer or carry heavy loads during the 10-hour break-in period.

When the engine starts, allow it to warm up properly. Idle the engine several minutes until the engine has reached normal operating temperature. Do not idle the engine for excessively long periods of time.

During the break-in period, a maximum of 1/2 throttle is recommended; however, brief full-throttle accelerations and variations in driving speeds contribute to good engine break-in.

After the completion of the break-in period, the engine oil and oil filter should be changed. Other maintenance after break-in should include checking of all prescribed adjustments and tightening of all fasteners.

Gasoline - Oil -Lubricant

RECOMMENDED GASOLINE

The recommended gasoline to use is 87 minimum octane regular unleaded. In many areas, oxygenates (either ethanol or MTBE) are added to the gasoline. Oxygenated gasolines containing up to 10% ethanol, 5% methane, or 5% MTBE are acceptable gasolines.


When using ethanol blended gasoline, it is not necessary to add a gasoline antifreeze since ethanol will prevent the accumulation of moisture in the fuel system.

Do not use white gas. Only Arctic Cat approved gasoline additives should be used.

RECOMMENDED ENGINE/ TRANSMISSION OIL

Any oil used in place of the recommended oil could cause serious engine damage. Do not use oils which contain graphite or molybdenum additives. These oils can adversely affect clutch operation. Also, not recommended are racing, vegetable, non-detergent, and castor-based oils.

The recommended oil to use is Arctic Cat ACX All Weather synthetic engine oil, which has been specifically formulated for use in this Arctic Cat engine. Although Arctic Cat ACX All-Weather synthetic engine oil is the only oil recommended for use in this engine, use of any API certified SM 5W-50 oil is acceptable.

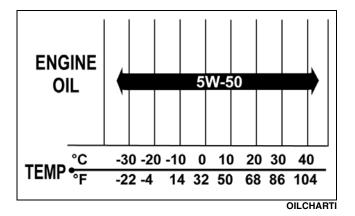

RECOMMENDED FRONT DIFFERENTIAL/REAR DRIVE LUBRICANT (Prowler/XT)

The recommended lubricant is Arctic Cat Gear Lube or an equivalent gear lube which is SAE approved 80W-90 hypoid. This lubricant meets all of the lubrication requirements of the Arctic Cat vehicle front differential and rear drive.

Any lubricant used in place of the recommended lubricant could cause serious front differential/rear drive damage.

RECOMMENDED DIFFERENTIAL LUBRICANT (Prowler XTX)

■NOTE: Arctic Cat recommends the use of genuine Arctic Cat lubricants.

The recommended lubricant for the front differential is SAE approved 80W-90 hypoid. This lubricant meets all of the front diffrential lubrication requirements of this vehicle.

www.mymowerparts.com





Back to Section TOC




The recommended lubricant for the rear differential is Arctic Cat 80W-90 Hypoid Friction Modified. This lubricant meets all of the rear differential lubrication requirements of this vehicle.

Any lubricant used in place of the recommended lubricant could cause serious differential damage.

FILLING GAS TANK

Always fill the gas tank in a well-ventilated area. Never add fuel to the gas tank near any open flames or with the engine running. DO NOT SMOKE while filling the gas tank.

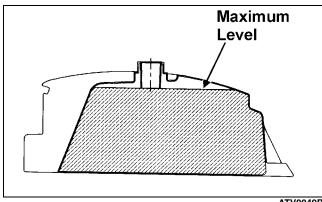

ATV0049B

Since gasoline expands as its temperature rises, the gas tank must be filled to its rated capacity only. Expansion room must be maintained in the tank particularly if the tank is filled with cold gasoline and then moved to a warm area.

Do not overflow gasoline when filling the gas tank. A fire hazard could materialize. Always allow the engine to cool before filling the gas tank.

Tighten the gas tank cap securely after filling the tank.

Do not over-fill the gas tank.

Genuine Parts

When replacement of parts is necessary, use only genuine Arctic Cat parts. They are precision-made to ensure high quality and correct fit. Refer to the appropriate Illustrated Parts Manual for the correct part number, quantity, and description.

Preparation For Storage

🗥 CAUTION

Prior to storing the vehicle, it must be properly serviced to prevent rusting and component deterioration.


- 1. Clean the seat cushion (cover and base) with a damp cloth and allow it to dry.
- 2. Clean the vehicle thoroughly by washing dirt, oil, grass, and other foreign matter from the entire vehicle. Allow it to dry thoroughly. DO NOT get water into any part of the engine or air intake.
- 3. Either drain the gas tank or add Fuel Stabilizer to the gas in the gas tank. Remove the air filter housing cover and air filter. Start the engine and allow it to idle. Using Arctic Cat Engine Storage Preserver, rapidly inject the preserver into the air filter opening for a period of 10 to 20 seconds; then stop the engine. Install the air filter and housing cover.

🛆 CAUTION

If the interior of the air filter housing is dirty, clean the area before starting the engine.

- 4. On the carbureted model, drain the carburetor float chamber.
- 5. Plug the exhaust hole in the exhaust system with a clean cloth.
- 6. Apply light oil to the plungers of the shock absorbers
- 7. Tighten all nuts, bolts, cap screws, and screws. Make sure rivets holding components together are tight. Replace all loose rivets. Care must be taken that all calibrated nuts, cap screws, and bolts are tightened to specifications.
- 8. Fill the cooling system to the bottom of the stand pipe in the radiator neck with properly mixed coolant.
- 9. Disconnect the battery cables; then remove the battery, clean the battery posts and cables, and store in a clean, dry area.
- 10. Store the vehicle indoors in a level position.

Avoid storing outside in direct sunlight and avoid using a plastic cover as moisture will collect on the vehicle causing rusting.



Back



Back to Section TOC



Preparation After Storage

Taking the vehicle out of storage and correctly preparing it will assure many miles and hours of trouble-free riding.

- 1. Clean the vehicle thoroughly.
- 2. Clean the engine. Remove the cloth from the exhaust system.
- 3. Check all control wires and cables for signs of wear or fraying. Replace if necessary.
- 4. Change the engine/transmission oil and filter.
- 5. Check the coolant level and add properly mixed coolant as necessary.

6. Charge the battery; then install. Connect the battery cables.

The ignition switch must be in the OFF position prior to installing the battery or damage may occur to the ignition system.

Connect the positive battery cable first; then the negative.

- 7. Check the entire brake systems (fluid level, pads, etc.), all controls, headlights, taillight, brakelight, and headlight aim; adjust or replace as necessary.
- 8. Tighten all nuts, bolts, cap screws, and screws making sure all calibrated nuts, cap screws, and bolts are tightened to specifications.
- 9. Check tire pressure. Inflate to recommended pressure as necessary.
- 10. Make sure the steering moves freely and does not bind.
- 11. Check the spark plug. Clean or replace as necessary.





SECTION 2 -PERIODIC MAINTENANCE/TUNE-UP

TABLE OF CONTENTS

Periodic Maintenance Chart	2-2
Periodic Maintenance	2-3
Lubrication Points	2-3
Air Filter	2-3
Valve/Tappet Clearance	
(Feeler Gauge Procedure)	2-4
Valve/Tappet Clearance	
(Valve Adjuster Procedure)	2-4
Testing Engine Compression	2-5
Spark Plug	2-6
Muffler/Spark Arrester	
Engine/Transmission Oil - Filter	2-6
Front Differential - Rear Drive/	
Differential Lubricant	2-7
Driveshaft/Coupling	2-8
Nuts/Bolts/Cap Screws	2-8
Headlight/Taillight-Brakelight	2-8
Shift Lever (Prowler/XTX)	
Shift Lever (XT)	
Hydraulic Brake System	2-10
Parking Brake	
Burnishing Brake Pads	
Checking/Replacing V-Belt	
Troubleshooting Brake System	2-16

Periodic Maintenance Chart

- A = Adjust I = Inspect
- C = Clean L = Lubricate
- D = Drain R = Replace
- T = Tighten

ltem	Initial Service After Break-In (First Mo or 100 Mi)	Every Day	Every Month or Every 100 Miles	Every 3 Months or Every 300 Miles	Every 6 Months or Every 500 Miles	Every Year or Every 1500 Miles	As Needed
Battery	I		I				С
Fuses				I			R
Air Filter/Drain Tube	I	I	C*				R
Valve/Tappet Clearance	I				I		А
Engine Compression						I	
Spark Plug	I			I	I		R (4000 Mi or 18 Mo)
Muffler/Spark Arrester					С		R
Gas/Vent Hoses	I	I					R (2 Yrs)
Throttle Cable Ends/Accelerator Pedal Pivot	I	I			C-L		A-R
Float Chamber (650 cc)				D*			
Engine RPM (Idle) (650 cc)	I				I		А
Engine-Transmission Oil Level		I					А
Engine-Transmission Oil/Filter	R			R*/R**/R***			R
Oil Strainer	I				I		С
Front Differential - Rear Drive/Differ- ential Lubricant	I		I				R (4 Yrs)
Tires/Air Pressure	I	I					R
Steering Components	I	I		I			R
V-Belt	I				I		R
Suspension (Ball joint boots, drive axle boots front and rear, tie rods, differential and rear drive bellows)	I	I					R
Nuts/Bolts/Cap Screws	Т		Т				А
Ignition Timing						I	
Headlight/Taillight-Brakelight	I	I					R
Switches	I	I					R
Shift Lever					I		A-L
Gauges/Indicators	I	I					R
Frame/Welds	I		I		I		
Electrical Connections					I		С
Complete Brake System (Hydraulic & Parking)	I	I					
Brake Pads	I			l*			R
Brake Fluid	I			I			R (2 Yrs)
Brake Hoses	I			I			R (4 Yrs)
Coolant/Cooling System	I		I				R (2 Yrs)
Wheel Lug Nuts	Т			Т			

 \ast Service/Inspect more frequently when operating in adverse conditions.

** When using an API certified SM 5W-50 oil.

*** When using Arctic Cat ACX All Weather synthetic oil, oil change interval can be increased to every 1,000 miles or every year. **WWW.MYMOWERPARTS.COM**

2-2



(Back to Section TOC



Periodic Maintenance

This section has been organized into sub-sections which show common maintenance procedures for the Arctic Cat UTV.

■NOTE: Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/transmission.

■NOTE: Some photographs and illustrations used in this section are used for clarity purposes only and are not designed to depict actual conditions.

■NOTE: Critical torque specifications are located in Section 1.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

Description	p/n
Compression Tester Kit	0444-213
Oil Filter Wrench	0644-389
Timing Light	0644-296
Valve Clearance Adjuster	0444-078

■NOTE: Special tools are available from the Arctic Cat Service Parts Department.

Lubrication Points

It is advisable to lubricate certain components periodically to ensure free movement. Apply light oil to the components using the following list as reference.

- A. Accelerator Pedal Pivot/Cable Ends
- B. Brake Pedal Pivot
- C. Parking Brake Cable Ends
- D. Shift Linkage
- E. Differential Lock Cable End (XT)
- F. Idle RPM Screw (650 cc)


Air Filter

Use the following procedure to remove the filter and inspect and/or clean it.

CLEANING AND INSPECTING FILTER

Failure to inspect the air filter frequently if the vehicle is used in dusty, wet, or muddy conditions can damage the engine.

- 1. Remove the seats; then remove the center console.
- 2. Unsnap the four fasteners securing the air cleaner housing cover and remove the cover.
- 3. Remove the air filter frame (A); then remove the foam filter element (B).

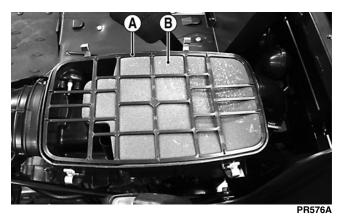

4. Fill a wash pan larger than the filter with a non-flammable cleaning solvent; then dip the filter in the solvent and wash it.

■NOTE: Foam Filter Cleaner and Foam Filter Oil are available from Arctic Cat.

- 5. Dry the filter.
- 6. Put the filter in a plastic bag; then pour in air filter oil and work the filter. Reattach the filter to the filter screen.

A torn air filter can cause damage to the vehicle engine. Dirt and dust may get inside the engine if the element is torn. Carefully examine the element for tears before and after cleaning it. Replace the element with a new one if it is torn.

7. Clean any dirt or debris from inside the air cleaner. Be sure no dirt enters the carburetor (XT).

www.mymowerparts.com



Back to TOC

Back to Section TOC



- 8. Place the foam filter in the air filter housing; then position the filter frame on top.
- 9. Install the air filter housing cover and secure with the retaining clips; then install the center console and seats making sure the seats lock securely.

CHECKING AND CLEANING DRAINS

- 1. Inspect one-way drains beneath the main housing for debris and for proper sealing.
- 2. Replace any one-way drain that is cracked or shows any signs of hardening or deterioration.

The one-way drain to the left is the clean air section of the filter housing. Any leak of this drain will allow dirt into the engine intake causing severe engine damage.

3. Wipe any accumulation of oil or gas from the filter housing and one-way drains.

Valve/Tappet Clearance (Feeler Gauge Procedure)

To check and adjust valve/tappet clearance, use the following procedure.

NOTE: The engine must be cold for this procedure.

■NOTE: The seats, center console, spark plug, and air filter housing must be removed for this procedure.


- 1. Remove the spark plug and timing inspection plug; then remove the tappet covers (for more detailed information, see Section 3 Servicing Top-Side Components).
- 2. Rotate the crankshaft to the TDC position on the compression stroke.

■NOTE: At this point, the rocker arms and adjuster screws must not have pressure on them.

3. Using a feeler gauge, check each valve/tappet clearance. If clearance is not within specifications, loosen the jam nut and rotate the tappet adjuster screw until the clearance is within specifications. Tighten each jam nut securely after completing the adjustment.

The feeler gauge must be positioned at the same angle as the valve and valve adjuster for an accurate measurement of clearance. Failure to measure the valve clearance accurately could cause valve component damage.

VALVE/TAPPET CLEARANCE			
Intake 0.1016 mm (0.004 in.)			
Exhaust 0.1524 mm (0.006 in.)			

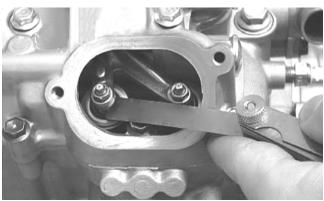

CC007D

- 4. Install the spark plug; then install the timing inspection plug.
- 5. Place the two tappet covers with O-rings into position. Tighten the cap screws securely.

Valve/Tappet Clearance (Valve Adjuster Procedure)

To check and adjust valve/tappet clearance, use the following procedure.

■NOTE: The engine must be cold for this procedure.

■NOTE: The seats, center console, spark plug, and air filter housing must be removed for this procedure.

- 1. Remove the spark plug and timing inspection plug; then remove the tappet covers (for more detailed information, see Section 3 Servicing Top-Side Components).
- 2. Rotate the crankshaft to the TDC position on the compression stroke.

■NOTE: At this point, the rocker arms and adjuster screws must not have pressure on them.

■NOTE: Use Valve Clearance Adjuster for this procedure.





(Back to Section TOC





- 3. Place the valve adjuster onto the jam nut securing the tappet adjuster screw; then rotate the valve adjuster dial clockwise until the end is seated in the tappet adjuster screw.
- 4. While holding the valve adjuster dial in place, use the valve adjuster handle and loosen the jam nut; then rotate the tappet adjuster screw clockwise until friction is felt.
- 5. Align the valve adjuster handle with one of the marks on the valve adjuster dial.
- 6. While holding the valve adjuster handle in place, rotate the valve adjuster dial counterclockwise until proper valve/tappet clearance is attained.

■NOTE: Refer to the appropriate specifications in Feeler Gauge Procedure sub-section for the proper valve/tappet clearance.

■NOTE: Rotating the valve adjuster dial counterclockwise will open the valve/tappet clearance by 0.05 mm (0.002 in.) per mark.

- 7. While holding the adjuster dial at the proper clearance setting, tighten the jam nut securely with the valve adjuster handle.
- 8. Place the two tappet covers with O-rings into position. Tighten the cap screws securely.

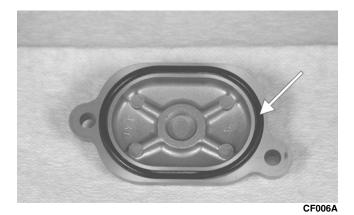

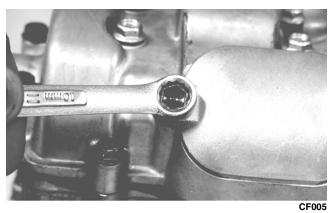

9. Install the spark plug; then install the timing inspection plug.

Testing Engine Compression

To test engine compression, use the following procedure.

■NOTE: The engine must be warm and the battery must be fully charged for this test.

■NOTE: The seats and center console must be removed for this procedure.

- 1. Remove the high tension lead from the spark plug.
- 2. Using compressed air, blow any debris from around the spark plug.

Always wear safety glasses when using compressed air.

- 3. Remove the spark plug; then attach the high tension lead to the plug and ground the plug on the cylinder head well away from the spark plug hole.
- 4. Attach the Compression Tester Kit.
- 5. While holding the throttle in the full-open position, crank the engine over with the electric starter until the gauge stops climbing (five to 10 compression strokes).

■NOTE: The compression should be within a range of 155-170 psi in the full-open throttle position.

- 6. If compression is abnormally low, inspect the following items.
 - A. Starter cranks engine over.
 - B. Gauge is functioning properly.
 - C. Throttle lever in the full-open position.
 - D. Valve/tappet clearance correct.
 - E. Valve bent or burned.
 - F. Valve seat burned.

■NOTE: To service valves, see Section 3.

- 7. Pour approximately 30 ml (1 fl oz) of oil into the spark plug hole, reattach the gauge, and retest compression.
- 8. If compression is now evident, service the piston rings (see Section 3).






Back to Section TOC



2


Spark Plug

A light brown insulator indicates that the plug is correct. A white or dark insulator indicates that the engine may need to be serviced or the carburetor (if applicable) may need to be adjusted. To maintain a hot, strong spark, keep the plug free of carbon.

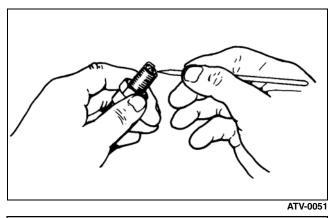

Before removing the spark plug, be sure to clean the area around the spark plug. Dirt could enter engine when removing or installing the spark plug.

Adjust the gap to 0.7-0.8 mm (0.028-0.032 in.).

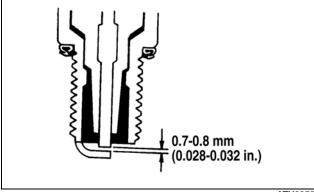

ATV0052C

When installing the spark plug, be sure to tighten it securely. A new spark plug should be tightened 1/2 turn once the washer contacts the cylinder head. A used spark plug should be tightened 1/8-1/4 turn once the washer contacts the cylinder head.

Muffler/Spark Arrester

Clean the spark arrester using the following procedure.








1. Remove the cap screws securing the spark arrester screen assembly to the muffler; then loosen and remove the spark arrester. Account for a gasket.





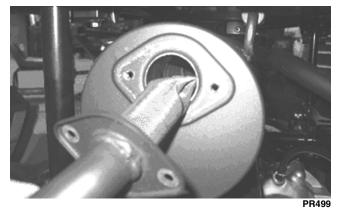

2. Using a suitable brush, clean the carbon deposits from the screen taking care not to damage the screen.

■NOTE: If the screen or gasket is damaged in any way, it must be replaced.

3. Install the spark arrester assembly and gasket and secure with the cap screws. Tighten the cap screws to 48 in.-lb.

Engine/Transmission Oil - Filter

OIL - FILTER

Back to Section TOC

Change the engine oil and oil filter at the scheduled intervals. The engine should always be warm when the oil is changed so the oil will drain easily and completely.

■NOTE: To change oil and filter, the seats and center console must be removed.


- 1. Park the vehicle on level ground.
- 2. Remove the oil level stick/filler plug.





PR053B

3. Remove the drain plug from the bottom of the engine and drain the oil into a drain pan.

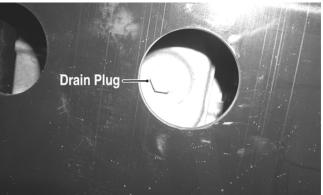



4. Using the Oil Filter Wrench and a ratchet handle (or a socket or box-end wrench), remove the old oil filter.

■NOTE: Clean up any excess oil after removing the filter.

- 5. Apply oil to a new filter O-ring and check to make sure it is positioned correctly; then install the new oil filter. Tighten securely.
- 6. Install the engine drain plug and tighten to 16 ft-lb. Pour the specified amount of the recommended oil in the filler hole. Install the oil level stick/filler plug.

Any oil used in place of the recommended oil could cause serious engine damage. Do not use oils which contain graphite or molybdenum additives. These oils can adversely affect clutch operation. Also, not recommended are racing, vegetable, non-detergent, and castor-based oils.

- 7. Start the engine (while the vehicle is outside on level ground) and allow it to idle for a few minutes.
- 8. Turn the engine off and wait approximately one minute.


9. Unscrew the oil level stick and wipe it with a clean www.slothowerparts.com

10. Install the oil level stick and thread into the engine case.

■NOTE: The oil level stick should be threaded into the case for checking the oil level.

11. Remove the oil level stick; the engine oil level should be above the illustrated "L" mark but not higher than the illustrated "F" mark.

Do not over-fill the engine with oil. Always make sure that the oil level is above the "L" mark but not higher than the "F" mark.

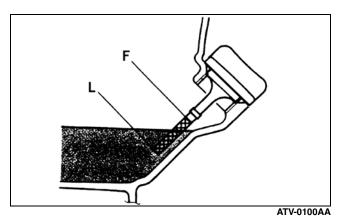


12. Inspect the area around the drain plug and oil filter for leaks.

Front Differential - Rear Drive/Differential Lubricant

To check lubricant, use the following procedure.

1. Remove the level plug; the lubricant level should be visible at the plug threads.

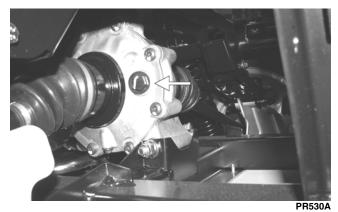

2. If low, add SAE approved 80W-90 hypoid gear lube as necessary.

To change the lubricant, use the following procedure.







Back to Section TOC



- 1. Place the vehicle on level ground.
- 2. Remove each fill/level plug.
- 3. Drain the lubricant into a drain pan by removing in turn the drain plug from each.

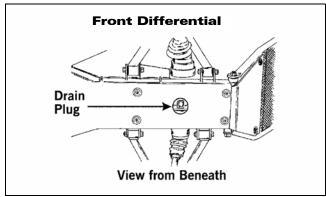

ATV0082A

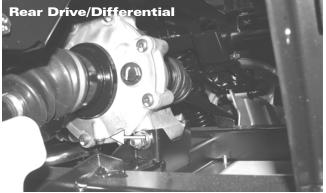

PR530B

- 4. After all the lubricant has been drained, install the drain plugs and tighten to 45 in.-lb.
- 5. Pour the appropriate amount of recommended lubricant into the fill/level hole.
- 6. Install the fill/level plugs.

■NOTE: If the lubricant is contaminated with water, inspect the drain plug, fill/level plug, and/or bladder.

Driveshaft/Coupling

The following drive system components should be inspected periodically to ensure proper operation.

- A. Spline lateral movement (slop).
- B. Coupling cracked, damaged, or worn.
- C. Universal joints worn or missing bearings.

Nuts/Bolts/Cap Screws

Tighten all nuts, bolts, and cap screws. Make sure rivets holding components together are tight. Replace all loose rivets. Care must be taken that all calibrated nuts, bolts, and cap screws are tightened to specifications.

Headlight/Taillight-Brakelight

HEADLIGHT

■NOTE: The bulb portion of the headlight is fragile. HANDLE WITH CARE. When replacing the headlight bulb, do not touch the glass portion of the bulb. If the glass is touched, it must be cleaned with a dry cloth before installing. Skin oil residue on the bulb will shorten the life of the bulb.

Do not attempt to remove the bulb when it is hot. Severe burns may result.

To replace the headlight bulb, use the following procedure.

- 1. Remove the wiring harness connector from the back of the headlight.
- 2. Grasp the bulb socket, turn it counterclockwise and remove, and pull the bulb straight out of the socket.
- 3. Install the new bulb into the socket and rotate it completely clockwise in the housing.
- 4. Install the wiring harness connector.

TAILLIGHT-BRAKELIGHT

To replace the taillight-brakelight bulb, use the following procedure.

- 1. Remove the two machine screws and remove the light assembly.
- 2. Rotate the bulb socket counterclockwise to remove it from the light assembly; then pull straight out on the bulb. Push the new bulb straight into the socket.
- 3. Install the bulb and socket into the light assembly and turn clockwise to lock in place.
- Install the taillight-brakelight assembly on the canopy support.





(Back to Section TOC




CHECKING/ADJUSTING HEADLIGHT AIM

The headlights can be adjusted vertically. The geometric center of the HIGH beam light zone is to be used for vertical aiming.


1. Position the vehicle on a level floor so the headlights are approximately 6.1 m (20 ft) from an aiming surface (wall or similar aiming surface).

■NOTE: There should be an average operating load on the vehicle when adjusting the headlight aim.

- 2. Measure the distance from the floor to the mid-point of each headlight.
- 3. Using the measurements obtained in step 2, make horizontal marks on the aiming surface.
- 4. Make vertical marks which intersect the horizontal marks on the aiming surface directly in front of the headlights.
- 5. Switch on the lights. Make sure the HIGH beam is on. DO NOT USE LOW BEAM.
- 6. Observe each headlight beam aim. Proper aim is when the most intense beam is centered on the vertical mark 5 cm (2 in.) below the horizontal mark on the aiming surface.

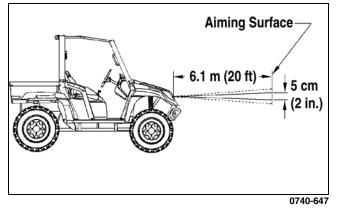

7. Using the adjuster knob, adjust each headlight until correct aim is obtained.

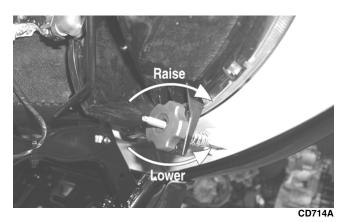

www.mymowerparts.com




Back to TOC

Shift Lever (Prowler/XTX)

CHECKING SHIFT LEVER CABLE

Set the parking brake and turn the ignition switch on; then with the shift lever in the neutral position, look for the (N) indication on the LCD. Shift into high range and look for the (H) indication, low range for the (L) indication, and reverse for the (R) indication. Shift the transmission into neutral and turn the ignition switch off.

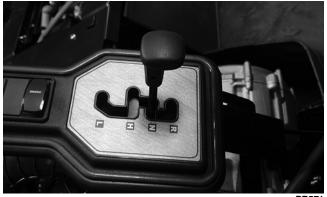

ADJUSTING SHIFT LEVER CABLE

To adjust the shift lever cable, use the following procedure.


- 1. Set the parking brake; then remove the seats and center console.
- 2. Make sure the shift lever is in neutral; then remove the E-clip securing the cable end to the shaft arm.



PR567A

3. Loosen nuts (A) and (B) and adjust the cable housing to align the throttle cable end to the shift arm stud (C).



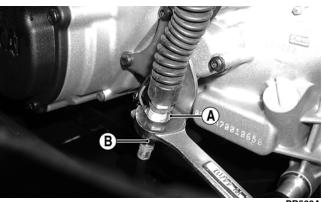





- 4. Install the E-clip; then tighten the nuts (A) and (B) securely.
- 5. Check each gear shift position for proper gear selection and make sure the proper icon illuminates on the LCD; then install the center console and seats.

Shift Lever **(XT)**

CHECKING SHIFT LEVER LINKAGE

Set the parking brake and turn the ignition switch on; then with the shift lever in the neutral position, look for the (N) indication on the LCD. Shift into high range and look for the (H) indication, low range for the (L) indication, and reverse for the (R) indication. Shift the transmission into neutral and turn the ignition switch off.




www.mymowerparts.com

ADJUSTING SHIFT LEVER LINKAGE

To adjust the shift lever linkage, use the following procedure.

- 1. Set the parking brake; then remove the seats and center console.
- 2. Make sure the shift lever is in neutral; then loosen the jam nut on the linkage.
- 3. Remove the E-clip on the transmission shift arm; then remove the linkage from the shift arm. Account for a washer and a bushing.

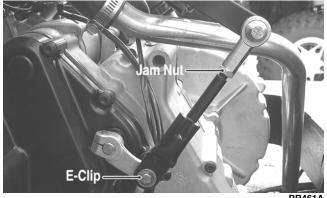

PR461A

- 4. Turn the linkage rod clockwise or counterclockwise until the lower linkage hole aligns with the shift arm pin.
- 5. Install the bushing and linkage and secure with the washer and E-clip; then tighten the jam nut securely. Check each gear shift position for proper gear selection and make sure the proper icon illuminates on the LCD.

Hydraulic Brake System

CHECKING/BLEEDING

The hydraulic brake system has been filled and bled at the factory. To check and/or bleed a hydraulic brake system, use the following procedure.

1. With the master cylinder in a level position, check the fluid level in the reservoir. If the level in the reservoir is not above the MIN, add DOT 4 brake fluid.












PR095

- 2. Depress the brake pedal several times to check for a firm brake. If the brake is not firm, the system must be bled.
- 3. To bleed the brake system, use the following procedure.
 - A. Remove the cover and fill the reservoir with DOT 4 Brake Fluid.
 - B. Install and secure the cover; then slowly depress the brake pedal several times.
 - C. Remove the protective cap, install one end of a clear hose onto one FRONT bleeder screw, and direct the other end into a container; then while holding slight pressure on the brake pedal, open the bleeder screw and watch for air bubbles. Close the bleeder screw before releasing the brake pedal. Repeat this procedure until no air bubbles are present.



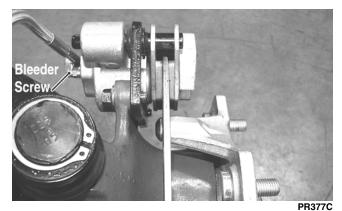

www.mymowerparts.com

Back



■NOTE: During the bleeding procedure, watch the reservoir very closely to make sure there is always a sufficient amount of brake fluid. When the level falls below MIN, refill the reservoir before the bleeding procedure is continued. Failure to maintain a sufficient amount of fluid in the reservoir will result in air in the system.

- D. At this point, perform steps B and C on the other FRONT bleeder screw; then move to the REAR bleeder screw and follow the same procedure.
- E. Repeat steps B and C until the brake pedal is firm.
- 4. Carefully check the entire hydraulic brake system that all hose connections are tight, the bleed screws are tight, the protective caps are installed, and no leakage is present.

This hydraulic brake system is designed to use DOT 4 brake fluid only. If brake fluid must be added, care must be taken as brake fluid is very corrosive to painted surfaces.


INSPECTING HOSES

Carefully inspect the hydraulic brake hoses for cracks or other damage. If found, the brake hoses must be replaced.

CHECKING/REPLACING PADS

The clearance between the brake pads and brake discs is adjusted automatically as the brake pads wear. The only maintenance that is required is replacement of the brake pads when they show excessive wear. Check the thickness of each of the brake pads as follows.

- 1. Remove a front wheel.
- 2. Measure the thickness of each brake pad.

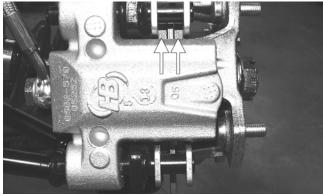

- PR376A
- 3. If thickness of either brake pad is less than 1.0 mm (0.039 in.), the brake pads must be replaced.

■NOTE: The brake pads should be replaced as a set.

(Back to Section TOC




- 4. To replace the brake pads, use the following procedure.
 - A. Remove the wheel.
 - B. Remove the cap screws securing the caliper holder to the knuckle; then remove the pads from the caliper.



PR237

- C. Install the new brake pads.
- D. Secure the caliper holder to the knuckle with the cap screws. Tighten to 20 ft-lb.

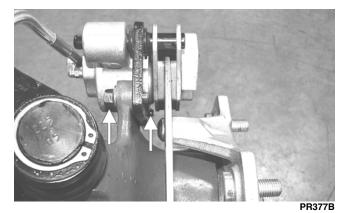

- E. Install the wheel. Tighten to 45 ft-lb.
- 5. Burnish the brake pads (see Burnishing Brake Pads in this section).

Parking Brake

CHECKING

Although the parking brake has been adjusted at the factory, the brake should be checked for proper operation. The brake must be maintained to be fully functional.

- 1. With the engine off, transmission in neutral, and the parking brake set, attempt to move the vehicle.
- 2. If the rear wheels are locked, it is adjusted properly.

www.mymowerparts.com






3. If the rear wheels are not locked, it must be adjusted (set up).


ADJUSTING

To adjust (set up) the parking brake, use the following procedure.


■NOTE: Remove the four rear body screws securing the belly panel to the frame and allow it to drop down for better access to the parking brake actuator.

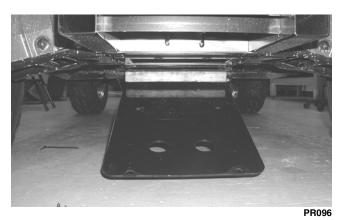

1. Remove the parking brake cable from the actuator lever; then remove the actuator nut and actuator lever. Note the position of the lever before removing.

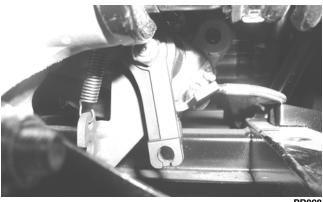


- PR098
- 2. Rotate the actuator clockwise (hand tight) until it contacts the back of the piston; then rotate counterclockwise approximately one spline.

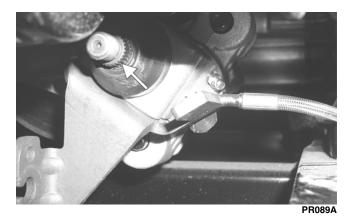



Back to Section TOC

3. Install the actuator lever in the position noted in step 1; then install the actuator nut and tighten to 35^{ft-lb.}

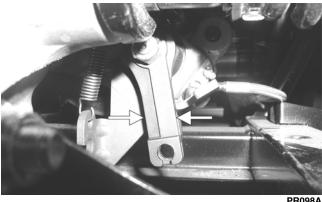

- 4. Install the parking brake cable and adjust nuts so the parking brake holds the vehicle when set and fully releases it when released.




CAUTION \wedge

If after adjusting the parking brake cable the parking brake will not hold the vehicle, the brake pads must be replaced.

MEASURING/REPLACING BRAKE PADS

Removing

- 1. Remove the parking brake cable (see Adjusting in this sub-section).
- 2. Lift the cargo box; then disconnect the lower lift support and allow the cargo box to tilt all the way back. Account for the washer.

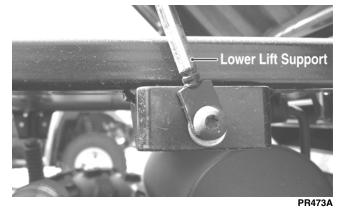

- 3. Remove the two cap screws securing the brake caliper to the rear drive housing and remove the caliper.
- 4. Remove the anti-rattle springs; then push in on the caliper holder and remove the outer brake pad. Remove the inner pad.



Inspecting and Measuring

- 1. Inspect the pads for gouges, chips, or wear.
- 2. Inspect the disc for gouges, grooves, cracks, and warpage.
- 3. Using a calipers, measure the thickness of each brake pad.
- 4. If the thickness of either brake pad is less than 1.0 mm (0.039 in.), the brake pads must be replaced.

■NOTE: The brake pads should be replaced as a set.

Installing

1. Place the brake pads into the caliper holder; then install the anti-rattle springs.

■NOTE: The metal backing of the pad will be facing the actuator when installed properly.

2. Slide brake caliper assembly over the brake disc and into position on the rear drive housing; then secure the caliper with the cap screws tightened to 20 ft-lb.



www.mymowerparts.com





Back to Section TOC

- 3. Connect the parking brake cable (see Adjusting in this sub-section).
- 4. Adjust the parking brake (see Adjusting in this sub-section).
- 5. Connect the lift support to the cargo box.

■NOTE: Whenever installing new pads, the new pads must be burnished (see Burnishing Brake Pads in this section).

Burnishing Brake Pads

Brake pads must be burnished to achieve full braking effectiveness. Braking distance will be extended until brake pads are properly burnished. To properly burnish the brake pads, use the following procedure.


Failure to properly burnish the brake pads could lead to premature brake pad wear or brake loss. Brake loss can result in severe injury.

- 1. Choose an area large enough to safely accelerate the vehicle to 30 mph and to brake to a stop.
- 2. Accelerate to 30 mph; then depress the brake pedal to decelerate to 0-5 mph.
- 3. Repeat procedure five times until brake pads are burnished.
- 4. Adjust the parking brake (if necessary).
- 5. Verify that the brakelight illuminates when the brake pedal is depressed.

Checking/Replacing V-Belt

REMOVING

1. Remove the seats and center console; then remove the left-side seat-base.

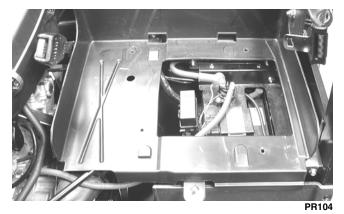


- 2. Remove the cap screws securing the V-belt cover noting the location of the different-lengthed cap screws for installing purposes; then using a rubber mallet, gently tap on the cover tabs to loosen the cover. Remove the cover.
- 3. Remove the nut securing the movable drive face; then remove the face. Account for the flat washer and spacer.

■NOTE: Keep the drive face plate in contact with the drive face when removing or installing the drive face to prevent the rollers from falling out.



CD963

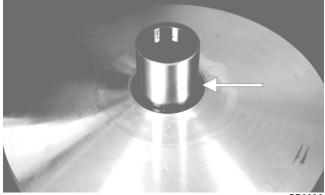

CD966A

4. Install one of the V-belt cover cap screws into the driven pulley fixed face; then turn the cap screw clockwise to spread the pulley faces. Remove the V-belt.











PR476A





INSTALLING

1. Place the V-belt into position on the driven pulley and over the front shaft.



PR109

■NOTE: The arrows on the V-belt should point rearward.

2. Pinch the V-belt together near its center and slide the spacer and movable drive face onto the driveshaft. Secure the drive face with a washer and nut (coated with red Loctite #271). Tighten the nut to 165 ft-lb.

Make sure the drive belt does not prevent the movable face from contacting the spacer when tightening the nut or false torque readings could occur. The assembly could loosen after starting the engine causing damage to the shaft and pulley.



PR108

■NOTE: At this point, remove the cap screw from the driven pulley face.

- 3. Rotate the V-belt and driven pulley/clutch until the V-belt is flush with the top of the driven pulley.
- 4. Place the V-belt cover gasket into position; then install the cover and secure with the cap screws making sure the different-lengthed cap screws are in their proper location. Tighten the cap screws to 8 ft-lb.
- 5. Secure the seat-base with the four cap screws. Tighten securely.
- 6. Install the seats and center console making sure the seats lock securely.









Troubleshooting Brake System

Problem: Braking poor				
Condition	Remedy			
1. Pad worn	1. Replace pads			
2. Pedal free-play excessive	2. Adjust free-play			
3. Brake fluid leaking	3. Repair - replace hydraulic system			
4. Hydraulic system leaking air	4. Bleed hydraulic system			
5. Master cylinder/brake cylinder seal worn	5. Replace seal(s)			
Problem: Brake pedal travel excessive				
Condition	Remedy			
1. Hydraulic system entrapped air	1. Bleed hydraulic system			
2. Brake fluid low	2. Add fluid to proper level			
3. Brake fluid incorrect	3. Replace with correct fluid			
4. Piston seal - cup worn	4. Replace seal - cup			
Problem: Brake fluid leaking				
Condition	Remedy			
1. Connection joints loose	1. Tighten joint			
2. Hose cracked	2. Replace hose			
3. Piston seal worn	3. Replace seal			







SECTION 3 - ENGINE/TRANSMISSION

TABLE OF CONTENTS

3-2
3-3

Engine/Transmission

This section has been organized into sub-sections which show a progression for the complete servicing of the Arctic Cat UTV engine/transmission.

To service the center crankcase halves, the engine/transmission must be removed from the frame. To service top-side, left-side, and right-side components, the engine/transmission does not have to be removed from the frame.

■NOTE: Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/ transmission.

■NOTE: Some photographs and illustrations used in this section are used for clarity purposes only and are not designed to depict actual conditions.

■NOTE: Critical torque specifications are located in Section 1.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

Description	p/n
Crankcase Separator/Crankshaft Remover	0444-009
Magneto Rotor Remover Set	0444-206
Piston Pin Puller	0644-328
Spanner Wrench	0544-005
Surface Plate	0644-016
V Blocks	0644-022

■NOTE: Special tools are available from the Arctic Cat Service Parts Department.

Specifications*

VALVES AND	GUIDES	
Valve Face Diameter	(intake) (exhaust)	
Valve/Tappet Clearance (cold engine)	(intake) (exhaust)	0.1016 mm 0.1524 mm
Valve Guide/Stem Clearance (intake	e/exhaust)	0.013 mm
Valve Guide/Valve Stem Deflection (wobble method)	(max)	0.35 mm
Valve Guide Inside Diameter		5.000-5.012 mm
Valve Stem Outside Diameter (intake	e/exhaust)	4.972-4.987 mm
Valve Stem Runout	(max)	0.1 mm
Valve Head Thickness	(min)	2.3 mm
Valve Face/Seat Width	(intake) (exhaust)	2.25 mm 2.60 mm
Valve Seat Angle (intake	e/exhaust)	45°
Valve Face Radial Runout	(max)	0.2 mm
Valve Spring Free Length	(min)	38.7 mm
Valve Spring Tension @ 31.5 mm	()	19.0 kg (42 lb)
CAMSHAFT AND C	YLINDE	R HEAD
Cam Lobe Height (min) (intake	e/exhaust)	33.53 mm
Camshaft Journal Oil Clearance	(max)	0.04 mm
Camshaft Runout	(max)	0.05 mm
Rocker Arm Inside Diameter	(max)	12.018 mm
Rocker Arm Shaft Outside Diameter	(min)	11.97 mm
Cylinder Head/Cover Distortion	()	0.05 mm
CYLINDER, PISTO		
CTLINDER, PISTO	N, AND	RINGS
Piston Skirt/Cylinder Clearance	N, AND	RINGS 0.045 mm
	(550 cc) (650 cc) (700 cc)	
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm	(550 cc) (650 cc)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End	(550 cc) (650 cc) (700 cc)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring to Groove Clearance	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc) (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd)	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (il) (il)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (max) (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (max) (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.36 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter CRANKS Connecting Rod (small end inside	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (max) (min) HAFT (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm 22.99 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter CRANKS Connecting Rod (small end inside diameter)	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (max) (min) HAFT (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm 22.99 mm 23.021 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter CRANKS Connecting Rod (small end inside diameter) Connecting Rod (big end side-to-side	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (650 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (max) (min) HAFT (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm 22.99 mm 23.021 mm 0.6 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter CRANKS Connecting Rod (small end inside diameter) Connecting Rod (big end side-to-side Connecting Rod (big end width) Connecting Rod @ 150 mm	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (oil) (1st/2nd) (max) (max) (max) (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm 22.99 mm 23.021 mm 0.6 mm 25 mm
Piston Skirt/Cylinder Clearance Piston Diameter 15 mm from Skirt End Piston Ring Free End Gap Bore x Stroke Cylinder Trueness Piston Ring End Gap - Installed Piston Ring End Gap - Installed Piston Ring to Groove Clearance (1st/2nd) Piston Ring Groove Width Piston Ring Thickness Piston Pin Bore Piston Pin Outside Diameter CRANKS Connecting Rod (small end inside diameter) Connecting Rod (big end side-to-side Connecting Rod (big end width) Connecting Rod @ 150 mm (small end deflection)	(550 cc) (650 cc) (700 cc) (1st/2nd) (550 cc) (700 cc) (700 cc) (max) (max) (1st/2nd) (oil) (1st/2nd) (oil) (1st/2nd) (max) (max) (max) (max)	0.045 mm 91.900-91.960 mm 97.948-97.962 mm 101.930-101.949 mm 12.5 mm 92 x 88 mm 97.9 x 85 mm 102 x 82 mm 0.01 mm 0.36 mm 0.03 mm 1.202-1.204 mm 2.01-2.03 mm 1.970-1.990 mm 23.0 mm 22.99 mm 23.021 mm 0.6 mm 25 mm 0.3 mm

* Specifications subject to change without notice.



Prowler/XT/XTX (Table of Contents)

Removing Engine/ Transmission

Many service procedures can be performed without removing the engine/transmission from the frame. Closely observe the note introducing each sub-section for this important information.

R AT THIS POINT

If the technician's objective is to service/replace left-side cover oil seals, front output joint oil seal, rear output joint oil seal, and/or the oil strainer (from beneath the engine/transmission), the engine/transmission does not have to be removed from the frame.

Support the vehicle on a suitable lift or jack stands allowing room to perform work from the underside.

■NOTE: Locate the jack stands to allow removing of the center belly panel.

Make sure the vehicle is solidly supported on the support stands to avoid injury.

- 1. Remove the seats and center console; then remove the left-side and right-side seat-bases.
- 2. Remove the center belly panel; then drain the oil and coolant.

www.mymowerparts.com






■NOTE: Use a small funnel between the frame and coolant drain plug to prevent coolant from draining on the frame and splashing.






- PR156A
- 3. Remove the negative cable from the battery; then remove the positive cable.
- 4. From the left-side, remove the spark plug cap; then disconnect the temperature sensor lead, speed sensor connector, fuel level sensor connector, and reverse override switch connector.

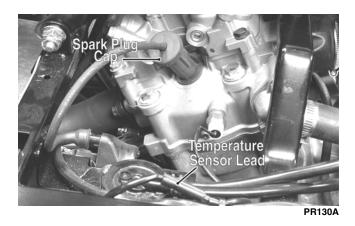






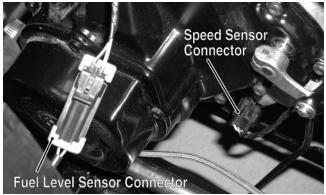

PR155A




5. From the left-side, disconnect the starter wire, alternator connector, CDI connector (650 cc), gear shift position switch, and electric choke connector; then remove the cap screw securing the main harness ground and the battery ground wires to the starter.

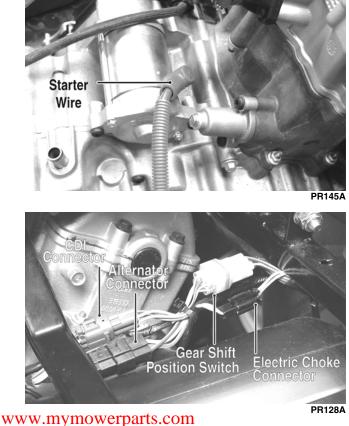


Back to TOC



Back <

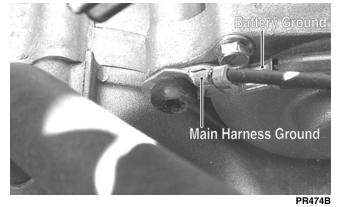

6. Remove the E-clip from the transmission shift arm; then on the XT, disconnect the shifter linkage and account for a washer and a bushing. On the Prowler/XTX, disconnect the cable.

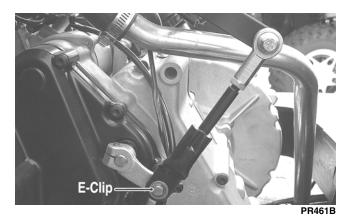





7. Remove four machine screws securing the shifter mount to the frame; then remove the shifter assembly.





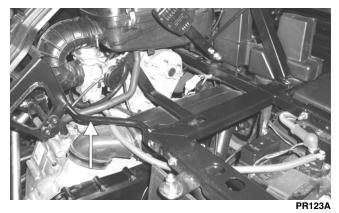


8. Loosen the clamp (A) securing the air intake boot to the carburetor/throttle body and the clamp (B) securing the air filter housing to the inlet housing boot; then remove the crankcase breather hose from the crankcase.

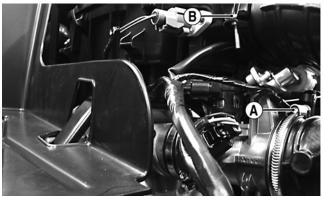

- PR578A
- 9. Remove two self-tapping screws securing the air filter mounting bracket to the frame; then remove the air filter and mounting bracket as an assembly.




10. Remove the throttle arm cover from the carburetor/throttle body; then disconnect and remove the throttle cable and the carburetor/throttle body.

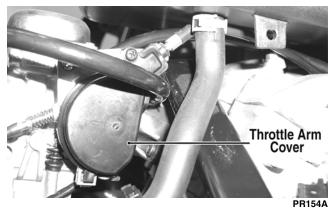

11. Remove the coolant hoses from the water pump and thermostat housings; then position the upper coolant line to the left-side of the engine compartment.



12. Remove the exhaust duct from the V-belt housing; then remove the inlet boot connecting the inlet duct to the V-belt housing.

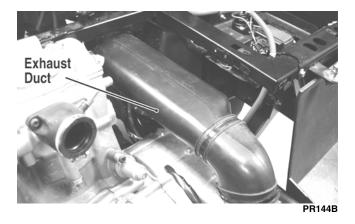




5

www.mymowerparts.com







(Back to Section TOC)

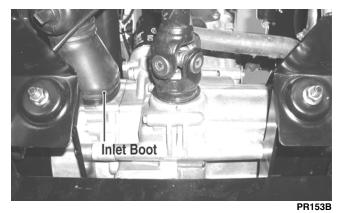

- 13. Remove the muffler; then remove the exhaust pipe.
- 14. Set the parking brake; then from the underside of the vehicle, mark the flanges of the drive-line couplers for assembling and remove the cap screws (three on the front drive coupler and three on the rear drive coupler) securing the driveshafts to the drive couplers.


■NOTE: Remove the front driveshaft first or the parking brake will not hold the coupler stationary and cap screw removing will be more difficult.

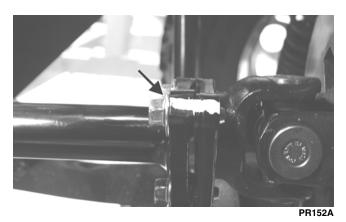

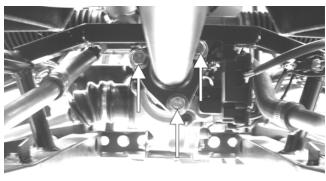


PR120A

15. Separate the drive coupler flanges; then remove the driveshafts from the splined slip-joints being careful not to damage the rubber boots. The front boot should be removed with the driveshaft.

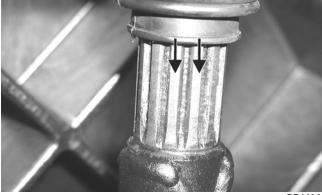

PR148A

16. Remove two flange nuts from the underside of the rear engine mounts.

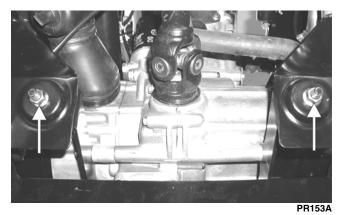

17. Remove two flange nuts securing the engine mounting bracket to the front engine mounts.




18. Attach suitable lifting chains to the engine/transmission; then using an engine hoist, lift the assembly out of the engine compartment.










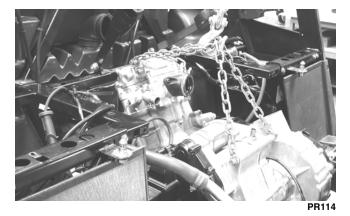

■NOTE: The front engine mounting bracket should slide free of the engine mounts first; then the rear engine mounting bracket and two rear engine mounts will lift free of the frame.

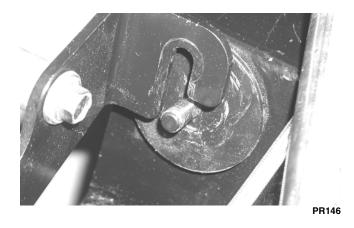

Top-Side Components

■NOTE: For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

AT THIS POINT

To service any one specific component, only limited disassembly of components may be necessary. Note the AT THIS POINT information in each sub-section.

■NOTE: The engine/transmission does not have to removed from the frame for this procedure.

Removing Top-Side Components

A. Valve Cover B. Cylinder Head

■NOTE: Remove the spark plug and timing inspection plug; then using an appropriate wrench, rotate the crankshaft to top-dead-center of the compression stroke.

1. Remove the two tappet covers.



CC001D

■NOTE: Keep the mounting hardware with the covers for assembly purposes or thread them back into the head to keep them separated.

2. Remove the 12 cap screws securing the valve cover to the head; account for the four rubber washers on the top side cap screws. Remove the valve cover. Account for and note the orientation of the cylinder head plug. Note the location of two alignment pins.














CD206

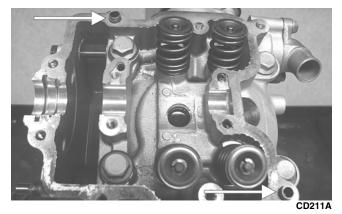


3. Loosen the cap screw on the end of the tensioner; then remove the two cap screws securing the tensioner adjuster assembly and remove the assembly. Account for a gasket.



4. Using an awl, rotate the C-ring in its groove until it is out of the cylinder head; then remove the C-ring.

■NOTE: Care should be taken not to drop the C-ring down into the crankcase.

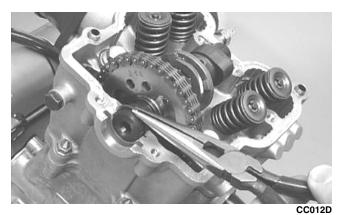

5. Bend the washer tabs down and remove the two cap screws securing the sprocket to the camshaft; then drop the sprocket off the camshaft.




6. Remove the cap screw securing the chain tensioner (account for a washer); then remove the tensioner.



7. While holding the chain, slide the sprocket and camshaft out of the cylinder head.






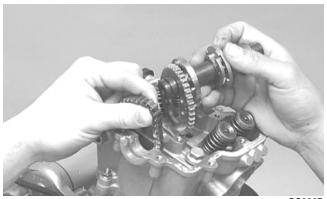


CC266D

■NOTE: Loop the chain over the cylinder and secure it to keep it from falling into the crankcase.

8. Remove the five nuts securing the cylinder head to the cylinder; then remove the four cylinder head cap screws.

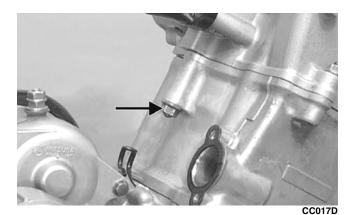

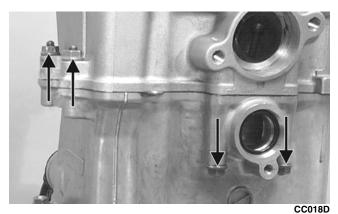

CC016D

www.mymowerparts.com

9. Remove the cylinder head from the cylinder, remove the gasket, and account for two alignment pins; then remove the cam chain guide.



CC020D


3

AT THIS POINT

To service valves and cylinder head, see Servicing Top-Side Components sub-section.

R AT THIS POINT

To inspect cam chain guide, see Servicing Top-Side Components sub-section.

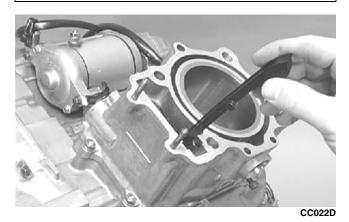

C. Cylinder **D.** Piston

■NOTE: Steps 1-9 in the preceding sub-section must precede this procedure.


- 10. Loosen the clamp securing the coolant hose to the union; then detach the hose.
- 11. Remove the two nuts securing the cylinder to the crankcase.




Back to TOC





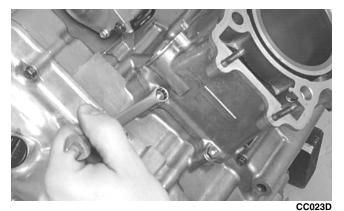


12. Lift the cylinder off the crankcase taking care not to allow the piston to drop against the crankcase. Account for the gasket and two alignment pins.

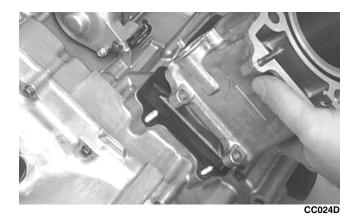





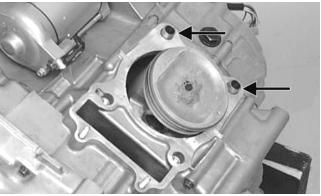

CC026D

www.mymowerparts.com




Back to TOC

R AT THIS POINT

To service cylinder, see Servicing Top-Side Components sub-section.

When removing the cylinder, be sure to support the piston to prevent damage to the crankcase and piston.

13. Using an awl, remove one piston-pin circlip.

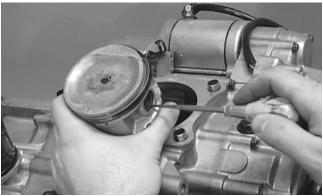

CC032D

14. Using the Piston Pin Puller, remove the piston pin. Account for the opposite-side circlip. Remove the piston.

■NOTE: It is advisable to remove the opposite-side circlip prior to using the puller.



CC033D

■NOTE: Support the connecting rod with rubber bands to avoid damaging the rod or install a suitable connecting rod holder.

Do not allow the connecting rod to go down inside the crankcase. If the rod is down inside the crankcase and the crankshaft is rotated, severe damage will result.

■NOTE: If the existing rings will not be replaced with new rings, note the location of each ring for proper installation. When replacing with new rings, replace as a complete set only. If the piston rings must be removed, remove them in this sequence.





- A. Starting with the top ring, slide one end of the ring out of the ring-groove.
- B. Remove each ring by working it toward the dome of the piston while rotating it out of the groove.

AT THIS POINT

To service piston, see Servicing Top-Side Components sub-section.

AT THIS POINT

To service center crankcase components only, proceed to Removing Left-Side Components.

Servicing Top-Side Components

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

VALVE ASSEMBLY

When servicing valve assembly, inspect valve seats, valve stems, valve faces, and valve stem ends for pits, burn marks, or other signs of abnormal wear.


■NOTE: Whenever a valve is out of tolerance, it must be replaced.

Cleaning/Inspecting Valve Cover

■NOTE: If the valve cover cannot be trued, the cylinder head assembly must be replaced.

- 1. Wash the valve cover in parts-cleaning solvent.
- 2. Place the valve cover on the Surface Plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the valve cover in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the valve cover in a figure eight motion until a uniform bright metallic finish is attained.

Do not remove an excessive amount of the sealing surface or damage to the camshaft will result. Always check camshaft clearance when resurfacing the valve cover.

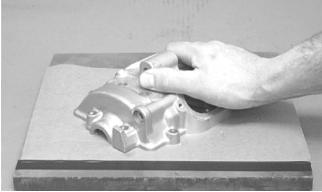

CC130D

5

A CAUTION

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.


Removing Valves

■NOTE: Keep all valves and valve components as a set. Note the original location of each valve set for use during installation. Return each valve set to its original location during installation.

1. Using a valve spring compressor, compress the valve springs and remove the valve cotters. Account for an upper spring retainer.



2. Remove the valve seal and the lower remaining spring seat. Discard the valve seal.

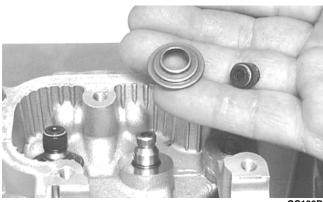

CC136D

www.mymowerparts.com

■NOTE: The valve seals must be replaced.






Back to Section TOC



3. Remove the valve springs; then invert the cylinder head and remove the valves.

Measuring Valve Stem Runout

1. Support each valve stem end with the V Blocks; then check the valve stem runout using a dial indicator.

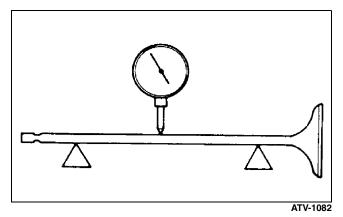


2. Maximum runout must not exceed specifications.

Measuring Valve Stem Outside Diameter

- 1. Using a micrometer, measure the valve stem outside diameter.
- 2. Acceptable diameter range (intake valve) must be within specifications.
- 3. Acceptable diameter range (exhaust valve) must be within specifications.

Measuring Valve Face/Seat Width

1. Using a micrometer, measure the width of the valve face.

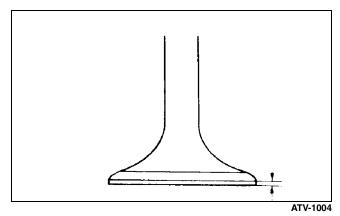

2. Acceptable width range must be within specifications.


Measuring Valve Face Radial Runout

1. Mount a dial indicator on the surface plate; then place the valve stem on a set of V blocks. w.mymowerparts.com






2. Position the dial indicator contact point on the outside edge of the valve face; then zero the indicator.

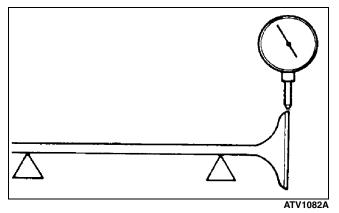

- 3. Rotate the valve in the V blocks.
- 4. Maximum runout must not exceed specifications.

Measuring Valve Guide/Valve Stem Deflection (Wobble Method)

- 1. Mount a dial indicator and base on the surface plate; then place the cylinder head on the surface plate.
- 2. Install the valve into the cylinder head; then position the dial indicator contact point against the outside edge of the valve face. Zero the indicator.

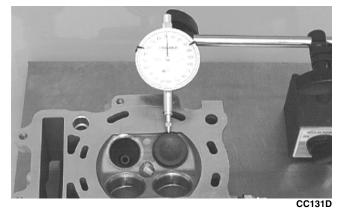

- 3. Push the valve from side to side; then from top to bottom.
- 4. Maximum "wobble" deflection must not exceed specifications.

Measuring Valve Guide (Inside Diameter)

- 1. Insert a snap gauge 1/2 way down into each valve guide bore; then remove the gauge and measure it with a micrometer.
- 2. Acceptable inside diameter range must be within specifications.
- 3. If a valve guide is out of tolerance, it must be replaced.



Servicing Valves/Valve Guides/Valve Seats

If valves, valve guides, or valve seats require servicing or replacement, Arctic Cat recommends that the components be taken to a qualified machine shop for servicing.

If valves are discolored or pitted or if the seating surface is worn, the valve must be replaced. Do not attempt to grind the valves or severe engine damage may occur.

Measuring Rocker Arm (Inside Diameter)

- 1. Using a dial calipers, measure the inside diameter of the rocker arm.
- 2. Acceptable inside diameter must not exceed specification.

Measuring Rocker Arm Shaft (Outside Diameter)

- 1. Using a micrometer, measure the outside diameter of the rocker arm shaft.
- 2. Acceptable outside diameter must be at or above specification.

Installing Valves


1. Apply grease to the inside surface of the valve seals; then place a lower spring seat and valve guide seal over each valve guide.



CC144D

- 2. Insert each valve into its original location.
- 3. Install the valve springs with the painted end of the spring facing away from the cylinder head.

■NOTE: If the paint is not visible, install the ends of the springs with the closest wound coils toward the head.

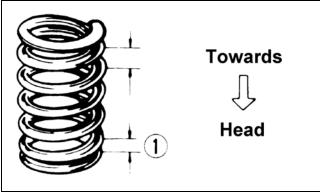

ATV-1011A

4. Place a spring retainer over the valve springs; then using the valve spring compressor, compress the valve springs and install the valve cotters.



CC132D

PISTON ASSEMBLY

■NOTE: Whenever a piston, rings, or pin are out of tolerance, they must be replaced.

Cleaning/Inspecting Piston


- 1. Using a non-metallic carbon removal tool, remove any carbon buildup from the dome of the piston.
- 2. Inspect the piston for cracks in the piston pin, dome, and skirt areas.
- 3. Inspect the piston for seizure marks or scuffing. Repair with #400 grit wet-or-dry sandpaper and water or honing oil.

■NOTE: If scuffing or seizure marks are too deep to correct with the sandpaper, replace the piston.

4. Inspect the perimeter of each piston for signs of excessive "blowby." Excessive "blowby" indicates worn piston rings or an out-of-round cylinder.

Removing Piston Rings

1. Starting with the top ring, slide one end of the ring out of the ring-groove.





Back to TOC





CC400D

2. Remove each ring by working it toward the dome of the piston while rotating it out of the groove.

■NOTE: If the existing rings will not be replaced with new ones, note the location of each ring for proper installation. When installing new rings, install as a complete set only.


Cleaning/Inspecting Piston Rings

- 1. Take an old piston ring and snap it into two pieces; then grind the end of the old ring to a 45° angle and to a sharp edge.
- 2. Using the sharpened ring as a tool, clean carbon from the ring-grooves. Be sure to position the ring with its tapered side up.

Improper cleaning of the ring-grooves by the use of the wrong type of ring-groove cleaner will result in severe damage to the piston.

Measuring Piston-Ring End Gap (Installed)

- 1. Place each compression ring in the wear portion of the cylinder. Use the piston to position each ring squarely in the cylinder.
- 2. Using a feeler gauge, measure each piston-ring end gap. Acceptable ring end gap must be within specifications.

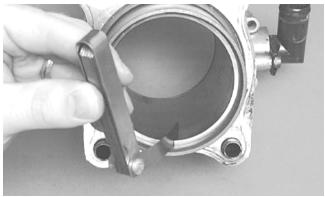

CC280D


www.mymowerparts.com






Measuring Piston Pin (Outside Diameter) and Piston-Pin Bore

1. Measure the piston pin outside diameter at each end and in the center. If measurement is not within specifications, the piston pin must be replaced.

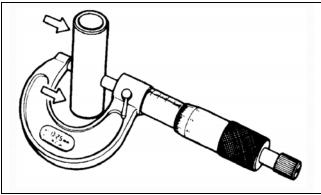


ATV-1070

2. Insert an inside dial indicator into the piston-pin bore. The diameter must not exceed specifications. Take two measurements to ensure accuracy.

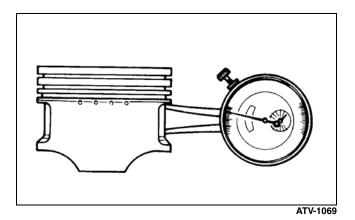

Measuring Piston Skirt/ Cylinder Clearance

1. Measure the cylinder front to back in six places.

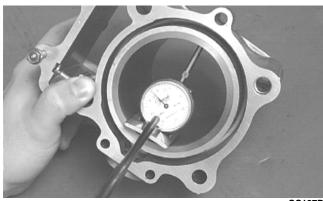

CC127D






2. Measure the corresponding piston diameter at a point 15 mm above the piston skirt at a right angle to the piston-pin bore. Subtract this measurement from the measurement in step 1. The difference (clearance) must be within specifications.

Installing Piston Rings


1. Install ring expander (4) in the bottom groove of the piston; then install the thin oil rings (3) over the expander making sure the expander ends do not overlap. Stagger the end gaps of the upper and lower thin oil rings according to the illustration.

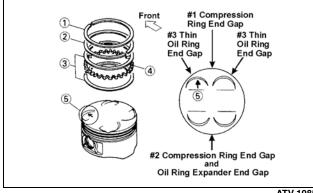

ATV-1085B

■NOTE: Note the direction of the exhaust side of the piston (5) for correct ring end gap orientation.

2. The ring with the orientation mark (MTOP or TOP) should be installed in the second (middle) groove and the ring with the orientation mark (M or O) should be installed in the first (top) groove.

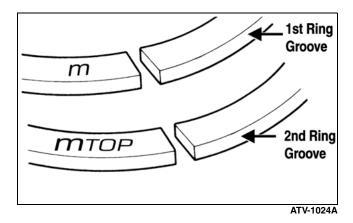

 O
 1st Ring Groove

 O
 2nd Ring Groove

ATV-1024B

5

Incorrect installation of the piston rings will result in engine damage.

CYLINDER/CYLINDER HEAD ASSEMBLY

■NOTE: If the cylinder/cylinder head assembly cannot be trued, they must be replaced.

Cleaning/Inspecting Cylinder Head

The cylinder head studs must be removed for this procedure.

- 1. Using a non-metallic carbon removal tool, remove any carbon buildup from the combustion chamber being careful not to nick, scrape, or damage the combustion chamber or the sealing surface.
- 2. Inspect the spark plug hole for any damaged threads. Repair damaged threads using a "heli-coil" insert.
- 3. Place the cylinder head on the surface plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the cylinder head in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the cylinder head in a figure eight motion until a uniform bright metallic finish is attained.

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.












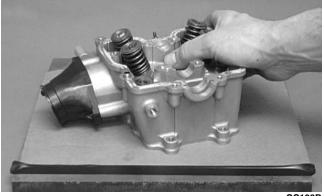

CC128D

Measuring Cylinder Head Distortion

- 1. Remove any carbon buildup in the combustion chamber.
- 2. Lay a straightedge across the cylinder head; then using a feeler gauge, check the distortion factor between the head and the straightedge.
- 3. Maximum distortion must not exceed specifications.





Cleaning/Inspecting Cylinder

- 1. Wash the cylinder in parts-cleaning solvent.
- 2. Inspect the cylinder for pitting, scoring, scuffing, warpage, and corrosion. If marks are found, repair the surface using a cylinder hone (see Honing Cylinder in this sub-section).
- 3. Place the cylinder on the surface plate covered with #400 grit wet-or-dry sandpaper. Using light pressure, move the cylinder in a figure eight motion. Inspect the sealing surface for any indication of high spots. A high spot can be noted by a bright metallic finish. Correct any high spots before assembly by continuing to move the cylinder in a figure eight motion until a uniform bright metallic finish is attained.

Water or parts-cleaning solvent must be used in conjunction with the wet-or-dry sandpaper or damage to the sealing surface may result.




CC129D

Inspecting Cam Chain Guide

- 1. Inspect cam chain guide for cuts, tears, breaks, or chips.
- 2. If the chain guide is damaged, it must be replaced.

Honing Cylinder

 Using a slide gauge and a dial indicator or a snap gauge, measure the cylinder bore diameter in three locations from top to bottom and again from top to bottom at 90° from the first measurements for a total of six measurements. The trueness (out-of-roundness) is the difference between the highest and lowest reading. Maximum trueness (out-of-roundness) must not exceed specifications.

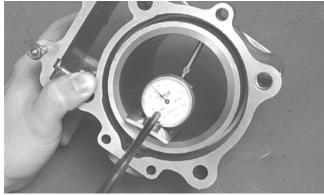

CC127D


- 2. Wash the cylinder in parts-cleaning solvent.
- 3. Inspect the cylinder for pitting, scoring, scuffing, and corrosion. If marks are found, repair the surface using a #320 grit ball hone.







■NOTE: To produce the proper 60° cross-hatch pattern, use a low RPM drill (600 RPM) at the rate of 30 strokes per minute. If honing oil is not available, use a lightweight petroleum-based oil. Thoroughly clean cylinder after honing using soap and hot water. Dry with compressed air; then immediately apply oil to the cylinder bore. If the bore is severely damaged or gouged, replace the cylinder.

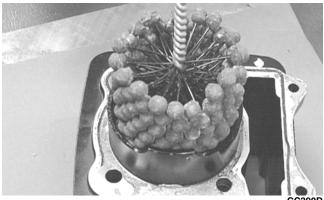


- CC390D
- 4. If any measurement exceeds the limit, replace the cylinder and piston.

Measuring Camshaft Runout

■NOTE: If the camshaft is out of tolerance, it must be replaced.


1. Place the camshaft on a set of V blocks; then position the dial indicator contact point against the shaft and zero the indicator.

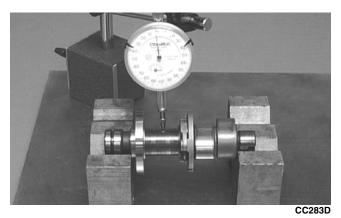

2. Rotate the camshaft and note runout; maximum tolerance must not exceed specifications.

Measuring Camshaft Lobe Height

1. Using a calipers, measure each cam lobe height.

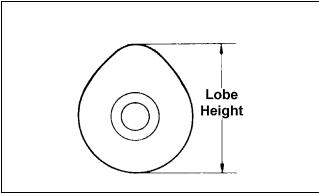

ATV1013A

5}

2. The lobe heights must not exceed minimum specifications.

Inspecting Camshaft Bearing Journal

- 1. Inspect the bearing journal for scoring, seizure marks, or pitting.
- 2. If excessive scoring, seizure marks, or pitting is found, the cylinder head assembly must be replaced.

Measuring Camshaft to Cylinder Head Clearance

1. Remove the adjuster screws and jam nuts.



- 2. Place a strip of plasti-gauge in each of the camshaft lands in the cylinder head.
- 3. Place the valve cover on the cylinder head and secure with the valve cover cap screws. Tighten securely.

■NOTE: Do not rotate the camshaft when measuring clearance.


4. Remove the cap screws securing the valve cover to the cylinder; then remove the valve cover and camshaft.




www.mymowerparts.com




Back to TOC

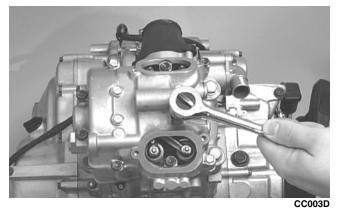

5. Match the width of the plasti-gauge with the chart found on the plasti-gauge packaging to determine camshaft to cylinder head and valve cover clear-ance.

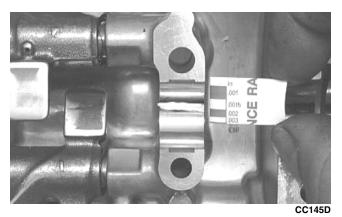


6. If clearance is excessive, measure the journals of the camshaft.

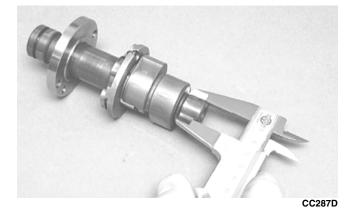


■NOTE: If the journals are worn, replace the camshaft; then measure the clearance again. If it is still out of tolerance, replace the cylinder head.

Inspecting Camshaft Spring/Drive Pin

1. Inspect the spring and drive pin for damage.

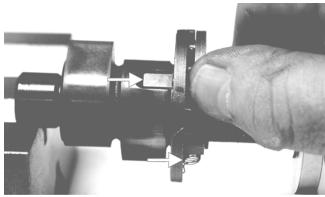


CF061A

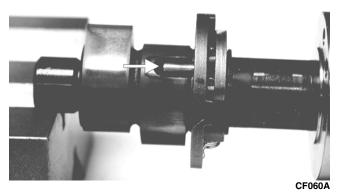

2. If damaged, the camshaft must be replaced.

Installing Top-Side Components

A. Piston B. Cylinder

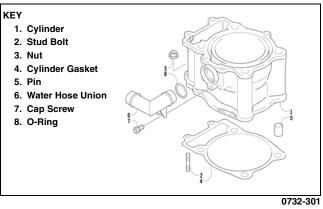

1. Install the piston on the connecting rod making sure there is a circlip on each side and the open end of the circlip faces upwards.


■NOTE: The piston should be installed so the arrow points toward the exhaust.









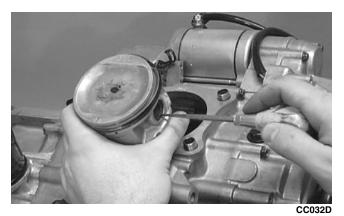


2. Place the two alignment pins into position. Place the cylinder gasket into position; then place a piston holder (or suitable substitute) beneath the piston skirt and square the piston in respect to the crankcase.



- CC025D
- 3. Lubricate the inside wall of the cylinder; then using a ring compressor or the fingers, compress the rings and slide the cylinder over the piston. Route the cam chain up through the cylinder cam chain housing; then remove the piston holder and seat the cylinder firmly on the crankcase.

The cylinder should slide on easily. Do not force the cylinder or damage to the piston, rings, cylinder, or crankshaft assembly may occur.

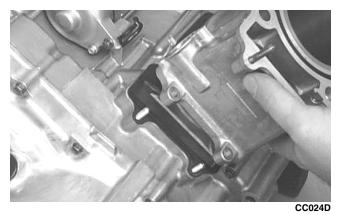

4. Loosely install the two nuts which secure the cylinder to the crankcase. ■NOTE: The two cylinder-to-crankcase nuts will be tightened in step 10.



CC023D

5. Install the coolant hose onto the crankcase union and tighten the clamp.


C. Cylinder Head D. Valve Cover

■NOTE: Steps 1-5 in the preceding sub-section must precede this procedure.

6. Place the chain guide into the cylinder.

A CAUTION

Care should be taken that the bottom of the chain guide is secured in the crankcase boss.

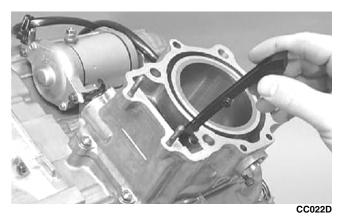

7. Place the head gasket into position on the cylinder. Place the alignment pins into position; then place the head assembly into position on the cylinder.











0



CC020D

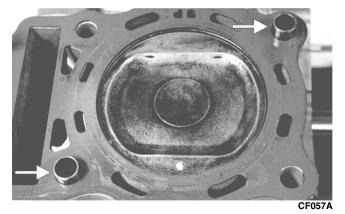

8. Install the four cylinder head cap screws. Tighten only until snug.

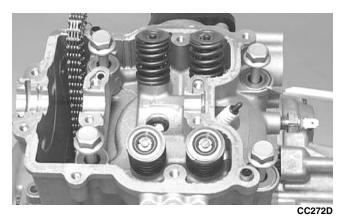

- 9. Loosely install the five cylinder head nuts.
- 10. In a crisscross pattern, tighten the four cylinder head cap screws (from step 8) to 40 ft-lb; then tighten the 8 mm nut (from step 9) to 18 ft-lb. Using a crisscross pattern, tighten the 6 mm nuts (from step 9) to 8 ft-lb. Tighten the two cylinder-to-crankcase nuts (from step 4) securely.
- 11. With the timing inspection plug removed and the chain held tight, rotate the crankshaft until the piston is at top-dead-center.
- 12. With the alignment pin installed in the camshaft, loosely place the cam sprocket (with the recessed side facing the cam shaft lobes) onto the camshaft. At this point, do not "seat" the sprocket onto the shaft.

Recessed Side

■NOTE: At this point, oil the camshaft journals, cam lobes, and the three seating surfaces on the cylinder.


13. While holding the cam chain sprocket to the side, install the rear cam chain tensioner guide into the cylinder head. Install the pivot cap screw and washer.



CD461

14. With the cam lobes directed down (toward the piston), maneuver the camshaft/sprocket assembly through the chain and towards its seating position; then loop the chain over the sprocket.

■NOTE: Note the position of the alignment marks on the end of the camshaft. They must be parallel with the valve cover mating surface. If rotating the camshaft is necessary for alignment, do not allow the chain and sprocket to rotate and be sure the cam lobes end up in the down position.

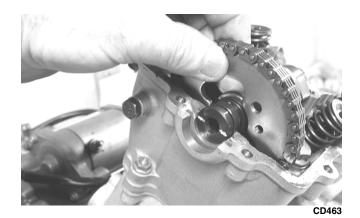

Back to Section TOC



www.mymowerparts.com





15. Seat the cam sprocket onto the camshaft making sure the alignment pin in the camshaft aligns with the smallest hole in the sprocket; then place the camshaft/sprocket assembly onto the cylinder ensuring the following.




CF013A


- A. Piston still at top-dead-center.
- B. Camshaft lobes directed down (toward the piston).
- C. Camshaft alignment marks parallel to the valve cover mating surface.
- D. Recessed side of the sprocket directed toward the cam lobes.
- E. Camshaft alignment pin and sprocket alignment hole (smallest) are aligned.

If any of the above factors are not as stated, go back to step 11 and carefully proceed.

16. Place the tab-washer onto the sprocket making sure it covers the pin in the alignment hole.

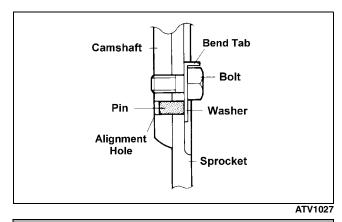

Care must be taken that the tab-washer is installed correctly to cover the alignment hole on the sprocket. If the alignment pin falls out, severe engine damage will result. 17. Install the first cap screw (threads coated with red Loctite #271) securing the sprocket and tab-washer to the camshaft. Tighten only until snug.

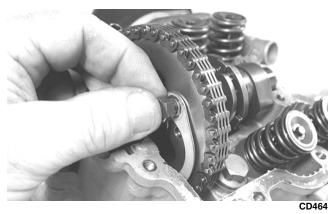

18. Rotate the crankshaft until the second cap screw securing the sprocket to the camshaft can be installed; then install the cap screw (threads coated with red Loctite #271) and tighten to 11 ft-lb. Bend the tab to secure the cap screw.



19. Rotate the crankshaft until the first cap screw (from step 17) can be addressed; then tighten to 11 ft-lb. Bend the tab to secure the cap screw.



20. Place the C-ring into position in its groove in the cylinder head.





Back to TOC

Back to Section TOC



3



- CC012D
- 21. Install the cylinder head plug in the cylinder head with the open end facing downward and toward the inside.

The open end of the plug must be positioned downward.



CD468

22. Remove the cap screw from the end of the chain tensioner; then using a flat-blade screwdriver, rotate the adjuster screw inside the tensioner clockwise until the screw bottoms.



■NOTE: The adjuster shaft will be drawn into the tensioner as the adjuster screw is rotated clockwise. The adjuster shaft tension will be released in step 24.

23. Place the chain tensioner adjuster assembly and gasket into position on the cylinder and secure with the two cap screws.



24. Using a flat-blade screwdriver, rotate the adjuster screw inside the tensioner counterclockwise until all tension is released; then install the cap screw into the end of the chain tensioner.





25. Loosen the four adjuster screw jam nuts; then loosen the four adjuster screws on the rocker arms in the valve cover.













26. Apply a thin coat of Three Bond Sealant to the mating surfaces of the cylinder head and valve cover.



CC275D

27. Place the valve cover into position.

■NOTE: At this point, the rocker arms and adjuster screws must not have pressure on them.

28. Install the four top side cap screws with rubber washers; then install the remaining cap screws. Tighten only until snug.



CC003D

- 29. In a crisscross pattern starting from the center and working outward, tighten the cap screws (from step 28) to 8.5 ft-lb.
- 30. Adjust valve/tappet clearance (see Section 2).
- 31. Place the two tappet covers into position making sure the proper cap screws are with the proper cover. Tighten the cap screws to 9 ft-lb. www.mymowerparts.com







32. If removed, install the spark plug. Tighten securely.

Right-Side Components

■NOTE: For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

R AT THIS POINT

To service any one specific component, only limited disassembly of components may be necessary. Note the AT THIS POINT information in each sub-section.

■NOTE: The engine/transmission does not have to be removed from the frame for this procedure.

Removing Right-Side Components

- A. Water Pump
- **B. Right-Side Cover**
- **C. Rotor/Flywheel**
- 1. Remove the four screws securing the outer magneto cover to the right-side cover; then remove the cover. Account for the gasket.
- 2. Remove the flange nut securing the spacer to the crankshaft; then remove the spacer. Account for the O-ring.



3




3. Using a cold chisel, scribe a mark showing the relative position of the shift arm to the shift arm shaft to aid in installing; then remove the shift arm.



PR429A

4. Remove the two cap screws securing the speed sensor housing; then remove the housing. Account for the gasket and two seal washers.

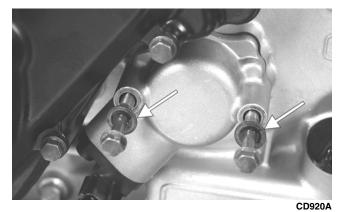

5. Loosen the clamps securing the coolant hose to the water pump; then remove the crossover tube from the cylinder head. Account for an O-ring.




CD214

6. Remove the two cap screws securing the water pump to the engine; then remove the water pump.

NOTE: The water pump is not a serviceable component. If the pump is defective or if the mechanical seal is leaking (coolant dripping from the discharge hole), the water pump must be replaced (see Section 4).

- 7. Remove the cap screws securing the right-side cover to the crankcase noting the location of the different-sized cap screws for installing purposes.
- 8. Using Side Case Puller, remove the side cover. Account for a gasket and two alignment pins.

■NOTE: Inspect the inside of the right-side cover for any shaft washers that may have come off with the cover. Make sure they are returned to their respective shafts and that the starter idler gear spacer is on the shaft or in the cover.

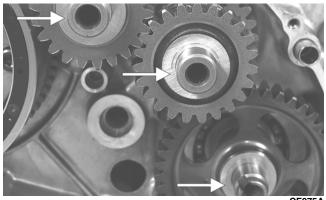

CF075A

9. Remove the nut securing the magneto rotor to the crankshaft; then install the magneto rotor puller adapter.

■NOTE: The puller has left-hand threads.

10. Using Magneto Rotor Remover Set, remove the rotor/flywheel assembly from the crankshaft. Account for the key; then remove the starter clutch gear assembly and washer.

www.mymowerparts.com









CD939A



 Image: Image of the magneto assembly, see Section 5.

11. Remove the two starter gears from the crankcase noting the direction of the beveled side of the gears for installing purposes; then remove the two starter gear shafts.






12. Remove the snap ring securing the water pump drive gear; then remove the gear noting the direction of the sides of the gear for installing purposes. Account for the drive gear alignment pin.



13. Remove the snap ring securing the water pump driven gear; then remove the gear noting the direction of the sides of the gear for installing purposes. Account for the driven gear alignment pin.

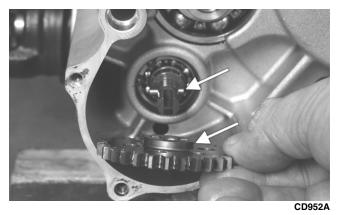

■NOTE: There is an oil passage beneath the driven gear/drive gear assembly. This passage should be plugged prior to removing the driven gear and

- drive gear. Failure to do so could result in the loss of an alignment pin into the crankcase.
- 14. Remove the shift shaft noting the timing marks for assembling purposes. Account for two washers.




www.mymowerparts.com








15. Remove the gear shift cam plate; then remove the shift cam stopper and cam stopper spring. Account for two washers.

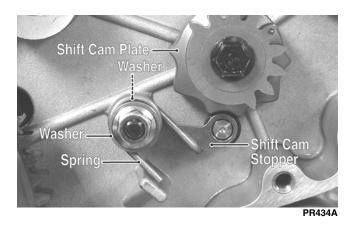

Installing Right-Side Components

■NOTE: Plug the oil passage in the crankcase housing prior to installing the drive gear/driven gear assembly to prevent loss of an alignment pin.

1. Install the water pump driven gear alignment pin and the driven gear (with the beveled side of the gear facing outward as noted in removing); then secure with the snap ring.

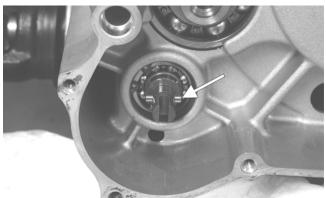


CD950A


Back to TOC

www.mymowerparts.com



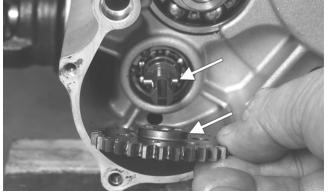

CD952A

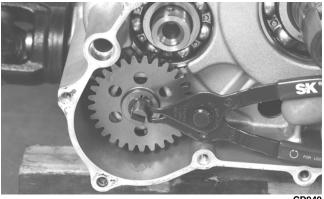

CD949

NOTE: The sharp side of the snap ring should be facing outward.

2. Install the water pump drive gear drive pin and the drive gear (with the flat side of the gear facing outward as noted in removing); then secure with the snap ring.



CD946A








CD944

■NOTE: The sharp side of the snap ring should be facing outward.

■NOTE: Once the gears are secured, remove the oil passage plug from the crankcase.

3. Install the two starter gear shafts; then install the two starter gears (with the beveled side of the intermediate gear facing inward as noted in removing).



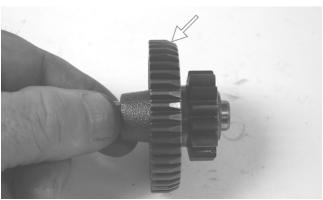


PR447A

4. In order on the crankshaft, install a washer, ring gear, key, and the magneto rotor. Secure with the nut (threads coated with red Loctite #271). Tighten to 105 ft-lb.




CD948A

3

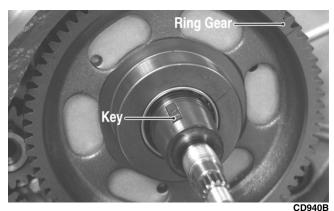

5. Install the shift cam plate onto the shift cam shaft; then coat the cap screw threads with red Loctite #271 and tighten securely.



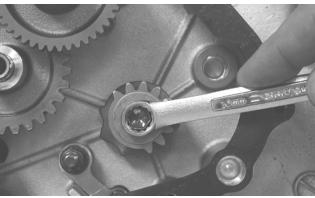

CD934




www.mymowerparts.com







6. Install the shift cam stopper, spring, and two washers; then coat the threads on the mounting stud with red Loctite #271 and install the nut. Tighten securely.

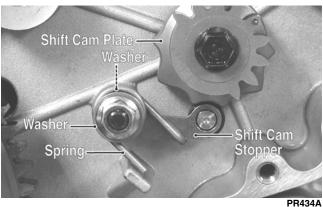


- 7. Install the shift shaft with two washers making sure to align the timing mark on the shift shaft with the mark on the shift cam plate.

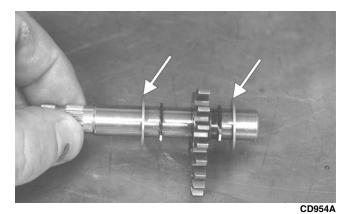

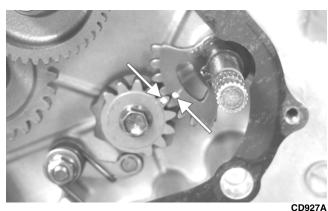


8. Lubricate the magneto cover gasket with fresh engine oil; then place it into position on the two alignment pins. Make sure the outer shift shaft washer is in place.

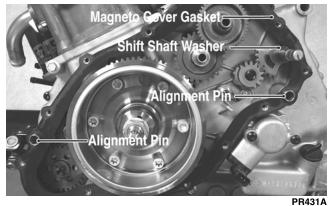

- 9. Install the magneto cover and secure with the cap screws. Tighten only until snug.
- 10. Place the spacer into position on the crankshaft making sure a new, lubricated O-ring is inside the spacer. Tighten the flange nut to 28 ft-lb.



- 11. Tighten the cap screws (from step 9) to 8 ft-lb.
- 12. Place the speed sensor housing and gasket into position and secure with the two cap screws. Tighten securely.

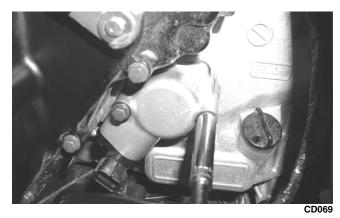

- 13. Place the water pump into position and secure with two cap screws. Tighten securely.
- 14. Install the crossover tube on the water pump and cylinder head making sure the O-ring is properly positioned.

www.mymowerparts.com







- 15. Install the shift arm on the shift arm shaft making sure the scribed marks (from removing) are aligned. Tighten securely.
- 16. Place the gasket and outer magneto cover into position on the right-side cover; then tighten four screws to 8 ft-lb.

Left-Side Components

■NOTE: For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.

AT THIS POINT

To service any one specific component, only limited disassembly of components may be necessary. Note the AT THIS POINT information in each sub-section.

■NOTE: The engine/transmission does not have to be removed from the frame for this procedure.


Removing Left-Side Components

- A. V-Belt Cover
- **B. Driven Pulley**
- **C. Clutch Cover**
- 1. Remove the cap screws securing the V-belt cover noting the location of the different-lengthed cap screws for installing purposes; then using a rubber mallet, gently tap on the cover tabs to loosen the cover.



2. Remove the nut securing the movable drive face; then remove the face. Account for a flat washer and spacer.



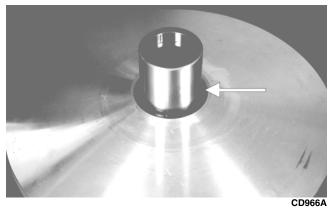

3. Remove the nut securing the fixed driven assembly; then remove the assembly.



- 4. Remove the fixed drive face and V-belt.
- 5. Using an impact driver, remove the cap screws securing the air intake plate; then remove the plate cushion.

www.mymowerparts.com









3




PR393

6. Remove the cap screws securing the clutch cover. Note the location of the different-lengthed cap screws for installing purposes. Using a rubber mallet, carefully remove the cover. Account for two alignment pins.






Care must be taken when removing the cover so the cover gasket is not damaged.

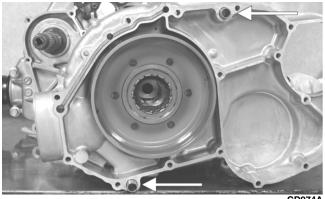

CD974A

■NOTE: For steps 7-13, refer to illustration CC829C.

NOTE: To aid in installing, it is recommended that the assemblies are kept together and IN ORDER.

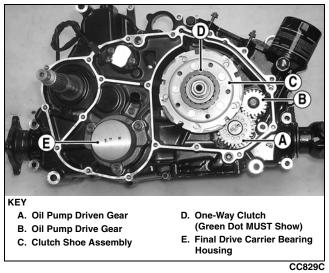

- 7. Remove the one-way clutch (D) from the clutch housing. Note the location of the green dot (or the word OUTSIDE) for installing purposes.
- 8. Using a hydraulic press, remove the clutch housing assembly from the clutch cover. Account for the left fixed drive spacer and an O-ring inside the fixed drive spacer.



CF085



CC596


■NOTE: Account for and inspect the clutch housing seal.




www.mymowerparts.com






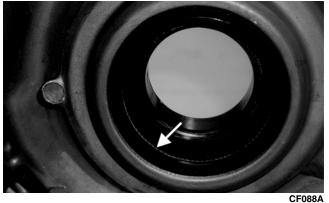


- CF088A
- 9. Remove the two Allen-head screws securing the gear shift position switch; then remove the sensor. Account for two neutral contact pins and two springs.

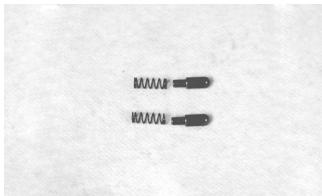


- CD997
- 10. Remove the nut (left-hand threads) securing the clutch shoe assembly (C).

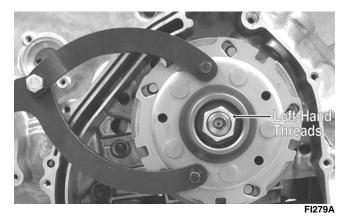

11. Remove the cap screw securing the oil pump drive gear (B). Account for a cap screw, washer, pin, and spacer.

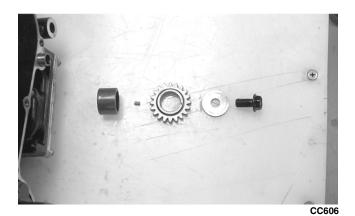

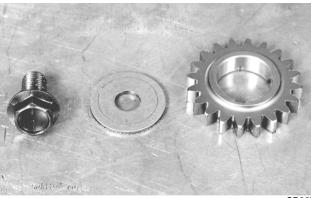

CD987



12. Using an impact driver, remove the Allen-head screws securing the final drive carrier bearing housing (E); then remove the housing and account for two alignment pins.



CD999




www.mymowerparts.com




13. Remove the snap ring securing the oil pump driven gear (A); then remove the gear noting the direction of the sides of the gear for installing purposes. Account for a pin and a washer.



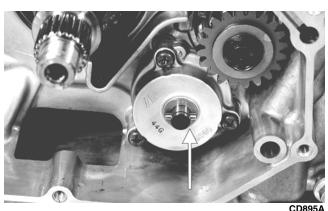

14. Remove the cap screws securing the oil pump; then remove the pump.

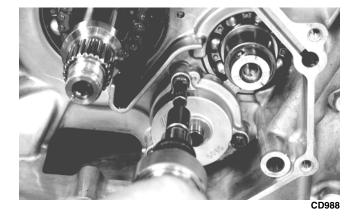


Servicing Left-Side Components

■NOTE: Whenever a part is worn excessively, cracked, damaged in any way, or out of tolerance, replacement is necessary.

INSPECTING CENTRIFUGAL CLUTCH SHOE

- 1. Inspect the clutch shoes for uneven wear, chips, cracks, or discoloration. If any shoe is damaged, replace the complete set.
- 2. Inspect the clutch shoes for wear or damage. If any shoe is worn to the bottom of the groove, replace the complete set.

Always replace the clutch shoes as a complete set or severe imbalance could occur.

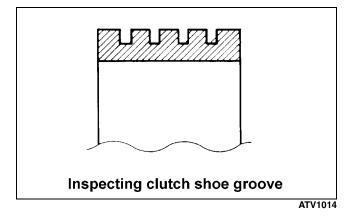

INSPECTING CLUTCH HOUSING

- 1. Inspect the clutch housing for burns, grooving, cracks, or uneven wear.
- 2. If the housing is damaged in any way, the housing must be replaced.

INSPECTING PRIMARY ONE-WAY DRIVE

- 1. Insert the drive into the clutch housing.
- 2. Rotate the inner race by hand and verify the inner race rotates only one direction.
- 3. If the inner race is locked in place or rotates both directions, the drive assembly must be replaced.

INSPECTING OIL PUMP

- 1. Inspect the pump for damage.
- 2. It is inadvisable to remove the screw securing the pump halves. If the oil pump is damaged, it must be replaced.


www.mymowerparts.com



Back to TOC





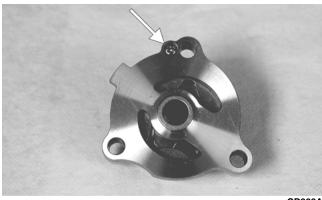


CD988A

DRIVEN PULLEY

■NOTE: The driven pulley is a non-serviceable component. If pulley faces, cam ramps, or sheave bushings are worn, the assembly must be replaced. Do not to disassemble the driven pulley.

Installing Left-Side Components

1. Install the gear shift position switch making sure the two neutral contact pins and the two springs are properly positioned. Tighten the Allen-head screws securely.

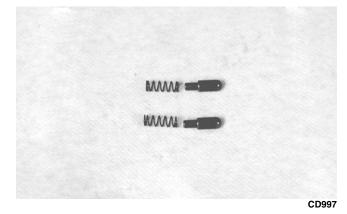



www.mymowerparts.com






2. Install the secondary shaft bearing housing making sure the two alignment pins are properly positioned. Tighten the Allen-head screws securely.




3. Install the oil pump onto the engine; then tighten the cap screws securely.



4. Install the oil pump drive gear spacer onto the crank balancer shaft. Grease the pin and insert it into the shaft; then install the drive gear making sure the raised side of the gear is facing toward the inside. Secure the gear with the cap screw (threads coated with red Loctite #271) and the washer. Tighten the cap screw to 62 ft-lb.

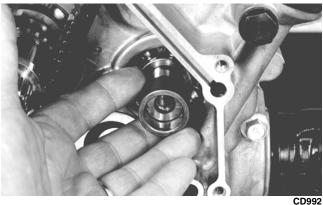



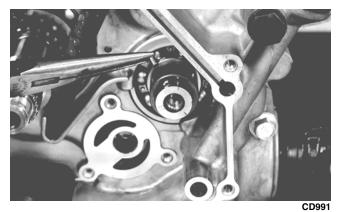

5. Grease the driven gear pin and insert it into the oil pump shaft; then install the driven gear (noting the direction of the sides of the gear from removing). Secure with a snap ring.



CD985A




■NOTE: When installed correctly, the sides of the drive and driven gears will be flush with each other.

6. Install the clutch shoe assembly and secure with the flange nut (threads coated with red Loctite #271). Tighten to 221 ft-lb.



7. Lightly grease the clutch housing seal; then insert the left fixed drive spacer.

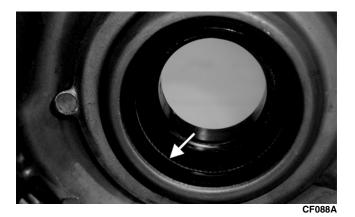



CF086

- 8. Install the clutch cover alignment pins into the crankcase, apply oil to the cover gasket, and install the gasket onto the crankcase.
- 9. Apply grease to the outer edges of the clutch housing; then from inside the clutch cover, install the clutch housing into the cover using a rubber mallet.
- 10. Install the one-way clutch onto the clutch shoe assembly.













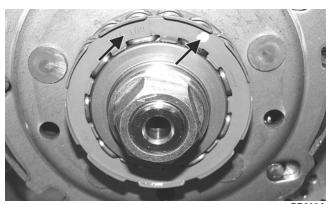

PR399A

When installed correctly, the green dot (or the word OUTSIDE) on the one-way clutch is visible.

- 11. Place the clutch cover/clutch housing assembly into position on the crankcase; then secure with the cap screws making sure the different-lengthed cap screws are in their proper location. Tighten to 8 ft-lb.
- 12. Place the air intake plate cushion into position; then install the air intake plate. Tighten the cap screws (threads treated with a small amount of red Loctite #271) securely.

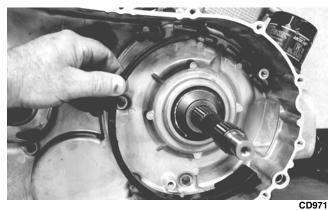




- 13. Place the driven pulley assembly into position and secure with the nut. Using Spanner Wrench, tighten to 80 ft-lb.
- 14. Slide the fixed drive face onto the shaft.

www.mymowerparts.com





- 15. Spread the faces of the driven pulley by threading a 6 mm cap screw into the threaded boss; then turn clockwise until pulley faces are opened approximately 1/2 in.
- 16. Place the V-belt into position on the driven pulley and over the front shaft.

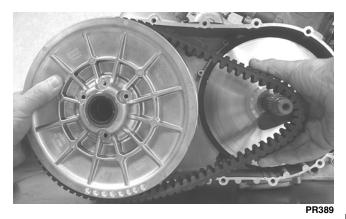

■NOTE: The arrows on the V-belt should point forward.

17. Pinch the V-belt together near its center and slide the spacer and movable drive face onto the driveshaft. Secure the drive face with a washer and nut (coated with red Loctite #271). Using Spanner Wrench, tighten the nut to 165 ft-lb.



CF261

Make sure the splines extend beyond the drive face or a false torque reading and spline damage may occur.

■NOTE: At this point, the cap screw can be removed from the driven pulley face.


- 18. Rotate the V-belt and driven pulley/clutch until the V-belt is flush with the top of the driven pulley.
- 19. Place the V-belt cover gasket into position; then install the cover and secure with the cap screws making sure the different-lengthed cap screws are in their proper location. Tighten the cap screws to 8 ft-lb.





3



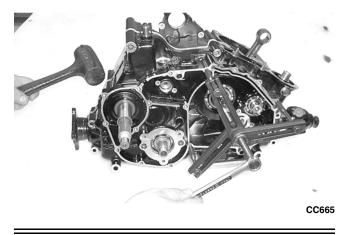

Center Crankcase Components

■NOTE: This procedure cannot be done with the engine/transmission in the frame. Complete Removing procedures for Top-Side, Left-Side, and Right-Side must precede this procedure.

■NOTE: For efficiency, it is preferable to remove and disassemble only those components which need to be addressed and to service only those components. The technician should use discretion and sound judgment.


Separating Crankcase Halves

- 1. Remove the left-side cap screws securing the crankcase halves. Note the location of the different-lengthed cap screws.
- 2. Remove the right-side cap screws securing the crankcase halves. Note the location of the different-lengthed cap screws.
- 3. Using the Crankcase Separator/Crankshaft Remover and tapping lightly with a rubber mallet, separate the crankcase halves. Account for four alignment pins.

■NOTE: To keep the shaft/gear assemblies intact for identification, tap the shafts toward the right-side crankcase half when separating the halves.

Disassembling Crankcase Half

■NOTE: For steps 1-7, refer to illustration CC821B.

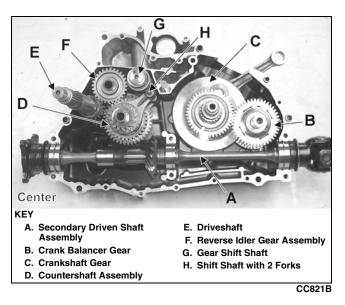

■NOTE: To aid in installing, it is recommended that the assemblies are kept together and IN ORDER.

1. Remove the secondary driven shaft assembly (A) noting the location of the bearing locating pins. Account for the bearing C-ring.




www.mymowerparts.com







2. Remove the reverse idler gear assembly (F). Account for all washers, shaft, bushing, and the gear.

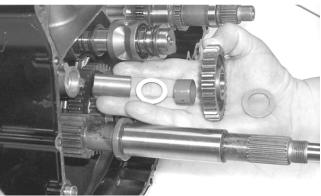

CC668


- 3. Remove the shift shaft (H); then remove the two forks taking note of the direction of the tabs on the forks for assembling purposes.
- 4. Remove the gear shift shaft (G) noting the location of the two holes on the end of the shaft. Account for two washers.



- PR380A
- 5. Remove the countershaft assembly (D). Account for a washer on each end of the countershaft.



■NOTE: Do not disassemble the countershaft assembly unless necessary. If necessary, see Servicing Center Crankcase Components sub-section. 6. Using a rubber mallet, tap on the crankcase to remove the driveshaft (E).

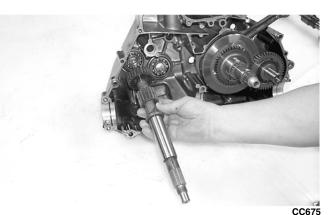

7. Note the timing marks on the crank balancer gear (B) and crankshaft gear (C) for assembling purposes; then slide the crank balancer gear off the crank balancer. Account for the key in the keyway.



8. Remove the crank balancer.

■NOTE: There is a flat spot on the crank balancer bearing flange to allow clearance past the crank-shaft.



- 9. Remove the snap ring securing the water pump driven gear shaft.
- 10. Using a hydraulic press, remove the crankshaft assembly.

■NOTE: Use a protective end cap to prevent damage to the crankshaft threads.





Back to Section TOC



5

- 11. Remove the cap screws securing the oil strainer cap; then remove the cap.
- 12. Remove the two cap screws securing the oil strainer; then remove the strainer.



PR406

Unless the secondary drive gear, bevel gear, or bearings require service, do not remove the secondary drive assembly from the case. If removed, bevel gear backlash will have to be adjusted requiring re-shimming of the drive bevel gear shaft.

13. To remove the secondary drive/bevel gear, remove the secondary drive bearing housing; then remove the nut securing the drive/bevel gear shaft in the bearing and using a plastic mallet, drive the shaft out of the bearing. Account for shim/shims.

■NOTE: Shims should be measured and kept for a starting point in adjusting backlash

Servicing Center Crankcase Components

■NOTE: Whenever a part is worn excessively, cracked, damaged in any way, or out of tolerance, replacement is necessary.

■NOTE: Certain models have been built using spiral gears, and certain models have been built using net-forged gears. When performing service procedures on the secondary gears, the technician should use sound judgment in determining which type of gear is being serviced.

SECONDARY GEARS (Spiral)

■NOTE: When checking and correcting secondary gear backlash and tooth contact, the universal joint must be secured to the front shaft or false measurements will occur.

Checking Backlash

■NOTE: The rear shaft and bevel gear must be removed for this procedure. Also, always start with the original shims on the rear shaft.

- 1. Install the secondary driven output shaft assembly onto the crankcase.
- 2. Install the secondary driveshaft bearing housing onto the left-side crankcase half to prevent runout of the secondary transmission input shaft.
- 3. Mount the dial indicator so the tip is contacting a tooth on the secondary drive bevel gear.
- 4. While rocking the drive bevel gear back and forth, note the maximum backlash reading on the gauge.
- 5. Acceptable backlash range is 0.05-0.33 mm (0.002-0.013 in.).

Correcting Backlash

■NOTE: If backlash measurement is within the acceptable range, no correction is necessary.

- 1. If backlash measurement is less than specified, remove an existing shim, measure it, and install a new thinner shim.
- 2. If backlash measurement is more than specified, remove an existing shim, measure it, and install a thicker shim.

■NOTE: Continue to remove, measure, and install until backlash measurement is within tolerance. Note the following chart.

Backlash Measurement	Shim Correction
Under 0.05 mm (0.002 in.)	Decrease Shim Thickness
At 0.05-0.33 mm (0.002-0.013 in.)	No Correction Required
Over 0.33 mm (0.013 in.)	Increase Shim Thickness

Checking Tooth Contact

■NOTE: After correcting backlash of the secondary driven bevel gear, it is necessary to check tooth contact.


- 1. Remove the secondary driven output shaft assembly from the left-side crankcase half.
- 2. Clean the secondary driven bevel gear teeth of old oil and grease residue.
- 3. Apply a thin, even coat of a machinist-layout dye to several teeth of the gear.
- 4. Install the secondary driven output shaft assembly.
- 5. Rotate the secondary driven bevel gear several revolutions in both directions.









6. Examine the tooth contact pattern in the dye and compare the pattern to the illustrations.

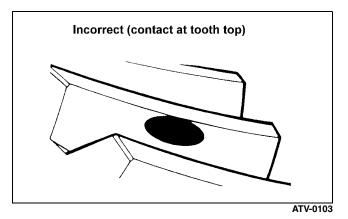

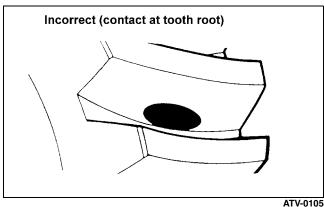

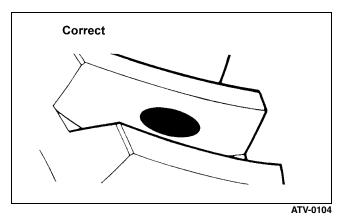

Correcting Tooth Contact

■NOTE: If tooth contact pattern is comparable to the correct pattern illustration, no correction is necessary.

If tooth contact pattern is comparable to an incorrect pattern, correct tooth contact according to the following chart.

Tooth Contact	Shim Correction
Contacts at Top	Decrease Shim Thickness
Contacts at Root	Increase Shim Thickness

■NOTE: To correct tooth contact, steps 1 and 2 (with NOTE) of "Correcting Backlash" must be followed and the above "Tooth Contact/Shim Correction" chart must be consulted.


After correcting tooth contact, backlash must again be checked and corrected (if necessary). Continue the correcting backlash/correcting tooth contact procedures until they are both within tolerance values.

SECONDARY OUTPUT DRIVE GEARS (Net-Forged)

Initial Set-Up


■NOTE: If the secondary output driven shaft is replaced or disassembled, the initial set-up must be performed to establish correct gear tooth contact. If only the secondary output drive shaft or secondary output driven gear are replaced, proceed to Correcting Backlash in this sub-section.

1. Install a new bearing (A) onto the secondary driven shaft (B) making sure the bearing locating groove is directed away from the driven gear splines.

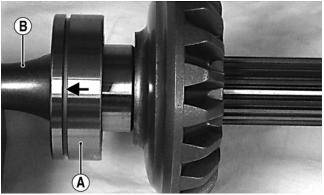

MT011A

2. Using a suitable press, install the driven gear (C) on the shaft until the gear firmly seats on the shoulder of the shaft.

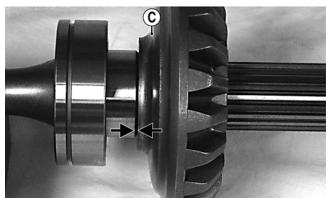



www.mymowerparts.com











3. If installing the existing shaft, start with the shims removed during disassembly or if installing a new shaft, start with approximately 1.0 mm shims at point (D); then install the output drive shaft bearing (E) making sure the locating pin is directed toward the center of the shaft.



MT012

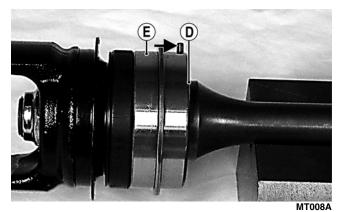


4. Install a new seal (F), output yoke (G), and nut (H) and tighten to 74 ft-lb.

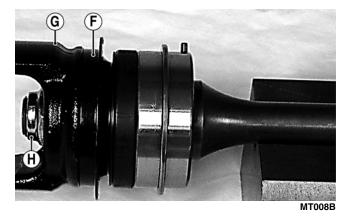

■NOTE: Do not use a new lock nut at this time as this procedure may have to be repeated.

5. Place the assembled shaft into the left crankshaft case; then lightly coat the gear teeth with machinist's lay-out dye. Rotate the shafts through several rotations in both directions. Gear contact should extend from the root to the top of the gear teeth.

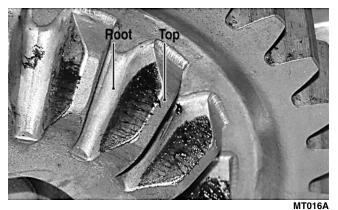


6. To adjust tooth contact, use the following chart to correctly shim the driven shaft.

Tooth Contact	Shim Correction
Contact at Top	Increase Shim Thickness
Contact at Root	Decrease Shim Thickness

7. After correct tooth contact is established, proceed to Checking Backlash in this sub-section.

Checking Backlash

- 1. If removed, install the secondary drive/bevel gear shaft into the crankcase; then tighten the nut to 59 ft-lb.
- 2. Install the secondary drive bearing support; then install the secondary driven output shaft into the crankcase.
- 3. Mount the dial indicator so the tip is contacting a tooth on the secondary drive bevel gear.
- 4. While rocking the drive bevel gear back and forth, note the maximum backlash reading on the gauge.

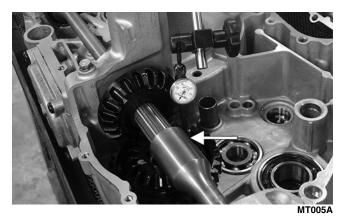

5. Acceptable backlash range is 0.115-0.390 mm (0.005-0.015 in.).

Correcting Backlash

■NOTE: If backlash measurement is within the acceptable range, no correction is necessary.







- 1. If backlash measurement is less than specified, remove an existing shim, measure it, and install a new thinner shim.
- 2. If backlash measurement is more than specified, remove an existing shim, measure it, and install a thicker shim.

■NOTE: Continue to remove, measure, and install until backlash measurement is within tolerance. Note the following chart.


Backlash Measurement	Shim Correction
Under 0.115 mm (0.005 in.)	Decrease Shim Thickness
At 0.115-0.390 mm (0.005-0.015 in.)	No Correction Required
Over 0.390 mm (0.015 in.)	Increase Shim Thickness

After backlash and tooth contact are within specifications, apply red Loctite #271 to the drive shaft threads and driven output shaft threads; then using new nuts, tighten the output shaft nut to 59 ft-lb and the output yoke nut to 74 ft-lb.

CRANKSHAFT ASSEMBLY

Measuring Connecting Rod (Small End Inside Diameter)

1. Insert a snap gauge into the upper connecting rod small end bore; then remove the gauge and measure it with micrometer.

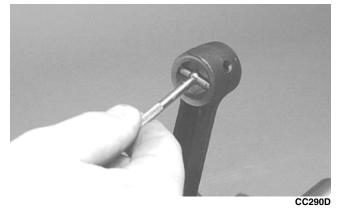

2. Maximum diameter must not exceed specifications.

Measuring Connecting Rod (Small End Deflection)

- 1. Place the crankshaft on a set of V-blocks and mount a dial indicator and base on the surface plate. Position the indicator contact point against the center of the connecting rod small end journal.
- 2. Zero the indicator and push the small end of the connecting rod away from the dial indicator.
- 3. Maximum deflection must not exceed specifications.


www.mymowerparts.com





Measuring Connecting Rod (Big End Side-to-Side)

- 1. Push the lower end of the connecting rod to one side of the crankshaft journal.
- 2. Using a feeler gauge, measure the gap between the connecting rod and crankshaft journal.

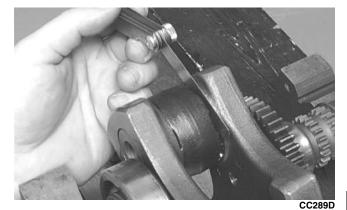


3. Acceptable gap range must be within specifications.

Measuring Connecting Rod (Big End Width)

- 1. Using a calipers, measure the width of the connecting rod at the big-end bearing.
- 2. Acceptable width range must be within specifications.

Measuring Crankshaft (Runout)

- 1. Place the crankshaft on a set of V blocks.
- 2. Mount a dial indicator and base on the surface plate. Position the indicator contact at point 1 of the crankshaft.

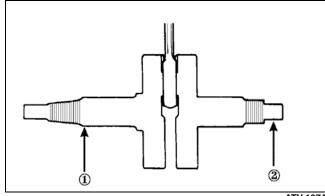

ATV-1074

3. Zero the indicator and rotate the crankshaft slowly.

Care should be taken to support the connecting rod when rotating the crankshaft.


4. Maximum runout must not exceed specifications.



■NOTE: Proceed to check runout on the other end of the crankshaft by positioning the indicator contact at point 2 and following steps 3-4.

Measuring Crankshaft (Web-to-Web)


1. Using a calipers, measure the distance from the outside edge of one web to the outside edge of the other web.

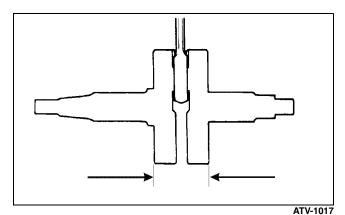

2. Acceptable width range must be within specifications.

COUNTERSHAFT

When disassembling the countershaft, care must be taken to note the direction each major component (dog, gear) faces. If a major component is installed facing the wrong direction, transmission damage may occur and/or the transmission will malfunction. In either case, complete disassembly and assembly will be required.

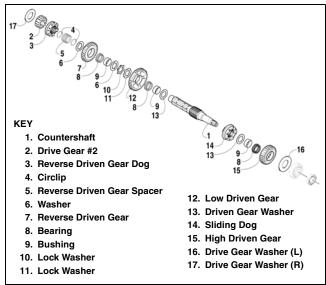

739-954A

Disassembling

From the right side:

- 1. Remove the right drive gear washer (17); then remove drive gear #2 (2).
- 2. Remove the reverse driven gear dog (3); then remove the circlip (4).
- 3. Remove the reverse driven gear spacer (5); then remove the circlip (4).
- 4. In order, remove washer (6), reverse driven gear (7), bearing (8), and bushing (9).
- 5. In order, remove washer (6), lock washer (10), lock washer (11), and low driven gear (12).
- 6. In order, remove bearing (8), bushing (9), and driven gear washer (13).

From the left side:

- 1. Remove the left drive gear washer (16); then remove the high driven gear (15) and bearing (8).
- 2. In order, remove bushing (9), driven gear washer (13), and sliding dog (14).

Assembling

From the left side:

- 1. Install the sliding dog (14), driven gear washer (13), and bushing (9).
- 2. Install bearing (8) and high driven gear (15); then install the left drive gear washer (16).

From the right side:

- 1. Install driven gear washer (13), bushing (9), bearing (8), and low driven gear (12).
- 2. Install lock washer (11), lock washer (10), washer (6), and bushing (9).
- 3. Install bearing (8), reverse driven gear (7), washer (6), and the circlip (4).
- 4. Install reverse driven gear spacer (5), circlip (4), reverse driven gear dog (3), and drive gear #2 (2); then install the right drive gear washer (17).

■NOTE: When installing the countershaft assembly, account for the washer on each end of the shaft.



Back to TOC






Assembling Crankcase Half

1. Install the secondary driven output shaft assembly.



CC687

2. Apply a liberal amount of engine oil to the crankshaft bearing. Using a propane torch, heat the bearing until the oil begins to smoke; then slide the crankshaft assembly into place.

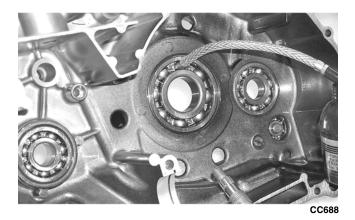



CC689

■NOTE: If heating the bearing is not possible, the crankshaft can be installed using a crankshaft installing tool.

3. Install the crank balancer.



CD832B


■NOTE: It will be necessary to rotate the crank balancer until the counterweight is facing away from the crankshaft; then rotate the crankshaft clockwise into the journal area to allow the crank balancer to be fully seated.

4. Place the key into the crank balancer keyway; then install the crank balancer gear making sure the alignment dots on the crank balancer gear and the crankshaft gear align.





5. Install the driveshaft.

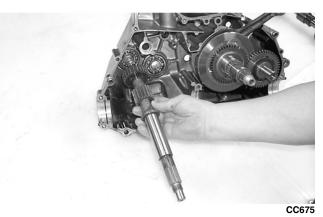

6. Place a washer on each end of the countershaft assembly; then install the assembly.

www.mymowerparts.com









CC674

- 7. Place a washer on each end of the gear shift shaft; then install the shaft assembly making sure the two holes on the end of the shaft are positioned vertically.
- 8. Insert the two shift forks into the sliding dogs noting the direction of the tabs from disassembling; then install the shift fork shaft.

■NOTE: Make sure the shift fork tabs face upward and that they are properly seated into the shift cams.



9. Install the reverse idler gear assembly noting the positioning of the two washers, gear, bushing, and shaft.




CC668

10. Install the front and rear secondary driven shaft assemblies into the left side of the crankcase making sure the bearing locating pins are facing upward and the bearing C-ring is fully seated in www.the provements.com





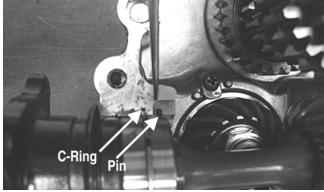

CD268A

- 11. Place the oil strainer into position; then secure with the two screws.
- 12. Place the oil strainer cap into position making sure the O-ring is in position; then secure the cap with cap screws. Tighten securely.

Joining Crankcase Halves

- 1. Apply High-Temp Sealant to the right-side mating surface.
- 2. Lightly oil all bearings and grease all shafts in the left-side crankcase.
- 3. Using a propane torch, heat the left-side crankshaft bearing until the oil begins to smoke; then join the two crankcase halves.



CC695

- 4. Using a plastic mallet, lightly tap the case halves together until cap screws can be installed.
- 5. From the left side, install the 8 mm cap screws; then tighten only until snug.

■NOTE: During the tightening procedure, rotate the shafts back and forth frequently to ensure no binding or sticking occurs.

6. From the right side, install the remaining 8 mm cap screws (two inside the case); then tighten only until snug.



- 7. From the right side, install the case half 6 mm cap screws; then tighten only until snug.
- 8. From the left side, install the 6 mm cap screws; then tighten only until snug.
- 9. In a crisscross/case-to-case pattern, tighten the 8 mm cap screws (from steps 5-6) until the halves are correctly joined; then tighten to 20 ft-lb.
- 10. In a crisscross/case-to-case pattern, tighten the 6 mm cap screws (from steps 7-8) to 10 ft-lb.

R AT THIS POINT

After completing center crankcase components, proceed to Installing Left-Side Components, to Installing Right-Side Components, and to Installing Top-Side Components.


Installing Engine/Transmission

■NOTE: Arctic Cat recommends that new gaskets and O-rings be installed whenever servicing the vehicle.

1. Attach suitable lifting chains to the engine/transmission; then using an engine hoist, lower the assembly into the engine compartment.

Keep hands and fingers clear when lowering the engine/transmission into place. The chains could shift causing severe injury.


Make sure that all wiring, hoses, and brake lines are routed away from engine mounts and engine brackets. Pinching or breaking of lines or shorting of wiring could occur.

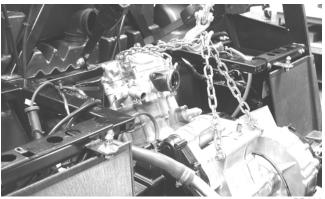

PR114


■NOTE: The rear engine mounting bracket and rear engine mounts should be attached to the engine. The front engine mounting bracket should be attached to the engine, and the front engine mounts should be in the frame.

2. Align the rear engine mount studs with the holes in the frame and slowly lower into place. The front engine mounting bracket will then slip over the engine mount studs.

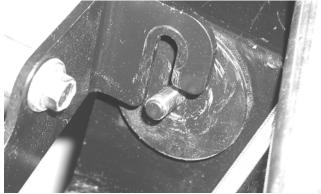

PR146


3. Install the flange nuts on the rear engine mount studs; then secure the front engine mounting bracket to the front engine mount studs with two flange nuts. Tighten the four flange nuts to 25 ft-lb.

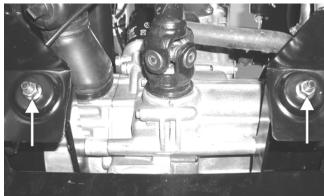

PR153A



4. Apply multi-purpose grease to the driveshaft splines; then align the flange marks and slide the splines into the slip-joints.



Back














The drive-line yokes must be aligned (timed) or damage will occur to the universal joints and gears.

5. Install the cap screws securing the drive couplers to the drive flanges and tighten to 40 ft-lb.

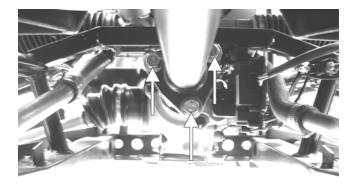


PR120A


- 6. Set the exhaust pipe in place; then install the muffler and align the assembly to the engine. Install two cap screws securing the exhaust pipe to the cylinder head and tighten to 20 ft-lb.
- 7. Install the inlet boot on the V-belt housing; then install the exhaust duct connecting the outlet housing to the V-belt housing. Tighten all clamps securely.



PR153B

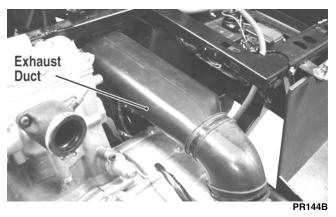

- 8. Connect the lower coolant hose to the water pump housing; then connect the upper coolant hose to the thermostat housing. Tighten the hose clamps securely.
- 9. Install the starter wire on the starter and tighten the nut securely; then connect the CDI connector (650 cc), alternator connector, gear shift position switch, and electric choke connector.

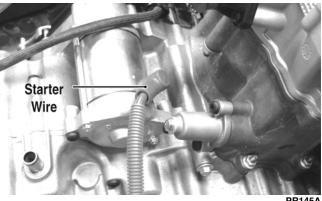


PR145A




www.mymowerparts.com






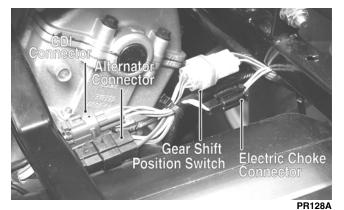

10. From the left-side, connect the speed sensor connector, fuel level sensor connector, and temperature sensor lead; then install the spark plug cap.

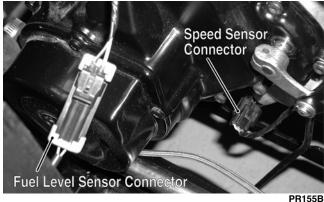

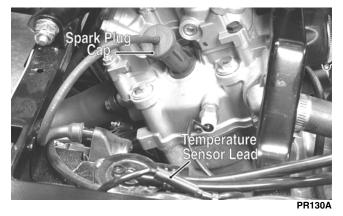

■NOTE: Make sure the main harness ground and battery ground wires are installed and secured in the proper location with the unpainted cap screw.



11. Install the carburetor/throttle body and tighten the intake boot clamp securely; then connect the gasline hose, vacuum line, and throttle cable.











www.mymowerparts.com





- 12. Place the air filter assembly into position and secure with the self-tapping screws; then connect the intake boot to the carburetor/throttle body and the inlet housing boot to the air filter housing. Tighten the clamps securely.
- 13. Place the shifter assembly into position and secure with the four machine screws. Tighten securely.
- 14. Connect the shifter linkage to the transmission shift arm placing the washer and bushing in appropriate locations (XT) or connecting the cable (Prowler/XTX); then secure with the E-clip.

■NOTE: Before operating vehicle, check and adjust shifter linkage/cable as required (see Section 2).

- 15. Fill the engine/transmission with the appropriate lubricant.
- 16. Fill the cooling system with the appropriate coolant.
- 17. Connect the positive battery cable to the battery; then connect the negative cable.
- 18. Install the left-side and right-side seat-bases; then install the center console and seats. Make sure the seats lock securely.
- 19. Start the engine and warm up to operating temperature. Check for fluid leaks; then shut off engine and check oil and coolant levels (see Section 2).

www.mymowerparts.com







Troubleshooting

Problem: Engine will not start or is hard to start (Co	mpression too low)
Condition	Remedy
1. Valve clearance out of adjustment	1. Adjust clearance
2. Valve guides worn - seated poorly	2. Repair - replace guides
3. Valves mistimed	3. Replace camshaft
4. Piston rings worn - broken	4. Replace rings
5. Cylinder bore worn	5. Replace - rebore cylinder
6. Starter motor cranks too slowly - does not turn	6. See Section 5
Problem: Engine will not start or is hard to start (No	spark)
Condition	Remedy
1. Spark plug fouled	1. Clean - replace plug
2. Spark plug wet	2. Clean - dry plug
3. Magneto defective	3. Replace magneto
4. CDI unit/ECU defective	4. Replace CDI unit/ECU
5. Ignition coil defective	5. Replace ignition coil
6. High-tension lead open - shorted	6. Replace high tension lead
Problem: Engine will not start or is hard to start (No	fuel reaching the carburetor/fuel injector)
Condition	Remedy
1. Gas tank vent hose obstructed	1. Clean vent hose
2. Carburetor float valve defective (650 cc)	2. Replace valve
3. Fuel hose obstructed	3. Clean - replace hose
4. Fuel screens obstructed	4. Clean - replace inlet screen - valve screen
5. Fuel pump defective	5. Replace fuel pump
Problem: Engine stalls easily	
	Democratic
Condition	Remedy
Condition 1. Spark plug fouled	Remedy 1. Clean - replace plug
	-
1. Spark plug fouled	1. Clean - replace plug
 Spark plug fouled Magneto defective 	 Clean - replace plug Replace magneto
 Spark plug fouled Magneto defective CDI unit/ECU defective 	 Clean - replace plug Replace magneto Replace CDI unit/ECU
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance Remedy Adjust clearance
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance Remedy Adjust clearance Replace spring(s)
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance Remedy Adjust clearance Replace spring(s) Replace arm - shaft Replace camshaft
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn 	 Clean - replace plug Replace magneto Replace CDI unit/ECU Clean jets/replace fuel injector Adjust clearance Remedy Adjust clearance Replace spring(s) Replace arm - shaft Replace camshaft
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace camshaft 4. Replace camshaft
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace camshaft 4. Replace camshaft
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace camshaft Diston) Remedy 1. Replace - service piston - cylinder
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft Bemedy 1. Replace camshaft Clean chamber
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup Piston pin - piston pin bore worn 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft Diston Remedy 1. Replace - service piston - cylinder 2. Clean chamber 3. Replace - service pin - bore 4. Replace rings - piston
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup Piston pin - piston pin bore worn Piston rings - ring groove(s) worn 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft Diston Remedy 1. Replace - service piston - cylinder 2. Clean chamber 3. Replace - service pin - bore 4. Replace rings - piston
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup Piston pin - piston pin bore worn Piston rings - ring groove(s) worn Problem: Engine noisy (Noise seems to come from from from from pin to piston pin bore worn	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft Diston Remedy 1. Replace - service piston - cylinder 2. Clean chamber 3. Replace - service pin - bore 4. Replace rings - piston
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup Piston pin - piston pin bore worn Piston rings - ring groove(s) worn 	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace camshaft Bemedy 1. Replace camshaft Service piston - cylinder 2. Clean chamber 3. Replace - service pin - bore 4. Replace rings - piston Itemedy
 Spark plug fouled Magneto defective CDI unit/ECU defective Carburetor jets/fuel injector obstructed Valve clearance out of adjustment Problem: Engine noisy (Excessive valve chatter) Condition Valve clearance excessive Valve spring(s) weak - broken Rocker arm - rocker arm shaft worn Camshaft worn Problem: Engine noisy (Noise seems to come from Condition Piston - cylinder worn Combustion chamber carbon buildup Piston pin - piston pin bore worn Piston rings - ring groove(s) worn Problem: Engine noisy (Noise seems to come from form form form form form form form	1. Clean - replace plug 2. Replace magneto 3. Replace CDI unit/ECU 4. Clean jets/replace fuel injector 5. Adjust clearance Remedy 1. Adjust clearance 2. Replace spring(s) 3. Replace arm - shaft 4. Replace camshaft Diston Remedy 1. Replace - service piston - cylinder 2. Clean chamber 3. Replace - service pin - bore 4. Replace rings - piston Iming chain Remedy 1. Replace chain







	Problem: Engine noisy (Noise seems to come from crankshaft)		
Со	ndition	Remedy	
	Bearing worn - burned	1. Replace bearing	
2.	Lower rod-end bearing worn - burned	2. Replace bearing	
З.	Connecting rod side clearance too large	3. Replace thrust washer(s)	
4.	Centrifugal clutch loose	4. Tighten - replace clutch	
5.	Rotor/flywheel loose	5. Tighten - replace flywheel - crankshaft	
Problem: Engine noisy (Noise seems to come from transmission)			
Со	ndition	Remedy	
1.	Gears worn - rubbing	1. Replace gears	
2.	Splines worn	2. Replace shaft(s)	
3.	Primary gears worn - rubbing	3. Replace gears	
4.	Bearings worn	4. Replace bearings	
5.	Bushing worn	5. Replace bushing	
Pro	blem: Engine noisy (Noise seems to come from	m secondary bevel gear and final driven shaft)	
Со	ndition	Remedy	
1.	Drive - driven bevel gears damaged - worn	1. Replace gears	
2.	Backlash excessive	2. Adjust backlash	
3.	Tooth contact improper	3. Adjust contact	
4.	Bearing damaged	4. Replace bearing	
5.	Gears worn - rubbing	5. Replace gears	
6.	Splines worn	6. Replace shaft(s)	
7.	Final driven shaft thrust clearance too large	7. Replace thrust washer(s)	
-			
Pro	blem: Engine idles poorly		
	oblem: Engine idles poorly ndition	Remedy	
Co		Remedy 1. Adjust clearance	
Co 1.	ndition		
Co 1. 2.	ndition Valve clearance out of adjustment	1. Adjust clearance	
Co 1. 2. 3.	ndition Valve clearance out of adjustment Valve seating poor	 Adjust clearance Replace - service seats - valves 	
Co 1. 2. 3. 4.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective	 Adjust clearance Replace - service seats - valves Replace guides 	
Co 1. 2. 3. 4. 5.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts 	
Co 1. 2. 3. 4. 5. 6.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto 	
Co 1. 2. 3. 4. 5. 6. 7.	Indition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU 	
Co 1. 2. 3. 4. 5. 6. 7. 8.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9.	Indition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc)	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug Replace ignition coil Adjust float height 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10.	Indition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug Replace ignition coil Adjust float height Clean jets/replace fuel injector 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11.	nditionValve clearance out of adjustmentValve seating poorValve guides defectiveRocker arms - arm shaft wornMagneto defectiveCDI unit/ECU defectiveSpark plug fouled - gap too wideIgnition coil defectiveFloat out of adjustment (650 cc)Jets/fuel injector obstructedPilot screw setting improper (650 cc)	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug Replace ignition coil Adjust float height 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro	Indition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug Replace ignition coil Adjust float height Clean jets/replace fuel injector Adjust pilot screw 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co	nditionValve clearance out of adjustmentValve seating poorValve guides defectiveRocker arms - arm shaft wornMagneto defectiveCDI unit/ECU defectiveSpark plug fouled - gap too wideIgnition coil defectiveFloat out of adjustment (650 cc)Jets/fuel injector obstructedPilot screw setting improper (650 cc)oblem: Engine runs poorly at high speed	 Adjust clearance Replace - service seats - valves Replace guides Replace arms - shafts Replace magneto Replace CDI unit/ECU Adjust gap - replace plug Replace ignition coil Adjust float height Clean jets/replace fuel injector 	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) oblem: Engine runs poorly at high speed	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1. 2.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) oblem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1. 2. 3.	nditionValve clearance out of adjustmentValve seating poorValve guides defectiveRocker arms - arm shaft wornMagneto defectiveCDI unit/ECU defectiveSpark plug fouled - gap too wideIgnition coil defectiveFloat out of adjustment (650 cc)Jets/fuel injector obstructedPilot screw setting improper (650 cc)blem: Engine runs poorly at high speednditionHigh RPM "cut out" against RPM limiterValve springs weakValve timing out of adjustment	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1. 2. 3. 4. 4. 5. 6. 7. 8. 9. 10. 11. 2. 4. 10. 11. 10. 11. 10. 10. 10. 11. 10. 10	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) oblem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak Valve timing out of adjustment Cams - rocker arms worn	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing 4. Replace cams - arms	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Prc Co 1. 2. 3. 4. 5. 5. 5. 5. 5. 5. 6. 7. 8. 9. 10. 11. 2. 5. 5. 5. 5. 5. 5. 5. 5. 5. 5	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) Delem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak Valve timing out of adjustment Cams - rocker arms worn Spark plug gap too narrow	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing 4. Replace cams - arms 5. Adjust gap	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 2. 5. 6. 7. 8. 9. 10. 11. 2. 5. 6. 7. 8. 9. 10. 11. 2. 5. 6. 7. 8. 9. 10. 11. 11. 11. 11. 11. 11. 11	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) Defem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak Valve timing out of adjustment Cams - rocker arms worn Spark plug gap too narrow Ignition coil defective	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing 4. Replace cams - arms 5. Adjust gap 6. Replace ignition oil	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Pro Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 7. 6. 7. 7. 8. 9. 7. 7. 7. 7. 8. 9. 7. 7. 7. 7. 7. 7. 7. 7. 7. 7	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) oblem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak Valve timing out of adjustment Cams - rocker arms worn Spark plug gap too narrow Ignition coil defective Float level too low (650 cc)	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing 4. Replace cams - arms 5. Adjust gap 6. Replace ignition oil 7. Adjust float height	
Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. Prc Co 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 1. 2. 3. 4. 5. 6. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 8. 7. 7. 7. 7. 7. 7. 7. 7. 7. 7. 7. 7. 7.	ndition Valve clearance out of adjustment Valve seating poor Valve guides defective Rocker arms - arm shaft worn Magneto defective CDI unit/ECU defective Spark plug fouled - gap too wide Ignition coil defective Float out of adjustment (650 cc) Jets/fuel injector obstructed Pilot screw setting improper (650 cc) Defem: Engine runs poorly at high speed ndition High RPM "cut out" against RPM limiter Valve springs weak Valve timing out of adjustment Cams - rocker arms worn Spark plug gap too narrow Ignition coil defective	1. Adjust clearance 2. Replace - service seats - valves 3. Replace guides 4. Replace arms - shafts 5. Replace magneto 6. Replace CDI unit/ECU 7. Adjust gap - replace plug 8. Replace ignition coil 9. Adjust float height 10. Clean jets/replace fuel injector 11. Adjust pilot screw Remedy 1. Shift into higher gear - decrease speed 2. Replace springs 3. Adjust timing 4. Replace cams - arms 5. Adjust gap 6. Replace ignition oil	





Pro	Problem: Exhaust smoke dirty or heavy			
Condition		Remedy		
1.	Oil (in the engine) overfilled - contaminated	1.	Drain excess oil - change oil	
2.	Piston rings - cylinder worn	2.	Replace - service rings - cylinder	
3.	Valve guides worn	3.	Replace guides	
4.	Cylinder wall scored - scuffed	4.	Replace cylinder	
5.	Valve stems worn	5.	Replace valves	
6.	Stem seals defective	6.	Replace seals	
Pro	blem: Engine lacks power			
Со	ndition	Re	medy	
1.	Valve clearance incorrect	1.	Adjust clearance	
2.	Valve springs weak	2.	Replace springs	
3.	Valve timing out of adjustment		Time camshaft	
4.	Piston ring(s) - cylinder worn	4.	Replace - service rings - cylinder	
5.	Valve seating poor	5.	Repair seats	
6.	Spark plug fouled		Clean - replace plug	
7.	Rocker arms - shafts worn	7.	Replace arms - shafts	
8.	Spark plug gap incorrect		Adjust gap - replace plug	
9.	Carburetor jets/fuel injector obstructed	9.	Clean jets/replace fuel injector	
10.	Float level out of adjustment (650 cc)	10.	Adjust float height	
11.	Air cleaner element obstructed		Clean element	
12.	Oil (in the engine) overfilled - contaminated		Drain excess oil - change oil	
13.	Intake manifold leaking air	13.	Tighten - replace manifold	
	Cam chain worn	14.	Replace cam chain - sprockets	
	blem: Engine overheats	1		
	ndition		medy	
	Carbon deposit (piston crown) excessive		Clean piston	
	Oil low		Add oil	
	Octane low - gasoline poor		Drain - replace gasoline	
	Oil pump defective		Replace pump	
	Oil circuit obstructed		Clean circuit	
	Gasoline level (in float chamber) too low (650 cc)		Adjust float height	
	Intake manifold leaking air		Tighten - replace manifold	
_	Coolant level low		Fill - examine system for leaks	
	Fan malfunctioning		Check fan fuse - replace fan	
	Fan switch malfunctioning (650/700 cc)		Replace fan switch	
	Thermostat stuck - closed		Replace thermostat	
12.	Radiator hoses - cap damaged - obstructed	12.	Clear obstruction - replace hoses	





SECTION 4 -FUEL/LUBRICATION/COOLING

TABLE OF CONTENTS

Fuel/Lubrication/Cooling	
Carburetor Specifications (650 cc)	
Electric Choke (650 cc)	
Carburetor (650 cc)	
Electronic Fuel Injection (550/700 cc)	
Engine RPM (Idle) (650 cc)	
Gas Tank	
Gas/Vent Hoses	
Oil Filter/Oil Pump	
Oil Cooler (700 cc)	
Liquid Cooling System	4-13
Radiator	4-13
Thermostat	
Fan	4-15
Water Pump	
Electric Fuel Pump/Fuel Level Sensor	
(550/700 cc)	4-17
Vacuum Pulse Fuel Pump (650 cc)	
Fuel Level Sensor (650 cc)	
Troubleshooting (650 cc)	
Troubleshooting (550/700 cc)	
,	

Fuel/Lubrication/ Cooling

■NOTE: Arctic Cat recommends the use of new gaskets, lock nuts, and seals and lubricating all internal components when servicing the engine/transmission.

■NOTE: Some photographs and illustrations used in this section are used for clarity purposes only and are not designed to depict actual conditions.

■NOTE: Critical torque specifications are located in Section 1.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

Description	p/n
Electric Choke Test Harness	0444-247
Oil Pressure Test Kit	0644-495
Tachometer	0644-275

■NOTE: Special tools are available from the Arctic Cat Service Parts Department.

Carburetor Specifications (650 cc)

Туре	Keihin CVK36	
Main Jet	138	
Slow Jet	40	
Pilot Screw Setting (turns)	2	
Needle Jet	6.0/4.0	
Jet Needle	Fixed	
Idle RPM	1250-1350	
Starter Jet	85	
Float Arm Height	17 mm	

Electric Choke (650 cc)

REMOVING


1. Disconnect the electric choke connector from the wiring harness; then remove the screw securing www.the phoke body to the street buretor.

Back to TOC


2. Carefully remove the choke assembly from the carburetor taking care not to force the plunger from the carburetor body.

INSPECTING/TESTING


1. Inspect the plunger (A) for scoring or scratches, the needle (B) for damage to the tip, the spring (C) for breakage, and the O-ring (D) for breaks.

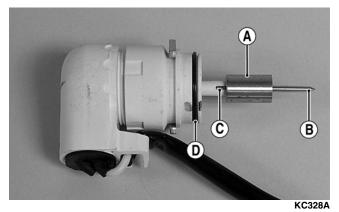

2. With the choke at room temperature (approximately 70° F), measure plunger extension. Measurement (A) should be 18.6-19.1 mm.

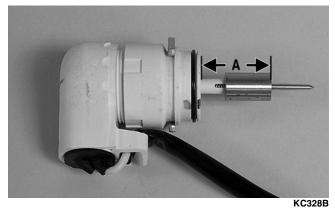

3. Connect Electric Choke Test Harness to the choke connector and a suitable 12 DC volt power supply for 2-3 minutes. Disconnect the power and measure plunger extension. Measurement (B) should be 22.1-23.4 mm.

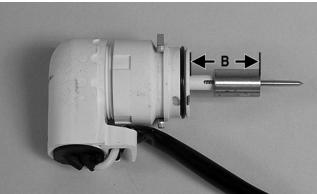

KC328C

4. If the choke is damaged or the measurements are not within specifications, the choke must be replaced.



INSTALLING

- 1. Lightly lubricate the O-ring on the choke body; then carefully insert the choke assembly into the carburetor being careful not to damage the plunger.
- 2. Secure the choke with the screw and tighten securely; then connect the choke connector to the wiring harness.


Carburetor (650 cc)

CTY: 37 19 18 17 16 KEY 27. Float Chamber 1. Cover 14. Float Set 15. Float Pin Assv 2. Screw 28. Screw 3. Spring 16. Pilot Screw 29. Spring 4. Vacuum Piston 17. Spring 30. Diaphragm Assy 18. Washer 5. Spring Seat 31. Pump Housing 6. Jet Needle 19. O-Ring 32. U-Ring 7. Needle Jet 20. Idle Adjust Screw 33. Screw 8. Jet Holder 21. Washer 34. O-Ring 9. Main Jet 22. Spring 35. Screw 10. Slow Jet 23. Plate 36. Screw 11. Starter Jet 24. Screw 37. Cover 12. Float Valve 25. Electric Choke 38. Vent Hose 13. Clip 26. Choke Cover 0741-115


Whenever any maintenance or inspection is performed on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.

REMOVING

- 1. Remove the seats and center console; then remove the left-side seat-base.
- 2. Loosen the clamps on the inlet boot; then remove the boot from the left-side.

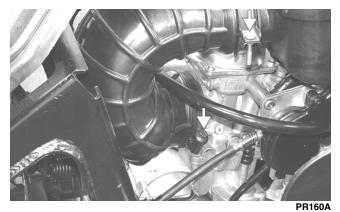

- 3. Loosen the clamp securing the intake boot to the carburetor; then separate the carburetor from the boot.
- 4. Remove the gas hose and carburetor float chamber vent hose.
- 5. Remove the throttle arm cover; then loosen the outer jam nut on the throttle cable and disconnect the throttle cable from the carburetor.

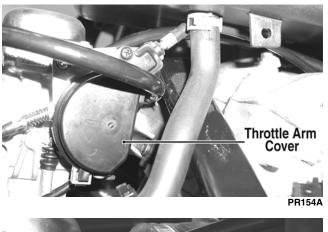



6. Disconnect the electric choke connector; then remove the carburetor from the engine.

DISASSEMBLING

1. Remove the four Phillips-head screws securing the top cover; then remove the cover.





(Back to Section TOC



4



2. Remove the vacuum piston assembly from the carburetor body. Account for a spring, spring seat, and the jet needle.





3. Remove the three screws securing the pump housing. Account for the diaphragm assembly, spring, and U-ring (in the housing).



CC748


4. Remove the Phillips-head screws securing the float chamber; then remove the chamber. Account for the O-ring.








5. Remove the float pin.

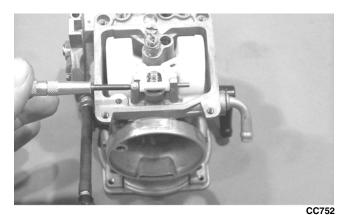

6. Lift the float assembly from the carburetor. Account for the float valve.

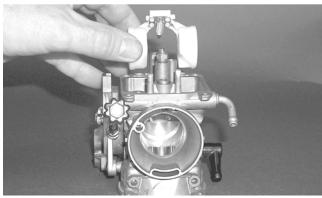


CC753

■NOTE: Note the locations of the jets, pilot screw, and holder for disassembling procedures.








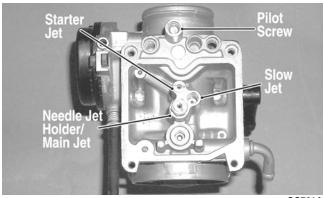

CC761A

- 7. Secure the needle jet holder with a wrench; then remove the main jet.
- 8. Remove the needle jet holder; then remove the needle jet, slow jet, and the starter jet.
- 9. Remove the pilot screw. Account for a spring, a washer, and an O-ring.

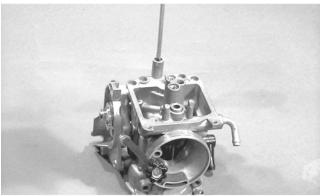

CC758

10. Unscrew and remove the idle adjust screw assembly. Account for the spring and washer.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

When drying components with compressed air, always wear safety glasses.

DO NOT place any non-metallic components in parts-cleaning solvent because damage or deterioration will result.

- 1. Place all metallic components in a wire basket and submerge in carburetor cleaner.
- 2. Soak for 30 minutes; then rinse with clean, hot water.

3. Wash all non-metallic components with soap and water. Rinse thoroughly, www.mymowerparts.com





- 4. Dry all components with compressed air only making sure all holes, orifices, and channels are unobstructed.
- 5. Inspect the carburetor body for cracks, nicks, stripped threads, and any other imperfections in the casting.
- 6. Inspect the vacuum piston/diaphragm for cracks, imperfections in the casting, or cracks and tears in the rubber.
- 7. Inspect float for damage.
- 8. Inspect gasket and O-rings for distortion, tears, or noticeable damage.
- 9. Inspect tips of the jet needle, pilot screw, and the needle jet for wear, damage, or distortion.
- 10. Inspect the slow jet and main jet for obstructions or damage.


■NOTE: If the slow jet is obstructed, the mixture will be extremely lean at idle and part-throttle operation.

- 11. Inspect the float valve for wear or damage.
- 12. Inspect the carburetor mounting flange for damage and tightness.

ASSEMBLING

Back to Section TOC

- 1. Thread the idle adjust screw assembly into the carburetor making sure the washer and spring are properly positioned.
- 2. Install the pilot screw with the spring, the washer, and the O-ring in this order.

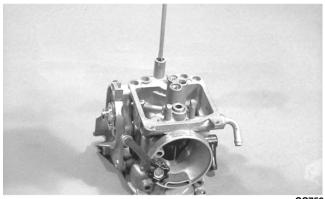


CC758

■NOTE: Turn the pilot screw clockwise until it is lightly seated; then turn it counterclockwise the recommended number of turns as an initial setting.

■NOTE: Note the locations of the jets and holder during assembling procedures.



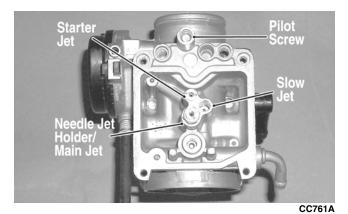


- 3. Install the slow jet. Tighten securely.
- 4. Install the main jet into the needle jet holder and tighten securely; then install the needle jet and needle jet holder assembly into the carburetor and tighten securely.
- 5. Place the float assembly (with float valve) into position and secure to the carburetor with the float pin.



CC753

■NOTE: Check float arm height by placing the carburetor on its side w/float contacting the needle; then measure with a caliper the height when the float arm is in contact with the needle valve. Float arm height should be 17 mm.


6. Place the float chamber into position making sure the O-ring is properly positioned; then secure with the Phillips-head screws.

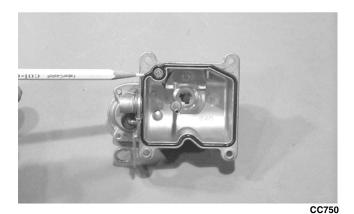

www.mymowerparts.com






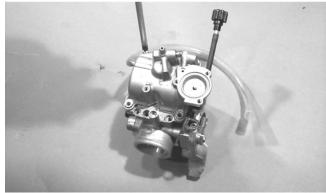

CC749

7. Place the U-ring into the pump housing. Position the spring and diaphragm assembly (lip toward the carburetor) onto the carburetor; then secure the assembly with the pump housing and three screws. Tighten securely.

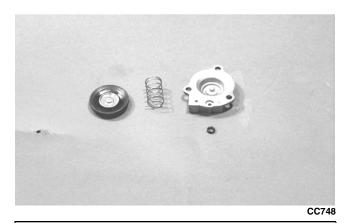

🛆 CAUTION

It is important to press down on the pump housing until it contacts the carburetor to make sure the diaphragm lip is properly seated in the groove in the carburetor. If the diaphragm is not properly seated, leakage will occur.

8. Place the jet needle, spring seat, and spring into the vacuum piston; then place the assembly down into the carburetor.



9. Place the top cover into position; then secure with the Phillips-head screws. Tighten securely.





CH015D

INSTALLING

- 1. Place the carburetor into position on the engine; then connect the electric choke connector to the main harness.
- 2. Connect the throttle cable to the carburetor. Tighten the jam nut securely.
- 3. Connect the gas hose; then connect the carburetor float chamber vent hose.
- 4. Place the carburetor into the intake boot and tighten the clamp securely.
- 5. Install the inlet boot between the air filter housing and the carburetor; then tighten the clamps securely.
- 6. Install the left-side seat-base; then install the center console and the seats making sure the seats lock securely.

Electronic Fuel Injection (550/700 cc)

Whenever the gasline hoses are removed (other than for pressure testing), the battery must be disconnected to prevent inadvertent activation of the electronic fuel pump.

Whenever any maintenance or inspection is performed on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.

TROUBLESHOOTING

- 1. Verify that the electric fuel pump is operating by listening for a "whirring" sound for approximately three seconds after the ignition switch is turned to the ON position. If no sound can be heard, see Electric Fuel Pump/Fuel Level Sensor (550/700 cc) in this section.
- 2. Check for a flashing EFI icon on the LCD. If EFI is flashing, see ECU Error Codes (550/700 cc) in Section 5.
- 3. Make sure there is sufficient, clean gas in the gas tank.
- 4. Verify that the battery is sufficiently charged to crank the engine over at normal speed.
- 5. Check the air filter housing and air filter for contamination. Clean or replace as necessary (see Section 2).


REMOVING THROTTLE BODY

1. Turn the ignition switch to the OFF position; then remove the ignition switch key.

🖄 WARNING

Do not turn the ignition switch to the ON position with the hoses removed. Gasoline will be pumped by the electric fuel pump causing a safety hazard.

- 2. Remove the left and right seats; then remove the center console and disconnect the battery.
- 3. Remove the connector from the IAT sensor (A); then loosen the inlet boot clamp (B) and remove the mounting screw (C).

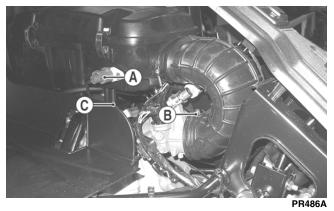


4. Disconnect the crankcase breather hose from the air filter housing; then remove the air filter assembly from the vehicle.










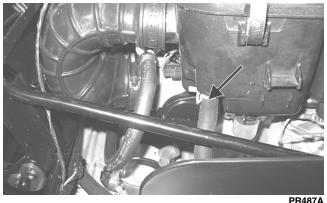

- PR4874
- 5. Slowly disconnect the gasline hose connector from the fuel rail.

Gasoline may be under pressure. Place an absorbant towel under the connector to absorb any gasoline spray when disconnecting.

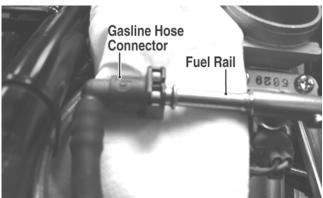

FI092/

- 6. Remove the screw securing the throttle actuator cover to the throttle body; then remove the cover.
- 7. Remove the throttle cable from the actuator arm.
- 8. Loosen the outer jam nut securing the throttle cable to the throttle body; then route the cable out of the way.
- 9. Remove the electrical connectors from the throttle body components.
- 10. Remove the throttle body assembly from the intake pipe.



FI104A

11. Use tape to cover and seal the intake opening.

Any objects or liquid entering the intake opening will fall into the engine causing severe damage if the engine is turned over or started.

INSTALLING THROTTLE BODY

- 1. Install the throttle body into the intake pipe and secure with the clamp. Tighten securely.
- 2. Place a new O-ring in the intake pipe; then position the pipe onto the engine and secure with two cap screws.
- 3. Connect the throttle cable to the throttle body and adjust throttle free-play (see Section 2); then connect the gasline hose.
- 4. Connect the electrical connectors to the throttle body components.
- 5. Install the air filter assembly and secure with the existing hardware; then connect the IAT sensor and crankcase breather hose.
- 6. Install the center console and seats making sure the seats lock securely in place.

Engine RPM (Idle) (650 cc)

■NOTE: Idle RPM is not adjustable on the 550/700 cc.

To adjust idle RPM, use the following procedure.

■NOTE: To access the idle adjustment screw, it will be necessary to remove the seats and center console. The idle adjustment screw is located on the left-side of the carburetor.

1. Set the parking brake. With the transmission in neutral, start the engine and warm it up to normal operating temperature.




www.mymowerparts.com





2. Turn the idle adjustment screw clockwise one turn past the recommended RPM setting; then turn it counterclockwise to 1250-1350 RPM.

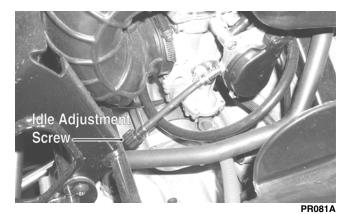

Adjust the idle to the correct RPM. Make sure the engine is at normal operating temperature before adjusting the idle RPM.

Gas Tank

Whenever any maintenance or inspection is made on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.


REMOVING

- 1. Remove the seats and center console; then remove the left-side and right-side seat-bases.
- 2. Remove twelve cap screws and two self-tapping screws securing the floorboard to the frame.
- 3. While pulling forward on the upper portion of the floorboard, lift the rear panel above the seat lock studs; then insert a small wood block to hold in position.



 FR164

4. From the opposite side of the vehicle, repeat step 3; then lift the rear of the floorboard up and lift the floorboard out of the vehicle.

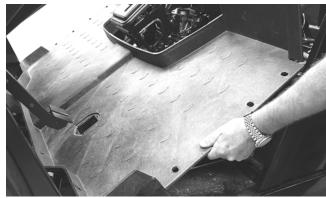

5. Disconnect the vent hose, gas hose, and fuel level sensor connector; then cap the vent fitting and gas hose fitting.



6. Remove the outer cap screw securing the front tank hold-down; then swing the hold-down to the left.



www.mymowerparts.com








4

PR165

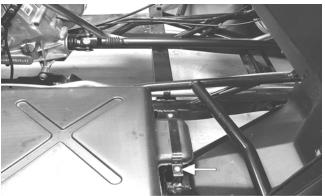

PR167A



7. Remove four press-nuts securing the gas cap inset; then remove the gas cap and inset. Install the gas cap.



8. Remove the joining cap screw and nut from the rear gas tank hold-down strap; then remove the inside hold-down strap.



Back to TOC

vmowerparts.com

Back

9. Lift and slide the tank forward raising the front of the tank first; then turn the tank and lift out the right side.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all gas tank components with parts-cleaning solvent.
- 2. Inspect all hoses for cracks or leaks.
- 3. Inspect gas tank cap and tank for leaks, holes, and damaged threads.
- 4. Inspect the fuel level sensor for proper operation (see appropriate Fuel Level Sensor in this section).

INSTALLING

Whenever any maintenance or inspection is made on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.

1. Place the gas tank into position in the vehicle; then install the inside rear hold-down strap.








2. Swing the front hold-down to the right into position and install the cap screw and nut. Do not tighten at this time.





3. Install the rear hold-down strap joining cap screw and nut. Do not tighten at this time.

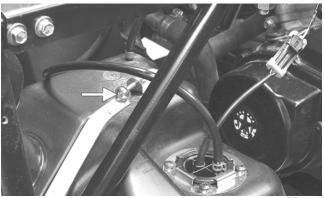


- PR166A
- 4. Place the gas cap filler panel into position; then if necessary, position the gas tank so the filler panel and filler neck are not binding or rubbing.




5. Secure the filler panel with four press-nuts; then tighten the hardware securing the hold-down straps (from steps 2-3) securely.



PR166A

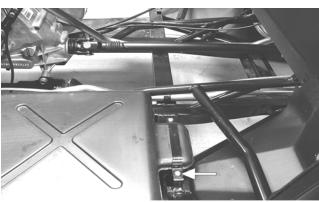

- PR167A
- 6. Connect the gas hose and gas tank vent hose to the proper fittings; then connect the fuel level sensor connector to the main harness.

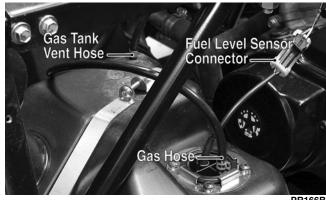

- PR166B
- 7. Position the floorboard into the vehicle and secure with the appropriate hardware; then install the center console, seat-bases, and seats making sure the seats lock securely.

Gas/Vent Hoses

Replace the gas hose every two years. Damage from aging may not always be visible. Do not bend or obstruct the routing of the carburetor vent hose (XT). Make certain that the vent hose is securely connected to the carburetor and the opposite end is always open.

www.mymowerparts.com







Oil Filter/Oil Pump

■NOTE: Whenever internal engine components wear excessively or break and whenever oil is contaminated, the oil pump should be replaced.

TESTING OIL PUMP PRESSURE

■NOTE: The engine must be warmed up to the specified temperature for this test.

- 1. Remove the seats and center console; then remove the left-side seat-base.
- 2. Tilt the cargo box back.
- 3. Remove the upper plug from the base of the oil filter; then using an appropriate adapter, connect an oil pressure gauge to the engine.



CF264A

■NOTE: Some oil seepage may occur when installing the oil pressure gauge. Wipe up oil residue with a cloth.

- 4. Set the parking brake and start the engine. Allow the engine to warm up to operating temperature (with cooling fan cycling).
- 5. Set the speedometer/tachometer to RPM. With the engine running at 2500 RPM, the pressure gauge must show 0.7-0.8 kg/cm² (10-20 psi).
- 6. Install the left-side seat-base; then install the center console and seats making sure the seats lock securely.

■NOTE: If the oil pressure is lower than specified, check for an oil leak, damaged oil seal, or defective oil pump.

■NOTE: If the oil pressure is higher than specified, check for too heavy engine oil weight (see Section 1), clogged oil passage, clogged oil filter, or improper installation of the oil filter.

REMOVING/DISASSEMBLING

- 1. Remove the oil pump from the engine (see Right-Side Components in Section 3).
- 2. Remove the Phillips-head screw on the back side of the pump and separate the pump housing and cover. Note the position of the inner and outer rotors and alignment pin for assembly.
- 3. Remove oil pump components.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all oil-pump components.
- 2. Inspect the rotors for scoring and gouges.
- 3. Inspect the alignment pin, driveshaft, and driven sprocket for damage.
- 4. Inspect the pump housing and cover for cracks or damage.

ASSEMBLING/INSTALLING

- 1. Place the rotors into the pump housing making sure the alignment pin is in the groove of the rotor.
- 2. Place the cover onto the pump housing.
- 3. Secure the pump with the Phillips-head screw coated with red Loctite #271.
- 4. Install the oil pump into the engine (see Right-Side Components in Section 3).

Oil Cooler (700 cc)

This model has an oil cooler in addition to the liquid cooling system. An oil cooler kit may be installed on any Arctic Cat UTV.

REMOVING


1. Loosen the clamps securing the oil hoses to the oil cooler; then place a shallow pan or absorbent towel under the connection and remove the hoses.










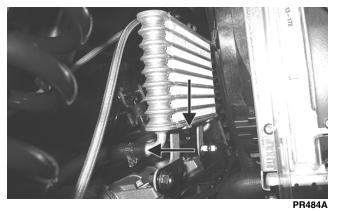

2. Remove the flange nuts and cap screws from the oil cooler mountings and remove the oil cooler.

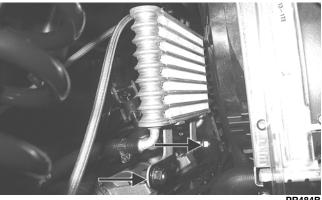

PR484B

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Prior to washing, inspect the oil cooler for signs of leaks such as oily dirt build-up.
- 2. Wash the cooling fins using a pressure washer or hot, soapy water and a soft brush.
- 3. Inspect all mounting brackets and the oil inlet and outlet for cracks or bends.

INSTALLING

- 1. Place the oil cooler into position and secure with the existing hardware. Tighten securely.
- 2. Connect the oil hoses and secure with the hose clamps. Tighten securely.

Liquid Cooling System


When filling the cooling system, use premixed Arctic Cat Antifreeze. While the cooling system is being filled, air pockets may develop; therefore, run the engine for five minutes after the initial fill, shut the engine off, and then fill the cooling system to the bottom of the stand pipe in the radiator neck.

After operating the vehicle for the initial 5-10 minutes, stop the engine, allow the engine to cool down, and check the coolant level. Add coolant as necessary.


Radiator

REMOVING

1. Remove the cap screws securing the dash assembly to the frame and one cap screw and nut from the center support. Slide the dash rearward approximately four inches.

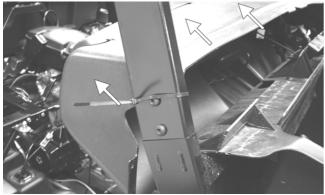



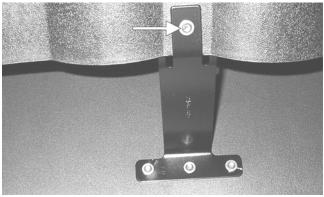

PR475A


2. Remove four torx-head screws (A) securing the under-hood storage box to the frame; then remove two cap screws with nuts (B) at the front of the storage box.



www.mymowerparts.com





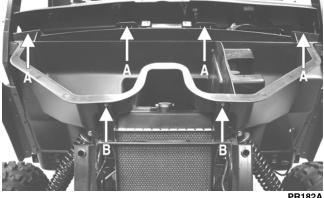


PR182A


3. While lifting up on the front of the storage box, pry the rear center clear of the center dash mount and remove the storage box.



4. Drain the coolant into a suitable container; then disconnect the cooling fan wire connector from the main harness.

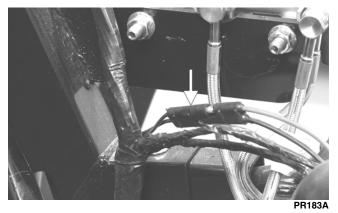

5. Remove the two shoulder bolts and nuts securing the radiator to the frame; then disconnect the upper and lower coolant hoses.

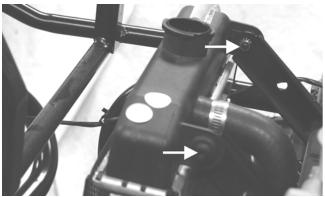

PR184A

6. Lift the radiator assembly from the vehicle. Account for two upper and two lower rubber mounting grommets.


CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Flush the radiator with water to remove any contaminants.
- 2. Inspect the radiator for leaks and damage.
- 3. Inspect all hoses for cracks and deterioration.
- 4. Inspect all fasteners and grommets for damage or wear.

INSTALLING

1. Place the radiator into position making sure the grommets are correctly installed; then secure to the mounts with the two shoulder bolts and nuts. Tighten securely.

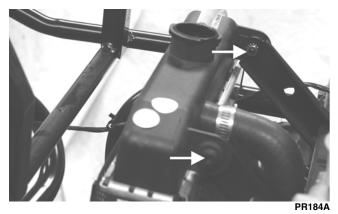


2. Connect the upper and lower coolant hoses to the radiator and secure with the appropriate hose clamps; then connect the cooling fan wire connector to the main harness.



www.mymowerparts.com





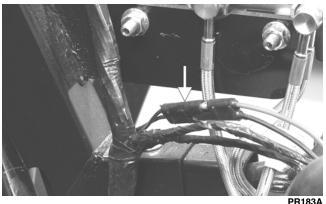

- 3. Pour the recommended coolant into the radiator and secure the radiator cap.
- 4. Place the storage box into position and using a smooth, flat pry-bar, pry the center of the box past the dash mount; then secure with the appropriate fasteners.



PR187

- 5. Slide the dash forward into position; then secure the dash with the appropriate hardware.
- 6. Start the engine and warm up to operating temperature; then check that the coolant level is at the specified level (see Section 1). Add coolant as necessary.

Thermostat

REMOVING

- 1. Drain approximately one quart of coolant from the cooling system.
- 2. Remove the two cap screws securing the thermostat housing to the cylinder head. Account for a thermostat with seal (550/650 cc) and O-ring (700 cc).

INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is

necessary. W.mymowerparts.com





1. Inspect the thermostat for corrosion, wear, or spring damage.


- 2. Using the following procedure, inspect the thermostat for proper operation.
 - A. Suspend the thermostat in a container filled with water.
 - B. Heat the water and monitor the temperature with a thermometer.
 - C. The thermostat should start to open at 63.5-66.5° C (146-152° F).
 - D. If the thermostat does not open, it must be replaced.
- 3. Inspect all coolant hoses, connections, and clamps for deterioration, cracks, and wear.

■NOTE: All coolant hoses and clamps should be replaced every four years or 4000 miles.

INSTALLING

1. Place the thermostat with seal (550/650 cc) and O-ring (700 cc) into the thermostat housing; then secure the thermostat housing to the cylinder head with the two cap screws.

When installing the thermostat, make sure the bleed holes are straight up and down or air will remain trapped causing engine damage due to overheating.

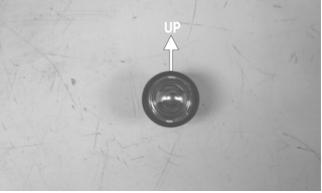

PR281A

2. Fill the cooling system with the recommended amount of antifreeze. Check for leakage.

Fan

REMOVING

- 1. Remove the radiator (see Radiator in this section).
- 2. Remove the fan assembly from the radiator.



INSTALLING

1. Position the fan assembly on the radiator; then secure with existing hardware.

■NOTE: The fan wiring must be in the upper-right position.

2. Install the radiator (see Radiator in this section).

Water Pump

■ NOTE: The water pump is not a serviceable component. If the pump is defective or if the mechanical seal is leaking (coolant dripping from the discharge hole), the water pump must be replaced.

REMOVING

1. Remove the radiator cap; then remove the water pump coolant drain plug and drain the coolant.



- 2. Drain the oil from the engine/transmission.
- 3. Remove the seats and center console; then remove the right-side seat-base.
- 4. Loosen the coolant hose clamps and slide the clamps away from the hose ends.




PR132

 Remove the two cap screws securing the water pump to the engine; then remove the water pump.
 www.mymowerparts.com






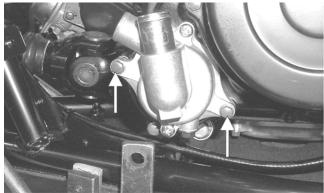

CC786A

INSTALLING

1. Secure the water pump to the engine with the two cap screws tightened securely.

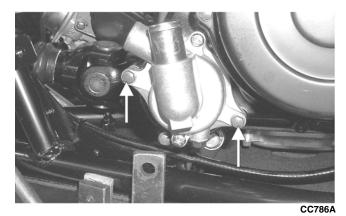

2. Connect the two coolant hoses to the water pump and secure with the clamps; then install the water pump coolant drain plug.



PR132

- 3. Fill the engine/transmission with the proper amount of recommended oil.
- 4. Fill the cooling system with the proper amount of recommended coolant.

■NOTE: While the cooling system is being filled, air pockets may develop; therefore, run the engine for five minutes after the initial fill, shut the engine off, and then fill the cooling system.



5. Check the entire cooling system for leakage.

After operating the vehicle for the initial 5-10 minutes, stop the engine, allow the engine to cool down, and check the coolant level. Add coolant as necessary.

6. Install the right-side seat-base; then install the center console and seats making sure the seats lock securely.

Electric Fuel Pump/Fuel Level Sensor (550/700 cc)

The electric fuel pump and fuel level sensor are not serviceable components. If either component fails, it must be replaced.

TESTING


Whenever any maintenance or inspection is made on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.

R AT THIS POINT

Prior to removing the electric fuel pump, the following check should be performed to determine that removal is necessary.

- 1. Turn the ignition switch ON and listen for a momentary "whirring" sound of the pump building pressure. If the sound is heard (10 seconds), no electrical checks are necessary. Turn the ignition switch OFF.
- 2. Disconnect the gasline hose from the fuel rail; then install a suitable pressure gauge.

Gasoline may be under pressure. Place an absorbant towel under the connector to absorb any gasoline spray when disconnecting.

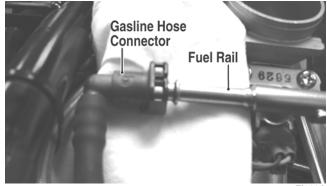

FI092A

- 3. Turn the ignition switch to the ON position. The fuel pressure should build until the pump shuts off. Pressure should read 3.0 kg-cm² (43 psi).
- 4. If the pump is not running, disconnect the fuel pump/sensor connector by reaching under the rear rack from behind.
- 5. Connect a multimeter to the power supply leads with the red tester lead to the red wire and the black tester lead to the black wire; then turn the ignition switch to the ON position. The meter should read battery voltage. If battery voltage is indicated and the fuel pump does not run, replace the pump assembly. If no battery voltage is indicated, check the ECU and the vehicle tilt sensor.

REMOVING

1. Remove the key from the ignition switch.

Always ensure that power cannot be inadvertently applied to the ignition/ECU when working on the fuel system. If the ignition switch is turned on, the electric fuel pump will start and gas could be rapidly pumped and spilled resulting in fire and severe injury.

- 2. Remove the seats, center console, and right-side seat-base; then disconnect the negative battery cable.
- 3. Disconnect the electrical plug from the main harness; then disconnect the gasline hose from the fuel pump.
- 4. Mark the fuel pump mounting and gas tank for installing purposes; then remove the screws securing the fuel pump to the gas tank and remove the fuel pump.

Take care not to damage the float or float arm or replacement of the entire assembly will be necessary.

5. Using duct tape or other suitable means, cover the fuel pump opening.

www.mymowerparts.com








INSPECTING

AT THIS POINT


If the pump has failed earlier test and must be replaced, proceed to INSTALLING.

- 1. Inspect the fuel screen and blow clean with low pressure compressed air.
- 2. Move the float lever and check for free movement. The float assembly should return to the lower position without force. If not, replace the fuel level sensor assembly.
- 3. Test the fuel level sensor by connecting a multimeter (A) to the fuel level sensor leads (B); then select OHMS. The multimeter should show 5 ohms at full fuel position (C) and 95 ohms at empty fuel position (D).

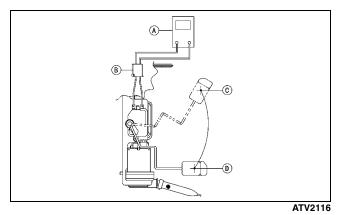

■NOTE: If readings are erratic, clean the resistor wiper and resistor with clean alcohol and retest. If still not correct, replace the fuel level sensor.

- 4. To replace the fuel level sensor, use the following procedure.
 - A. Disconnect the two-wire connector (A); then press the fuel level sensor toward the top of the fuel pump to release it from the mounting slot (B).

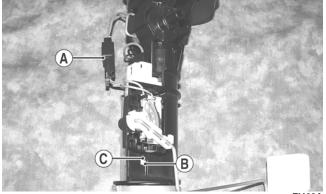

FI460A

B. Engage the tabs (C) of the fuel level sensor into the mounting slot (B) and press toward the bottom of the fuel pump to latch in place; then connect the two-wire connector (A).

INSTALLING

1. Place the fuel pump assembly into the gas tank with a new gasket aligning the match marks; then secure with the four screws. Tighten securely.

■NOTE: It is important to install the fuel pump with the correct orientation to ensure adequate float lever clearance.

- 2. Connect the gasline hose to the fuel pump pipe and secure with the hose clamp; then connect the electrical plug to the main harness.
- 3. Connect the negative battery cable; then turn the ignition switch to the ON position and verify that no gas leaks are present, the pump runs for 2-3 seconds, and the gas gauge reading is normal.
- 4. Start the engine to verify proper engine operation; then shut off the engine and install the right-side seat-base, center console, and seats making sure the seats lock securely into place.

Vacuum Pulse Fuel Pump (650 cc)

■NOTE: The vacuum pulse fuel pump is a nonserviceable assembly. If the pump fails, it must be replaced.

AT THIS POINT

Prior to removing the vacuum pulse fuel pump, the following test should be performed to determine that removal is necessary.

Whenever any maintenance or inspection is made on the fuel system during which there may be fuel leakage, there should be no welding, smoking, open flames, etc., in the area.

TESTING


1. Disconnect the fuel pump/carburetor hose at the fuel pump; then connect a hose and suitable pressure gauge to the fuel pump output fitting.



Back to TOC






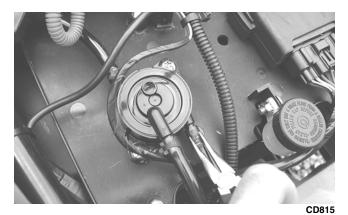

2. Start the engine. Fuel pump pressure should show 0.036-0.084 kg/cm² (0.5-1.2 psi).

REMOVING

1. Remove the right-side seat-base; then remove the three clamps securing the gas hoses and vacuum hose and disconnect the hoses.

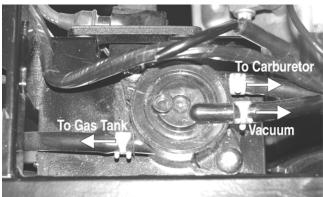

- PR280A
- 2. Remove the two machine screws and flange nuts securing the fuel pump to the electrical tray; then remove the pump.

INSTALLING

- 1. Place the fuel pump into position on the electrical tray; then secure with the machine screws and flange nuts. Tighten securely.
- 2. Connect two gas hoses and one vacuum hose; then secure with the clamps.

Fuel Level Sensor (650 cc)

REMOVING

1. Remove the seats and the center console; then remove the right-side seat-base.


2. Remove the gasline hose and disconnect the fuel level sensor connector; then remove four torx-head machine screws and the fuel level sensor mounting plate.



3. Remove the fuel level sensor from the gas tank. Account for a seal.

INSPECTING

- 1. Inspect the fuel screen and clean with low pressure compressed air.
- 2. Move the float lever and check for free movement. The float assembly should drop to the "empty" position when the fuel level sensor is held vertically. If there is binding or sticking, replace the fuel level sensor.
- 3. Test the fuel level sensor by connecting a multimeter (A) to the fuel level sensor connector (B); then select OHMS on the multimeter. The multimeter should read 5 ohms of resistance at "full fuel" position (C) and 95 ohms at the "empty fuel" position (D).

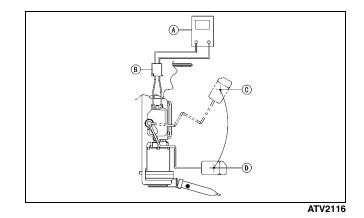

■NOTE: If readings are erratic, clean the resistor wiper and resistor with a clean cloth soaked with alcohol and retest. If the readings shown are not as specified, replace the fuel level sensor assembly.



www.mymowerparts.com



INSTALLING

- 1. Using a new seal, place the fuel level sensor into position in the gas tank; then secure the fuel level sensor mounting plate. Tighten the four torx-head machine screws securely.
- 2. Connect the fuel level sensor connector to the main harness; then install the gasline hose and secure with the clamp.
- 3. Install the right-side seat-base; then install the center console and seats making sure the seats lock securely into place.









Troubleshooting

(650 cc)

Pro	Problem: Starting impaired			
Со	ndition	Remedy		
1.	Starter jet obstructed	1. Clean jet		
2.	Starter jet passage obstructed	2. Clean passage		
З.	Carburetor leaking air	3. Replace gasket		
Pro	blem: Idling or low speed impaired			
Со	ndition	Remedy		
1.	Slow jet obstructed - loose	1. Clean - tighten jet		
2.	Slow jet outlet obstructed	2. Clean outlet		
З.	Pilot screw setting incorrect	3. Adjust screw		
4.	Float height incorrect	4. Adjust float height		
Pro	bblem: Medium or high speed impaired			
Со	ndition	Remedy		
1.	High RPM "cut out" against RPM limiter	1. Shift into higher gear - decrease RPM speed		
2.	Main jet obstructed	2. Clean main jet		
З.	Needle jet obstructed	3. Clean needle jet		
4.	Vacuum piston not operating properly	4. Check piston operation		
5.	Filter obstructed	5. Clean filter		
6.	Float height incorrect	6. Adjust float height		
Pro	blem: Overflow and fuel level fluctuations			
Со	ndition	Remedy		
1.	Float valve worn - damaged	1. Replace valve		
2.	Float valve spring broken	2. Replace spring		
3.	Float not working properly	3. Adjust float height - replace float		
4.	Float valve dirty	4. Clean valve		
5.	Float height too high - too low	5. Adjust float height		

Troubleshooting (550/700 cc)

Problem: Starting impaired	
Condition	Remedy
1. Gas contaminated	1. Drain gas tank and fill with clean gas
Problem: Idling or low speed impaired	
Condition	Remedy
1. TPS out of adjustment	1. Adjust TPS
Problem: Medium or high speed impaired	
Condition	Remedy
1. High RPM "cut out" against RPM limiter	1. Decrease RPM speed



SECTION 5 -ELECTRICAL SYSTEM

TABLE OF CONTENTS

Electrical System	5-2
Specifications	5-2
Battery	
RPM Limiter	
Testing Electrical Components	5-3
Switches	
Electrical Connections	5-4
Accessory Receptacle/Connector	
Brakelight Switch	
Coolant Temperature and Cooling Fan Switches	
(650 cc)	
Engine Coolant Temperature (ECT) Sensor	
(550/700 cc)	5-5
Fan Motor	
Power Distribution Module (PDM)	
Ignition Coil	5-7
EFI Sensors/Components (550/700 cc)	5-8
Speed Sensor	
Ignition Switch	
Headlight Switch	
2WD/4WD/Differential Lock Switch	
(Prowler/XTX)	5-10
2WD/4WD Selector Switch (XT)	
Differential Lock Switch (XT)	
Reverse Override Switch	
Front Drive Actuator	
Stator Coils (650 cc)	
Stator Coil/Crankshaft Position	_
(CKP) Sensor (550/700 cc)	5-13
Starter Motor	
Starter Relay	
CDI Unit (650 cc)	
Electronic Control Unit (ECU) (550/700 cc)	5-15
Regulator/Rectifier	
Headlights	
Taillight-Brakelight	
Ignition Timing	
ECU Error Codes (550/700 cc)	
Tilt Sensor (550/700 cc)	
Throttle Position Sensor (TPS) (550/700 cc)	
Troubleshooting	

Electrical System

■NOTE: Some photographs and illustrations used in this section are used for clarity purposes only and are not designed to depict actual conditions.

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

Description	p/n
Fluke Model 73 Multimeter	0644-191
MaxiClips	0744-041
Peak Voltage Reading Adapter	0644-307
Test Plug/Error Code List	0444-216

■NOTE: Special tools are available from the Arctic Cat Service Parts Department.

Specifications

	cc	
Spark Plug Type		Champion RG6YC
Spark Plug Gap		0.7-0.8 mm (0.028-0.032 in.)
Spark Plug Cap		5000 ohms
Ignition Coil Resistance (s	(primary) secondary)	Less than 1 ohm (terminal to ground) 5200-7800 ohms (high tension - plug cap removed - to ground)
Ignition Coil Peak (pri Voltage	imary/CDI)	142.4-213.6 DC volts (blue/white to ground)
Stator Coil Resistance	(trigger) (charging) (signal)	160-240 ohms (green to blue) Less than 1 ohm (black to black) Less than 1 ohm (yellow to white)
Peak Voltage	(trigger) (signal)	4.2-6.3 volts (green to blue) 0.4-0.6 volts (yellow to white)
Charging Coil Output	(no load)	60 AC volts @ 5000 RPM (black to black)
AC Generator Output	(approx)	325W @ 5000 RPM

550/70	00 cc
Spark Plug Type	NGK CR6E
Spark Plug Gap	0.7-0.8 mm (0.028-0.032 in.)
Spark Plug Cap	5000 ohms
Resistance	Less than 1 ohm (terminal (+) to terminal (-)) 12k-19k ohms (high tension - plug cap to terminal (+))
Ignition Coil Primary Voltage	Battery Voltage (orange (+) to blue/white (-))
	150-250 ohms (blue to white) Less than 1 ohm (yellow to yellow)
Crankshaft Position Sensor AC Volt- age	5.0 or more (blue to green)
AC Generator Output (no load)	60 AC volts @ 5000 RPM (yellow to yellow)

Battery

The battery is located in a compartment in front of the left-rear wheel under the operator's seat.

■NOTE: To access the battery box, the left-rear fender splash panel must be removed.

After being in service, batteries require regular cleaning and recharging in order to deliver peak performance and maximum service life. The following procedures are recommended for cleaning and maintaining lead-acid batteries. Always read and follow instructions provided with battery chargers and battery products.

Anytime service is performed on a battery, the following must be observed: keep sparks, open flame, cigarettes, or any other flame away. Always wear safety glasses. Protect skin and clothing when handling a battery. When servicing battery in enclosed space, keep the area well-ventilated. Make sure battery venting is not obstructed.

- 1. Remove the battery hold-down; then disconnect the battery cables (negative cable first).
- 2. Disconnect the vent hose.
- 3. Remove the battery from the vehicle; then thoroughly wash the battery and battery compartment with soap and water.

■NOTE: If battery posts, cable ends, or the battery case has a build-up of white/green powder residue, apply water and baking soda to neutralize acid; then flush off with warm soapy water.

4. Using a wire brush, clean the battery posts and cable ends removing all corrosive buildup. Replace damaged cables or cable ends.

www.mymowerparts.com

Back to TOC



5. Add clean distilled water to bring fluid level to the UPPER level line.

Battery acid is harmful if it contacts eyes, skin, or clothing. Care must be taken whenever handling a battery.

Never use electrolyte (sulfuric acid) to "top off" the battery. Use only distilled water or severe battery damage may occur.

6. Using a multimeter, test the battery voltage. The meter must read at least 12.5 DC Volts for a fully charged battery.

■NOTE: At this point, if the meter reads as specified, the battery may be returned to service (see step 10).

- 7. If the meter reads less than specified voltage, charge the battery using the following guidelines.
 - A. When using an automatic battery charger, always follow the charger manufacturer's instructions.
 - B. When using a constant-current battery charger, use the following Battery Charging Chart.

Never exceed the standard charging rate.

An overheated battery could explode causing severe injury or death. Always monitor charging times and charge rates carefully. Stop charging if the battery becomes very warm to the touch. Allow it to cool before resuming charging.

Battery Charging Chart (Constant-Current Charger)					
Battery Voltage (DC)	Charge State	Charge Time Required (at 1.5-2.0 Amps)			
12.5 or more	100%	None			
12.2-12.4	75%-99%	3-6 hours			
12.0-12.2	50%-74%	5-11 hours			
11.0-11.9	25%-49%	13 hours (minimum)			
11.5 or less	0-24%	20 hours (minimum)			

■NOTE: If the battery voltage is 11.5 DC Volts or less, some chargers may "cut off" and fail to charge. If this occurs, connect a fully charged booster battery in parallel (positive to positive and negative to negative) for a short period of time with the charger connected. After 10-15 minutes, disconnect the booster battery leaving the charger connected and the charger should continue to charge. If the charger "cuts off," replace the bat-

wwwwymymowerparts.com





- 8. After charging the battery for the specified time, remove the battery charger and allow the battery to sit for 1-2 hours.
- 9. Connect the multimeter and test the battery voltage. The meter should read at least 12.5 DC Volts. If the voltage is as specified, the battery is ready for service.

■NOTE: If voltage in step 9 is below specifications, charge the battery an additional 1-5 hours; then retest. Recheck electrolyte level and the battery is ready for service.

10. Place the battery in the battery compartment; then coat the battery posts and cable ends with a light coat of multi-purpose grease.

Before installing the battery, make sure the ignition switch is in the OFF position.

11. Connect the battery cables (positive cable first); then install the battery hold-down.

Connecting cables in reverse (positive to negative and negative to positive) can cause serious damage to the electrical system.

RPM Limiter

■NOTE: The UTV is equipped with a CDI unit/ECU that retards ignition timing when maximum RPM is approached. When the RPM limiter is activated, it could be misinterpreted as a high-speed misfire.

Testing Electrical Components

All of the electrical tests should be made using the Fluke Model 73 Multimeter and when testing peak voltage, the Peak Voltage Reading Adapter must be used. If any other type of meter is used, readings may vary due to internal circuitry. When troubleshooting a specific component, always verify first that the fuse(s) are good, that the bulb(s) are good, that the connections are clean and tight, that the battery is fully charged, and that all appropriate switches are activated.

■NOTE: For absolute accuracy, all tests should be made at room temperature of 68° F.



Switches

Each time the vehicle is used, switches should be checked for proper operation. Use the following list for reference.

- A. Ignition/start switch engine will run; starter will engage.
- B. 2WD/4WD selector switch differential will engage (4WD)/disengage (2WD).
- C. Reverse/neutral/high/low switch R/N/H/L will be indicated on the LCD.
- D. Headlight switch high beam, low beam, and lights off can be selected.
- E. Brake switch brakelight illuminates and starter can be engaged with vehicle in gear.

Electrical Connections

The electrical connections should be checked periodically for proper function. In case of an electrical failure, check fuses, connections (for tightness, corrosion, damage), and/or bulbs.

Accessory Receptacle/Connector

■NOTE: This test procedure is for either the receptacles or the connectors.

VOLTAGE

- 1. Turn the ignition switch to the ON position; then set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the red/white wire or the positive connector; then connect the black tester lead to ground.
- 3. The meter must show battery voltage.

■NOTE: If the meter shows no battery voltage, troubleshoot the battery, fuse, receptacle, connector, or the main wiring harness.


Brakelight Switch

The switch connector is the two-prong black connector below the master cylinder.

■NOTE: The ignition switch must be in the ON position.

VOLTAGE (Wiring Harness Connector)

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the orange wire; then connect the black tester lead to ground.

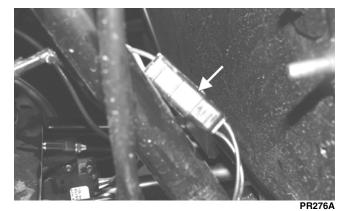

3. The meter must show battery voltage.

■NOTE: If the meter shows no battery voltage, troubleshoot the battery, fuse, switch, or the main wiring harness.

■NOTE: If the meter shows battery voltage, the main wiring harness is good; proceed to test the switch/component, the connector, and the switch wiring harness for resistance.

RESISTANCE (Switch Connector)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

■NOTE: The brake pedal must be depressed for this test.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to one black wire; then connect the black tester lead to the other black wire.

www.mymowerparts.com



Back to TOC





- AR621D
- 3. When the lever is depressed, the meter must show less than 1 ohm.


■NOTE: If the meter shows more than 1 ohm of resistance, replace the switch.

Coolant Temperature and Cooling Fan Switches (650 cc)

- 1. Connect the meter leads (selector in the OHMS position) to the switch contacts.
- 2. Suspend the switch and a thermometer in a container of cooking oil; then heat the oil.

■NOTE: Neither the switch nor the thermometer should be allowed to touch the bottom of the container or inaccurate readings will occur. Use wire holders to suspend switch and thermometer.

Wear insulated gloves and safety glasses. Heated oil can cause severe burns.

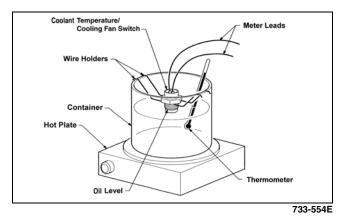

3. On the coolant temperature switch when the oil temperature reaches 112-118° C (234-244° F), the meter should show a closed circuit.

- 4. On the coolant temperature switch, allow the oil to cool, and when the temperature is within a temperature range of 107-113° C (225-235° F), the meter should show an open circuit.
- 5. On the cooling fan switch when the temperature reaches 81-99° C (175-213° F), the meter should show a closed circuit.
- 6. On the cooling fan switch, allow the oil to cool, and when the temperature is within a temperature range of 67-82° C (150-184° F), the meter should show an open circuit.
- 7. If the readings are not as indicated, the switch must be replaced.
- 8. Install the switch and tighten securely.
- 9. Connect the switch leads.

Engine Coolant Temperature (ECT) Sensor (550/700 cc)

- 1. Connect the meter leads (selector in OHMS position) to the sensor terminals.
- 2. Suspend the sensor and a thermometer in a container of cooking oil; then heat the oil.

■NOTE: Neither the sensor nor the thermometer should be allowed to touch the bottom of the container or inaccurate readings will occur. Use wire holders to suspend the sensor and thermometer.

Wear insulated gloves and safety glasses. Heated oil can cause severe burns.

- 3. On the ECT sensor when the temperature reaches 40° C (104° F), the meter should read approximately 1136 ohms.
- 4. On the ECT sensor when the temperature reaches 100° C (212° F), the meter should read approximately 155 ohms.
- 5. If the readings are not as indicated, the sensor must be replaced.
- 6. Install the sensor and tighten securely.
- 7. Connect the leads.



www.mymowerparts.com





Fan Motor

NOTE: The ignition switch must be in the ON position.

VOLTAGE (Main Harness Connector to Fan Motor)

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the black/red wire (the black 2-prong at the fan motor); then connect the black tester lead to ground.
- 3. The meter must show battery voltage.


■NOTE: If the meter shows no battery voltage, troubleshoot the battery, fuse, motor, or the main wiring harness.

■NOTE: If the meter shows battery voltage, the main wiring harness is good. The connector should be checked for resistance.

RESISTANCE (Fan Motor Connector)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to the red wire; then connect the black tester lead to the black wire.

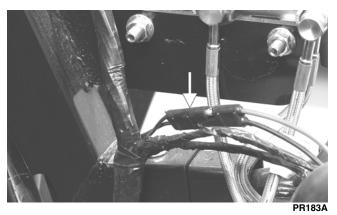

3. The meter must show less than 1 ohm.

■NOTE: If the meter shows more than 1 ohm of resistance, troubleshoot or replace the switch/ component, the connector, or the switch wiring harness.

■NOTE: To determine if the fan motor is good, connect the red wire from the fan connector to a 12 volt DC power supply; then connect the black wire from the fan connector to ground. The fan should operate.

Care should be taken to keep clear of the fan blades.

Power Distribution Module (PDM)

The fuses are located in a power distribution module under the operator's seat.

If there is any type of electrical system failure, always check the fuses first.

- 1. Remove all fuses from the power distribution module.
- 2. Set the meter selector to the DC Voltage position.
- 3. Connect the black tester lead to ground.
- 4. Using the red tester lead, contact each end of the fuse holder connector terminals individually.
- 5. The meter must show battery voltage from one side of the connector terminal ends.

■NOTE: Battery voltage will be indicated from only one side of the fuse holder connector terminal; the other side will show no voltage.

■NOTE: When testing the HI fuse holder, the headlight OFF/HI/LO switch must be in the HI position; when testing the LIGHTS fuse holder, the headlight dimmer switch can be in either the HI or the LO position.

■NOTE: If the meter shows no battery voltage, troubleshoot the battery, switches, power distribution module, or the main wiring harness.

FUSES

The main fuses are located in a power distribution module under the operator's seat.

If there is any type of electrical system failure, always check the fuses first.


■NOTE: To remove the fuse, compress the locking tabs on either side of the fuse case and lift out.










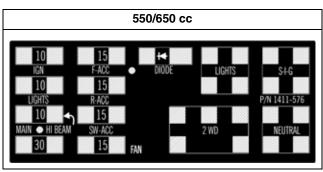

1411-576

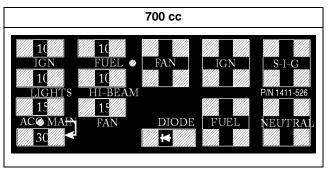

1411-526

Always replace a blown fuse with a fuse of the same type and rating.

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to one spade end of the fuse; then connect the black tester lead to the other spade end.
- 3. The meter must show less than 1 ohm resistance. If the meter shows open, replace the fuse.

■NOTE: Make sure the fuses are returned to their proper position according to amperage. Refer to the amperage listed under each fuse on the power distribution module.

RELAYS

The relays are indentical plug-in type located on the power distribution module. Relay function can be checked by switching relay positions. The relays are interchangeable.

■NOTE: The module and wiring harness are not a serviceable component and must be replaced as an assembly.

Ignition Coil

The ignition coil is mounted on the fuel pump mounting plate adjacent to the fuel pump.

VOLTAGE (Primary Side)

See PEAK VOLTAGE Primary Coil (650 cc) or Primary Coil (550/700 cc) in this sub-section.


RESISTANCE

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

■NOTE: For these tests, the meter selector should be set to the OHMS position.

Primary Winding

1. Connect the red tester lead to the terminal (with the wire removed); then connect the black tester lead to ground.

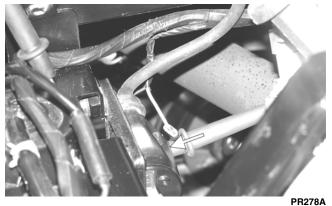

2. The meter reading must be within specification.

Secondary Winding

- 1. Connect the red tester lead to the high tension lead (with the plug cap removed); then connect the black tester lead to ground.
- 2. The meter reading must be within specification.

■NOTE: If the meter does not show as specified, replace ignition coil.

Spark Plug Cap


1. Connect the red tester lead to one end of the cap; then connect the black tester lead to the other end of the cap.

www.mymowerparts.com







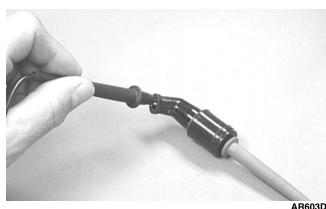

AR603D

2. The meter reading must be within specification.

■NOTE: If the meter does not show as specified, replace the spark plug cap.

PEAK VOLTAGE

■NOTE: On the 650 cc, all of the peak voltage tests should be made using the Fluke Model 73 Multimeter with Peak Voltage Reading Adapter. If any other type of tester is used, readings may vary due to internal circuitry. Do not use the adapter on the 550/700 cc.

■NOTE: The battery must be at full charge for these tests.

Primary Coil (650 cc)

- 1. Set the meter selector to the DC Voltage position; then disconnect the blue/white primary wire from the coil.
- 2. Connect the red tester lead to the primary wire; then connect the black tester lead to ground.

Do not touch the primary wire with the ignition switch turned on or severe electrical shock will occur.

- 3. Turn the ignition switch to the ON position.
- 4. The meter must be within specification.
- 5. With the test leads still connected, crank the engine with the electric starter.
- 6. The meter must show 300-450 DC volts.

Primary Coil (550/700 cc)

1. Set the meter selector to the DC Voltage position; then disconnect the two wires from the coil.

■NOTE: The coil is located to the right of the engine and may be accessed from behind the right-side seat with the cargo box raised.

2. Connect the red tester lead to the orange wire and the black tester lead to the blue/white wire.





3. Turn the ignition switch to the ON position. The meter must show battery voltage.

EFI Sensors/ Components (550/700 cc)

CRANKSHAFT POSITION (CKP) SENSOR

To test the CKP sensor, see Stator Coil/Crankshaft Position (CKP) Sensor (550/700 cc) in this section.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR

- 1. Disconnect the MAP connector from the pressure sensor located on the throttle body.
- 2. Select DC Voltage on the tester and turn the ignition switch to the ON position.
- 3. Connect the black tester lead to the black/green wire and the red tester lead to the orange/blue wire. The meter should read 4.5-5.5 DC volts. If the meter does not read as specified, check the ECU connector or wiring.
- 4. Connect the MAP to the harness; then using Maxi-Clips, connect the red tester lead to the brown/white wire and the black tester lead to the black/green wire. With the engine running at idle speed, the meter should read approximately 1.5 DC volts.


■NOTE: If the meter does not read as specified, replace the sensor.

Speed Sensor

■NOTE: Prior to testing the speed sensor, inspect the three-wire connector on the speed sensor for contamination, broken pins, and/or corrosion.

- 1. Set the meter selector to the DC Voltage position.
- 2. With appropriate needle adapters on the meter leads, connect the red tester lead to the voltage lead (V); then connect the black tester lead to the ground lead (G).



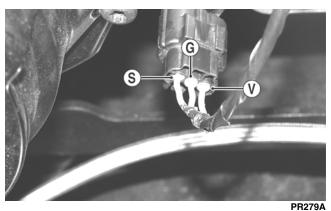

PR2/9A

- 3. Turn the ignition switch to the ON position.
- 4. The meter must show approximately 6 DC volts.
- 5. Leave the black tester lead connected; then connect the red tester lead to the signal lead pin (S).
- 6. Slowly move the vehicle forward or backward; the meter must show 0 and approximately 6 DC volts alternately.

■NOTE: If the sensor tests are within specifications, the speedometer must be replaced (see Section 9).


To replace a speed sensor, use the following procedure.

- 1. Disconnect the three-wire connector from the speed sensor harness or from the speed sensor; then remove the Allen-head cap screw securing the sensor to the sensor housing.
- 2. Remove the sensor from the sensor housing accounting for an O-ring.



CD070

3. Install the new speed sensor into the housing with new O-ring lightly coated with multi-purpose grease; then secure the sensor with the Allen-head cap screw (threads coated with blue Loctite #242). Tighten securely.

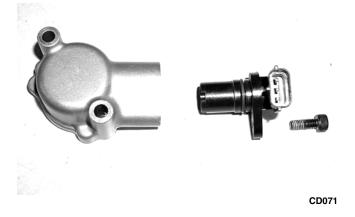

Ignition Switch

To access the ignition switch, dash switches, front accessory connectors, and front switched accessory connector, the dash must be unfastened and slid to the rear.

VOLTAGE

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red meter lead to the red wire; then connect the black meter lead to ground.
- 3. Meter must show battery voltage.

■NOTE: If the meter shows no battery voltage, troubleshoot the main 30 amp fuse, the battery, or the main wiring harness.

- 4. Connect the red meter lead to the red/black wire; then with the black lead grounded, turn the ignition switch to the ON position. The meter must show battery voltage.
- 5. Connect the red meter lead to the yellow/green wire; then with the black lead grounded, turn the ignition switch to the START position. The starter should engage and the meter must show battery voltage.

■NOTE: When the starter is engaged, battery voltage will be approximately 10.5 DC volts.

Headlight Switch

VOLTAGE

- 1. Connect the red meter lead to the gray wire; then connect the black meter lead to the black wire.
- 2. Turn the ignition switch to the ON position. The meter must show battery voltage.







■NOTE: If the meter does not show battery voltage, troubleshoot the LIGHTS fuse on the power distribution module, the ignition switch, or the main harness.

- 3. Connect the red meter lead to the yellow wire; then select the high beam position on the headlight switch. The meter must show battery voltage.
- 4. Connect the red meter lead to either of the two white wires; then select the low beam position on the headlight switch. The meter must show battery voltage.

■NOTE: The battery voltage will show lower in steps 3 and 4 due to electrical loading of the head-lights.


2WD/4WD/Differential Lock Switch (Prowler/XTX)

RESISTANCE

1. Remove the switch assembly from the dash; then disconnect the harness from the switch.

■NOTE: The switch can be removed from the dash using a thin, flat pry bar or suitable putty knife. It is not necessary to remove the dash to remove the switch.

2. Using an ohmmeter, the following readings must be observed.

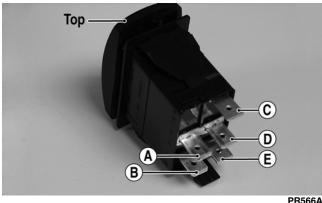

		THOUGA
2WD	4WD	DIFFERENTIAL LOCK
A to D <1 ohm	A to D <1 ohm	A to D <1 ohm
C to E <1 ohm	C to E <1 ohm	C to E <1 ohm
A to B Open	A to B <1 ohm	A to B <1 ohm
A to C Open	A to C Open	A to C <1 ohm
A to E Open	A to B <1 ohm	A to C <1 ohm

VOLTAGE

■NOTE: Voltage tests must be made with the switch and the actuator connected. The meter can be connected at the actuator connector using a break-out harness or MaxiClips.

- 1. Connect the black tester lead to the black wire; then turn the ignition switch to the ON position.
- 2. Select the DC Volts position on the tester and observe the meter readings for each of the three switch positions.

WIRE COLOR	2WD	4WD	DIFFERENTIAL LOCK
Black to Orange	12.0 DC Volts	12.0 DC Volts	12.0 DC Volts
Black to White/Green	11.5 DC Volts	0 DC Volts	0 DC Volts
Black to White/Red	11.5 DC Volts	11.5 DC Volts	0 DC Volts

■NOTE: If the meter does not show voltages according to the chart, make sure the front drive actuator is plugged in; then troubleshoot the switch, ignition fuses, battery connections, or wiring harness.

2WD/4WD Selector Switch (XT)

RESISTANCE

1. Remove the switch assembly from the dash; then disconnect the harness from the switch.


■NOTE: The switch can be removed from the dash using a thin, flat pry bar or suitable putty knife. It is not necessary to remove the dash to remove the switch.

2. Using an ohmmeter, the following readings must be observed.







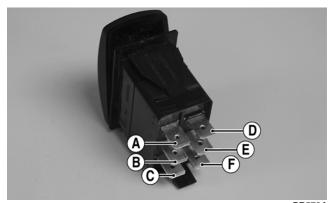

PR573A

2WD	4WD
A to B <1 ohm	A to B Open
E to F Open	E to F <1 ohm

Differential Lock Switch (XT)

VOLTAGE

1. Select DC Voltage on the multimeter; then connect the red tester lead to the switch terminal (leaving the wire connected) and the black tester lead to ground.




2. Turn the ignition switch to the ON position. The meter must show 12 DC volts.

■NOTE: If no voltage is indicated, check the wiring harness, fuse, or battery connections.

3. Select the lock position on the differential. The meter should drop to 0 volts, and the front drive actuator should operate to engage 4-wheel drive.

■NOTE: It may be necessary to rock the vehicle slightly to engage the differential lock fully.

■NOTE: The 4WD and LOCK icons in the upper-left corner of the LCD should illuminate.

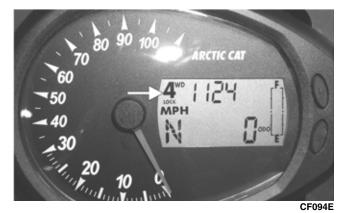

4. If the differential lock engages (front wheels locked) and the voltage does not drop to 0, the switch is faulty and must be cleaned or replaced.

Reverse Override Switch

VOLTAGE

■NOTE: To perform the following tests, the ignition switch must be in the ON position and the transmission shifted into reverse gear.

- 1. Connect the red meter lead to the black/blue wire and the black meter lead to a suitable ground; then select 2WD on the 2WD/4WD selector switch. The meter must show approximately 1.5 DC volts.
- 2. Depress the reverse override switch. The meter showing should not change from step 1.
- 3. Select 4WD on the 2WD/4WD selector switch. The meter must show approximately 5 DC volts.
- 4. Depress the reverse override switch. The meter must show approximately 1.5 DC volts.
- 5. Connect the red meter lead to the red/yellow wire. The meter must show approximately 1.5 DC volts. Depress the reverse override switch. The meter must show approximately 1.5 DC volts.
- 6. Connect the red meter lead to the red/green wire. The meter should show 0 DC volts.
- 7. Depress the reverse override switch. The meter must show approximately 5 DC volts.









5


Front Drive Actuator

■NOTE: With the engine stopped and the ignition switch in the ON position, a momentary "whirring" sound must be noticeable each time the selector switch is moved to 2WD and 4WD. Test the switch, 30 amp fuse, and wiring connections prior to testing the actuator.

NOTE: The differential must be in the unlocked position for this procedure.

VOLTAGE

1. Locate the 4-wire connector for the front drive selector actuator on the frame to the right of the differential; then connect the red meter lead to the orange wire using a MaxiClip.

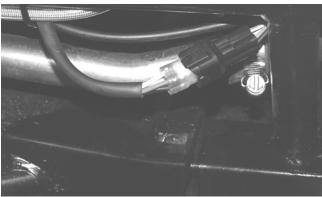

PR293

2. Connect the black lead to the black wire using a MaxiClip; then select 2WD on the 2WD/4WD selector switch.



■NOTE: The black tester lead can remain connected to the black wire for the remaining tests.

3. Turn the ignition switch to the ON position. The meter must show battery voltage.

■NOTE: If battery voltage is not shown, troubleshoot the 10 amp ignition (IGN) fuse on the power distribution module, the ignition switch, or the main wiring harness.

- 4. Connect the red meter lead to the white/red wire. The meter must show battery voltage.
- 5. Select 4WD on the 2WD/4WD selector switch. The meter must show 0 DC volts.
- 6. Connect the red meter lead to the white/orange wire. The meter must show battery voltage.
- 7. Engage the differential lock. The meter must show 0 DC volts.

■NOTE: If the meter does not show 0 DC volts, rock the vehicle to help engage the differential lock; then troubleshoot the differential lock switch (see Differential Lock Switch (XT) in this section).

Stator Coils (650 cc)

VOLTAGE (Generator Regulated Output)

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the positive battery post; then connect the black tester lead to the negative battery post.
- 3. With the engine running at a constant 5000 RPM (with the headlights on), the meter must show 14-15.5 DC volts.

Do not run the engine at high RPM for more than 10 seconds.

■NOTE: If voltage is lower than specified, test Charging Coil - No Load.

VOLTAGE (Charging Coil - No Load)

The connector is the three-wire one on the left side of the engine just above the centrifugal clutch housing.

■NOTE: Test the connector that comes from the engine.

- 1. Set the meter selector to the AC Voltage position.
- 2. Test between the three black wires for a total of three tests.









3. With the engine running at the specified RPM, all wire tests must be within specification.

Do not run the engine at high RPM for more than 10 seconds.

■NOTE: If both stator coil tests failed, replace the stator assembly.

RESISTANCE (Charging Coil)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to OHMS position.
- 2. Test between the three black wires for a total of three tests.
- 3. The meter reading must be within specification.

RESISTANCE (Trigger Coil)

A CAUTION

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to the green wire; then connect the black tester lead to the blue wire. The meter reading must be within specification.

RESISTANCE (Signal Coil)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to the yellow wire; then connect the black tester lead to the white wire. The meter reading must be within specification.

PEAK VOLTAGE

■NOTE: All of the peak voltage tests should be made using the Fluke Model 73 Multimeter with Peak Voltage Reading Adapter. If any other type of tester is used, readings may vary due to internal circuitry.

■NOTE: The battery must be at full charge for these tests.

Trigger Coil

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the green wire; then connect the black tester lead to the blue wire.

www.mymowerparts.com





- 3. Crank the engine over using the electric starter.
- 4. The meter reading must be within specification.

Signal Coil

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the yellow wire; then connect the black tester lead to the white wire.
- 3. Crank the engine over using the electric starter.
- 4. The meter reading must be within specification.

Stator Coil/Crankshaft Position (CKP) Sensor (550/700 cc)

VOLTAGE (AC Generator - Regulated Output)


- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the positive battery post; then connect the black tester lead to the negative battery post.
- 3. With the engine running at a constant 5000 RPM (with the headlights on), the meter must show 14-15.5 DC volts.

Do not run the engine at high RPM for more than 10 seconds.

■NOTE: If voltage is lower than specified, test AC Generator - No Load.

VOLTAGE (AC Generator -No Load)

The connector is the black three-pin one on the left side above the shift lever.

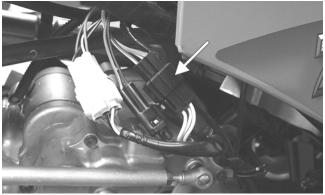

FI083B

■NOTE: Test the connector that comes from the engine.





- 1. Set the meter selector to the AC Voltage position.
- 2. Test between the three yellow wires for a total of three tests.
- 3. With the engine running at a constant 5000 RPM, all wire tests must be within specification.

Do not run the engine at high RPM for more than 10 seconds.

■NOTE: If both stator coil tests failed, check all connections, etc., and test again. If no voltage is present, replace the stator assembly.

RESISTANCE (AC Generator)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to OHMS position.
- 2. Test between the three yellow wires for a total of three tests.
- 3. The meter reading must be within specification.

RESISTANCE (Crankshaft Position Sensor)

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

- 1. Set the meter selector to the OHMS position.
- 2. Connect the red tester lead to the blue wire; then connect the black tester lead to the white wire. The meter reading must be within specification.

AC VOLTAGE

■NOTE: The battery must be at full charge for these tests.

Crankshaft Position Sensor

- 1. Set the meter selector to the AC Voltage position.
- 2. Connect the red tester lead to the blue wire; then connect the black tester lead to the green wire.
- 3. Crank the engine over using the electric starter.
- 4. The meter reading must be within specification.

Starter Motor

■NOTE: The starter motor is not a serviceable component. If the motor is defective, it must be replaced.

REMOVING

1. Disconnect the battery.

Always disconnect the negative battery cable from the battery first; then disconnect the positive cable.

- 2. Remove the nut securing the positive cable to the starter; then remove the cable from the starter.
- 3. Remove the two cap screws securing the starter with ground wires to the crankcase; then remove the starter. Account for the wiring forms and an O-ring.

INSTALLING

- 1. Apply a small amount of grease to the O-ring seal on the starter; then install the starter into the crankcase. Secure with two machine screws and wiring forms.
- 2. Secure the positive cable to the starter with the nut.
- 3. Connect the battery.

TESTING VOLTAGE

Perform this test on the starter motor positive terminal. To access the terminal, slide the boot away.

■NOTE: The ignition switch must be in the ON position, and the shift lever in the NEUTRAL position.

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the starter terminal; then connect the black tester lead to ground.
- 3. With the starter button depressed, the meter must show battery voltage and the starter motor should operate.





www.mymowerparts.com





(Back to Section TOC




■NOTE: If the meter showed battery voltage but the starter did not operate or operated slowly, inspect battery voltage (at the battery), starter motor condition, and/or ground connections.

■NOTE: If the meter showed no battery voltage, inspect the main fuse, ground connections, starter motor lead, battery voltage (at the battery), starter relay, or the neutral start relay.

Starter Relay

- 1. Remove the operator seat; then using the multimeter set to the DC Voltage position, check the relay as follows.
- 2. Connect the red tester lead to the positive battery terminal; then connect the black tester lead to the starter cable connection on the starter relay. The meter must show battery voltage.

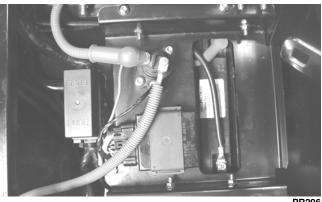

PR296

■NOTE: Make sure that the ignition switch is in the ON position, transmission in neutral, and parking brake set.

3. Depress the starter button while observing the multimeter. The multimeter should drop to 0 volts and a "click" should be heard from the relay.


■NOTE: If a "click" is heard and any voltage is indicated by the multimeter, replace the starter relay. If no "click" is heard and the multimeter continues to indicate battery voltage, proceed to step 4.

4. Disconnect the two-wire plug from the starter relay; then connect the red tester lead to the green wire and the black tester lead to the black wire.

www.mymowerparts.com





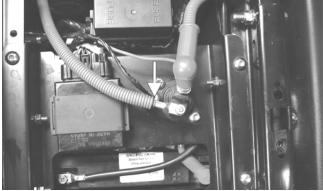

PR297A

5

5. Depress the starter button and observe the multimeter.

■NOTE: If battery voltage is indicated, replace the starter relay. If no voltage is indicated, proceed to Neutral Start Relay check.

CDI Unit (650 cc)

The CDI is located beneath the operator's seat near the battery.

■NOTE: The CDI unit is not a serviceable component. If the unit is defective, it must be replaced.

The CDI is rarely the cause for electrical problems; however, if the CDI is suspected, substitute another CDI unit to verify the suspected one is defective.

■NOTE: Prior to replacing the CDI unit to assure the CDI unit is defective, it is advisable to perform a CDI peak voltage test (see Ignition Coil in this section) and/or perform a continuity test of the wiring harness from the CDI connector to the CDI unit.

Electronic Control Unit (ECU) (550/700 cc)

The ECU is located beneath the seat near the battery.

■NOTE: The ECU is not a serviceable component. If the unit is defective, it must be replaced.

The ECU is rarely the cause for electrical problems; however, if the ECU is suspected, substitute another ECU to verify the suspected one is defective.

This EFI system has a built-in feature that will only allow an ECU of the same part number to be used in this model. Do not attempt to substitute an ECU from a different model as the system will not allow it to start.



Back to Section TOC

Error codes can be cleared by following the procedures located in the ECU Error Codes (550/700 cc) sub-section in this section.

Regulator/Rectifier

The regulator/rectifier is located under the operator's seat next to the battery. Try to verify all other charging system components before the regulator/rectifier is replaced.

TESTING

- 1. Start engine and warm up to normal operating temperatures; then connect a multimeter (set at the DC Voltage position) to the battery as follows.
- 2. Connect the red tester lead to the positive battery post and the black tester lead to the negative battery post.
- 3. Slowly increase RPM. The voltage should increase with the engine RPM to a maximum of 15.5 DC volts.

■NOTE: If voltage rises above 15.5 DC volts, the regulator is faulty or a battery connection is loose or corroded. Clean and tighten battery connections or replace the regulator/rectifier. If voltage does not rise, check Voltage in this section. If charging coil voltage is normal, replace the regulator/rectifier.

Headlights

The connectors are the four 2-prong ones secured to the headlight bulbs (two on each side).

VOLTAGE

■NOTE: The low beams are the outside bulbs (black and white wires) and the high beams are the inside bulbs (yellow and black wires). Always connect the black tester lead to the black wires. The ignition switch must be in the ON position.

- 1. Set the meter selector to the DC Voltage position.
- 2. Set the light switch to the correct position for the affected light; then connect the black tester lead to the black wire using a MaxiClip.
- 3. Connect the red tester lead to the yellow wire (high beam) or white wire (low beam) using a MaxiClip. The meter must show battery voltage.

■NOTE: If battery voltage is not shown in any test, inspect the LIGHTS fuse on the power distribution module, headlight switch, ignition switch, switch connectors, or wiring harness.

Taillight-Brakelight

VOLTAGE (Taillight)

■NOTE: Perform this test at the socket end of the taillight-brakelight harness (pigtail). The ignition switch must be in the ON position and either high beam or low beam selected on the light switch.

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the black tester lead to the black wire; then connect the red tester lead to the white wire. The meter should show battery voltage.
- 3. With the ignition key in the LIGHTS position, the meter must show battery voltage.

■NOTE: If battery voltage is not shown and the headlights are illuminated, inspect the three-wire connector in the left-rear canopy tube at the juncture of the canopy tube and lower frame. If battery voltage is shown on the meter, replace the bulb.

VOLTAGE (Brakelight)

■NOTE: Perform this test at the socket end of the taillight/brakelight harness (pigtail). The ignition switch must be in the ON position.

- 1. Set the meter selector to the DC Voltage position.
- 2. Connect the red tester lead to the red/blue wire; then connect the black tester lead to the black wire.
- 3. With the brake applied, the meter must show battery voltage.

■NOTE: If the meter shows no voltage, inspect the 10 amp ignition (IGN) fuse, brakelight switch, wiring harness, or connectors.

Ignition Timing

The ignition timing cannot be adjusted; however, verifying ignition timing can aid in troubleshooting other components. To verify ignition timing, use the following procedure.

■NOTE: To check ignition timing, the seats and center console must be removed.









- 1. Attach the Timing Light to the spark plug high tension lead; then remove the timing inspection plug from the left-side crankcase cover.
- 2. Start the engine and using the RPM function on the speedometer/tachometer, run at 1500 RPM; ignition timing should be 10° BTDC.
- 3. Install the timing inspection plug.


If ignition timing cannot be verified, the rotor may be damaged, the key may be sheared, the trigger coil bracket may be bent or damaged, or the CDI unit/ECU may be faulty.

ECU Error Codes (550/700 cc)

If a sensor fails or an out-of-tolerance signal is sensed by the ECU, an error code will be generated by the ECU. This will result in the analog needle swinging full scale. The EFI icon will flash.

To read the error code(s), use the following procedure.

- 1. Make sure the ignition switch is in the OFF position; then remove the seats.
- 2. Locate the diagnostic plug next to the PDM; then remove the black rubber cap.
- 3. Connect the Test Plug from Test Plug/Error Code List to the diagnostic plug.

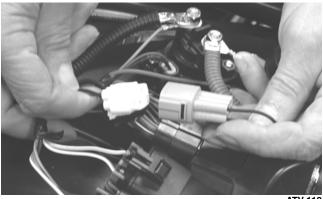

ATV-11

4. Turn the ignition switch to the ON position and read the error code on the LCD. Refer to the following ECU Error Code List to identify the specific problem area.

ECU Error Code List

www.mymowerparts.com

■NOTE: Each of the following numerical codes will have a two-letter prefix. A prefix of AC (Active Code) or SC (Stored Code) will be displayed. Always correct and clear Active Codes before clearing Stored Codes.

- 00 = No Fault Detected (active code only)
- 12 = CKP (Crankshaft Position) Sensor*
- 13 = MAP (Manifold Absolute Pressure) Sensor
- 14 = TPS (Throttle Position Sensor)
- 15 = ECT (Engine Coolant Temperature) Sensor
- 16 = Speed Sensor
- 21 = IAT (Inlet Air Temperature) Sensor
- 23 = Tilt Sensor*
- 24 = Ignition Coil #1*
- 32 = Fuel Injector #1*
- 40 = ISC (Idle Speed Control) Valve
- 41 = Fuel Pump Relay*
- 60 = Cooling Fan Relay
- 95 = Sensor Power
- 96 = Incorrect ECU*
- 97 = ECU Memory Power (constant battery power)
- 99 = Start/Run Not Possible (active code only)
 *Will initiate code 99.

To clear the error code(s), use the following procedure.

■NOTE: The ignition switch should be in the OFF position.

- 1. With the test plug connected to the diagnostic plug and the drive select switch in the 4WD position, hold the reverse override switch down and turn the ignition switch to the ON position.
- 2. After ten seconds, release the reverse override switch and turn the ignition switch to the OFF position; then turn the ignition switch to the ON position. The display should read AC00 (no fault detected).

■NOTE: If the LCD still displays an error code, continue troubleshooting the appropriate component.

- 3. Disconnect the test plug; then install the black rubber cap.
- 4. Install the seats making sure they lock securely in place.

Tilt Sensor (550/700 cc)

Incorrect installation of the tilt sensor could cause sudden loss of engine power which could result in loss of vehicle control resulting in injury or death.

A CAUTION

Do not drop the tilt sensor as shock can damage the internal mechanism.









5

SUPPLY VOLTAGE

1. Disconnect the three-wire connector from the sensor; then select DC Voltage on the multimeter and connect the red tester lead to the orange wire (C) and the black tester lead to the black wire (A).

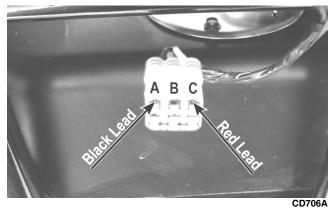

- 2. Turn the ignition switch to the ON position. The multimeter should read battery voltage. If battery voltage is not indicated, check the 30-amp fuse, wiring harness, or the ignition switch.
- 3. Remove the red tester lead and connect to the blue/brown wire (B). The multimeter should read 0 DC volts. If the specified voltage is not indicated, check wire connections at the ECU or substitute another ECU to verify the test.

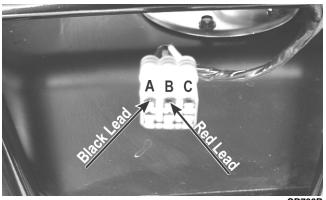





OUTPUT VOLTAGE

■NOTE: Needle adapters will be required on the multimeter leads as the following tests are made with the sensor connected.


1. Connect the three-wire plug to the sensor; then remove the right-side mounting screw securing the sensor to the rear frame.

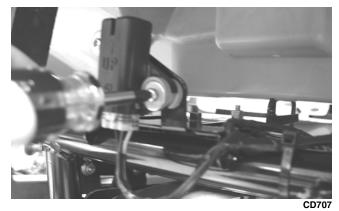

- 2. Install the needle adapters to the multimeter leads; then select DC Voltage on the multimeter.
- 3. Connect the red tester lead to the blue/brown wire (B) and the black tester lead to the black/yellow wire (A); then turn the ignition switch ON and observe the meter. The meter should read 0.8-3.0 DC volts.

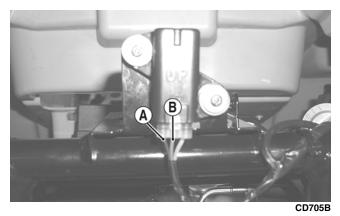

4. Tilt the sensor 60° or more to the left and right observing the meter. The meter should read 4.0-8.0 DC volts after approximately one second in the tilted position. If the meter readings are not as specified, the tilt sensor is defective.

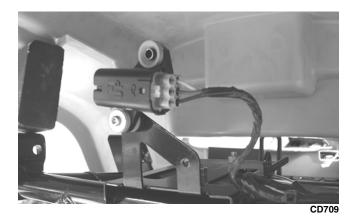


■NOTE: When replacing the sensor after testing, make sure the arrow marking is directed up.



www.mymowerparts.com



(Back to Section TOC)

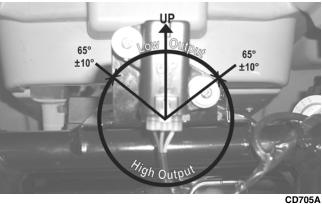

Throttle Position Sensor (TPS) (550/700 cc)

INSPECTING


1. Remove the seats and center console; then disconnect the three-wire TPS connector plug.





■NOTE: Prior to testing the TPS, inspect the three-wire plug connector on the main harness and the three-pin plug on the TPS for contamination, broken pins, and/or corrosion.

- 2. Make sure the ignition switch is in the OFF position; then select the DC Voltage position on the meter.
- 3. Connect the black tester lead to terminal A and the red tester lead to terminal B. Turn the ignition switch to the ON position. The meter should read 4.5-5.5 DC volts.

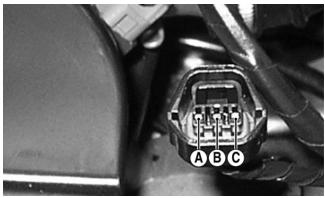

PB538A

-

4. Remove the black tester lead from terminal A and connect it to terminal C. The meter should read 5.0 DC volts.

■NOTE: If the meter does not read as specified, check for poor connections at the ECU or open/broken wires in the wiring harness.


Always make sure the ignition switch is in the OFF position before disconnecting the ECU.

5. Turn the ignition switch to the OFF position; then disconnect the battery (negative cable first).

Always disconnect the battery when performing resistance tests to avoid damaging the multimeter.

6. Select the OHMS position on the meter; then perform the following resistance tests on the TPS.

Throttle Position	Pins	Ohms
Closed	A, B, or C to Ground	Infinity (Open)
	A to B	5.0k
	A to C	650
	B to C	4.5k
Full-Open	A, B, or C to Ground	Infinity (Open)
	A to C	3.8k
	B to C	1.3k

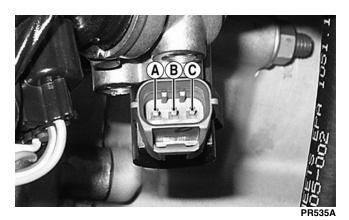



www.mymowerparts.com






Back to Section TOC

■NOTE: If any meter reading is not as specified, replace or adjust the TPS (see INSTALL-ING/ADJUSTING in this sub-section).

- 7. Connect the positive lead to the battery; then connect the negative lead.
- 8. Connect the main harness TPS connector to the TPS; then using MaxiClips, connect the black tester lead to the black wire and the red tester lead to the green/black wire.

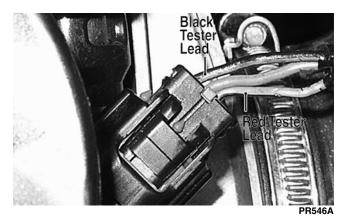

9. Select the DC Voltage position on the meter and turn the ignition switch to the ON position. The meter should read approximately 0.6 DC volts with the throttle closed and approximately 5.0 DC volts with the throttle in the full-open position.


■NOTE: If the meter readings are as specified, check the main harness connector at the ECU main harness wiring. If the meter readings are not as specified, replace the TPS and adjust to specifications (see INSTALLING/ADJUSTING in this sub-section).

Always make sure the ignition switch is in the OFF position before disconnecting the ECU.

10. Clear all ECU error codes after servicing is complete (see ECU Error Codes (550/700 cc) in this section).

REMOVING

1. Remove the seats and center console; then disconnect the three-wire TPS connector plug.

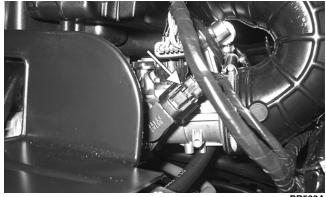

PR533/

2. Remove the screw securing the TPS to the throttle body and remove the TPS.

INSTALLING/ADJUSTING

- 1. Place the TPS into position on the throttle body and secure with the screw. Do not tighten at this time.
- 2. Connect the main harness to the TPS.
- 3. Locate the diagnostic plug under the seat next to the PDM; then install the Test Plug from Test Plug/Error Code List onto the plug.
- 4. Turn the ignition switch to the ON position and note the position of the TPS indicator icon (A, B, or C); then adjust the TPS until the TPS icon appears in the center position (B).



PR542A



PR540A



www.mymowerparts.com





(Back to Section TOC



5. Tighten the mounting screws securely; then verify the TPS icon appears in the center position.

6. Remove the test plug; then install the center console and seats making sure the seats lock securely in place.







Troubleshooting

Problem: Spark absent or weak		
Condition	Remedy	
1. Ignition coil defective	1. Replace ignition coil	
2. Spark plug defective	2. Replace plug	
3. Magneto defective	3. Replace magneto	
4. CDI unit/ECU defective	4. Replace CDI unit/ECU	
5. Pick-up coil defective	5. Replace pick-up coil	
Problem: Spark plug fouled with carbon		
Condition	Remedy	
1. Mixture too rich (650 cc)	1. Adjust carburetor	
2. Idling RPM too high (650 cc)	2. Adjust idle RPM	
3. Gasoline incorrect	3. Change to correct gasoline	
4. Air cleaner element dirty	4. Clean element	
5. Spark plug incorrect (too cold)	5. Replace plug	
6. Valve seals cracked - missing	6. Replace seals	
7. Oil rings worn - broken	7. Replace rings	
Problem: Spark plug electrodes overheat or burn		
Condition	Remedy	
1. Spark plug incorrect (too hot)	1. Replace plug	
2. Engine overheats	2. Service cooling system	
3. Spark plug loose	3. Tighten plug	
4. Mixture too lean (650 cc)	4. Adjust carburetor	
Problem: Battery does not charge		
Condition	Remedy	
1. Lead wires/connections shorted - loose - open	1. Repair - replace - tighten lead wires	
2. Magneto coils shorted - grounded - open	2. Replace magneto coils	
3. Regulator/rectifier shorted - punctured	3. Replace regulator/rectifier	
Problem: Battery charges, but charging rate is below		
Condition	Remedy	
1. Lead wires shorted - open - loose (at terminals)	1. Repair - tighten lead wires	
2. Stator coils (magneto) grounded - open	2. Replace stator coils	
3. Regulator/rectifier defective	3. Replace regulator/rectifier	
4. Electrolyte low	4. Add distilled water	
5. Cell plates (battery) defective	5. Replace battery	
Problem: Magneto overcharges		
Problem: Magneto overcharges Condition	Remedy	
Problem: Magneto overcharges Condition 1. Internal battery short circuited	Remedy 1. Replace battery	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective	Remedy 1. Replace battery 2. Replace resistor	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective 3. Regulator/rectifier poorly grounded	Remedy 1. Replace battery	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective 3. Regulator/rectifier poorly grounded Problem: Charging unstable	Remedy 1. Replace battery 2. Replace resistor 3. Clean - tighten ground connection	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective 3. Regulator/rectifier poorly grounded Problem: Charging unstable Condition	Remedy 1. Replace battery 2. Replace resistor 3. Clean - tighten ground connection Remedy	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective 3. Regulator/rectifier poorly grounded Problem: Charging unstable Condition 1. Lead wire intermittently shorting	Remedy 1. Replace battery 2. Replace resistor 3. Clean - tighten ground connection Remedy 1. Replace lead wire	
Problem: Magneto overcharges Condition 1. Internal battery short circuited 2. Regulator/rectifier resistor damaged - defective 3. Regulator/rectifier poorly grounded Problem: Charging unstable Condition	Remedy 1. Replace battery 2. Replace resistor 3. Clean - tighten ground connection Remedy	







Pro	Problem: Starter button not effective				
Со	ndition	Remedy			
1.	Battery charge low	1. Recharge - replace battery			
2.	Switch contacts defective	2. Replace switch			
3.	Starter motor brushes not seating	3. Replace starter			
4.	Starter relay defective	4. Replace relay			
5.	Emergency stop - ignition switch off	5. Turn on switches			
6.	Wiring connections loose - disconnected	6. Connect - tighten - repair connections			
Pro	Problem: Battery "sulfation" (Acidic white powdery substance or spots on surfaces of cell plates)				
Со	ndition	Remedy			
1.	Charging rate too low - too high	1. Replace battery			
2.	Battery electrolyte excessive - insufficient	2. Keep electrolyte to prescribed level			
3.	Specific gravity too high - too low	3. Charge battery - add distilled water			
4.	Battery run-down - damaged	4. Replace battery			
5.	Electrolyte contaminated	5. Replace battery			
	blem: Battery discharges too rapidly				
Со	ndition	Remedy			
1.	Electrolyte contaminated	1. Replace battery			
2.	Specific gravity too high	2. Charge battery - add distilled water			
3.	Charging system (charging operation) not set properly	 Check magneto - regulator/rectifier - circuit connections adjust for specified charging operation 			
4.	Cell plates overcharged - damaged	4. Replace battery - correct charging system			
5.	Battery short-circuited	5. Replace battery			
6.	Specific gravity too low	6. Recharge battery			
Pro	Problem: Battery polarity reversed				
Со	ndition	Remedy			
1.	Battery incorrectly connected	1. Reverse connections - replace battery			





SECTION 6 - DRIVE SYSTEM

TABLE OF CONTENTS

Drive System	6-2
Front Drive Actuator	
Front Differential	6-3
Drive Axles	6-15
Rear Gear Case (Prowler/XT)/	
Rear Differential (XTX)	6-20
Hub	6-21
Hydraulic Brake Caliper	6-23
Universal Joints	6-24
Troubleshooting	6-27



Drive System

■NOTE: Some photographs and illustrations used in this section are used for clarity purposes only and are not designed to depict actual conditions.

■NOTE: Critical torque specifications are located in Section 1.

GENERAL INFORMATION

All gear cases are tagged beneath a cover bolt. This tag is marked with a production date code, sequence code, and a ratio code. All gear cases are 4.0:1 ratio.

The die-cast aluminum housings have been assembled with thread-rolling screws (trilobular). When assembling with these screws, start the screws carefully into the housing; then use the following torque values.

Size	New Housing	Reassembled Housing
M6 (Torx T-30 Recess)	9 ft-lb	8 ft-lb
M8 (Torx T-40 Recess)	28 ft-lb	23 ft-lb

SPECIAL TOOLS

A number of special tools must be available to the technician when performing service procedures in this section. Refer to the current Special Tools Catalog for the appropriate tool description.

Description	p/n
CV Boot Clamp Tool	0444-120
Internal Hex Socket	0444-104
Pinion Gear/Shaft Removal Tool	0444-127
Gear Case Seal Installer Tool	0444-224
U-Joint Separator Tool	0444-128

■NOTE: Special tools are available from the Arctic Cat Service Parts Department.

Front Drive Actuator

■NOTE: The actuator is not a serviceable component. If it is defective, it must be replaced.

■NOTE: The actuator will operate only when the ignition switch is in the ON position.

The front drive actuator is located on the right side of the front drive input housing. With the engine stopped and the ignition switch in the ON position, a momentary "whirring" sound can be heard each time the front drive selector switch is shifted. If no sound is heard, see Section 5. If the actuator runs constantly or makes squealing or grinding sounds, the actuator must be replaced.


REMOVING

- 1. Select 4WD on the front drive selector switch; then disconnect the connector on the actuator harness.
- 2. Using a T-30 torx wrench, remove the mounting cap screw from the driveshaft side of the actuator.



PR189A

3. Remove the mounting cap screw from above the actuator on the suspension side.

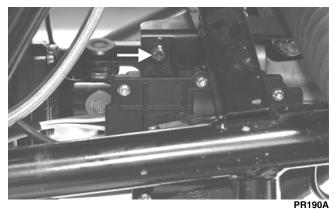

4. Loosen but do not remove the mounting cap screw at the front of the actuator; then slide the actuator to the rear enough to clear the slotted mounting tab and the selector shaft. Remove from the right side.








AG928


INSTALLING

- 1. Lubricate the O-rings on the actuator; then ensure that all mounting surfaces are clean and free of debris.
- 2. Align the actuator with the selector shaft and slide it forward onto the shaft taking care to engage the cap screw in the slot of the front mounting tab.

■NOTE: On the Prowler/XTX, make sure to properly align the differential lock actuator lever with the hole in the differential lock plunger.

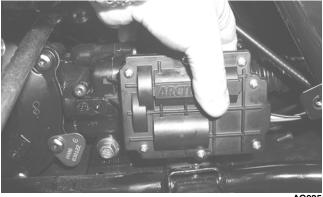

- ∆G925
- 3. While holding the actuator firmly forward, tighten the front cap screw to hold the actuator in place; then install but do not tighten the two remaining cap screws.

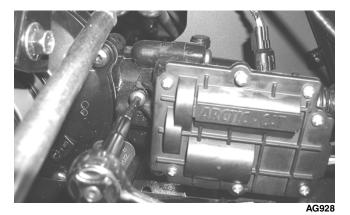

4. Loosen the front cap screw; then tighten the cap www.seremonterogivesbaffside.







AG926

6

■NOTE: It is important to tighten this cap screw while the others are loose to ensure proper seating of the actuator.

- 5. Tighten the remaining cap screws; then connect the electrical plug to the main harness.
- 6. Turn the ignition switch to the ON position and check the operation by shifting the selector switch several times.
- 7. Secure the wiring harness to the frame with a nylon cable tie; then install the inner fender panel.

Front Differential

REMOVING


1. Remove the belly panel; then place the vehicle on jack stands adjusted high enough to allow working from the underside of the vehicle.

■NOTE: The jack stands should be placed under the main frame to avoid contact with front suspension components.

Make sure the vehicle is solidly supported on the jack stands to avoid injury.

2. Remove the drain plug and drain the gear lubricant into a drain pan; then install the plug and tighten to 45 in.-lb.



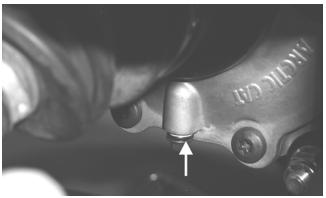

PR022/

- 3. Remove the front wheels.
- 4. Set the parking brake; then turn the ignition switch to the ON position and select 4WD on the 2WD/4WD selector switch.
- 5. Remove the cotter pin securing the hex nut; then remove the hex nut.
- 6. Release the parking brake.

■NOTE: It is not necessary to remove the brake hoses from the calipers for this procedure.

7. Remove the two brake calipers. Account for the four cap screws; then remove the hubs.





8. Disconnect the front drive actuator power connector from the main harness; then disconnect the differential lock indicator connector from the differential lock switch located on the right-side of the differential.




www.mymowerparts.com


9. Remove two cap screws securing the differential lock cable support; then disconnect the differential lock cable at the differential.





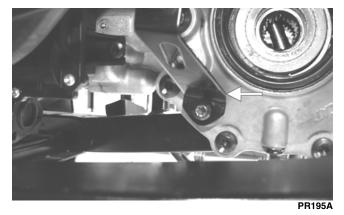

10. Remove the lower and upper ball joint cap screws taking care not to strip the threads on the ball joint shaft; then using a rubber mallet, tap the end of the axle and free it from the knuckle assembly.

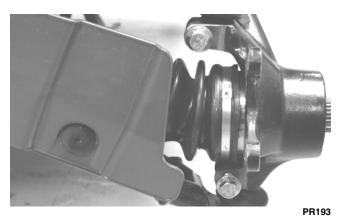

11. Pull the steering knuckle away from the axle.











12. Support the axle to not allow it to drop or hang.

The axle must be supported. If the axle is allowed to drop or hang, damage to the inner CV joint may occur.

13. Remove the lower shock bolts. Account for the lock nuts; then move the shocks and upper A-arm up and secure them with a strap.

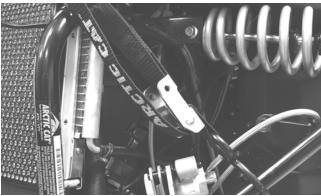

- PR200
- 14. Scribe match marks on the front input drive flange and the front drive yoke flange; then remove the cap screws securing the yoke and flange. Separate the flanges but do not remove the driveshaft.

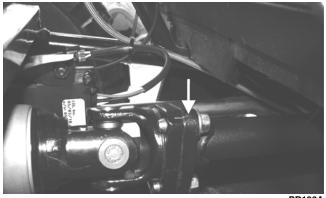


PR198A

15. Using a slide hammer, remove the front axles.



16. Remove the lower differential mounting cap screw. Account for a lock nut and four washers. Note the position of the washers for assembling.

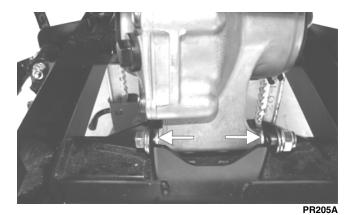

17. Remove the upper differential mounting cap screw. Account for a lock nut and two washers.



18. Free the differential assembly from the frame mountings; then lower the differential through the frame.

Disassembling Input Shaft

1. Using a T-40 torx wrench, remove the cap screws securing the pinion housing.

www.mymowerparts.com




Back to TOC







G

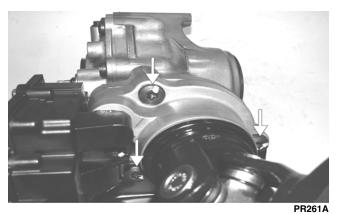

2. Using a rubber mallet, remove the housing. Account for a gasket. Remove the fork, collar, and spring. Note the location of all the components for assembling purposes.

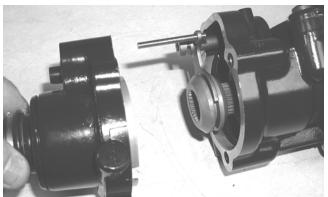

CD103

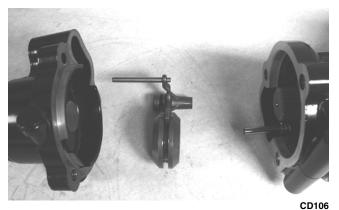

3. Remove the input shaft from the pinion housing.

4. Using a seal removal tool, remove the input shaft seal. Account for a spacer.




AF982

5. Remove the snap ring securing the input shaft bearing; then place the pinion housing in a press and remove the bearing.





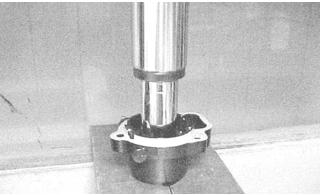

AF984



www.mymowerparts.com










KX219

Assembling Input Shaft

1. Place the pinion housing in a press and install the input shaft bearing. Secure the bearing with the existing snap ring making sure the sharp edge of the snap ring faces to the outside.

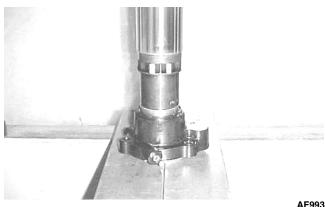



KX222

4. Install the input shaft into the pinion housing; then secure in the bearing with a circlip.



KX210A

5. Place the pinion housing with new gasket onto the differential housing; then secure with existing cap screws. Tighten to 23 ft-lb.

■NOTE: If a new differential housing is being installed, tighten the cap screws to 28 ft-lb.



6



AF994

- 2. Install the input shaft seal making sure it is flush with the edge of the housing.
- 3. Lubricate the input shaft splines with High-Performance #2 Molybdenum Disulphide Grease.

■NOTE: Any time drive splines are separated, clean all splines with parts-cleaning solvent and dry with compressed air; then lubricate with recommended grease.



KX221












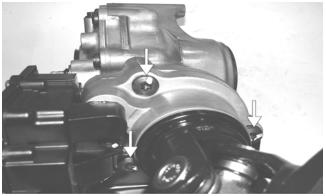

PR261A


Disassembling Differential Assembly

■NOTE: This procedure can be performed on a rear gear case (Prowler/XT)/rear differential (XTX).

1. Using a T-40 torx wrench, remove the cap screws securing the pinion housing. Account for the coupler, fork, and spring.



2. Using a T-40 torx wrench, remove the cap screws securing the differential cover. Account for and make note of the ID tag location for assembling purposes.

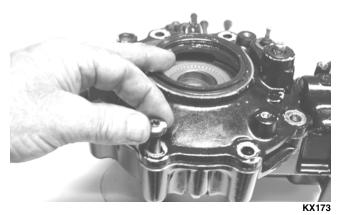


3. Using a plastic mallet, tap lightly to remove the differential cover. Account for an O-ring.




■NOTE: If the cover is difficult to remove, pry on the cover in more than one recessed location.

4. Remove the splined coupler, shifter fork, pin, and spring of the differential lock assembly and set aside. Note position of parts for assembling purposes.

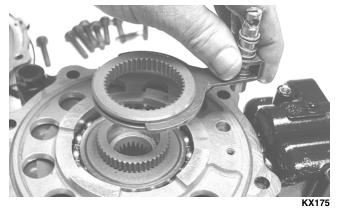

5. Remove the left differential bearing flange assembly and account for a shim. Mark the shim as left-side.

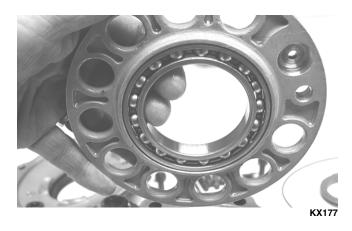



www.mymowerparts.com





(Back to Section TOC)






6. Place the differential with the open side down; then lift the housing off the spider assembly. Account for shim(s) and mark as right-side.



KX179




7. Using the 48 mm Internal Hex Socket, remove the lock collar securing the pinion gear assembly.

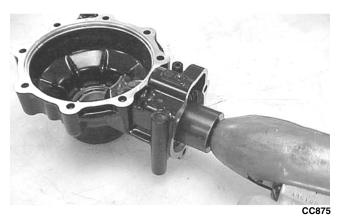


www.mymowerparts.com



8. Using the Pinion Gear/Shaft Removal Tool and a hammer, remove the pinion gear from the gear case housing.

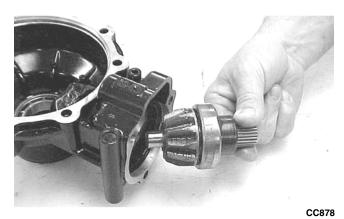

9. Secure the pinion gear in a bearing puller; then remove the pinion bearing using a press. Account for a collar and a bearing.

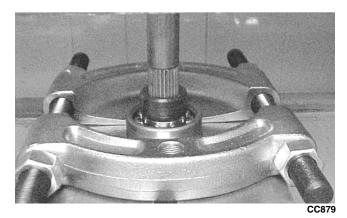

■NOTE: If gears are being replaced, use the existing shims. The numbers are scribed onto the gears: the ring gear has the number on the opposite side of the gears, and the pinion gear has the number on the end of the pinion gear shaft by the splines. If no number is present, it should be considered as being in the 0 category.

■NOTE: If the differential housing is being replaced, proceed to the following Shimming Procedure/Shim Selection sub-section.



6

Back






Shimming Procedure/ Shim Selection

- 1. Press bearings into bores by outer ring to hard contact with seat.
- 2. Install the lock collar and tighten to 125 ft-lb; then stake the lock collar edge approximately 1.5 mm (0.060 in.) into the lower oil channel.



CC891

3. Note the following shim selections (shims are nominally 1.5 mm/0.060 in. thick):

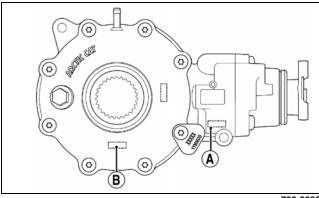



738-268C

- A. Cover Side add value A on the differential housing to value B on the differential housing cover; then add 1.5 mm (0.060 in.). This will give you the proper shim thickness.
- B. Gear Case Side install a 1.3-1.4 mm (0.050-0.055 in.) shim and tighten the bolts to 28 ft-lb. Verify backlash to be within a range of 0.28-0.38 mm (0.011-0.015 in.) and end-play to be within a range of 0.10-0.20 mm (0.004-0.008 in.). If not within specification range, reselect shim until backlash specification range can be verified.
- 4. Prior to final assembling, apply molybdenum disulfide grease to all oil seal lips.
- 5. Prior to final assembling, prelubricate journal on pinion assembly with SAE 80W-90 hypoid gear lubricant prior to pressing assembly into differential housing.


Assembling Pinion Gear

1. Install the bearing onto the pinion shaft. Install the pinion shaft collar.

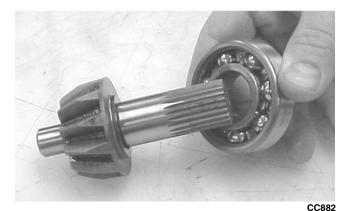

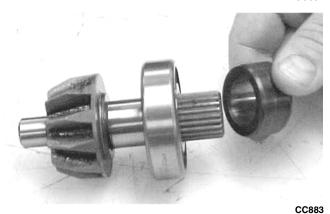

2. Place the pinion assembly in a bearing puller; then install the bearing using a press.

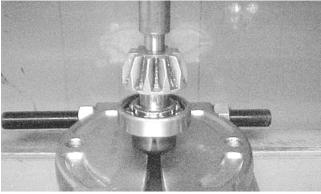

CC884

3. Install the pinion gear assembly into the housing. Using the 48 mm Internal Hex Socket, secure the pinion gear assembly with the existing lock collar. Tighten to 125 ft-lb.

■NOTE: On a front differential, the lock collar has right-hand threads. On a rear gear case/differential, the lock collar has left-hand threads.

Back to Section TOC








CC890

4. Place a punch on the edge of the lock collar in the oil gallery area; then using a hammer, stake the lock collar to ensure that the collar will remain securely tightened.




CC891

5. Install the shift fork shaft w/spring into the housing making sure the shaft O-ring is positioned to the inside.

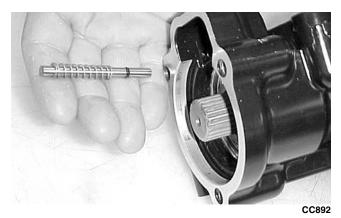


6. Install the shift fork assembly making sure the fork leg is facing upward. Apply a small amount of oil to the gasket; then install the gasket.

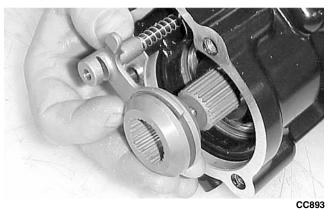

7. Place the input shaft assembly onto the housing; then secure with the existing cap screws. Tighten to 23 ft-lb.

■NOTE: If a new housing is being installed, tighten the cap screws to 28 ft-lb.

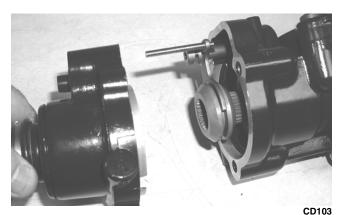



CD110

8. Install the proper shim onto the ring gear spider assembly making sure the chamfer side of the shim is facing toward the ring gear. Install the ring gear in the housing; then install the outside shim with the chamfer side of the shim toward the ring gear.

■NOTE: The spider and ring gear assembly must be replaced as a complete unit.


9. Assemble the fork and sliding collar into the cover assembly; then install the left bearing flange/bearing assembly and seat firmly into the cover.






(Back to Section TOC



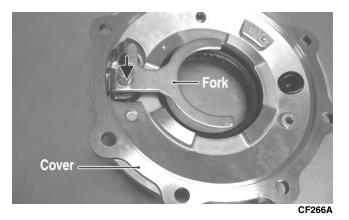

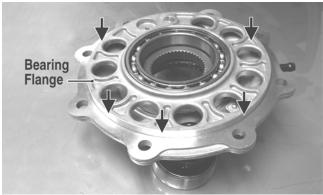

- CF267A
- 10. Apply a liberal coat of grease to the O-ring; then install it on the assembled cover assembly making sure to seat the O-ring completely down around the circumference of the bearing flange.



- 11. Making sure the O-ring is properly positioned on the differential housing cover assembly, install the
- cover with existing hardware. Account for the ID tag. Tighten the cap screws to 23 ft-lb.

■NOTE: Grease can be applied to the O-ring for ease of assembling.

■NOTE: If a new housing is being installed, tighten the cap screws to 28 ft-lb.

Removing Needle Bearing


■NOTE: Removing the needle bearing is rarely necessary. Avoid removing the needle bearing unless the bearing is clearly damaged.






■NOTE: This procedure can be performed on a rear gear case (Prowler/XT)/rear differential (XTX).

1. Place a 1/4 in. drill bit on the inside surface of the needle bearing (against the bottom side); then drill through the pinion shaft needle bearing housing.

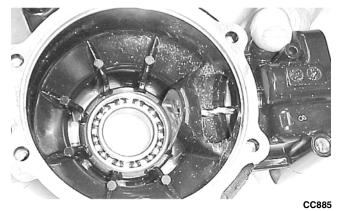

2. Using a propane torch, heat the area surrounding the needle bearing to soften the Loctite.

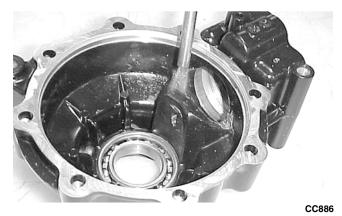

3. Using a flat-nosed punch, drive the bearing out of the housing.



CC887

Installing Needle Bearing

1. Apply red Loctite #271 to the outside of a new bearing; then place the new bearing into the housing.







U

2. Using a suitable driver, install the needle bearing into the housing making sure the bearing is seated.


■NOTE: Do not push the bearing too far into the housing.

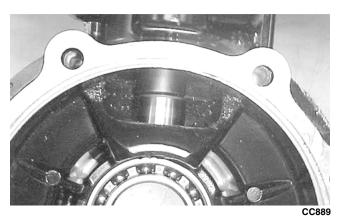

3. Install the pinion shaft and secure with the existing 48 mm lock collar. Tighten to 125 ft-lb.

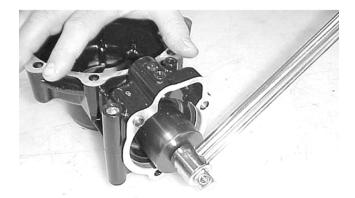

4. Place a punch on the edge of the lock collar in the oil gallery area; then using a hammer, stake the lock collar to ensure that the collar will remain securely tightened.

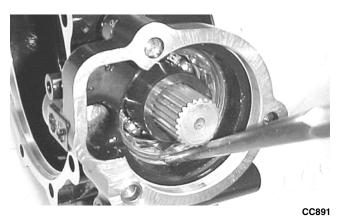

5. Install the pinion housing.

Removing/Installing Axle Seal

■NOTE: This procedure can be performed on a rear gear case (Prowler/XT)/rear differential (XTX).

1. Remove the seal using a seal removal tool.



CC899

6

2. Using a press, remove the bearing.



3. Using a press, install the new bearing into the housing.




www.mymowerparts.com





CC890

(Back to Section TOC)

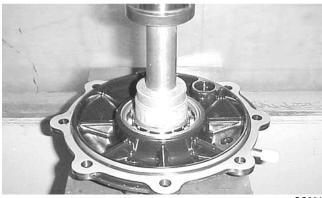

CC901

■NOTE: Prior to installing the seal, apply grease to the seal outside diameter.

4. Using Gear Case Seal Installer Tool, evenly press the seal into the cover bore until properly seated.




Make sure the tool is free of nicks or sharp edges or damage to the seal may occur.


5. Repeat steps 1-4 for the opposite side.

INSTALLING DIFFERENTIAL


- 1. Place the differential assembly into position in the frame; then install the top mounting through-bolt, two washers, and lock nut. Do not tighten at this time.
- 2. Install the lower front mounting through-bolt, washers, spacers, and lock nut. Note the correct location for the spacer washers.

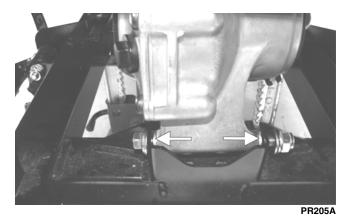

- 3. Tighten the nuts to 38 ft-lb.
- 4. Pour 275 ml (9.3 fl oz) of SAE 80W-90 hypoid lubricant into the differential and install the fill plug. Tighten to 16 ft-lb.
- 5. Align the scribed match marks on the front input drive flange and the front drive yoke flange; then secure with the cap screws tightened to 20 ft-lb.

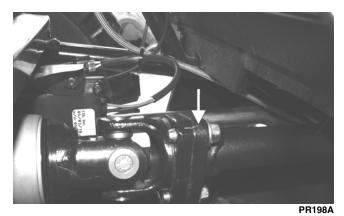

- 6. Install the front axles (see Drive Axles in this section).
- 7. Install the knuckle assemblies onto the axles and ball joints; then secure with four cap screws taking care not to damage the threads when installing. Tighten to 35 ft-lb.

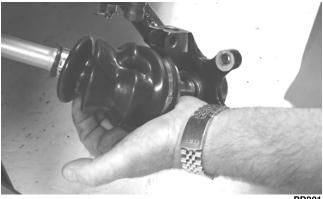


Back to Section TOC

PR201











PR193

8. Secure the lower shock eyelets with cap screws and lock nuts. Tighten to 33 ft-lb.

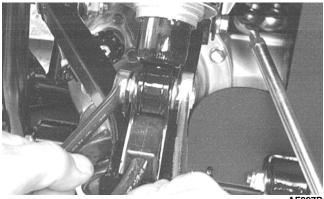



- 9. Install the brake calipers. Secure with the "patch-lock" cap screws tightened to 20 ft-lb.
- 10. Install the differential lock cable support making sure to connect the cable end in the actuator plunger; then secure with two torx-head cap screws and tighten securely.

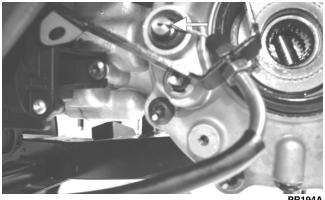



- 11. Connect the front drive actuator connector to the main harness and the differential lock indicator connector to the differential; then secure the wires to the frame with nylon ties.
- 12. Apply a light coat of multi-purpose grease to the hub splines; then install the hubs and nuts. Tighten to 200 ft-lb; then install new cotter pins.



- 13. Install the wheels and tighten to 45 ft-lb.
- 14. Remove the vehicle from the support stand.
- 15. Install the belly panel.

Drive Axles

REMOVING REAR DRIVE AXLE

1. Secure the vehicle on a support stand to elevate the wheels.

Make sure the vehicle is solidly supported on the support stand to avoid injury.

- 2. Set the parking brake; then remove the wheels.
- 3. Remove the cotter pins securing the hex nuts; then remove the hex nuts.



4. Slide the hub out of the knuckle and set aside.










6



PR221

5. Remove the cap screw and lock nut securing the knuckle to the upper A-arm. Discard the lock nut.

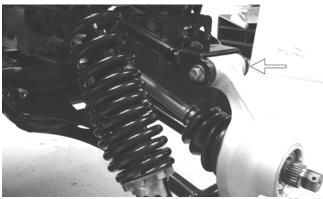

PR220A

■NOTE: Never reuse a lock nut. Once a lock nut has been removed, it must be replaced with a new lock nut.

6. While holding the drive axle stationary, pull the top of the knuckle out and down until it is free of the drive axle.



7. Place a drain pan under the vehicle to contain any oil leakage; then using a slide hammer, remove the drive axle.



AF935

REMOVING FRONT DRIVE AXLE

■NOTE: For removing a front drive axle, see Front Differential in this section.

CLEANING AND INSPECTING AXLES

■NOTE: Always clean and inspect the drive axle components to determine if any service or replacement is necessary.

1. Using a clean towel, wipe away any oil or grease from the axle components.



2. Inspect boots for any tears, cracks, or deterioration.

■NOTE: If a boot is damaged in any way, it must be replaced with a boot kit.

DISASSEMBLING AXLES

1. Using a side-cutters (or suitable substitute), remove the large clamp from the boot.











2. Wipe away excess grease to access the retaining ring. Using an awl or circlip pliers, remove the circlip.



CD021

3. Using a snap ring pliers, remove the snap ring securing the bearing ring to the shaft. Note the direction of the bearing for assembling purposes.



CD023

4. Note the difference inside each bearing ring end for assembling purposes; then remove the bearing ring.

NOTE: The recess of the bearing must face toward the housing.



CD022

5. Inspect the splines of the shaft, the bearing ring, and the housing for damage.

■NOTE: If any damage is apparent to the splines, the bearing ring, and/or the housing, the drive axle must be replaced as an assembly.

6. Using a side-cutters (or suitable substitute), remove the small clamp from the shaft.



CD752

6

■NOTE: At this point if the outside boot is damaged, continue with step 7.

7. Using a side-cutters (or suitable substitute), remove both outside boot clamps from the shaft. Note the position of the different-sized clamps for assembling purposes.



CD751










8. Apply 40 grams (1/3 of contents) of grease from the grease pack included in Front Axle Boot Repair Kit into the knuckles and the new outside boot.

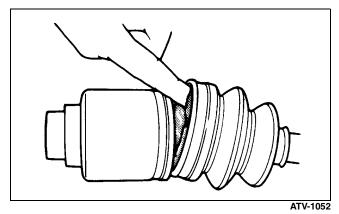

■NOTE: The grease pack contains 120 grams of grease. The inside joint (double-offset) requires

grease. The inside joint (double-offset) requires approximately 70-90 grams of grease and the outside (bell-type) requires approximately 35-55 grams. When replacing boots, use 2/3 of the pack for inside boots and 1/3 of the pack for outside boots.

Do no over-fill the joint as boot damage may occur resulting in joint failure.

9. Slide the new outside boot onto the shaft with the new clamps positioned as shown. Note the different-sized clamps from removal.

■NOTE: The boot is positioned correctly when the small end of the boot seats down into the recessed groove.



CD754

10. Using CV Boot Clamp Tool, secure both outside boot clamps.

It is important that the clamps are positioned correctly or they may loosen when in motion.



CD024


ASSEMBLING AXLES

1. Install the inner boot with the small clamp making sure the ends of the clamp are positioned correctly.

■NOTE: The boot is positioned correctly when the small end of the boot seats down into the recessed groove.



2. Using the boot clamp tool, secure the small clamp of the inner boot.

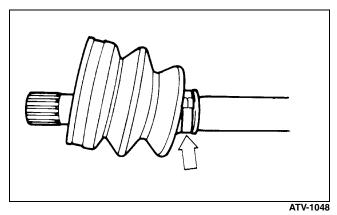

- 3. Apply 80 grams (2/3 of contents) of grease from the pack into the bearing housing.
- 4. Install the bearing onto the shaft making sure the recess of the bearing is facing the housing.







(Back to Section TOC





CD022

The bearing ring must go onto the shaft with the side without splines facing toward the small clamp of the inner boot or severe damage will result.

5. Secure the bearing ring with the snap ring making sure the sharp side of the snap ring faces away from the boot.



CD023

CD021

6. Making sure the marks made during disassembling align, slide the housing over the bearing ring; then completely seat the bearing ring into the housing and install the snap ring.

■NOTE: Pull the bearing ring out of the housing until it contacts the snap ring; then slide the ring in half way. This will purge air from the housing and ensure the bearing is packed properly.



7. Slide the boot over the housing; then using the www.wpphelawppheressecure the boot with the clamp.



Back to TOC



CD024


8. Inspect the axle components for correct positioning of the four clamps. Also, inspect the boots for being correctly positioned on the shaft.

INSTALLING REAR DRIVE AXLE

1. Slide the drive axle into place in the gear case.

■NOTE: To assure proper seating of the axle, give it a light pull; the axle should remain "clipped" in place.

- 2. Swing the knuckle up and onto the drive axle; then place the knuckle into place in the upper A-arm. Secure the knuckle to the A-arm with a cap screw and a new lock nut. Tighten to 33 ft-lb.
- 3. Place the hub into position on the axle followed by a hex nut. Tighten the hex nut finger-tight at this time.
- 4. Tighten the hub hex nut (from step 3) to 200 ft-lb; then install and spread a new cotter pin making sure each side of the pin is flush to the hub nut.

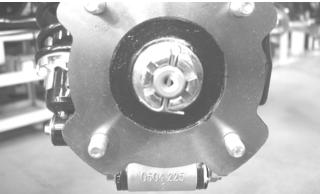

CD027

6

- 5. Install the wheel. Tighten to 45 ft-lb.
- 6. Remove the vehicle from the support stand and release the parking brake.


INSTALLING FRONT DRIVE AXLE

1. Position the drive axle in the gear case and steering knuckle; then insert the ball joints into the steering knuckles. Secure with cap screws tightened to 35 ft-lb.




Back to Section TOC

- 2. Secure the lower shock eyelet to the A-arm with a cap screw and a new lock nut. Tighten to 33 ft-lb.
- 3. Slide the hub w/brake disc into position in the steering knuckle followed by a hex nut. Tighten finger-tight at this time.
- 4. Install the brake caliper on the steering knuckle. Tighten to 20 ft-lb.
- 5. Set the parking brake; then turn the ignition switch to the ON position, select 4WD on the 2WD/4WD drive selector switch, and engage the differential lock. Turn the ignition switch to the OFF position.
- 6. Tighten the hub hex nut (from step 3) to 200 ft-lb; then install and spread a new cotter pin making sure each side of the pin is flush to the hub nut.

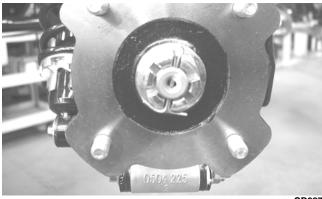

- 7. Install the wheel and tighten to 45 ft-lb.
- 8. Remove the vehicle from the support stand.
- 9. Check the front differential lubricant level and add lubricant as necessary.

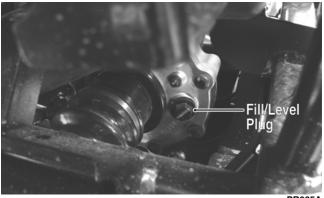


PR065A

Rear Gear Case (Prowler/XT)/ Rear Differential (XTX)

REMOVING

■NOTE: Release the cargo box latch and allow the cargo box to tilt back; then remove the cargo box lift support by removing the cap screw and nut securing the lower lift support to the frame. The cargo box will tilt fully rearward.

- 1. Drain the lubricant from the rear gear case/differential; then remove both rear drive axles (see Drive Axles in this section).
- 2. Remove the driveline brake caliper; then cut the rear-most propeller shaft boot clamp and slide the boot forward.
- 3. Remove the boot clamps on the rear driveline boot.
- 4. Remove the two cap screws and lock nuts securing the rear gear case/differential to the frame; then remove the gear case/differential through the upper left-side of the frame and lift out the top.

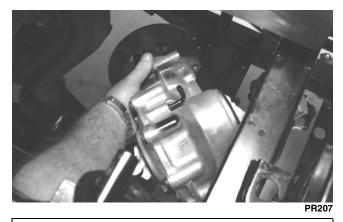

R AT THIS POINT

For servicing the input shaft, pinion gear, needle bearing, and axle seal, see Front Differential in this section.

INSTALLING

- 1. Slide the gear case/differential into position down through the upper-left side of the frame; then align the driveline splines to the differential input coupler and engage the driveline and differential.
- 2. Pack the driveline boot with the appropriate grease; then secure with the boot clamps using CV Boot Clamp Tool.

Back

www.mymowerparts.com



(Back to Section TOC



- 3. Secure the differential to the frame with two through-bolts and secure with lock nuts and flat washers. Tighten to 38 ft-lb.
- 4. Install the rear drive axles (see Drive Axles in this section).
- 5. Install the driveline brake caliper and tighten the mounting cap screws to 20 ft-lb; then adjust the parking brake (see Parking Brake in Section 2).
- 6. Fill the differential (XTX) or gear case (Prowler/XT) with the appropriate lubricant.

Hub

REMOVING

1. Secure the vehicle on a support stand to elevate the wheel; then remove the wheel.

■NOTE: Removing or tightening of the hub nuts requires that the axles be locked. To lock the rear axle, set the parking brake. To lock the front axle, turn the ignition switch to ON, select 4WD on the 2WD/4WD drive selector switch, and engage the differential lock; then set the parking brake and turn the ignition switch to OFF.

Make sure the vehicle is solidly supported on the support stand to avoid injury.


2. Remove the cotter pin from the axle.

■NOTE: During assembly, new cotter pins should be installed.




PR257

- 3. Remove the flange nut securing the hub.
- 4. Remove the brake caliper (front only).

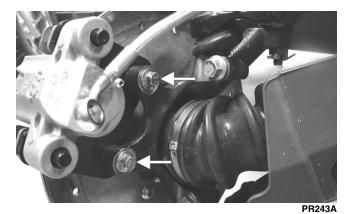

- 5. Remove the hub assembly.
- 6. Remove the four cap screws securing the brake disc (front hub only).

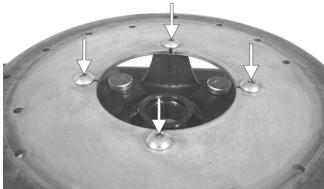

PR254A

CLEANING AND INSPECTING

2

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all hub components.
- 2. Inspect all threads for stripping or damage.
- 3. Inspect the brake disc (if applicable) for cracks or warping.
- 4. Inspect the hub for pits, cracks, loose studs, or spline wear.

REPLACING WHEEL STUDS

- 1. Secure the hub in a suitable holding fixture and remove the brake disc (if applicable).
- 2. Drive the damaged stud out of the hub; then place the new stud into the hub and thread on an appropriate flange nut.







Back to TOC





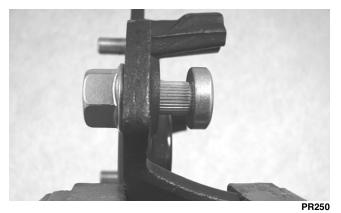

3. Using a socket and ratchet handle, tighten the nut until the stud is fully drawn into the hub.

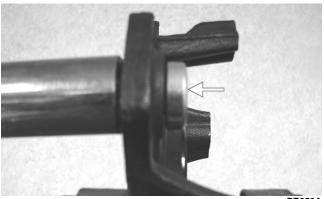

PR252A

INSTALLING

- 1. Secure the brake disc (if applicable) to the hub with the four cap screws coated with red Loctite #271. Tighten to 15 ft-lb.
- 2. Apply grease to the splines in the hub.



3. Install the hub assembly onto the axle; then set the parking brake.




- PR221
- 4. Secure the hub assembly with the nut. Tighten to 200 ft-lb; then secure with a new cotter pin.

■NOTE: If the cotter pin can not be inserted due to misalignment of the hole in the axle and the slots in the nut, tighten the nut until properly aligned.



5. For front hubs, secure the brake calipers to the knuckle with two cap screws tightened to 20 ft-lb.

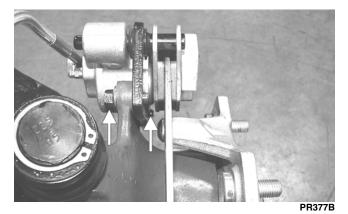

- 6. Install the wheel and tighten to 45 ft-lb.
- 7. Remove the vehicle from the support stand.



www.mymowerparts.com



Back to TOC



Hydraulic Brake Caliper

NOTE: The brake caliper is a non-serviceable component; it must be replaced as an assembly.

REMOVING/DISASSEMBLING

1. Secure the vehicle on a support stand to elevate the wheel; then remove the wheel.

Make sure the vehicle is solidly supported on the support stand to avoid injury.

2. Drain the brake fluid from the caliper, hose, and master cylinder.




PR235

Brake fluid is highly corrosive. Do not spill brake fluid on any surface of the vehicle and do not reuse brake fluid.


- 3. Remove the brake hose from the caliper; then remove the caliper and plug the brake fluid port.
- 4. Compress the caliper holder against the caliper and remove the outer brake pad; then remove the inner brake pad.



PR237

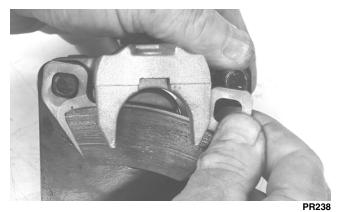

5. Remove the caliper holder from the caliper and account for the brake caliper O-ring. Do not remove the piston from the caliper.

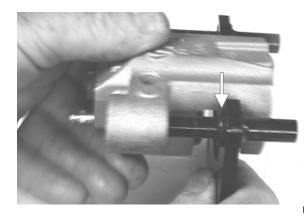

6. Plug the fluid port with a suitable plug to prevent contamination during cleaning.

PR239B

PR240A

CLEANING AND INSPECTING

- 1. Clean all caliper components (except the brake pads) with parts-cleaning solvent.
- 2. Inspect the brake pads for damage and excessive wear.

■NOTE: For measuring brake pads, see Section 2.

ASSEMBLING/INSTALLING


1. Install the caliper onto the caliper holder making sure the caliper is correctly oriented on the holder.



Back to TOC

Back to Section TOC



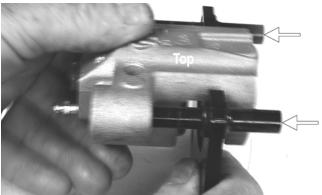

PR239C

2. Compress the caliper holder toward the caliper and install the inner brake pad; then install the outer pad.



PR238



PR239


- 3. Place the brake caliper assembly into position and secure with the "patch-lock" cap screws. Tighten the caliper to 20 ft-lb.
- 4. Place a new crush washer on each side of the brake hose fitting and install it on the caliper. Tighten to 20 ft-lb.
- 5. Fill the reservoir; then bleed the brake system (see Section 2).
- 6. Install the wheel. Tighten to 45 ft-lb.
- 7. Remove the vehicle from the support stand and verify brake operation.

Universal Joints


REMOVING

■NOTE: The four universal joints can be accessed by removing the belly panel. To remove the belly panel, see Belly Panel in Section 8.

- 1. Support the vehicle on suitable jack stands elevated high enough to allow working from the underside of the vehicle.
- 2. To aid in installing, match mark drive-line components prior to removing.

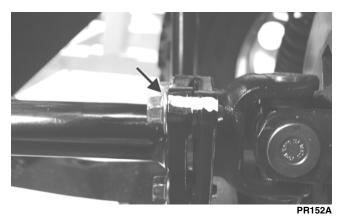

3. Remove the cap screws securing the propeller shaft flange to the yoke flange on the appropriate drive-line; then remove the propeller shaft.

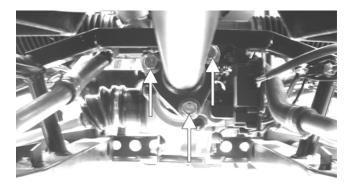

PR120A












4. Install U-Joint Separator Tool on the universal joint fixed yoke; then remove the bearing cup retainers.



5. Using a suitable socket and ratchet handle, rotate the jackscrew to push the bearing cup out of the yoke; then remove the tool and the bearing cup.

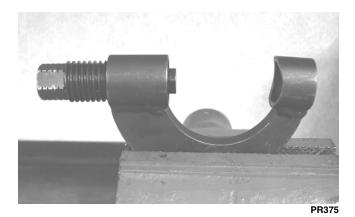

INSPECTING

1. Inspect the yoke bores for damage or signs of bearing cup looseness. If bearing cups are loose, the yoke must be replaced.



PR367B

1

2. Check that yoke legs are parallel.



- 6. Install the separator tool on the opposite side of the yoke to push the second bearing cup from the yoke; then remove the tool and separate the universal joint.
- 7. Secure the separator tool in a vise and repeat steps 4-6 to remove the bearing cups from the movable yoke.



PR367A

3. Check splines and flanges for excessive wear, thread damage, or warpage.











PR367C

INSTALLING

1. Remove the bearing cups from the universal joint; then insert the joint into the yoke and install one bearing cup on the joint.

Care must be taken when installing bearing cups that the needle bearings stay in place or severe damage to the universal joint will occur.



PR368

2. Secure U-Joint Separator Tool in a vise; then place the yoke, joint, and bearing cup into position and press the cup into the yoke.



PR374


3. Install the retainer in the bearing cup; then remove the yoke from the separator tool.

■NOTE: Repeat steps 2-3 for the opposite-side bearing cup.

4. Remove the separator tool from the vise and install the universal joint, bearing cups, and movable yoke into the fixed yoke using the same procedure as steps 2-3 except the vise cannot be used.



5. Check that the universal joint can be flexed freely without binding; then apply multi-purpose grease to the splines and install the propeller shaft noting the match marks made prior to removing.

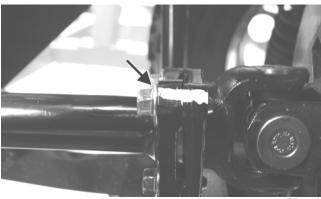

PR152A





Troubleshooting

Problem: Power not transmitted from engine to wheels			
Condition	Remedy		
1. Rear axle shaft serration worn - broken	1. Replace shaft		
Problem: Power not transmitted from engine to either front wheel			
Condition	Remedy		
1. Secondary drive - driven gear teeth broken	1. Replace gear(s)		
2. Propeller shaft serration worn - broken	2. Replace shaft		
3. Coupling damaged	3. Replace coupling		
4. Coupling joint serration worn - damaged	4. Replace joint		
5. Front drive - driven bevel gears broken - damaged	5. Replace gear(s)		
6. Front differential gears/pinions broken - damaged	6. Replace gears - pinions		
7. Front drive actuator not operating	7. Replace fuse - 2WD/4WD switch - front drive actuator		

6





SECTION 7 - SUSPENSION

TABLE OF CONTENTS

Suspension	7-2
Shock Absorbers	
Front A-Arms	
Rear A-Arms	7-5
Wheels and Tires	7-7
Troubleshooting	7-8



Suspension

■NOTE: Critical torque specifications are located in Section 1.

The following suspension system components should be inspected periodically to ensure proper operation.

- A. Shock absorber rods bent, pitted, or damaged.
- B. Rubber damper cracked, broken, or missing.
- C. Shock absorber body damaged, punctured, or leaking.
- D. Shock absorber eyelets broken, bent, or cracked.
- E. Shock absorber eyelet bushings worn, deteriorated, cracked, or missing.
- F. Shock absorber spring broken or sagging.
- G. Sway bar mountings tight and bushings secure.

Shock Absorbers

REMOVING

1. Secure the vehicle on a support stand to elevate the wheels and to release load on the suspension.

Make sure the vehicle is solidly supported on the support stand to avoid injury.

2. Remove the two cap screws and nuts securing each front shock absorber to the frame and upper A-arm. Account for bushings and sleeves from each.



AF605D

Additional support stands are necessary to support the rear axle when the shock absorbers are removed or damage may occur.

3. Remove the two cap screws and nut securing each rear shock absorber to the frame and lower A-arm. Account for bushings and sleeves from each.



4. Using a suitable spring compression stand, compress the shock absorber spring, remove the retainer, and remove the spring.

Shock absorber springs are under high compression loads. Do not attempt to remove springs without an adequate spring compressor. Sever injury could result.



AF730D

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all shock absorber components in parts-cleaning solvent.
- 2. Inspect each shock rod for nicks, pits, rust, bends, and oily residue.

www.mymowerparts.com

Back to TOC





3. Inspect all springs, spring retainers, shock rods, sleeves, bushings, shock bodies, and eyelets for cracks, leaks, and bends.

INSTALLING

- 1. Place the shock absorber spring over the shock absorber, compress the spring, and install the retainer.
- 2. Place bushings and sleeves (where appropriate) into shock eyelet; then install shock with two cap screws and nuts. Tighten all nuts to 33 ft-lb.

Do not tighten the nuts beyond the 33 ft-lb specification or the shock eyelet or mount WILL be damaged.

■NOTE: The rear shock absorber-to-lower A-arm torque factor is 20 ft-lb.

3. Remove the vehicle from the support stand.

Front A-Arms

REMOVING

1. Secure the vehicle on a support stand to elevate the front wheels; then remove the wheels.

Make sure the vehicle is solidly supported on the support stand to avoid injury.


2. Remove the cotter pin from the nut. Discard the cotter pin.



- PR257
- 3. Remove the nut securing the hub.

www.mymowerparts.com

4. Remove the brake caliper. Account for two cap screws.

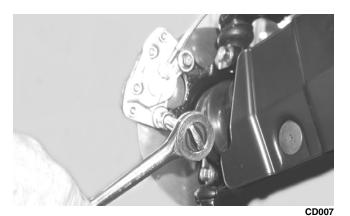

- 5. Remove the hub assembly.
- 6. Remove the cotter pin and slotted nut securing the tie rod end to the knuckle; then remove the tie rod end from the knuckle.
- 7. Remove the cap screws securing the ball joints to the knuckle.

🛆 CAUTION

Support the knuckle when removing the cap screws or damage to the threads will occur.



PR193

- 8. Tap the ball joints out of the knuckle; then remove the knuckle.
- 9. Remove the lower shock absorber eyelet from the upper A-arm.




AF626D

10. Remove the cap screws securing the A-arms to the frame.


Back





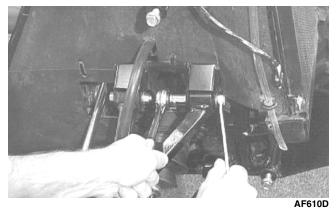

11. Remove the snap ring from the ball joint; then remove the ball joint from the A-arm.

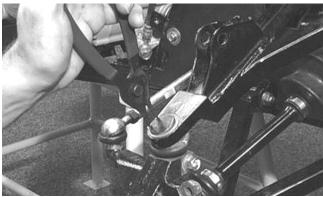



CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.


- 1. Clean all A-arm components in parts-cleaning solvent.
- 2. Clean the ball joint mounting hole of all residual Loctite, grease, oil, or dirt for installing purposes.
- 3. Inspect the A-arm for bends, cracks, and worn bushings.
- 4. Inspect the ball joint mounting holes for cracks or damage.
- 5. Inspect the frame mounts for signs of damage, wear, or weldment damage.

INSTALLING

1. Apply green Loctite #609 to the entire outside diameter of the ball joint; then install the ball joint into the A-arm and secure with the snap ring.



2. Install the A-arm assemblies into the frame mounts and secure with the cap screws. Only fin-ger-tighten at this time.

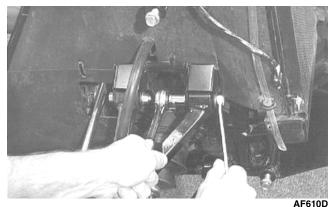

3. Route the brake hose through the upper A-arm shock absorber mount.



AF627D

- 4. Secure the lower eyelet of the shock absorber to the upper A-arm. Tighten nut to 33 ft-lb.
- 5. Secure the A-arm assemblies to the frame mounts (from step 2). Tighten the cap screws to 33 ft-lb.

Do not tighten the nut beyond the 33 ft-lb specification or the shock eyelet or mount WILL be damaged.

6. Install the knuckle assembly onto the ball joints and secure with cap screws. Tighten to 35 ft-lb.










AF628D

7. Install the tie rod end and secure with the nut (coated with red Loctite #271). Tighten to 30 ft-lb; then install a new cotter pin and spread the pin to secure the nut.

■NOTE: During assembly, new cotter pins should be installed.

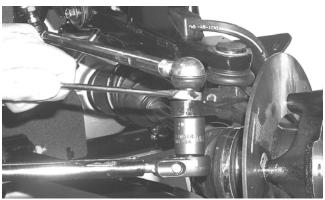


AF618D

8. Apply grease to the hub and drive axle splines; then install the hub assembly onto the drive axle.



PR290A

- 9. Secure the hub assembly with the nut. Tighten only until snug.
- 10. Secure the brake caliper to the knuckle with the two "patch-lock" cap screws. Tighten to 20 ft-lb.

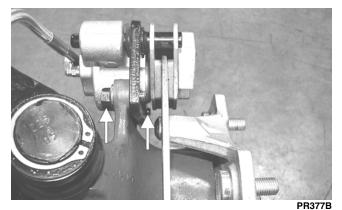

- Secure the hub nut (from step 9) to the shaft/axle. Tighten to 200 ft-lb.
- 12. Install a new cotter pin and spread the pin to secure the nut.



- 13. Install the wheel and tighten to 45 ft-lb.
- 14. Remove the vehicle from the support stand.

Rear A-Arms

Ζ

REMOVING

1. Secure the vehicle on a support stand to elevate the wheels.

Make sure the vehicle is solidly supported on the support stand to avoid injury.

- 2. Set the parking brake.
- 3. Remove the wheel.
- 4. Remove the cotter pin securing the hex nut; then remove the hex nut.
- 5. Remove the cap screws and lock nut securing the shock absorber to the frame and lower A-arm; then remove the shock absorber.








6. Remove the cap screws securing the boot guard to the lower A-arm.



7. Slide the axle out of the knuckle and set aside.

8. Remove the cap screws and lock nuts securing the knuckle to the A-arms. Discard the lock nuts.

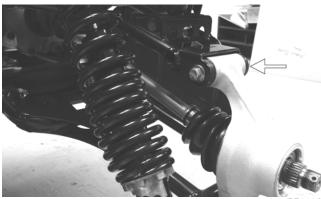

PR220A

■NOTE: Never reuse a lock nut. Once a lock nut has been removed, it must be replaced with a new lock nut.

9. Remove the cap screws and lock nuts securing the A-arms to the frame; then remove the A-arms.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all A-arm components in parts-cleaning solvent.
- 2. Inspect the A-arm for bends, cracks, and worn bushings.
- 3. Inspect the frame mounts for signs of damage, wear, or weldment damage.

INSTALLING

1. Install the A-arm assemblies into the frame mounts and secure with the cap screws and new lock nuts. Finger-tighten only at this time.

www.mymowerparts.com





- 2. Slide the knuckle onto the drive axle and into position on the A-arms; then secure the knuckle to the A-arms with cap screws and new lock nuts. Tighten to 33 ft-lb.
- 3. Tighten the hardware securing the A-arms to the frame mounts (from step 1) to 33 ft-lb.
- 4. Apply grease on the drive axle splines; then install the hub assembly onto the drive axle.



PR221

- 5. Secure the hub assembly with the nut. Tighten to 200 ft-lb.
- 6. Install a new cotter pin and spread the pin to secure the nut.



PR196

- 7. Secure the shock absorber to the frame with a cap screw and new lock nut. Tighten to 33 ft-lb.
- 8. Secure the shock absorber to the lower A-arm with a cap screw and new lock nut. Tighten to 20 ft-lb.
- 9. Secure the boot guard to the lower A-arm with the two cap screws. Tighten securely.
- 10. Install the wheel and tighten to 45 ft-lb.

Back to Section TOC

11. Remove the vehicle from the support stand.



Wheels and Tires

TIRE SIZE

Use only Arctic Cat approved tires when replacing tires. Failure to do so could result in unstable vehicle operation.

The UTV models are equipped with low-pressure tubeless tires of the size and type listed in Section 1. Do not under any circumstances substitute tires of a different type or size.

Always use the size and type of tires specified. Always maintain proper tire inflation pressure.

Do not mix tire tread patterns. Use the same pattern type on front and rear. Failure to heed warning could cause poor handling qualities of the vehicle and could cause excessive drive train damage not covered by warranty.

TIRE INFLATION PRESSURE

Front and rear tire inflation pressure should be 0.70 kg/cm² (10 psi).

REMOVING

1. Secure the vehicle on a support stand to elevate the wheels.

Make sure the vehicle is solidly supported on the support stand to avoid injury.

2. Remove the nuts securing the wheels; then remove the wheels.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

1. Clean the wheels and hubs with parts-cleaning solvent.

- 2. Clean the tires with soap and water.
- 3. Inspect each wheel for cracks, dents, or bends.
- 4. Inspect each tire for cuts, wear, missing lugs, and leaks.

INSTALLING

- 1. Install each wheel on its hub and secure with the existing hardware.
- 2. Tighten to 45 ft-lb.

CHECKING/INFLATING

1. Using an air pressure gauge, measure the air pressure in each tire. Adjust the air pressure as necessary to meet the recommended inflation pressure.



CD005

2. Inspect the tires for damage, wear, or punctures.

Do not operate the vehicle if tire damage exists.

■NOTE: If repair is needed, follow the instructions found on the tire repair kit or remove the wheel and have it repaired professionally.

■NOTE: Be sure all tires are the specified size and have identical tread pattern.

- 3. Check the front wheel alignment (toe-in and toe-out) and adjust as necessary (see Section 8).
- 4. Test drive the vehicle on a dry, level surface and note any pulling to the left or right during acceleration, deceleration, and braking.

■NOTE: Pulling could be caused by uneven tire pressure side-to-side, steering alignment out of adjustment, unequal loading, or improper tire size.



www.mymowerparts.com



Back to TOC

Troubleshooting

Problem: Suspension too soft			
Condition	Remedy		
1. Spring(s) weak	1. Replace spring(s)		
2. Shock absorber damaged	2. Replace shock absorber		
Problem: Suspension too stiff			
Condition	Remedy		
1. A-arm-related bushings worn	1. Replace bushing		
Problem: Suspension noisy			
Condition	Remedy		
1. Cap screws (suspension system) loose	1. Tighten cap screws		
2. A-arm-related bushings worn	2. Replace bushings		





SECTION 8 - STEERING/FRAME

TABLE OF CONTENTS

Steering/Frame	8-2
Steering Assembly	
Steering Wheel	
Upper Steering Shaft	
Lower Steering Shaft Assembly	
Steering Knuckles	
Checking/Adjusting Front Wheel Alignment.	
Front Bumper Assembly (XT/XTX)	
Hood	
Fenders	
Floor	
Belly Panel	8-13
Exhaust System	
Cargo Box (XT/XTX)	
Taillight Assembly	
Seats	
Troubleshooting	
-	



8

Steering/Frame

■NOTE: Critical torgue specifications are located in Section 1.

The following steering components should be inspected periodically to ensure safe and proper operation.

- A. Steering wheel secure.
- B. Steering has equal and complete full-left and full-right capability.
- C. Steering sector mounting bolts tight.
- D. Ball joints not worn, cracked, or damaged.
- E. Tie rods not bent or cracked.
- F. Knuckles not worn, cracked, or damaged.
- G. Cotter pins not damaged or missing.
- H. Steering wheel tilt locks securely (XTX).

The frame and welds should be checked periodically for damage, bends, cracks, deterioration, broken components, and missing components.

Steering Assembly

REMOVING

1. Secure the vehicle on a support stand to elevate the front wheels; then remove the front wheels.

Make sure the vehicle is solidly supported on the support stand to avoid injury.


2. Remove the cotter pins and nuts securing the tie rod ends to the knuckles; then remove the tie rod ends from the knuckles.



Back to TOC

www.mymowerparts.com

3. Make matching alignment marks on the pinion shaft and lower steering shaft joint.

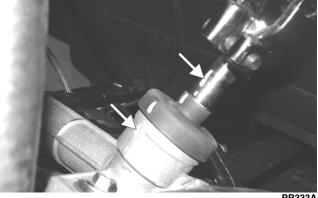


PR333A

■NOTE: Any time steering components are disassembled, all connecting components should be marked for proper alignment during assembling.

4. Remove the cap screw securing the lower steering shaft joint to the pinion shaft; then slide the joint free of the pinion.



5. Remove two cap screws securing the rack and pinion assembly to the frame. Account for two nuts and two washers.

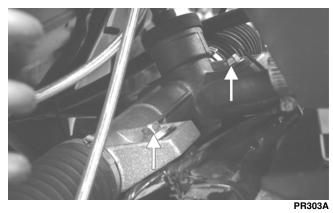

6. Remove the rack and pinion assembly from the right-side.





PR305

INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Inspect the tie rod ends for damaged threads, torn boots, or excessive wear.
- 2. Inspect the tie rods for bends or deformation.
- 3. Inspect the rack and pinion-to-tie rod boots for tears or deterioration.






- 4. Check boot clamps for security.
- 5. Check that the rack and pinion assembly operates smoothly with no binding from full-left to full-right position.
- 6. Inspect for grease seepage from the rack and pinion assembly.

■NOTE: The steering assembly (rack and pinion) is not repairable and must be replaced as an assembly; however, the tie rods and boots are replaceable.

REPLACING TIE RODS/BOOTS

1. Secure the rack and pinion assembly in a vise or other suitable holding fixture; then remove the tie rod end, jam nut, and rack boot. 2. Slide the steering stopper (A) away from the inner tie rod end (B); then hold the rack (C) with a pipe wrench and remove the inner tie rod end from the rack.

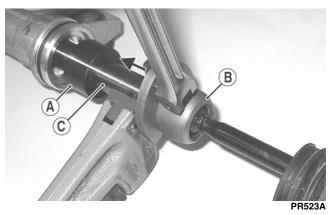

3. Clean all Loctite from the threads in the rack and if the tie rod is to be reused, clean the tie rod threads also.



PR526A

4. Coat the thread with red Loctite #271; then install the tire rod into the rack and using an appropriate crow-foot, tighten to 74 ft-lb.



www.mymowerparts.com







PR519

■NOTE: Always attach the crow-foot to the torque wrench with the open end 90° to the torque wrench handle to ensure accurate torque application.



PR528A

5. Install the rack boot and secure with the clamps; then loosely install the jam nut and outer tie rod end.



PR520

INSTALLING

1. Place the rack and pinion assembly into position from the right-side of the vehicle; then secure with the two cap screws, washers, and nuts. Tighten to 50 ft-lb.



2. With the rack and the steering wheel centered, slide the lower steering shaft joint onto the pinion shaft aligning the match marks.



3. Apply green Loctite #270 to the cap screw; then secure the lower steering shaft joint to the pinion shaft making sure the shaft does not protrude into the joint beyond the clamping surface.



PR309A

Allowing the lower steering shaft joint to extend too far onto the pinion shaft could cause binding or lock-up of the steering joint resulting in loss of steering control.

- 4. Tighten the cap screw to 36 ft-lb; then check that the steering wheel turns freely.
- 5. Install the tie rod ends into the steering knuckles; then secure with the castle nuts (coated with red Loctite #271) tightened to 30 ft-lb.








- 6. Install the cotter pins and spread to secure.
- 7. Install the wheels and tighten to 45 ft-lb. Check the steering system for full and free travel; then check and adjust the front wheel alignment (see Checking/Adjusting Front Wheel Alignment in this section).

Steering Wheel

REMOVING

1. Remove the steering wheel cover; then match mark the steering shaft and steering wheel.

■NOTE: Any time steering components are disassembled, all connecting components should be marked for proper alignment during assembling.

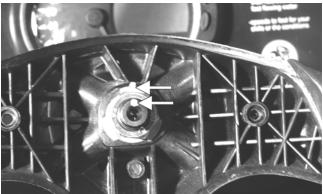

PR324/

2. Remove the nut securing the steering wheel and remove the steering wheel. Account for the flat thrust-washer and two wave washers.



■NOTE: Some models have a castle nut/cotter pin and drilled steering shaft. Never reuse a cotter pin.

INSPECTING

- 1. Inspect the steering wheel for cracks, missing padding, or broken spokes.
- 2. Inspect the splines for wear. www.mymowerparts.com





3. Check that the steering wheel is not bent.


INSTALLING

- 1. Place the flat thrust-washer and then the two wave washers onto the steering shaft.
- 2. Install the steering wheel aligning the two match marks; then apply a drop of red Loctite #271 to the threads of the nut and secure the steering wheel. Tighten to 25 ft-lb.

■NOTE: If a new steering wheel is being installed, mark the wheel as close as possible to the old wheel mark; then check for proper positioning with the front wheels straight forward.

3. On the models with a standard nut, install the steering wheel cover and secure with the screws. On the models with a castle nut, install the cotter pin through the steering shaft and nut and spread to secure; then install the steering wheel cover and secure with the screws. Do not over-tighten the cover screws.

■NOTE: If the hole in the steering shaft does not align with the slots in the castle nut, tighten the nut slightly until the next slot aligns with the hole.

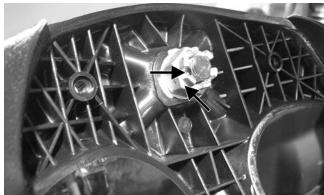


PR554A

Upper Steering Shaft


REMOVING

- 1. Remove the steering wheel (see Steering Wheel in this section).
- 2. Remove the six screws securing the dash panel to the frame and one cap screw and nut from the center support.



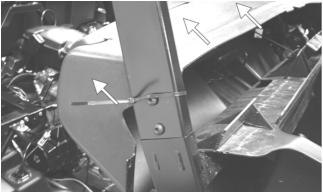

PR181A

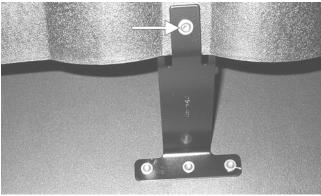

PR475A

3. Slide the dash panel rearward to access the upper steering shaft joint; then remove the cap screw securing the upper shaft joint to the steering wheel shaft.



4. Match mark the upper steering shaft joint and the steering wheel shaft; then remove the steering wheel shaft. Account for the lower thrust-washer.

■NOTE: Any time steering components are disassembled, all connecting components should be marked for proper alignment during assembling.

INSPECTING

- 1. Inspect the steering wheel shaft for excessive wear.
- 2. Check for worn splines, cracks, or damaged threads.


- 3. Roll the steering wheel shaft on a flat surface to check for bends.
- 4. Inspect the nylon bushings in the steering shaft housing for cracking or excessive wear.

INSTALLING

1. Slide the steering wheel shaft into the steering housing; then with the lower thrust-washer in position, align the match marks and slide the upper steering shaft joint onto the steering wheel shaft.



- 2. Apply green Loctite #270 to the cap screw; then install the cap screw in the upper steering shaft joint. Install the nut and finger-tighten.
- 3. Align the match marks on the steering wheel shaft and the steering wheel and slide the steering wheel onto the splines; then install the nut and finger-tighten.

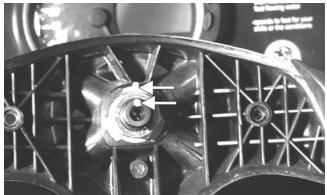


PR324A

- 4. Hold rearward pressure on the steering wheel and tighten the cap screw (from step 2) to 36 ft-lb.
- 5. Remove the steering wheel nut. Apply one drop of red Loctite #271 to the threads and install the nut. Tighten to 25 ft-lb.
- 6. Check for freedom of movement of the steering system; then install the steering wheel cover.
- 7. Move the dash panel into position and secure to the frame and center support with the existing hardware.








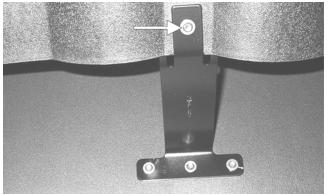



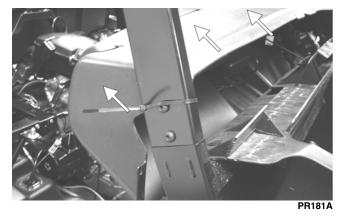

Lower Steering Shaft Assembly


Before beginning this procedure, the upper steering shaft must be removed (see Upper Steering Shaft in this section).

REMOVING

Remove the cap screw securing the lower steering shaft joint to the pinion shaft; then slide the steering shaft assembly free and remove through the opening in the splash panel.

Back to TOC



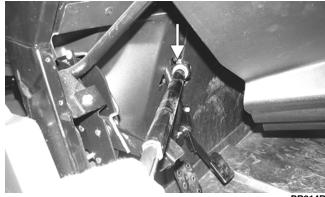

PR314B

INSPECTING

■NOTE: The lower steering shaft assembly is not repairable or rebuildable. If any damage or excessive wear is detected, the assembly must be replaced.

- 1. Inspect the joints for excessive wear or looseness.
- 2. Inspect welds and slip-joints for cracks.
- 3. Check for excessive wobble in the slip-joint.

INSTALLING

1. Place the steering shaft assembly into position through the opening in the splash panel.




PR314A

2. Align the match marks on the pinion shaft and the lower steering shaft joint; then slide the steering shaft joint onto the pinion shaft.





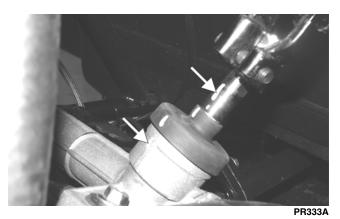

3. Apply green Loctite #270 to the cap screw; then secure the lower steering shaft joint to the pinion shaft making sure the pinion shaft does not pro-trude into the joint beyond the clamping surface. Tighten to 36 ft-lb.



Allowing the lower steering shaft joint to extend too far onto the pinion shaft could cause binding or lock-up of the steering joint resulting in loss of steering control.

4. Install the upper steering shaft (see Upper Steering Shaft in this section).

Steering Knuckles

REMOVING AND DISASSEMBLING

1. Secure the vehicle on a support stand to elevate the wheel; then remove the wheel.

Make sure the vehicle is solidly supported on the support stand to avoid injury.


- 2. Remove the cotter pin from the axle.
- 3. Remove the nut securing the hub.

4. Remove the brake caliper. www.mymowerparts.com





- 5. Remove the hub assembly.
- 6. Remove the cotter pin from the tie rod end and remove the tie rod end from the knuckle.
- 7. Remove the two cap screws securing the ball joints in the knuckle.

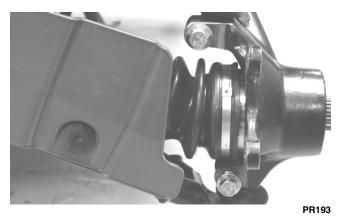

- 8. Tap the ball joint end out of the knuckle; then remove the knuckle.
- 9. Remove the snap ring securing the bearing in the knuckle; then press the bearing out of the knuckle.



CLEANING AND INSPECTING


■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all knuckle components.
- 2. Inspect the bearing for pits, scoring, rusting, or premature wear.
- 3. Inspect the knuckle for cracks, breaks, or galling of the bearing surface.

ASSEMBLING AND INSTALLING

1. Using a suitable press and driver, press the bearing into the knuckle until firmly seated; then install the snap ring.



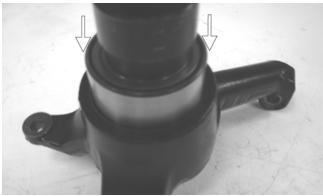

PR292A



2. Install the knuckle to the upper and lower ball joints and secure with the two cap screws. Tighten to 35 ft-lb.



PR202




3. Install the tie rod end and secure with the nut (coated with red Loctite #271). Tighten to 30 ft-lb; then install a new cotter pin and spread the pin.





■NOTE: During assembling, new cotter pins should be installed.

4. Apply a small amount of grease to the hub splines.

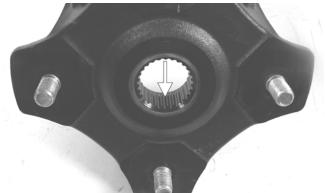

PR290A

5. Install the hub assembly onto the splines of the shaft.



6. Secure the hub assembly with the nut. Tighten to 200 ft-lb.



7. Install a new cotter pin and secure by spreading as shown.






PR260

■NOTE: If the hole in the axle shaft does not align with the slots in the castle nut, tighten the nut until the hole and slots align.

8. Secure the brake caliper to the knuckle with the two cap screws. Tighten to 20 ft-lb.

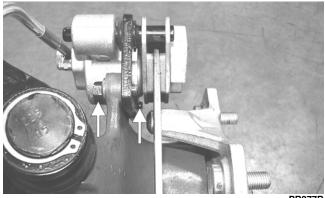

PR377B

- 9. Install the wheel; then using a crisscross pattern, tighten to 45 ft-lb.
- 10. Remove the vehicle from the support stand.

Checking/Adjusting Front Wheel Alignment

■NOTE: All measurements and adjustments must be made with the vehicle unloaded.

Mark the center-line of the front tires at the front and rear of the tire; then using a tape measure, measure and record the distance between the marks at the front and rear. The front measurement should be 6-12 mm (1/4-1/2 in.) greater than the rear measurement (toe-out).




PR087A

To adjust the wheel alignment, use the following procedure.

1. Center the steering wheel; then using an open-end wrench to hold the tie rod ends, loosen the right-side and left-side jam nuts.



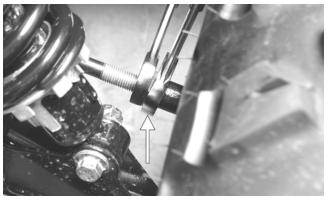

PR085A

Always use a wrench to hold the tie rod ends when loosening or tightening the jam nuts or damage to the boots could occur.

2. Turn the left-side and right-side tie rods in equal increments to achieve the proper toe-out; then tighten the jam nuts securely.

www.mymowerparts.com










Front Bumper Assembly (XT/XTX)

REMOVING

Remove four cap screws and nuts. Account for four lock washers and eight flat washers.

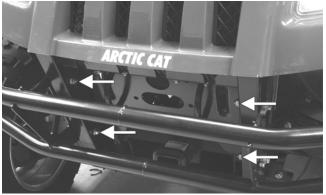



CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all bumper components with hot, soapy water.
- 2. Inspect all welds for cracking or bending.


INSTALLING

Place the bumper assembly into position on the frame; then secure with the four cap screws and nuts making sure the flat washers and lock washers are properly positioned. Tighten securely.


Hood

REMOVING

1. Open the hood; then disconnect the four headlight connectors and remove two nylon ties.

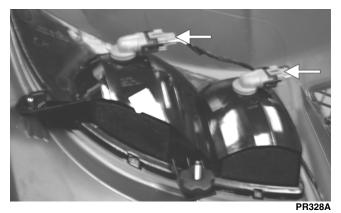

2. Loosen but do not remove the four cap screws and flange nuts securing the hood hinge to the frame; then lower the hood.

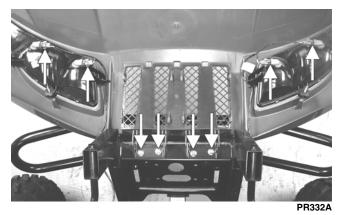

3. Finish removing the cap screws and flange nuts (from step 2); then remove the hood assembly.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all hood components with soap and water.
- 2. Inspect the hood for cracks and/or loose fasteners.
- 3. Inspect for any missing decals.

INSTALLING

1. Place the hood into position on the vehicle; then install the two outside cap screws and flange nuts. Finger-tighten only at this time.



www.mymowerparts.com






2. Open the hood; then install the remaining two cap screws and flange nuts. Tighten all four securely.



3. Connect the four headlight connectors; then secure the wires with two new nylon ties.

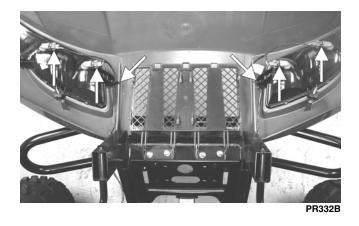

Fenders

REMOVING

Remove three torx-head screws securing each fender to the frame. Account for a stiffener bracket on the front fenders.



PR311A

INSTALLING

Place the appropriate fender into position and secure with existing hardware.


Floor

REMOVING

- 1. Remove the seats and center console.
- 2. Remove twelve cap screws and two self-tapping screws securing the floor to the frame.
- 3. While pulling forward on the upper-rear of the floor, lift the rear part of the floor above the seat lock stud.

■NOTE: To aid in removing, insert a small wood block to hold in position.



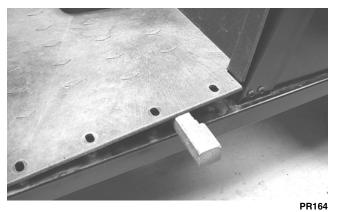


4. From the opposite side of the vehicle repeat step 3; then lift the rear of the floor up and lift the floor out of the vehicle.









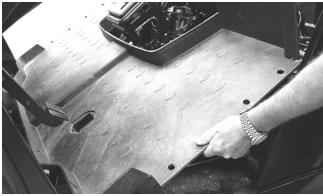

PR165

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean the floor with soap and water.
- 2. Inspect the floor for cracks or holes.

INSTALLING

- 1. Place the front of the floor into position in the vehicle first; then lower the rear and push past the seat lock studs.
- 2. Secure the floor with twelve cap screws and two self-tappings screws.
- 3. Install the center console and seats making sure the seats lock securely into position.

Belly Panel

REMOVING

- 1. Remove the body screws securing the belly panel to the underside of the frame.
- 2. Remove the belly panel.

www.mymowerparts.com

INSTALLING

- 1. Place the belly panel into position on the underside of the frame.
- 2. Install the body screws. Tighten securely.

Exhaust System

REMOVING MUFFLER

1. Remove the two exhaust springs at the muffler/exhaust pipe juncture.



PR131

2. Slide the muffler assembly clear of the holder pins.

INSPECTING MUFFLER

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Inspect muffler externally for cracks, holes, and dents.
- 2. Inspect the muffler internally by shaking the muffler back and forth and listening for rattles or loose debris inside the muffler.

■NOTE: For additional details on cleaning the muffler/spark arrester, see Section 2.

INSTALLING MUFFLER

- 8
- 1. Place the muffler onto the holder pins and slide into position.
- 2. Secure the muffler to the exhaust pipe with the two exhaust springs.

Cargo Box (XT/XTX)


REMOVING

1. Raise the cargo box; then remove the cap screw and nut securing the lower lift support to the frame. Account for the washer. The cargo box will tilt fully rearward.







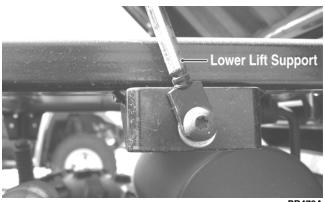

- PR473A
- 2. Loosen but do not remove the four shoulder cap screws securing the pivot housings to the cargo box.



- PR33
- 3. Lower the cargo box; then remove the four cap screws (from step 2).
- 4. With the help of an assistant or an adequate lift, remove the cargo box from the vehicle. Account for four pivot housings.

CLEANING AND INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Clean all cargo box components with soap and water.
- 2. Inspect the cargo box for cracks, tears, and loose hardware.
- 3. Inspect the welds of the cargo box frame for cracking or bending.
- 4. Inspect the cargo box gate latches for smooth operation.

INSTALLING

1. With the help of an assistant or an adequate lift, set the cargo box into position on the frame; then position the two upper pivot housings between the cargo box and frame. Lightly grease the pivot housings.

- 2. Align the holes in the upper pivot housings with the holes in the cargo box; then install the lower pivot housings and secure with the four shoulder cap screws. Tighten to 20 ft-lb.
- 3. Raise the cargo box; then connect the lift support to the frame, install the cap screw and nut, and tighten the nut securely.
- 4. Lower the cargo box and lock into position.

Taillight Assembly

REMOVING

1. Remove two torx-head screws securing the taillight assembly to the rear canopy tube; then rotate the taillight assembly left or right to allow the connector to clear the access opening.



PR056

2. Disconnect the three-prong connector from the bulb socket and remove the taillight assembly.

INSPECTING

■NOTE: Whenever a part is worn excessively, cracked, or damaged in any way, replacement is necessary.

- 1. Inspect wiring harness, three-prong connector, lens, base, cap screws, and socket for damage.
- 2. Inspect all wires for corroding, pinching, and cracking.
- 3. Inspect the bulb for wattage, voltage, and proper operation.

INSTALLING

- 1. Connect the three-prong connector to the bulb socket; then place the taillight assembly into position on the rear canopy tube.
- 2. Install the two torx-head screws and tighten securely.







Seats

REMOVING/INSTALLING


1. To remove a seat, pull the seat lock lever up. Raise the front of the seat and slide it forward.

Troubleshooting

2. To install a seat, slide the rear of the seat into the seat retainers and push down firmly on the front of seat. The seat should automatically lock into position.

Co	ondition	Remedy
1	. Front wheel alignment incorrect	1. Adjust alignment
2	. Lubrication inadequate	2. Lubricate appropriate components
3	. Tire inflation pressure incorrect	3. Adjust pressure
4	. Tie rod ends seizing	4. Replace tie rod ends
5	. Linkage connections seizing	5. Repair - replace connections
Pr	oblem: Steering oscillation	
Co	ondition	Remedy
1	. Tires inflated unequally	1. Adjust pressure
2	. Wheel(s) wobbly	2. Replace wheel(s)
3	. Wheel hub cap screw(s) loose - missing	3. Tighten - replace cap screws
4	. Wheel hub bearing worn - damaged	4. Replace bearing
5	. Tie rod ends worn - loose	5. Replace - tighten tie rod ends
6	. Tires defective - incorrect	6. Replace tires
7	. A-arm bushings damaged	7. Replace bushings
8	. Bolts - nuts (frame) loose	8. Tighten bolts - nuts
Pr	oblem: Steering pulling to one side	
Co	ondition	Remedy
1	. Tires inflated unequally	1. Adjust pressure
2	. Front wheel alignment incorrect	2. Adjust alignment
3	. Wheel hub bearings worn - broken	3. Replace bearings
4	. Frame distorted	4. Repair - replace frame
5	. Shock absorber defective	5. Replace shock absorber
Pr	oblem: Steering impaired	
Co	ondition	Remedy
1	. Tire pressure too high	1. Adjust pressure
2	Steering linkage connections worn	2. Replace connections
3	. Cap screws (suspension system) loose	3. Tighten cap screws
Pro	oblem: Tire wear rapid or uneven	
Co	ondition	Remedy
	. Wheel hub bearings worn - loose	1. Replace bearings
1	. Wheel hub bearings worth - toose	1. heplace bearings





(Back to Section TOC



Problem: Steering noise		
Condition	Remedy	
1. Caps screws - nuts loose	1. Tighten cap screws - nuts	
2. Wheel hub bearings broken - damaged	2. Replace bearings	
3. Lubrication inadequate	3. Lubricate appropriate components	
Problem: Rear wheel oscillation		
Condition	Remedy	
1. Rear wheel hub bearings worn - loose	1. Replace bearings	
2. Tires defective - incorrect	2. Replace tires	
3. Wheel rim distorted	3. Replace rim	
4. Wheel hub cap screws loose	4. Tighten cap screws	
5. Parking brake adjusted incorrectly	5. Adjust parking brake	
6. Rear suspension arm-related bushing worn	6. Replace bushing	
7. Rear shock absorber damaged	7. Replace shock absorber	
8. Rear suspension arm nut loose	8. Tighten nut	







SECTION 9 - CONTROLS/INDICATORS

TABLE OF CONTENTS

Master Cylinder Assembly	9-2
Accelerator Pedal	
Front Differential Lock (XT)	9-3
Shift Lever	
Speedometer/Tachometer/LCD/	
Indicator Lights	9-4



Master Cylinder Assembly

■NOTE: The master cylinder is a non-serviceable component; it must be replaced as an assembly.

REMOVING

1. Slide a piece of flexible tubing over one of the wheel bleeder valves and direct the other end into a container. Remove the reservoir cover; then open the bleeder valve. Allow the brake fluid to drain until the reservoir is empty.



2. Remove the cotter pin and pivot pin from the yoke; then remove two cap screws and flange nuts securing the master cylinder assembly to the frame.





PR336

3. Remove the oil bolt securing the banjo-fittings to the master cylinder; then remove the master cylinder. Discard the three crush washers.

Brake fluid is highly corrosive. Do not spill brake fluid on any surface of the vehicle.

INSPECTING

- 1. Inspect the master cylinder push rod and clevis for wear, bending, or elongation of clevis holes.
- 2. Inspect the push rod boot for tears or deterioration.
- 3. Inspect the reservoir for cracks and leakage.
- 4. Inspect the brake hose for cracks and deterioration and the condition of the banjo-fittings.

INSTALLING

- 1. Place the master cylinder into position; then using three new crush washers, secure the two banjo-fit-tings to the master cylinder. Tighten to 20 ft-lb.
- 2. Secure the master cylinder assembly to the frame with two cap screws and two flange nuts. Tighten to 25 ft-lb.
- 3. Install the pivot pin and secure with a new cotter pin.
- 4. Fill the master cylinder and bleed the brake system (see Section 2).

Accelerator Pedal


REMOVING

Dislodge the throttle cable holding grommet from the actuator arm; then remove two torx-head screws and nuts securing the accelerator pedal assembly to the splash panel and remove the accelerator pedal.




www.mymowerparts.com



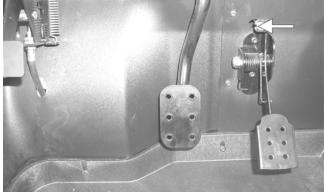

PR342B

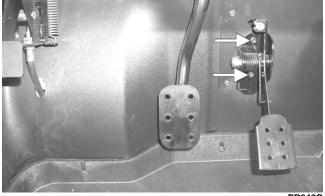

PR342C

INSTALLING


Align the mounting holes with the holes in the splash panel and secure with the two torx-head screws and nuts; then snap the throttle cable holding grommet into the actuator arm.

Front Differential Lock (XT)

ADJUSTING CABLE

www.mymowerparts.com

1. With the toggle in the pushed-in position, slide the rubber protector sleeve (A) off the cable near the toggle; then loosen the jam nut (B) and turn the cable adjuster (C) to achieve 3-4 mm (0.12-0.16 in.) free-travel measured at the toggle.

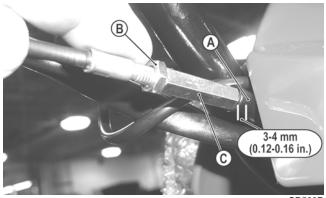

CD560B

Select the 2WD position on the 2WD/4WD selector switch; then turn the ignition switch to the ON position and select the LOCK position on the toggle. The front drive actuator should operate engaging four-wheel drive.


■NOTE: It may be necessary to turn the steering wheel or to rock the vehicle forward and backward to align the differential lock splines and allow engagement.

- 3. Return the toggle to the pushed-in position and listen for the front drive actuator to operate.
- 4. Turn the ignition switch to the OFF position. Tighten the jam nut securely; then install the protector sleeve on the adjuster assembly.

Shift Lever

REMOVING

- 1. Remove the seats and center console.
- 2. Remove the flange nut and shoulder screw from the shift lever pivot; then remove the shift lever. Account for the shifter spring.

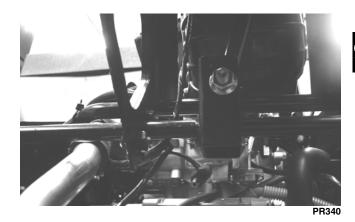

INSTALLING

1. With the shifter spring in place on the shift lever, install the shift lever onto the shift axle.








2. Install the shoulder screw and secure with the flange nut (threads coated with blue Loctite #243). Tighten to 20 ft-lb.

Speedometer/ Tachometer/LCD/ **Indicator Lights**

REPLACING

- 1. Remove the six screws securing the dash panel to the frame; then remove the parking brake handle and jam nut.
- 2. Slide the dash panel to the rear sufficiently to access the components.

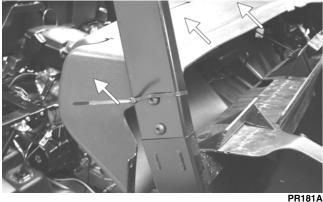

3. Remove the nuts securing the gauge assembly to the dash; then unplug the multi-pin connector and remove the gauge from the vehicle.



PR284A

- 4. Place the new gauge into the dash panel opening; then place the gauge holder over the mounting screws and secure with the nuts.
- 5. Plug the multi-pin connector into the gauge; then turn the ignition switch to the ON position and check gauge functions.
- 6. Slide the dash into position and secure with the six screws.
- 7. Install the parking brake handle and jam nut.



