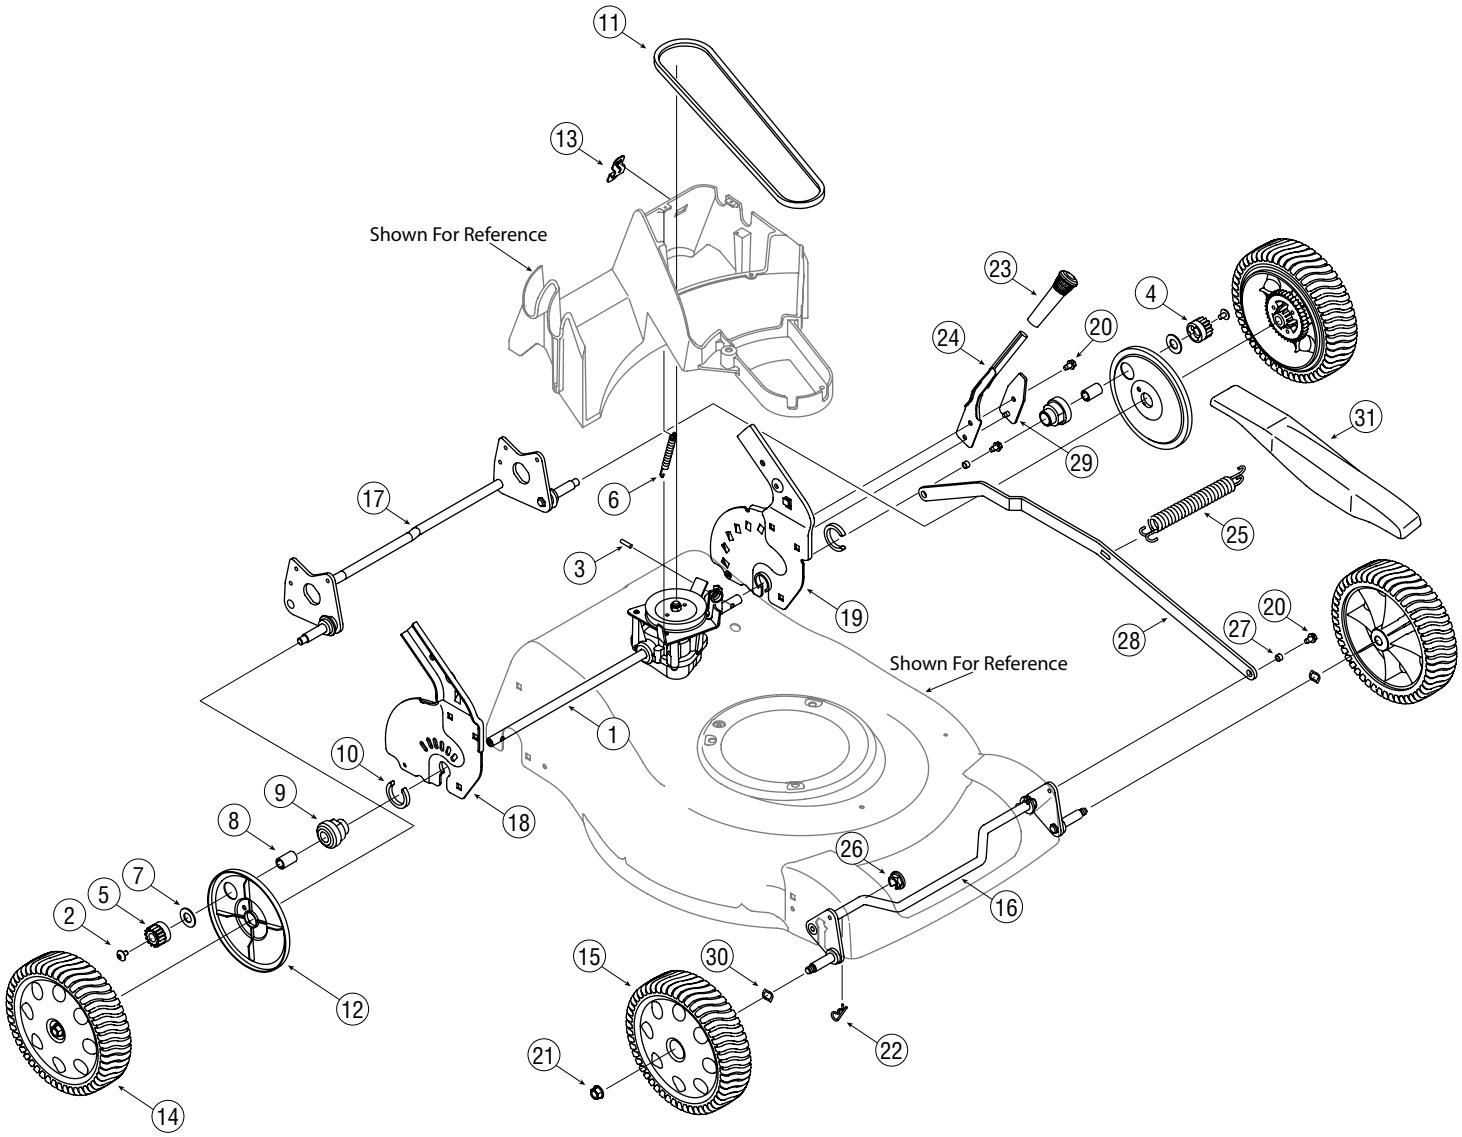

1	618-04229	Transmission Assembly
2	710-04223	Screw, M6 x 1.0
3	715-0221	Dowel Pin
4	717-04184	Spur Gear, 14T - LH
5	717-04192	Spur Gear, 14T - RH
6	732-0611	Extension Spring, .38 OD x 3.6
7	736-0414	Flat Washer, .570 x 1.120 x .062
8	741-0710	Sleeve Bearing, .502 x .627 x 1.00
9	748-04073	Transmission Bearing Support
10	750-04317	Clip Spacer
11	754-04078A	V-Belt, 3L x 35.5
12	782-7551A	Wheel Dust Cover
13	787-01262	Transmission Cable Bracket
14	634-04207	Rear Wheel
15	734-04033	Front Wheel
16	687-02133	Front Bracket Assembly

17	687-02134	Rear Bracket Assembly
18	687-02148	Handle Bracket Assembly - RH
19	687-02149	Handle Bracket Assembly - LH
20	710-0599	TT Screw, 1/4-20 x .500
21	712-0431	Flange Lock Nut, 3/8-16
22	714-0174	Cotter Pin
23	720-0223	Grip
24	732-04261	Spring Lever
25	732-04271	Extension Spring, .500 ID x 6.85 Lg
26	741-04136	Split Hex Flange Bearing
27	750-04305	Spacer
28	787-01235	Cross Bracket
29	787-01251	Stop Bracket
30	736-0504	Wave Washer, .510 x .750 x .017
31	731-05237	Spring Bracket Cover

For Parts Call 606-678-9623 or 606-561-4983

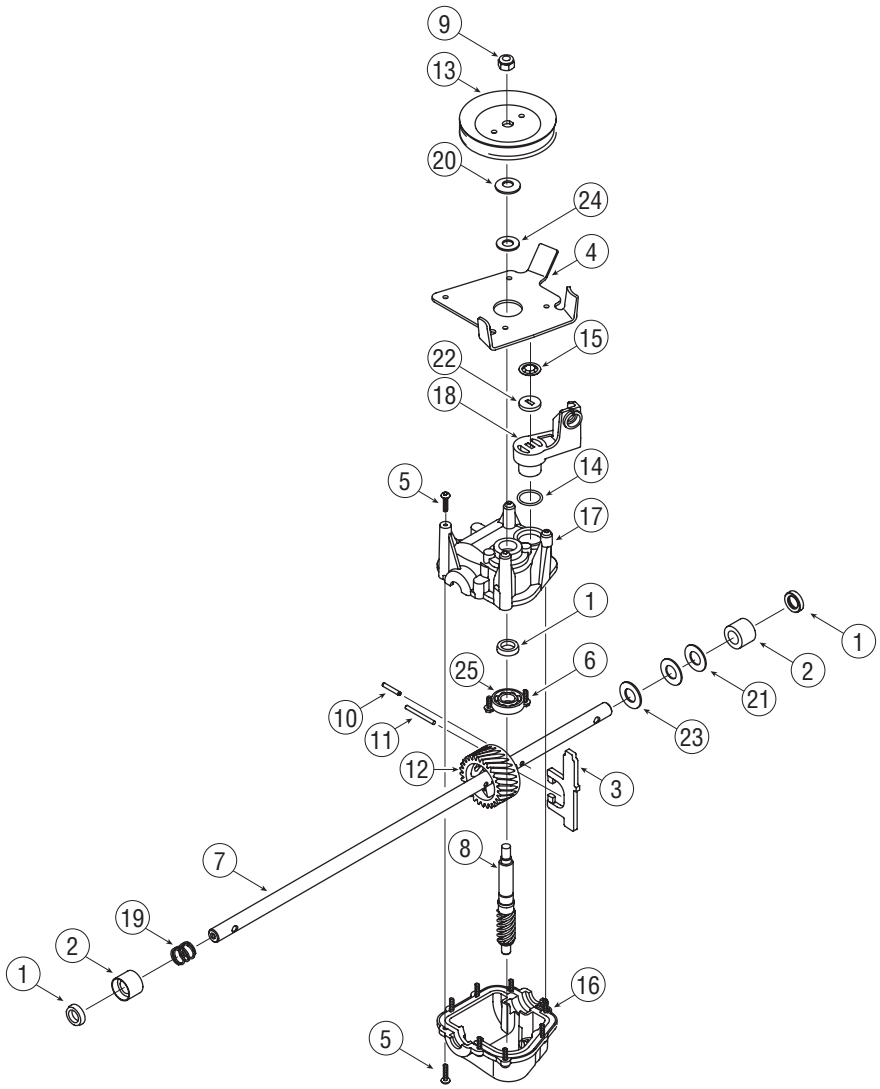

1	721-04107	Oil Seal
2	741-04106	Plastic Bushing
3	707-04409	Shift Fork
4	707-04540	Transmission Bracket
5	710-04329	Screw, .159 OD x .610
6	710-04374	Hex Screw, .159 OD x .43
7	711-04386	Output Shaft
8	711-04394	Input Shaft
9	712-0411	Hex Lock Nut, 5/16-24
10	715-0129	Spirol Pin
11	715-04030	Dowel Pin
12	717-04194	Plastic Gear, 28T
13	756-04151	Pulley, 3.36 OD

14	721-04110	O-Ring
15	726-04043	Push Nut, 3/8 ID x 3/4 OD
16	731-04883	Lower Housing
17	731-05099	Upper Housing
18	731-05100	Clutch Lever
19	732-04278	Compression Spring, .525 ID x .588
20	736-0105	Bell Washer, .375 x .870 x .063
21	736-04170	Flat Washer, .508 ID x 1.00 OD
22	736-04178	Felt Slotted Washer
23	736-0572	Flat Washer, .510 x 1.00 x .060
24	736-0864	Thrust Washer, .375 x .812 x .060
25	741-04116	Ball Bearing

To order replacement parts, contact 1-800-648-6776 or visit www.troybilt.com.

www.mymowerparts.com

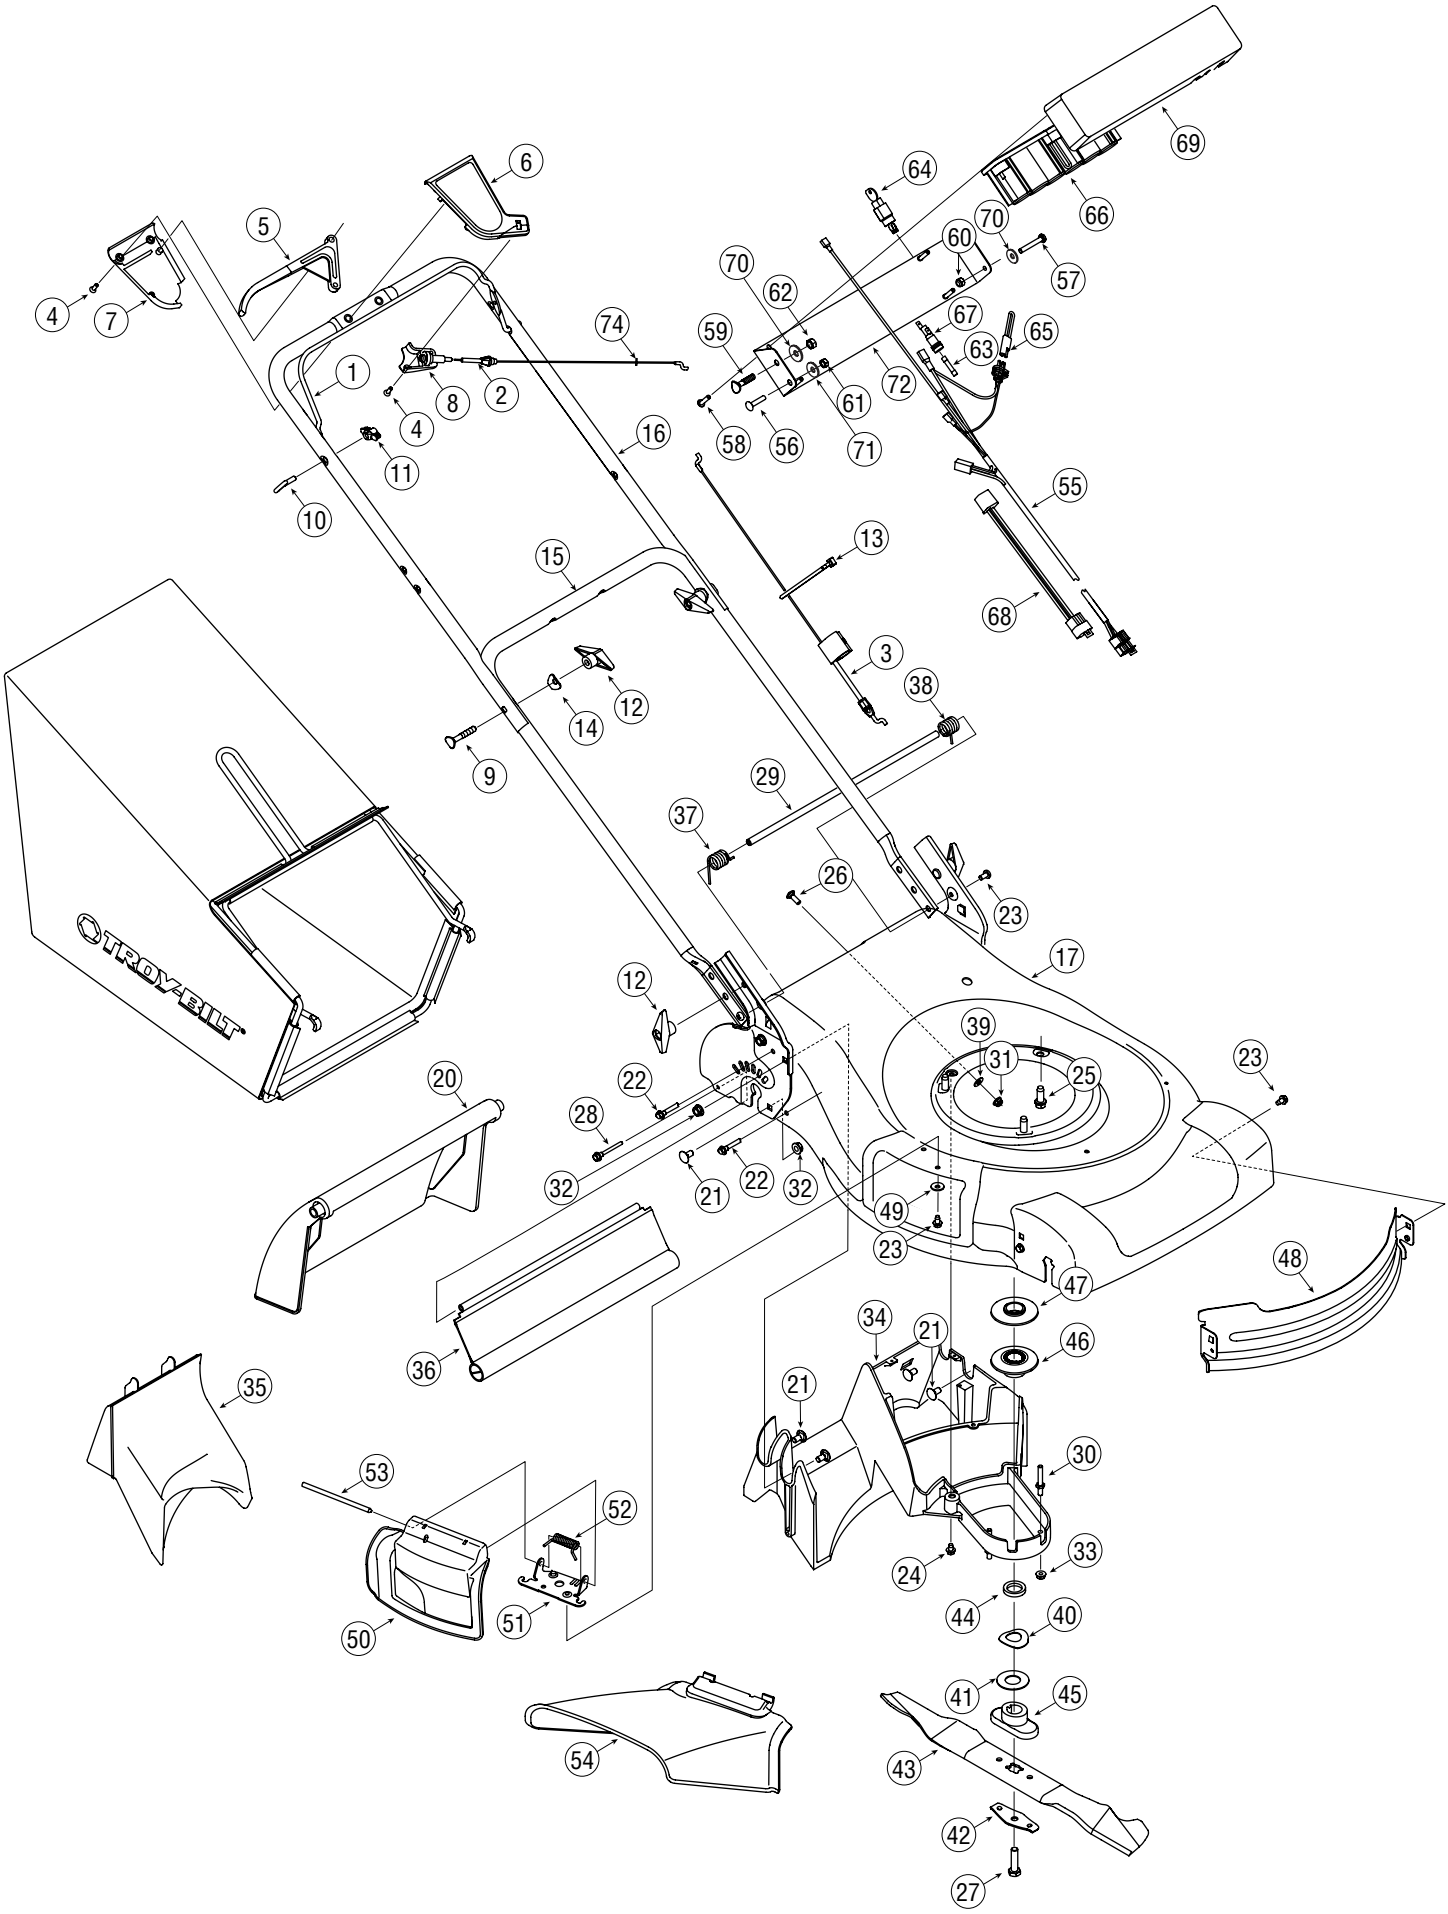
TROY-BILT

1	747-1161A	Blade Control
2	746-04195	Drive Cable
3	746-1130	Control Cable
4	710-1667	Screw, #10-16 x .625
5	731-0620	Drive Control Lever
6	731-1057	Upper Control Cover
7	731-1058	Lower Control Cover
8	731-1059	Mounting Cap
9	710-1174	Carriage Bolt, 5/16-18 x 2.0
10	710-1205	Eye Bolt
11	720-0279	Wing Nut
12	720-0284	Handle Knob
13	725-0157	Cable Tie
14	736-0451	Saddle Washer, .320 x .93 x .060
15	749-04202	Lower Handle
16	749-04209	Upper Handle
17	787-01213	21" Deck
18	647-04048	Grass Catcher Frame
19	664-04042	Grass Catcher
20	731-05017	Rear Door
21	710-0260A	Carriage Bolt, 5/16-18 x .62
22	710-1241	Screw, 1/4-15 x 1.00
23	710-0599	TT Screw, 1/4-20 x .500
24	710-0653	TT Screw, 1/4-20 x .375
25	710-0654A	Screw, 3/8-16 x 1.00
26	710-0703	Carriage Screw, 1/4-20 x .75
27	710-1044	Screw, 3/8-24 x 1.50
28	710-1802	Screw, 1/4-20 x 2.00
29	711-04374	Door Pivot Rod
30	711-0993	Belt Guard Pin
31	712-04064	Flange Lock Nut, 1/4-20
32	712-3004A	Flange Lock Nut, 5/16-18
33	712-3027	Flange Lock Nut, 1/4-20
34	731-05154	Deck Baffle
35	731-05157	Mulch Plug
36	731-05185	Trailshield
37	732-04264	Door Torsion Spring - RH
38	732-04265	Door Torsion Spring - LH
39	736-0463	Flat Washer, .25 x .630 x .0515
40	736-0513	Spring Washer, .890 x 1.70 x .048
41	736-0514	Flat Washer, .885 x 1.850 x .060
42	736-0524B	Blade Bell Support
43	742-0741	21" Mulching Blade
44	748-0358	Engine Spacer
45	748-0376C	Blade Adapter
46	756-04156	Lower Engine Pulley
47	756-04157	Upper Engine Pulley
48	787-01224	Front Deck Baffle
49	736-0270	Bell Washer, .265 x .75 x .062
50	687-02055	Mulching Baffle
51	17032A	Deflector Chute Adapter
52	732-1014	Torsion Spring
53	747-0710	Hinge Pin
54	731-04177	Side Discharge Chute
55	725-1442†	Electric Starter Harness Assembly
56	710-0111†	Screw, 1/4-20 x 1.25
57	710-0136†	Screw, 1/4-20 x 1.75
58	710-0969†	Screw, #12-16 x 1.00
59	710-1250†	Curved Carriage Bolt, 5/16 x 1.5
60	712-0324†	Hex Lock Nut, 1/4-20
61	712-3006†	Hex Nut, 1/4-20
62	712-3010†	Hex Nut, 5/16-18
63	725-0298†	7.5 Amp Fuse
64	725-0873†	Key Switch
65	725-1206†	Plug
66	725-1276†	12 Volt Battery
67	725-1428†	Fuse Holder
68	725-1538†	Ext Harness
69	731-0891A†	Upper Battery Tray
70	736-0242†	Bell Washer, .340 x .872 x .060
71	736-0270†	Bell Washer, .265 x .75 x .062
72	782-9012†	Lower Battery Tray
73	725-0727†	Battery Charger (Not Shown)
74	735-0226	Rubber Gromet

† If equipped

8

Parts List

To order replacement parts, contact 1-800-648-6776 or visit www.troybilt.com.

IMPORTANT

For a proper working machine, use Factory Approved Parts. **V-BELTS** are specially designed to engage and disengage safely. A substitute (non OEM) V-Belt can be dangerous by not disengaging completely.

www.mymowerparts.com