



# Service Kit 753-05483

Date: 12/11/2006

Subject: FastAttach Accessory Shoulder Bolts

Models Affected: 2006 Model Year 600 and 800 Series Lawn and Garden Tractors


REFERENCE: S/A MTD-055

**Read through and understand these instructions completely before proceeding with repair.**

**PURPOSE:** This service kit is required when installing a front end FastAttach accessory on certain FastAttach model lawn and garden tractors. Various models did not come with the shoulder bolt hardware.

**NOTE:** *These materials are prepared for use by trained technicians who are experienced in the service and repair of equipment of the kind described in this publication, and are not intended for use by untrained or inexperienced individuals. Such individuals should seek the assistance of an authorized service technician or dealer.*

**NOTE:** *Save this Instruction Sheet. Refer to it when ordering replacement parts.*

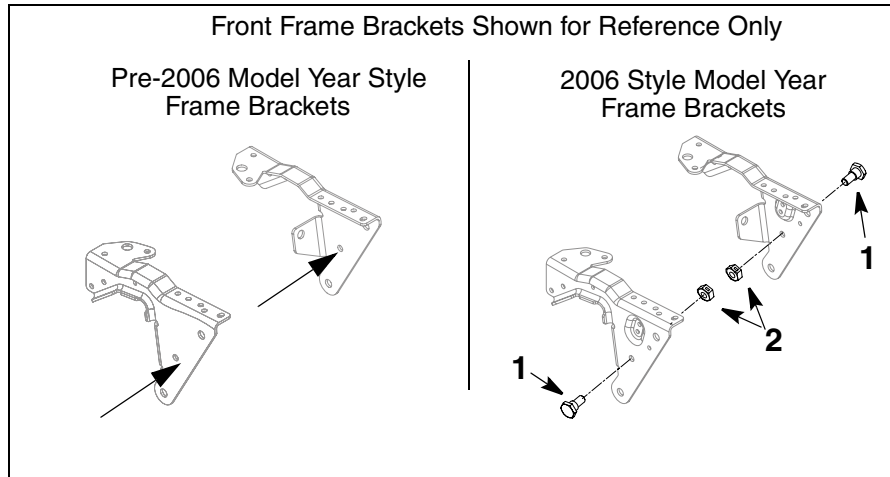

**FIGURE 1**

## Service Kit Contents

(See Figure 1)

ITEM NO.	PART NUMBER	QTY	DESCRIPTION
1	738-0143	2	SCREW: SHOULDER: .496 x .336 x 3/8"-16
2	712-3000	2	NUT: HEX: CENTER LOCK: 3/8"-16: GRB
	*	1	THIS INSTRUCTION SHEET

\* - Not Available Separately

### Installation Instructions:

- Using a 3/4" socket and ratchet and a 9/16" open end wrench, install a Shoulder Screw, Item 1, and Hex CenterLock Nut, Item 2, onto each frame bracket as shown in the location defined in Figure 1. Tighten securely.
- Refer to the FastAttach accessory's Operator's Manual to proceed with the accessory installation.