


WIRING DIAGRAM (400 Automatic Transmission)
 Harness (p/n 0486-093 - FIS)
 Harness (p/n 0486-106 - ACT)

- 1 SWITCH, BRAKE PRESSURE
- 2 SPEEDOMETER
- 3 LIGHTS, INDICATOR
- 4 CONTROL, LEFT HAND
- 5 OVERRIDE, REVERSE
- 6 SWITCH, BRAKE HANDLE
- 7 SWITCH, KEY
- 8 CONNECTOR, REAR ACCESSORY
- 9 TAILLIGHT
- 10 COIL, IGNITION
- 11 CDI
- 12 RELAY, STARTER
- 13 BATTERY, 12V
- 14 RELAY, NEUTRAL
- 15 REGULATOR/RECTIFIER
- 16 MAGNETO
- 17 BOX, FUSE
- 18 SWITCH, FOOT BRAKE
- 19 DIODE ASSY.
- 20 LIGHT, TEMP.-SWITCH
- 21 MOTOR, FAN
- 22 FAN, TEMP.- SWITCH
- 23 DIODE, FAN
- 24 SWITCH, GEAR
- 25 HEADLIGHT, LOW-BEAM LEFT
- 26 HEADLIGHT, HIGH-BEAM LEFT
- 27 HEADLIGHT, LOW-BEAM RIGHT
- 28 HEADLIGHT, HIGH-BEAM RIGHT
- 29 CONNECTOR, FRONT ACCESSORY
- 30 MOTOR, STARTER
- 31 CONNECTOR, SWITCHED ACCESSORY

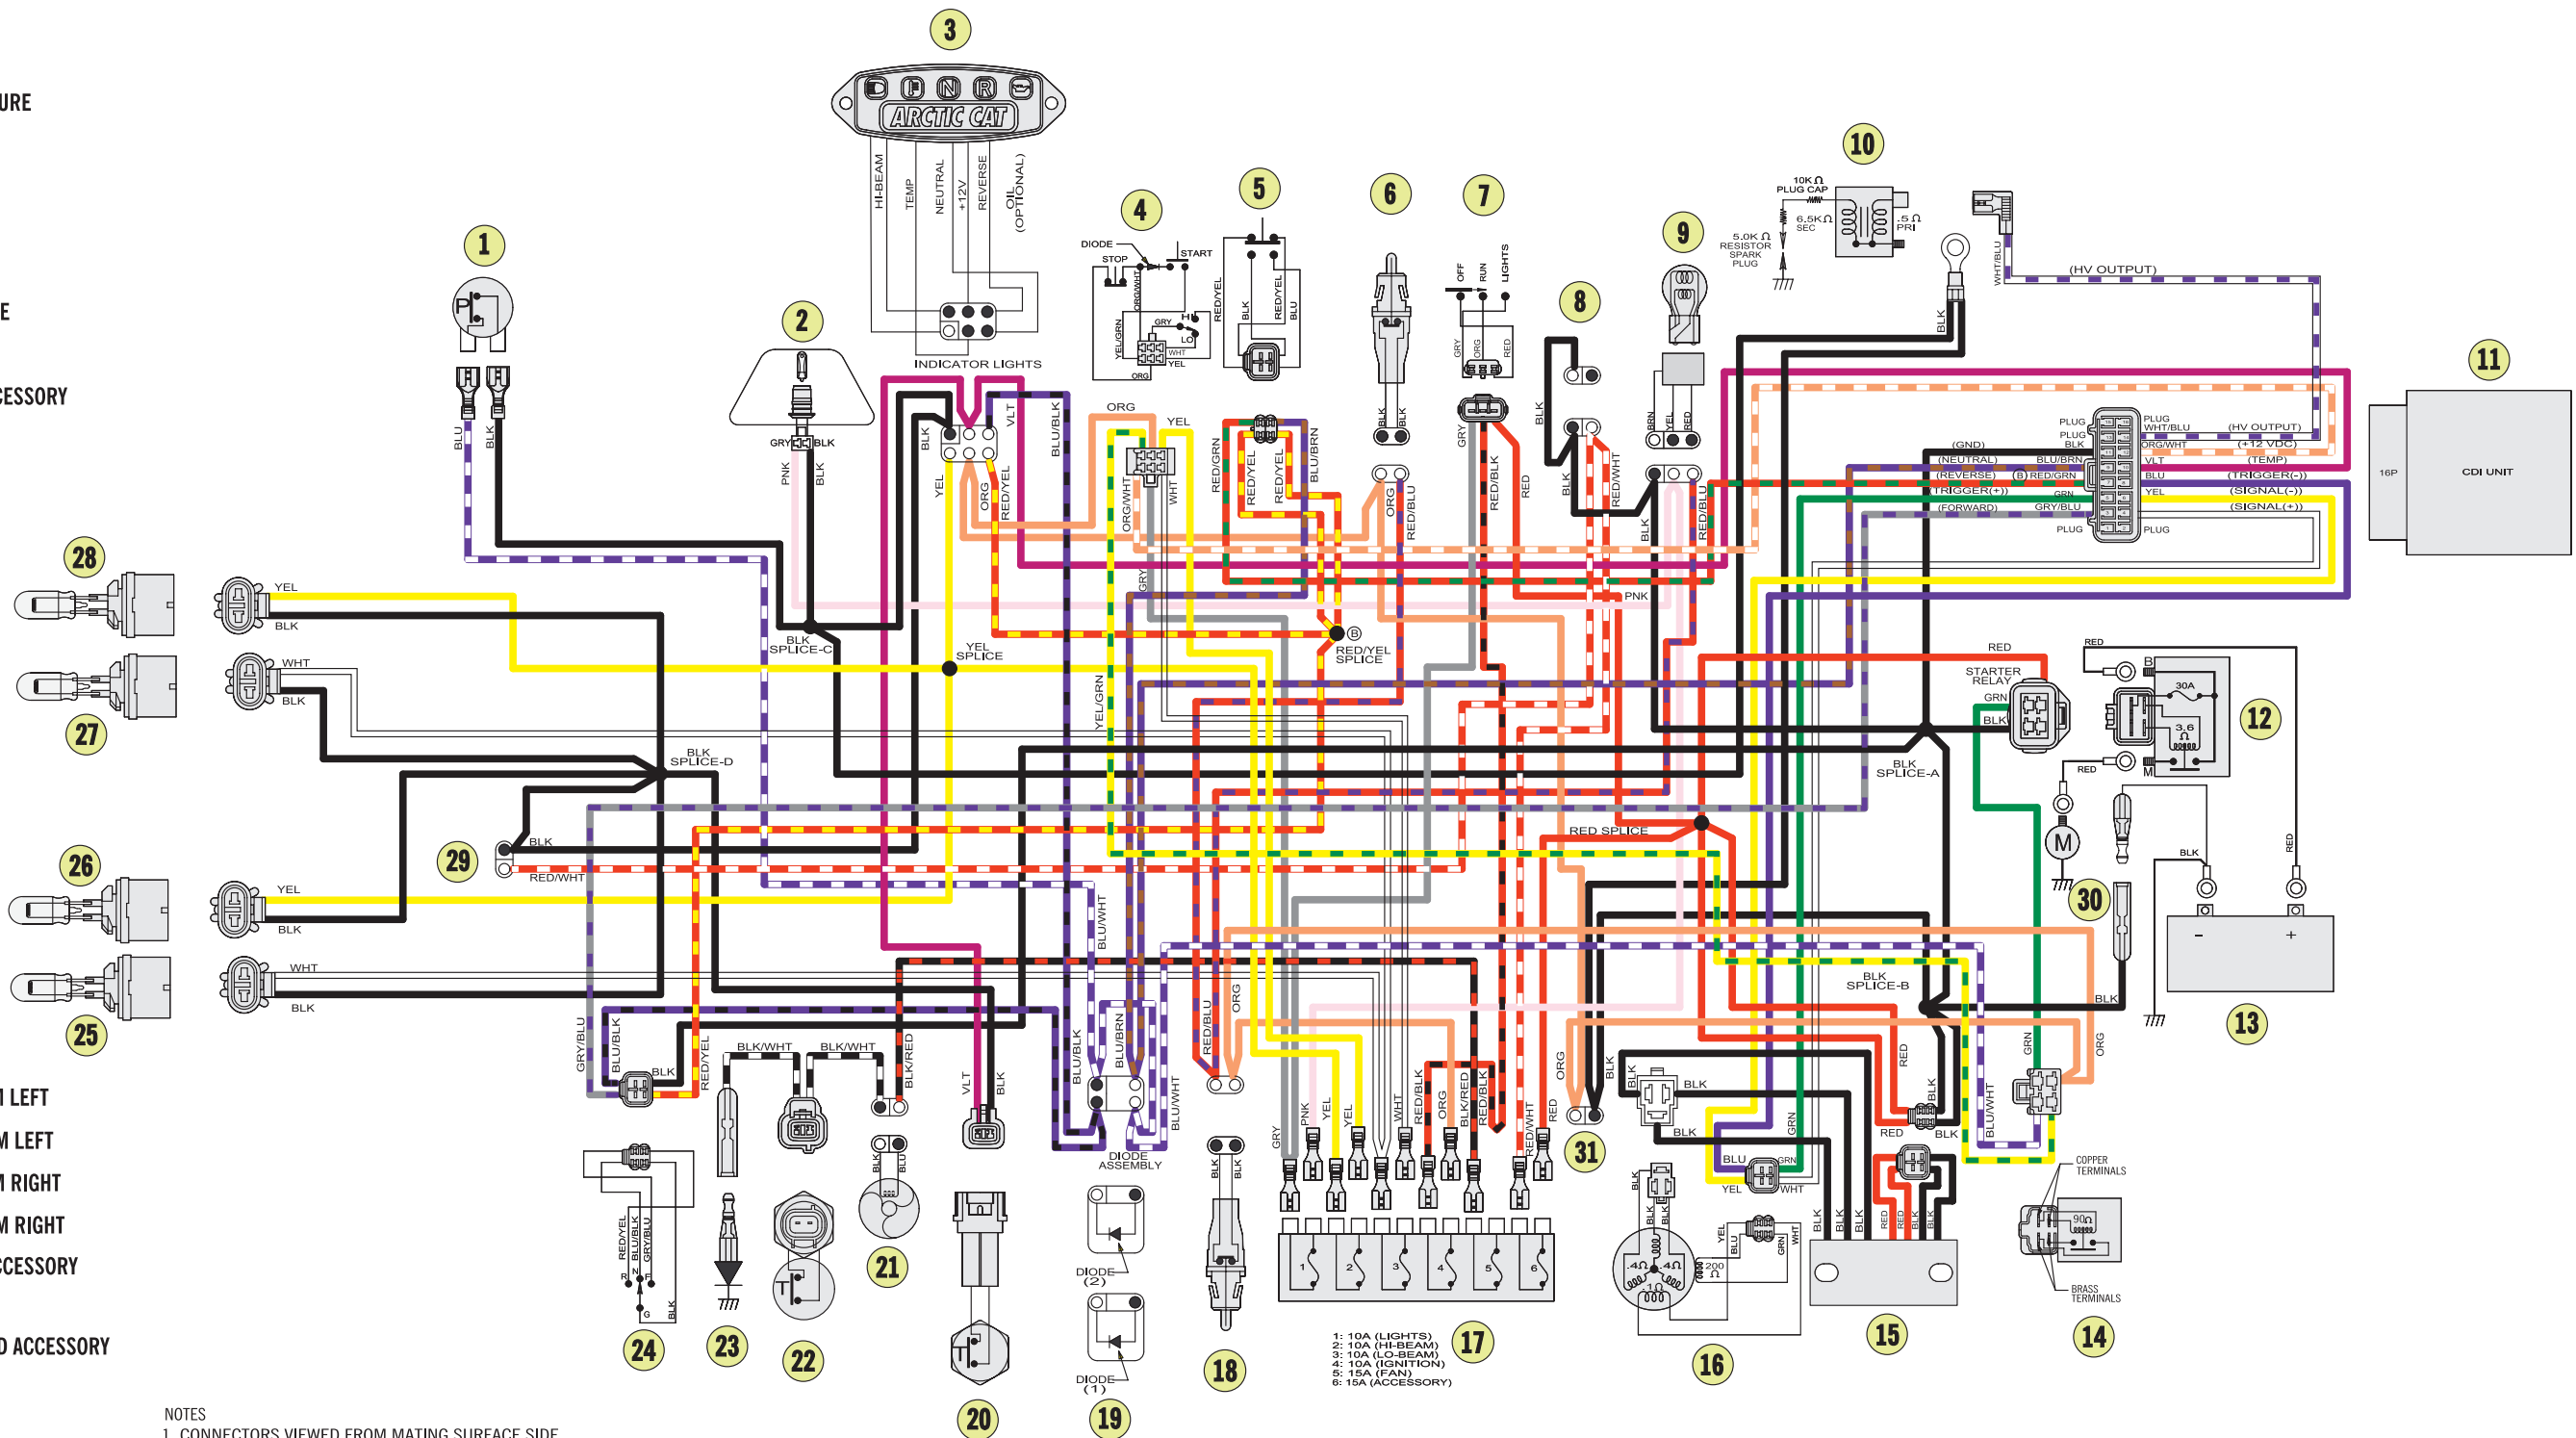

NOTES
 1. CONNECTORS VIEWED FROM MATING SURFACE SIDE.
 2. ● MALE PIN TERMINAL
 ○ FEMALE RECEPTACLE TERMINAL

- 1: 10A (LIGHTS)
- 2: 10A (HI-BEAM)
- 3: 10A (LO-BEAM)
- 4: 10A (IGNITION)
- 5: 15A (FAN)
- 6: 15A (ACCESSORY)