



10M900

Illustrated Parts List

Model Series

10M900

TYPE NUMBER
0005 through 0521.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Brake	5
Cam	3
Carburetor	4
Controls	4
Covers	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Flywheel	6
Fuel Tank	4
Governor Spring	4
Head	2
Ignition	5
Kits/Gaskets-Sets	2
Muffler Group	5
Oil Group	2
Piston Group	3
Rewind	6
Valves	3












PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

10M900










1058 OWNER'S MANUAL













1330 REPAIR MANUAL

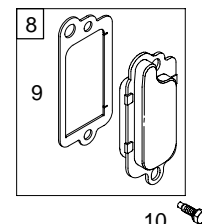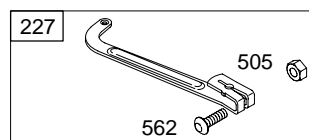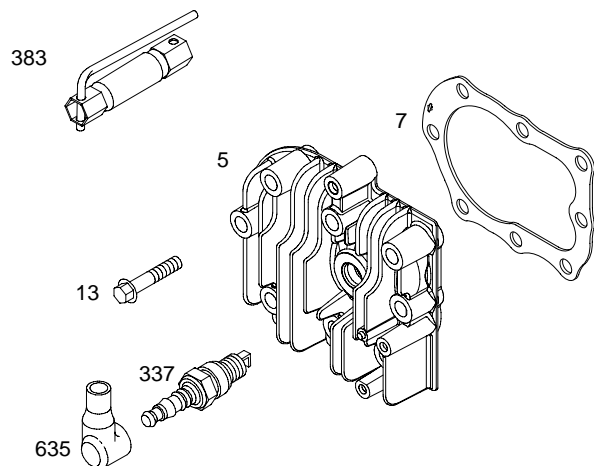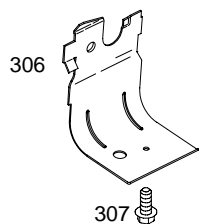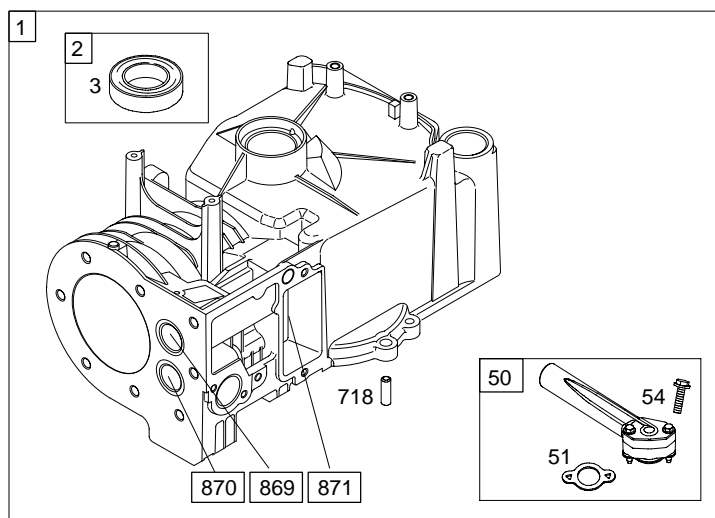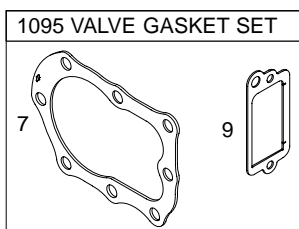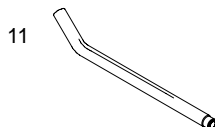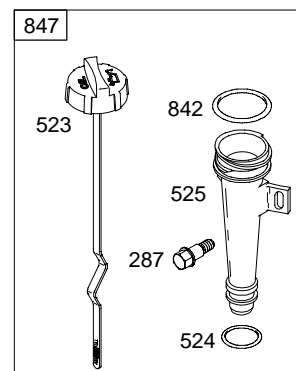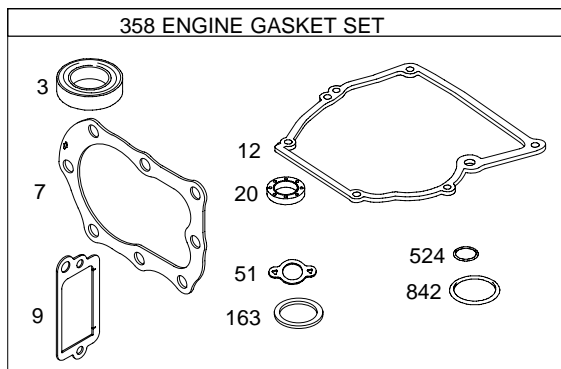

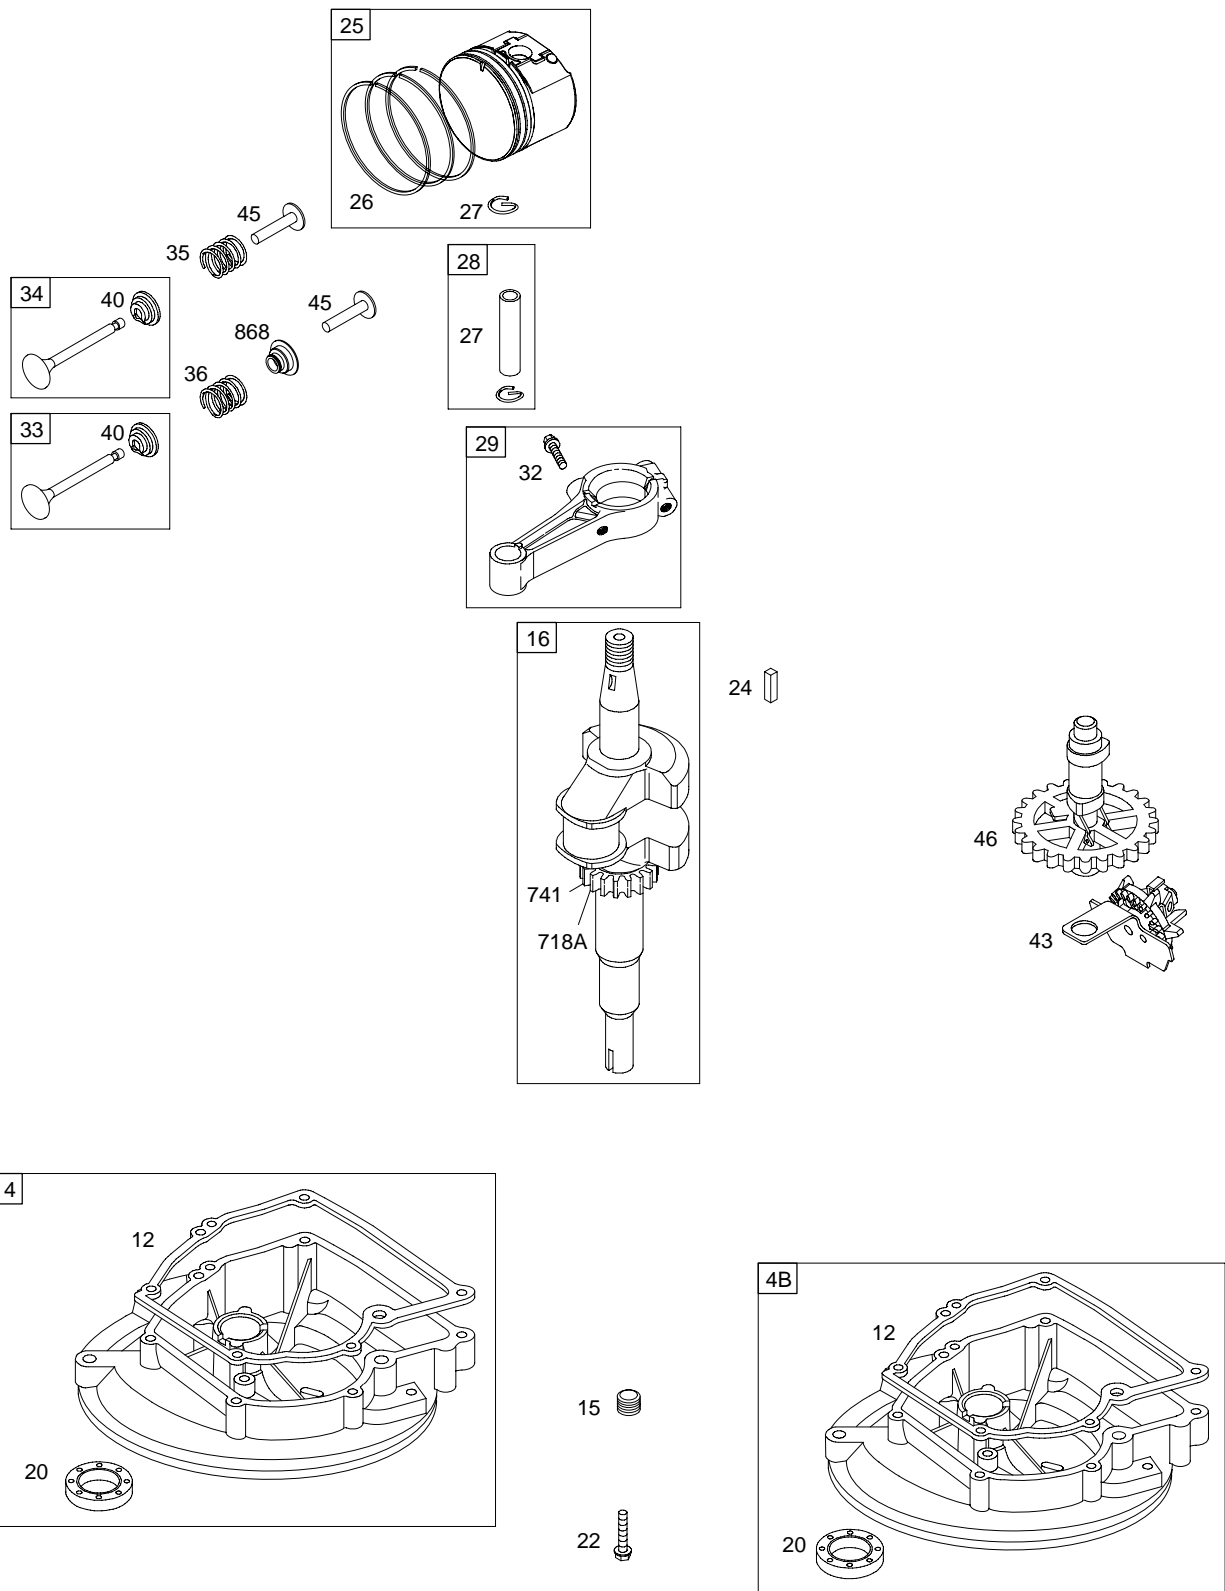

10M900

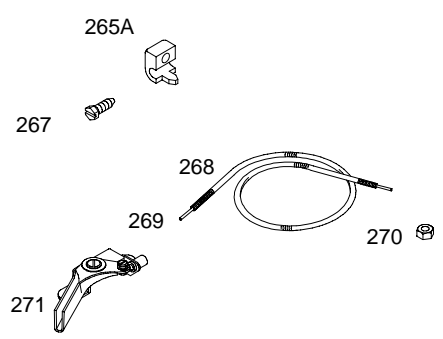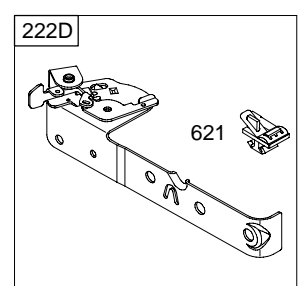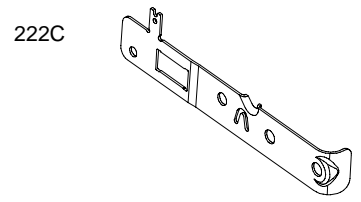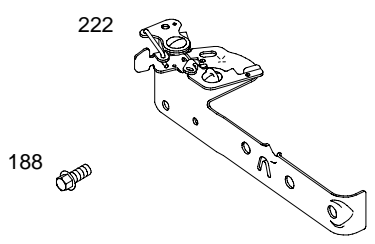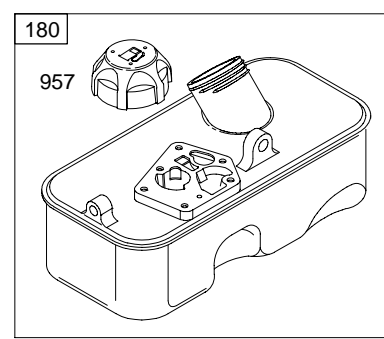
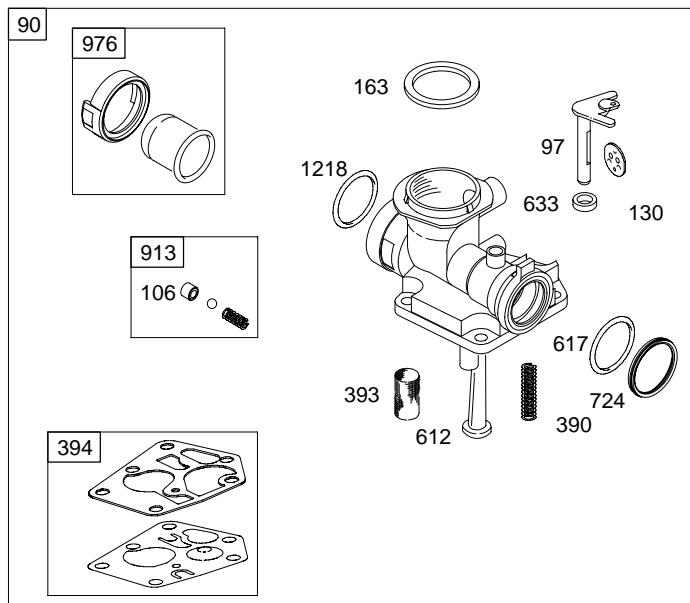


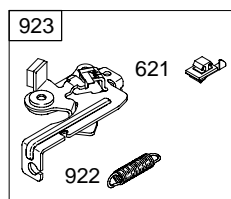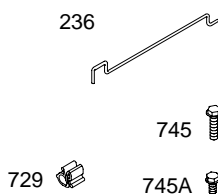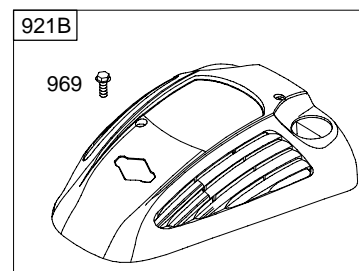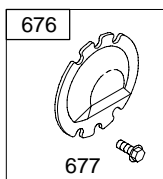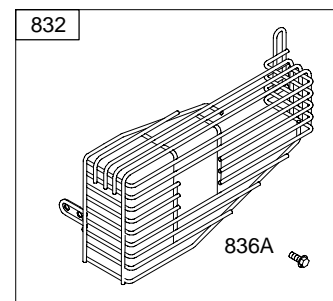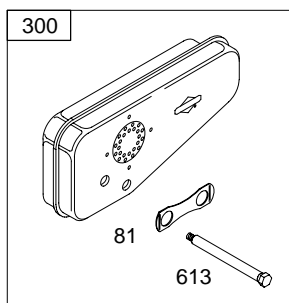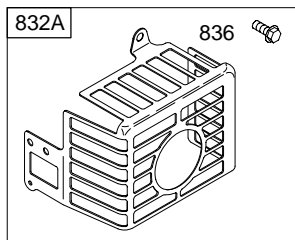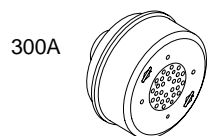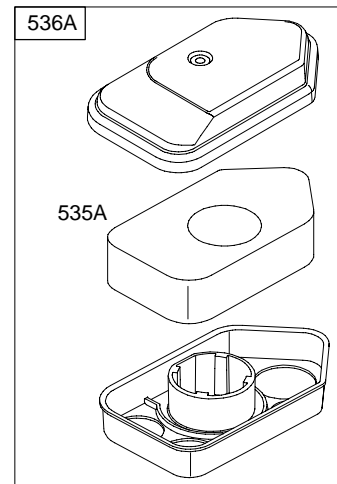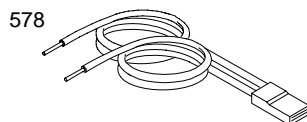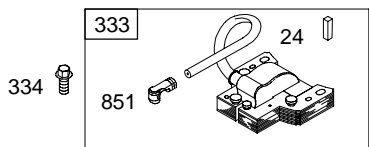

10M900

1019 LABEL KIT

1036 EMISSIONS LABEL

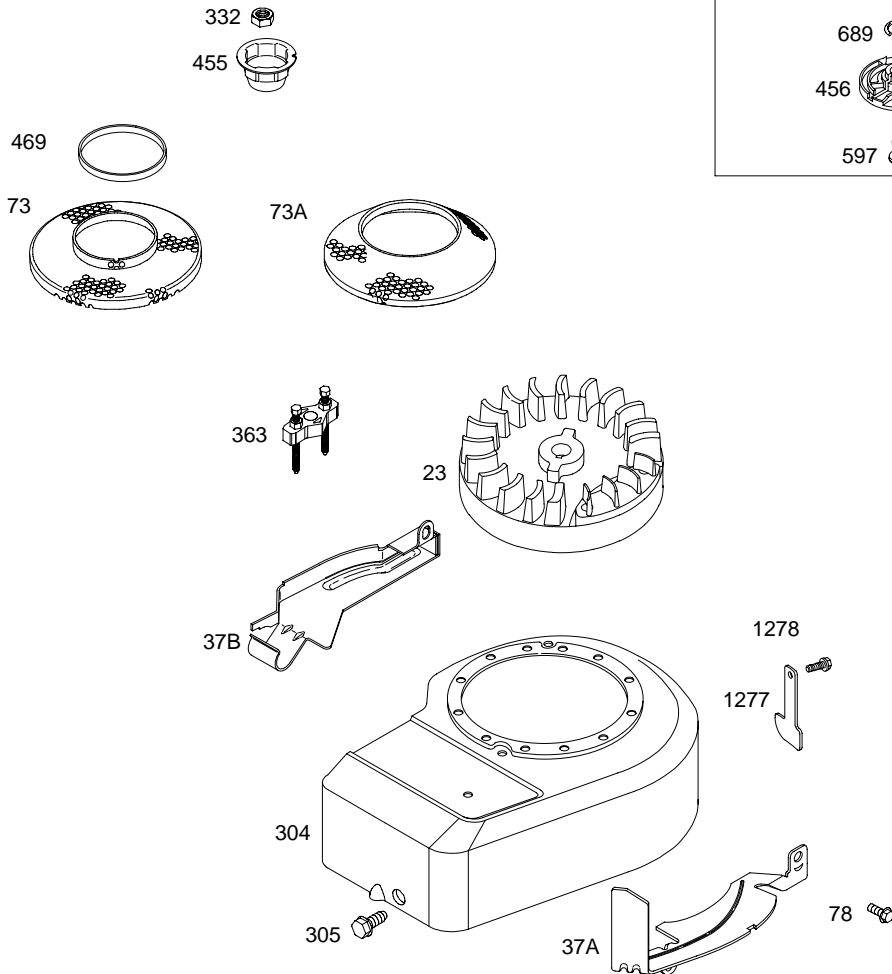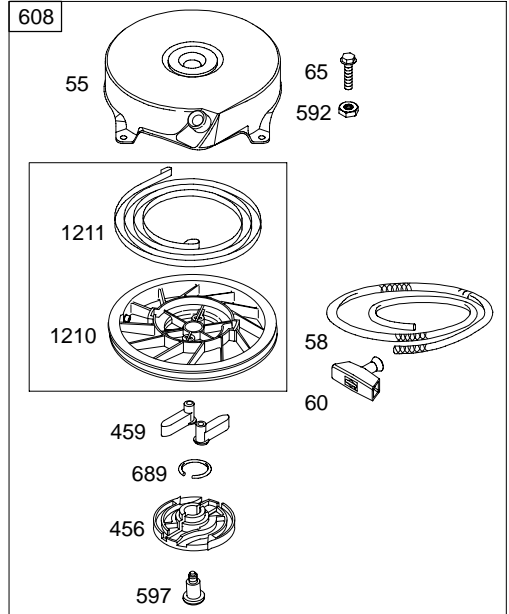

10M900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699650	Cylinder Assembly	26	790909	Ring Set (Standard) (Used After Code Date 04111400).	81	691179	Lock-Muffler Screw Used on Type No(s). 0388.
2	399269	Kit-Bushing/Seal (Magneto Side)				90	790206	Carburetor (Used After Code Date 03111900).
3	★299819	Seal-Oil (Magneto Side)			----- Note -----			
4	699081	Sump-Engine Used on Type No(s). 0005.			699658 Ring Set (Standard) (Used Before Code Date 04111500).			----- Note -----
4B	698691	Sump-Engine						697415 Carburetor (Used Before Code Date 03112000).
5	790169	Head-Cylinder	27	691588	Lock-Piston Pin			790218 Carburetor Used on Type No(s). 0005, 0111, 0112, 0113.
7	★Δ698717	Gasket-Cylinder Head	28	699659	Pin-Piston			
8	699640	Breather Assembly	29	699654	Rod-Connecting			
9	★Δ695890	Gasket-Breather (Standard, .015 Thick)	32	691664	Screw (Connecting Rod)			
10	691666	Screw (Breather Assembly)	33	296676	Valve-Exhaust	97	697414	Shaft-Throttle
11	691245	Tube-Breather	34	296677	Valve-Intake	106	691901	Seat-Inlet
12	★692218	Gasket-Crankcase (Standard, .015 Thick)	35	690520	Spring-Valve (Intake)	130	691190	Valve-Throttle
13	691640	Screw (Cylinder Head)	36	690520	Spring-Valve (Exhaust)	163	★271139	Gasket-Air Cleaner
15	691680	Plug-Oil Drain	37A	691209	Guard-Flywheel (Muffler Side)	180	494406	Tank-Fuel
16	691472	Crankshaft	37B	697403	Guard-Flywheel (Carburetor Side)	188	692198	Screw (Control Bracket)
		----- Note -----				190	691640	Screw (Fuel Tank) (1 3/4" Long)
		692989 Crankshaft Used on Type No(s). 0005, 0018, 0111, 0112, 0113, 0212, 0397.	40	692194	Retainer-Valve	190A	692198	Screw (Fuel Tank) (1/2" Long)
		691471 Crankshaft Used on Type No(s). 0016.	43	697799	Slinger-Governor/Oil			
20	★391483	Seal-Oil (PTO Side)	45	691762	Tappet-Valve	202	698835	Link-Mechanical Governor
22	691662	Screw (Crankcase Cover/Sump)	46	691998	Camshaft	209	698719	Spring-Governor (Light Blue) Used on Type No(s). 0015, 0016, 0018, 0100, 0212, 0289, 0397.
23	692009	Flywheel	50	699644	Manifold-Intake			----- Note -----
		----- Note -----	51	★699649	Gasket-Intake			698726 Spring-Governor (Pink) Used on Type No(s). 0310, 0364, 0367, 0435, 0452, 0474, 0489, 0521.
		690843 Flywheel Used on Type No(s). 0005, 0111, 0112, 0113.	54	691111	Screw (Intake Manifold)			790220 Spring-Governor (Black) Used on Type No(s). 0005, 0111, 0112, 0113.
24	222698	Key-Flywheel	55	692144	Housing-Rewind Starter			
25	790908	Piston Assembly (Standard) (Used After Code Date 04111400).	58	697316	Rope-Starter (88 5/8" Long)			
		----- Note -----			----- Note -----			
		699657 Piston Assembly (Standard) (Used Before Code Date 04111500).	60	691915	Grip-Starter Rope			
			65	690837	Screw (Rewind Starter)			
			73	694018	Screen-Rotating Used on Type No(s). 0212, 0289. (Used Before Code Date 03080400).			
			73A	699850	Screen-Rotating (Used After Code Date 03080300).			
			78	692198	Screw (Flywheel Guard)			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Δ Valve Gasket Set-Reference 1095

10M900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	697410	Bracket-Control Used on Type No(s). 0212, 0289, 0310, 0364, 0367, 0435, 0452, 0474, 0489, 0521.	332	690662	Nut (Flywheel)	608	499706	Starter-Rewind
222C	698725	Bracket-Control Used on Type No(s). 0100.	333	496914	Armature-Magneto	612	496046	Tube-Pick Up
222D	699326	Bracket-Control Used on Type No(s). 0005, 0015, 0016, 0018, 0111, 0112, 0113, 0397.	334	691061	Screw (Magneto Armature)	613	691413	Screw (Muffler) Used on Type No(s). 0388.
227	697402	Lever-Governor Control	337	802592	Plug-Spark ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0005, 0015, 0016, 0018, 0364, 0388.	615	690340	Retainer-Governor Shaft
236	691867	Link-Lockout	356	692390	Wire-Stop	616	697405	Crank-Governor
265A	690798	Clamp-Casing Used on Type No(s). 0005, 0015, 0016, 0018, 0100.	358	699933	Gasket Set-Engine	617	270344	Seal-O Ring (Intake Manifold)
267	691044	Screw (Casing Clamp)	363	19069	Puller-Flywheel	621	692310	Switch-Stop
268	691072	Casing-Control Wire (Cut To Required Length)	365	790029	Screw (Carburetor)	633	691321	Seal-Choke/Throttle Shaft (Throttle)
269	691589	Wire-Control (Cut To Required Length)	383	89838	Wrench-Spark Plug	635	66538	Boot-Spark Plug
270	691027	Nut (Control Wire Casing)	390	691839	Spring-Choke Diaphragm	670	691633	Spacer-Fuel Tank (Compliance Engines)
271	691028	Lever-Control	393	691837	Screen-Carburetor	676	393756	Deflector-Muffler Used on Type No(s). 0113.
287	691002	Screw (Dipstick Tube)	394	495770	Diaphragm-Carburetor	677	690661	Screw (Muffler Deflector) Used on Type No(s). 0113.
300	692307	Muffler Used on Type No(s). 0388.	404	690272	Washer (Governor Crank)	689	691855	Spring-Friction
300A	394569	Muffler (Round Lo Tone)	455	691236	Cup-Flywheel	718	690959	Pin-Locating (Cylinder)
304	697411	Housing-Blower (Compliance) ----- Note ----- 790297 Housing- Blower (Non Compliance) Used on Type No(s). 0005, 0111, 0112, 0113, 0397.	456	692299	Plate-Pawl Friction	718A	499047	Pin-Locating (Crankshaft)
305	692198	Screw (Blower Housing)	459	281505	Pawl-Ratchet	724	697478	Retainer-Seal
306	690400	Shield-Cylinder (Used Before Code Date 04071400).	469	694420	Ring-Rotating Trim (Used Before Code Date 03080400). Used on Type No(s). 0212, 0289.	729	690586	Clip-Wire
307	690345	Screw (Cylinder Shield) (Used Before Code Date 04071400).	505	691251	Nut (Governor Control Lever)	741	691805	Gear-Timing
			523	692040	Dipstick	745	691146	Screw (Brake) (7/8" Long)
			524	★691876	Seal-Dipstick Tube	745A	690859	Screw (Brake) (1/2" Long)
			525	691320	Tube-Dipstick	832	790743	Guard-Muffler Used on Type No(s). 0388.
			529	692189	Grommet	832A	699670	Guard-Muffler Used on Type No(s). 0005, 0111, 0112, 0113, 0364, 0397.
			534	691417	Screw (Air Cleaner)	836	690664	Screw (Muffler Guard) (13/32" Long) Used on Type No(s). 0005, 0111, 0112, 0113, 0364, 0397.
			535A	698369	Filter-Air Cleaner Foam	836A	790745	Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0388.
			536A	698472	Cleaner-Air			
			562	92613	Bolt (Governor Control Lever)			
			578	398153	Wire Assembly Used on Type No(s). 0015, 0016, 0018.			
			592	690800	Nut (Rewind Starter)			
			597	691696	Screw (Pawl Friction Plate)			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
△ Valve Gasket Set-Reference 1095

10M900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
842	★691870	Seal-O Ring (Dipstick Tube)	913	494409	Seat-Check Valve	1058	275508	Operator's Manual
847	691440	Dipstick/Tube Assembly	921B	698709	Cover-Blower Housing	1095	498526	Gasket Set-Valve
851	493880	Terminal-Spark Plug	922	692135	Spring-Brake	1210	499901	Pulley/Spring Assembly
868	697338	Seal-Valve	923	691487	Brake			(Pulley)
869	699641	Seat-Valve (Intake)	957	497929	Cap-Fuel Tank	1211	499901	Pulley/Spring Assembly
870	699642	Seat-Valve (Exhaust)	957A	791129	Cap-Fuel Tank Used on Type No(s). 0005, 0015, 0016, 0018, 0112, 0113.	1218	695866	Seal-O Ring (Carburetor)
871	699643	Bushing-Valve Guide (Exhaust Valve)	969	694046	Screw (Blower Housing Cover) (2 1/4" Long)	1277	698718	Guard-Governor Nut
		----- Note -----				1278	691002	Screw (Governor Nut Guard)
		63709 Bushing-Valve Guide (Intake Valve)	976	694394	Primer-Carburetor	1330	270962	Repair Manual
			1019	496757	Kit-Label			
			1036	790713	Label-Emissions (Used After Code Date 04063000).			
					----- Note -----			
					699930 Emissions- Label (Used Before Code Date 04070100).			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
△ Valve Gasket Set-Reference 1095