



110600

Illustrated Parts List

Model Series

110600

TYPE NUMBERS
0015 through 0136.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

110600

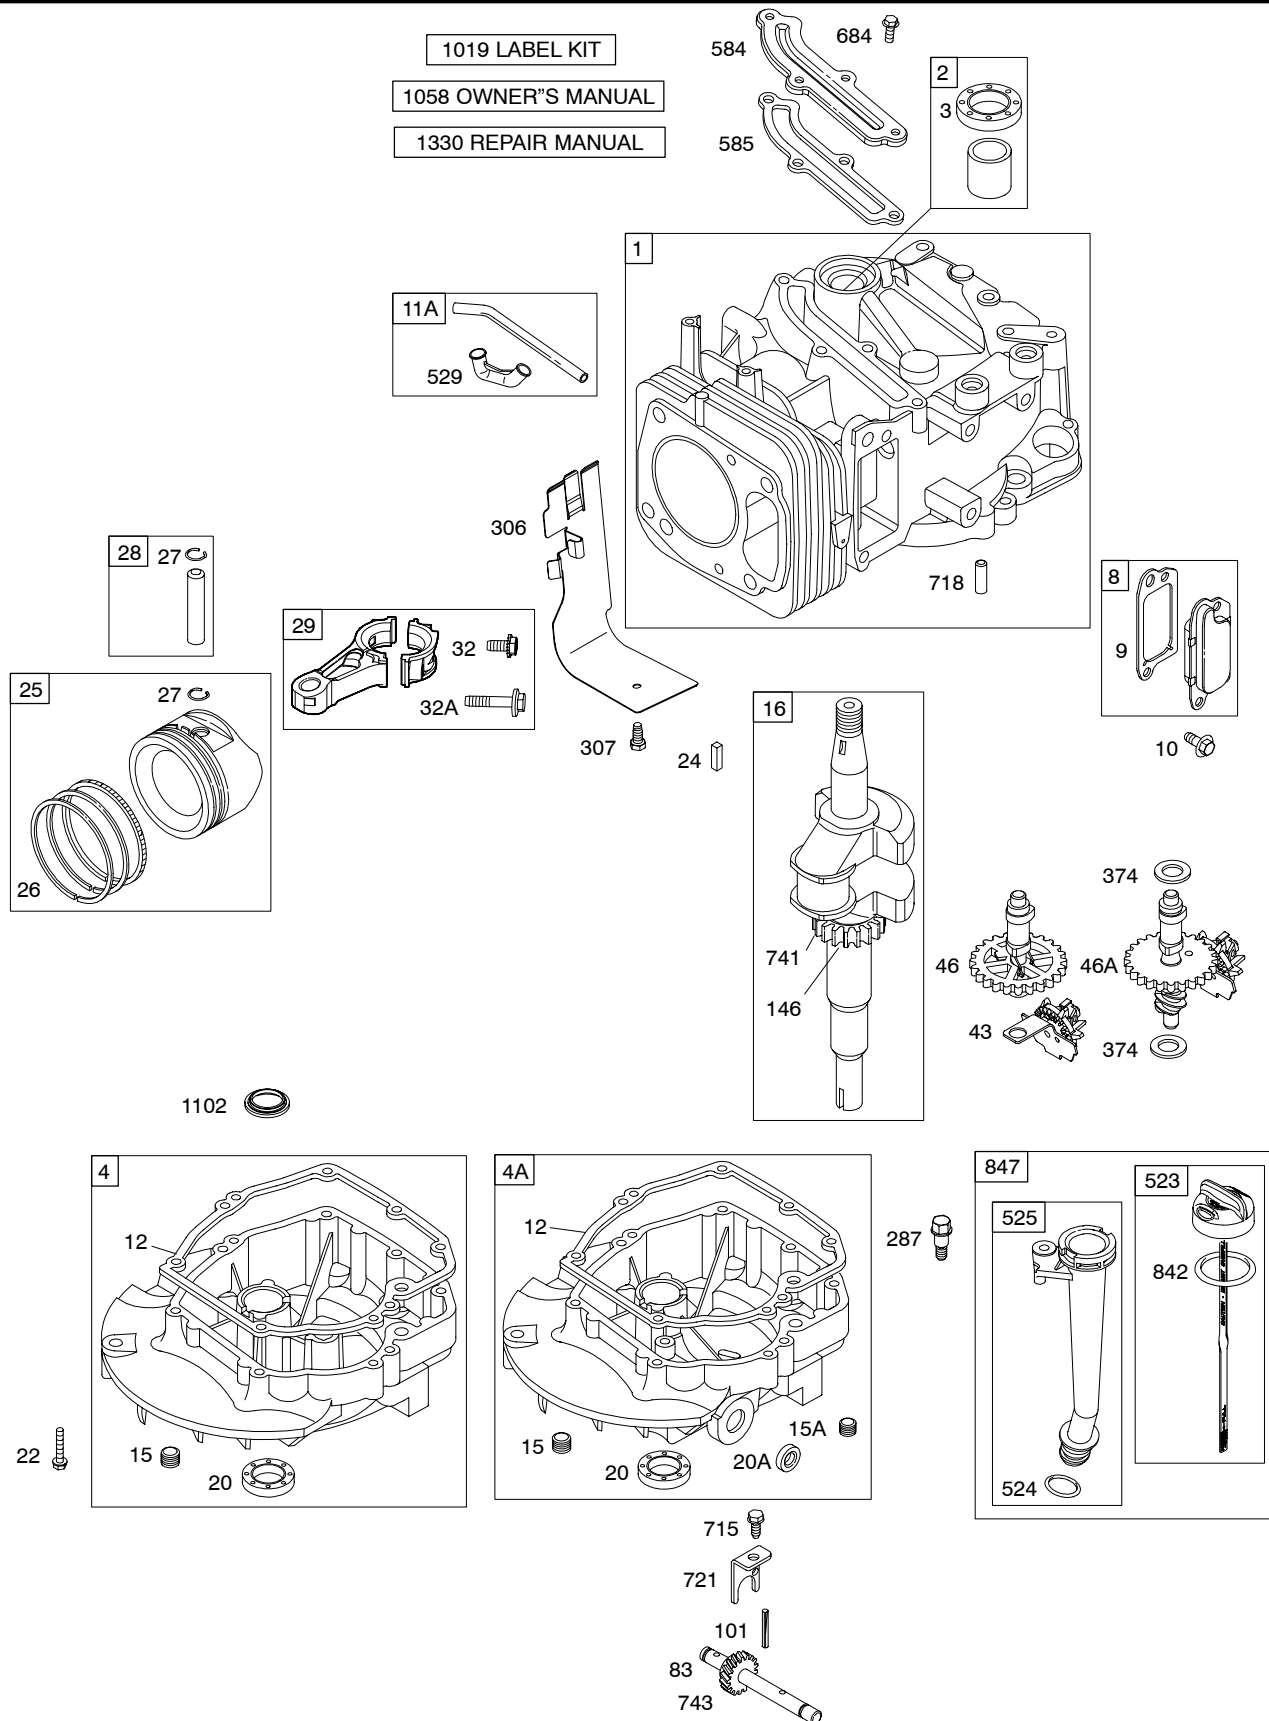


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.





6013-2

Assemblies include all parts shown in frames.













10/11/2005

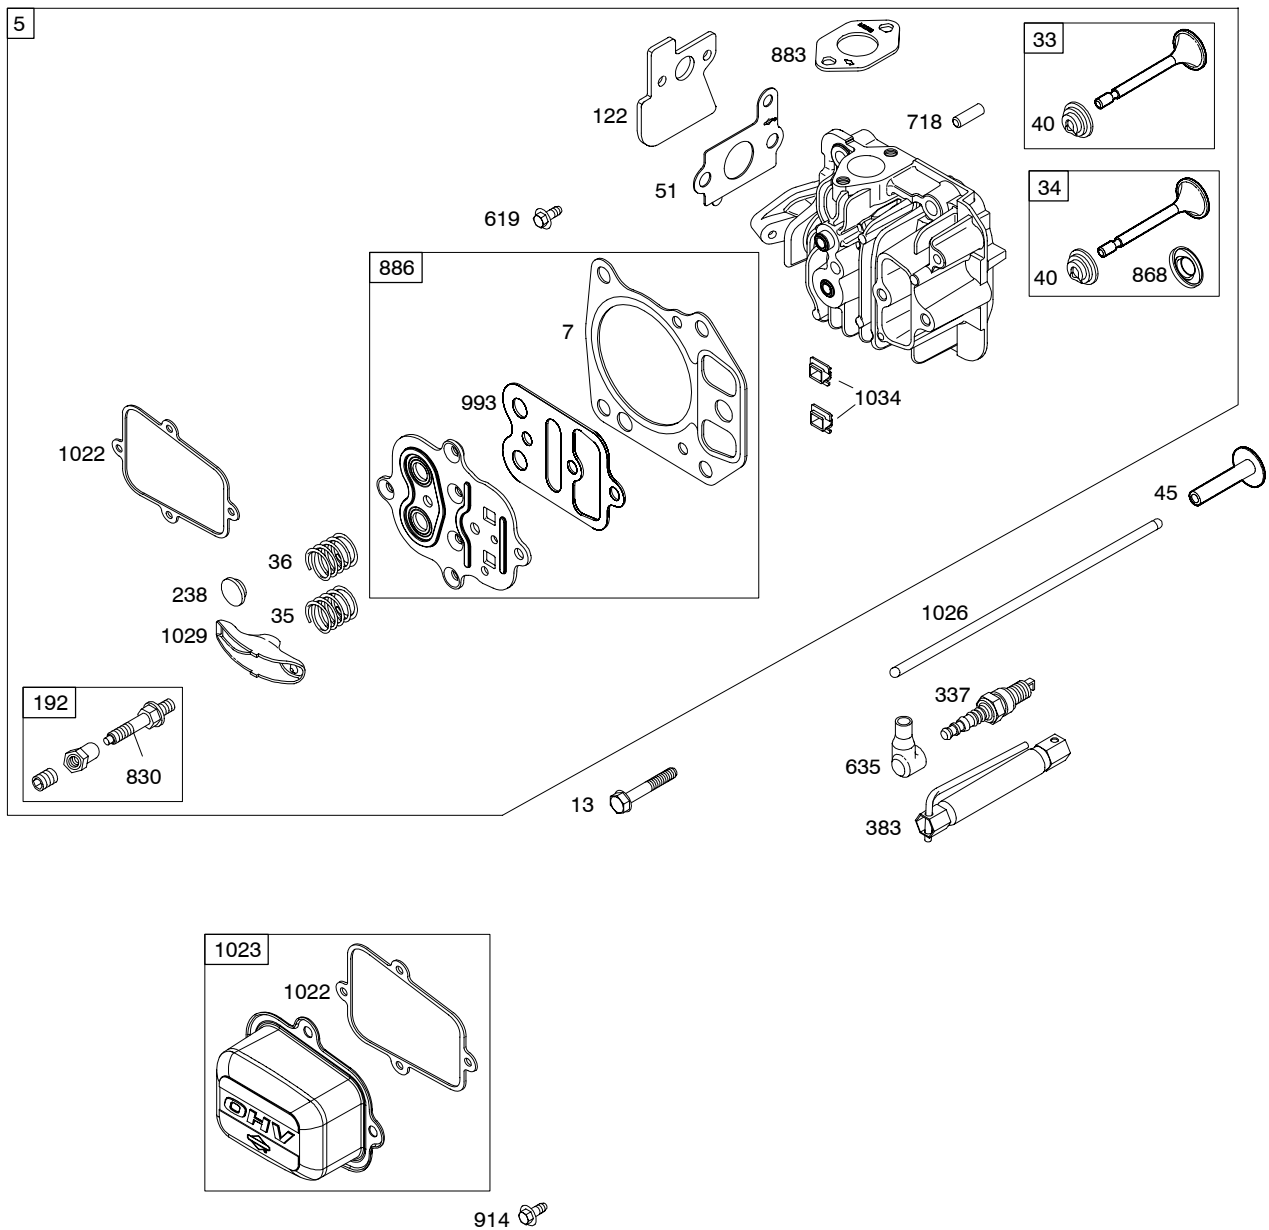


110600

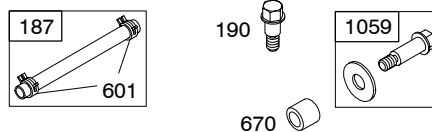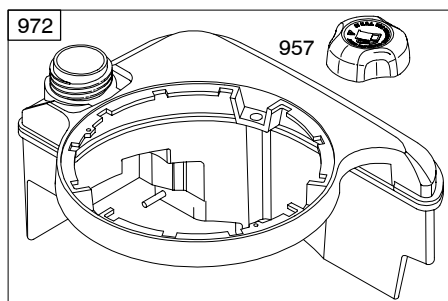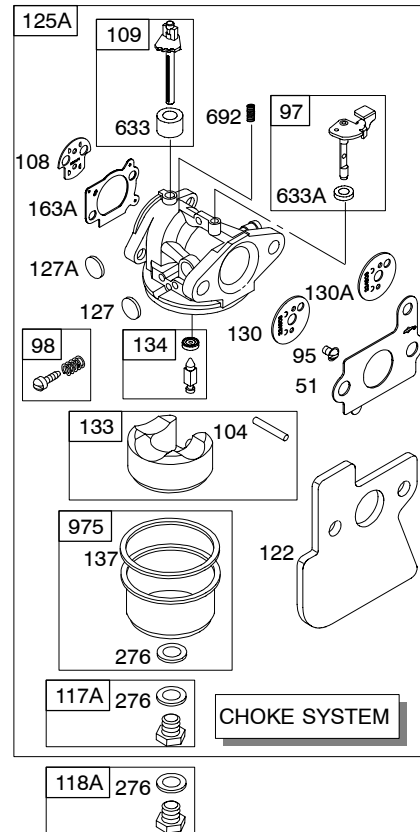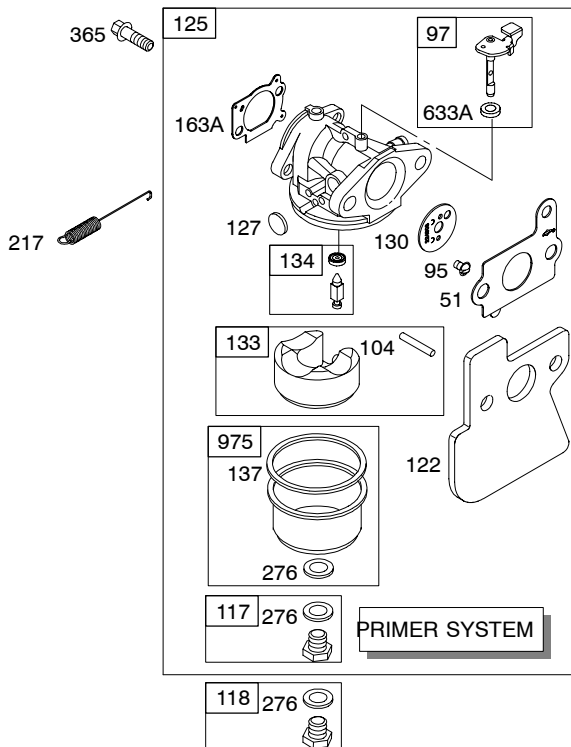


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6013-4 Assemblies include all parts shown in frames. **10/11/2005**

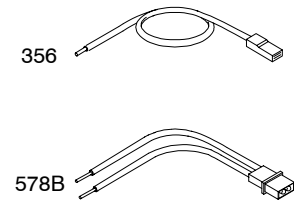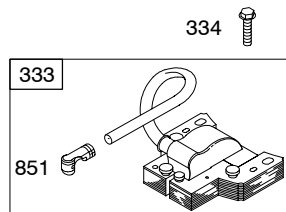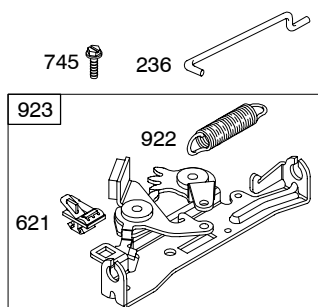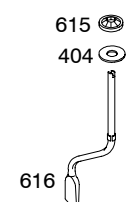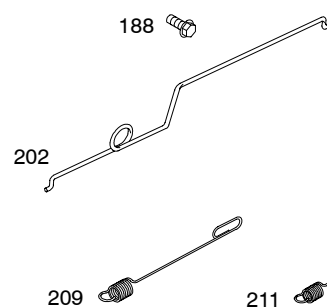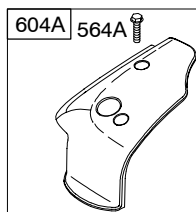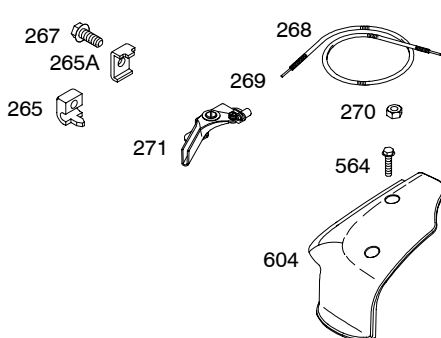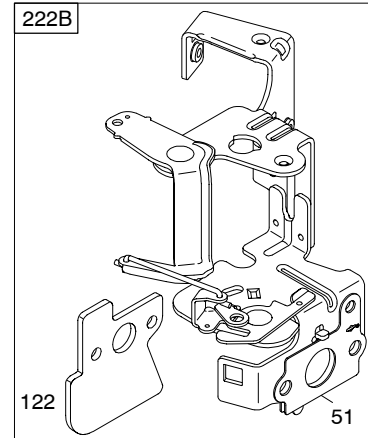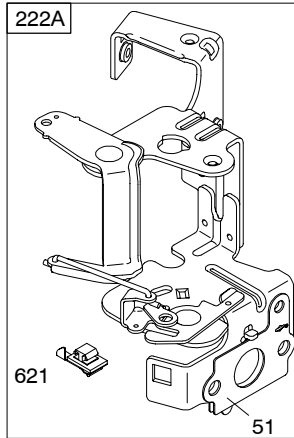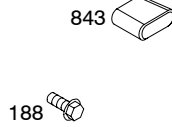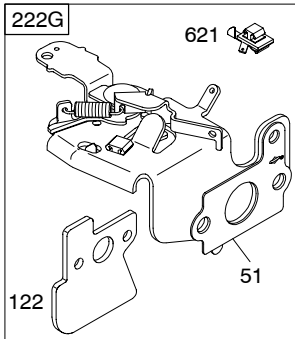





110600

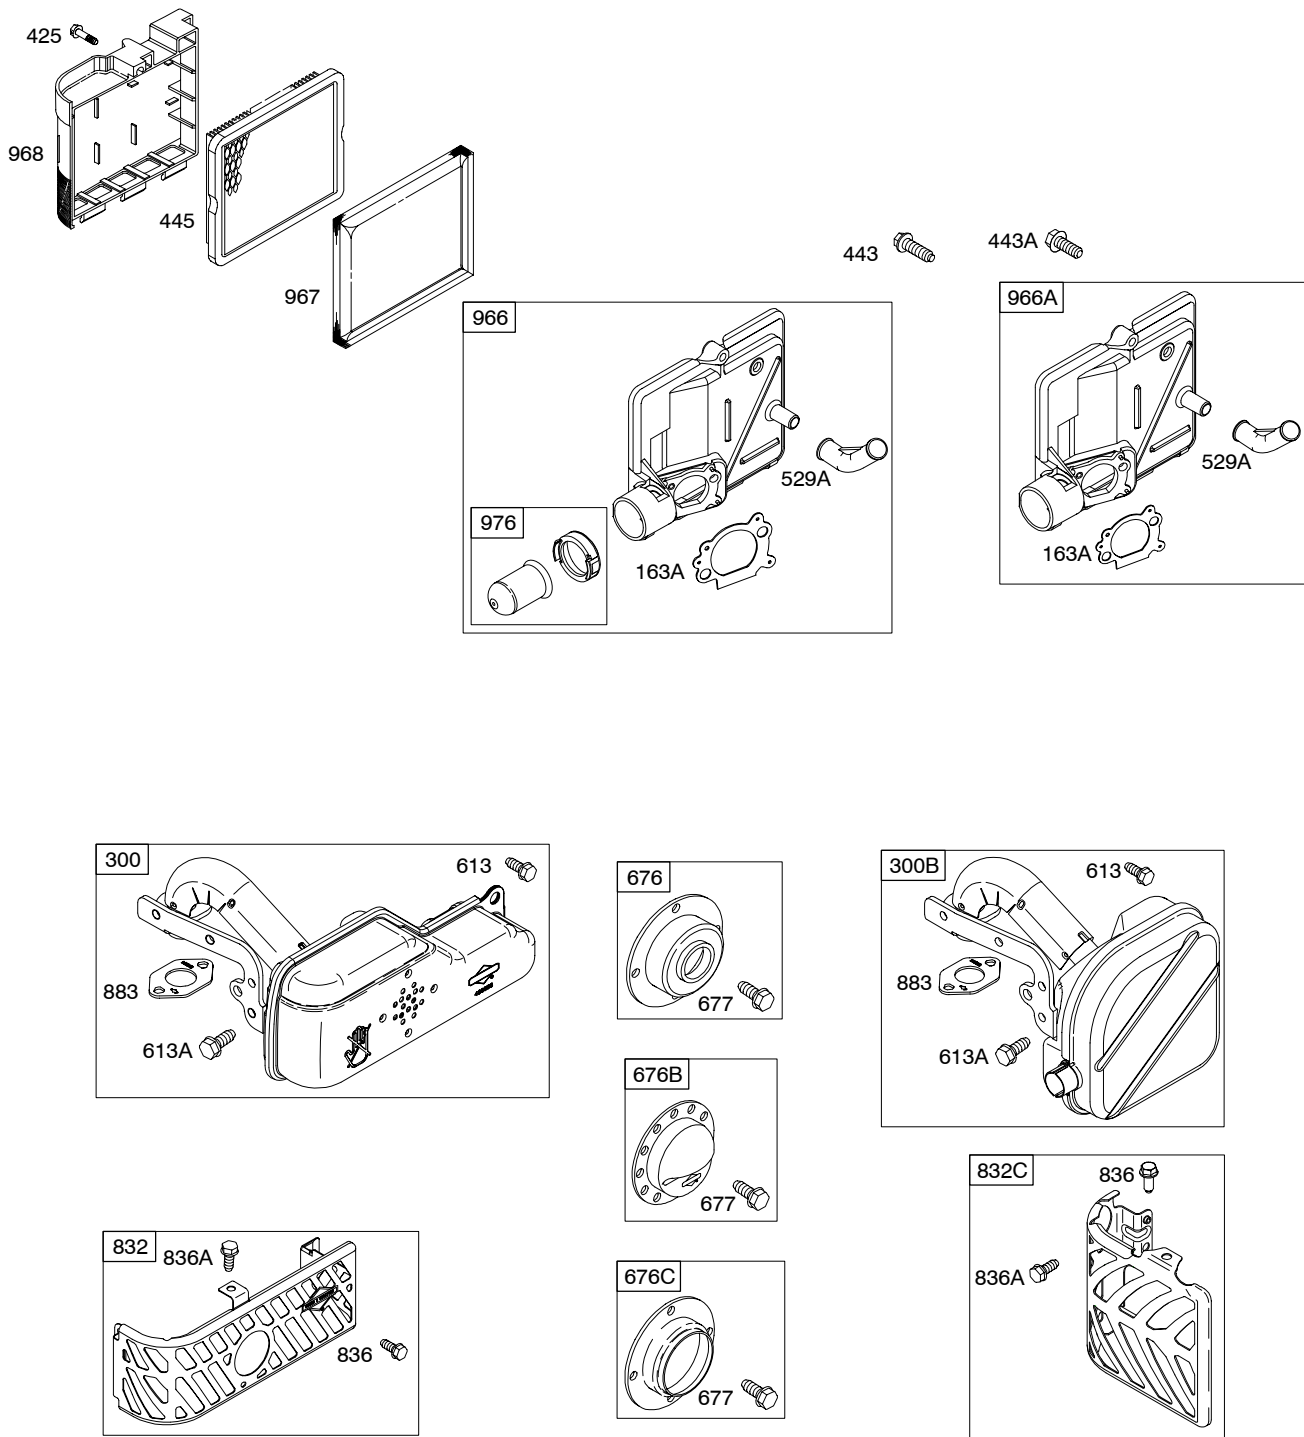

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6013-6 Assemblies include all parts shown in frames. 10/11/2005

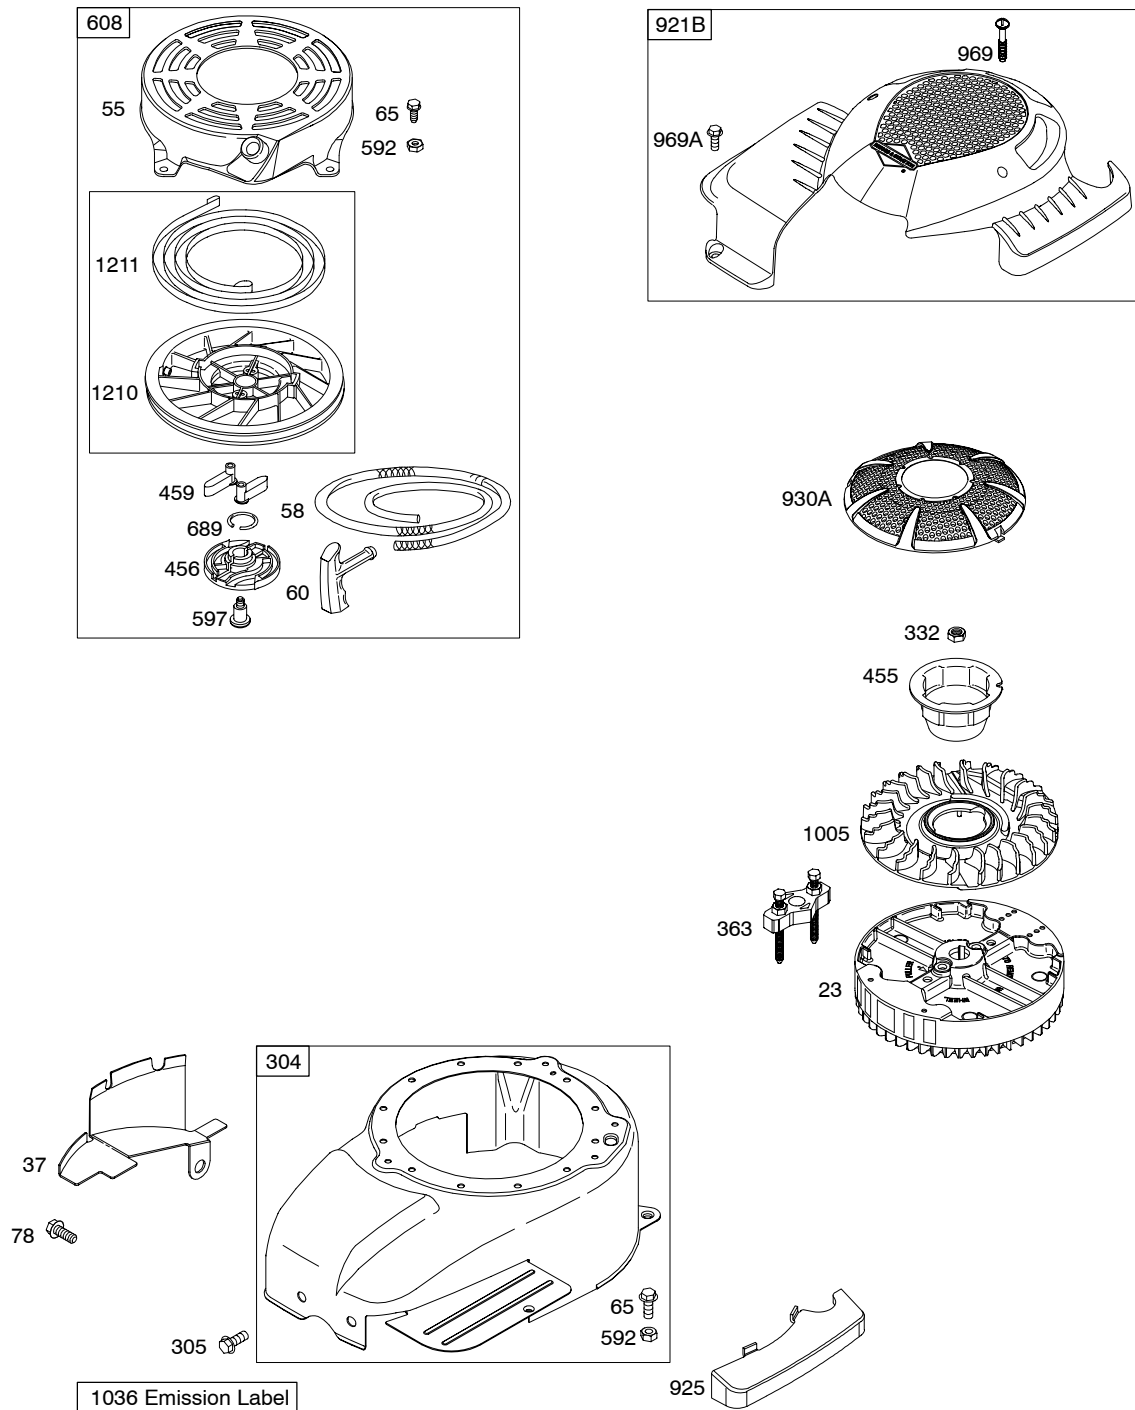

110600

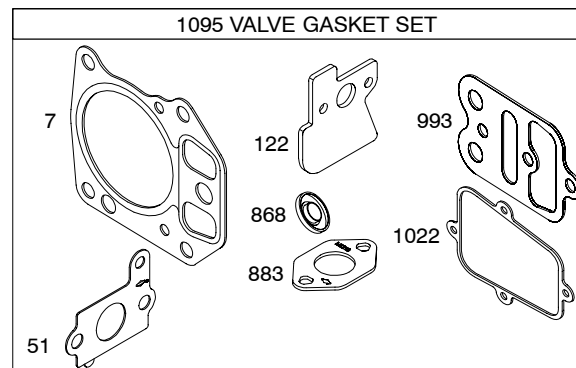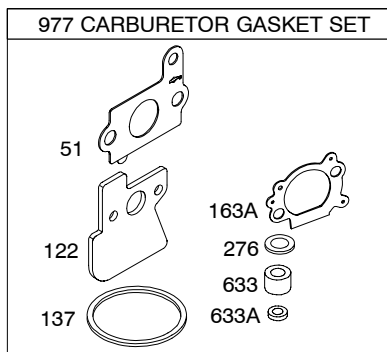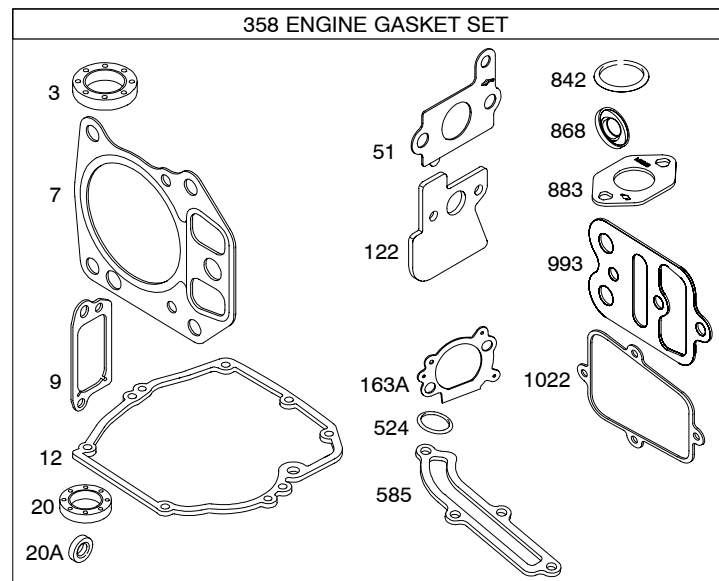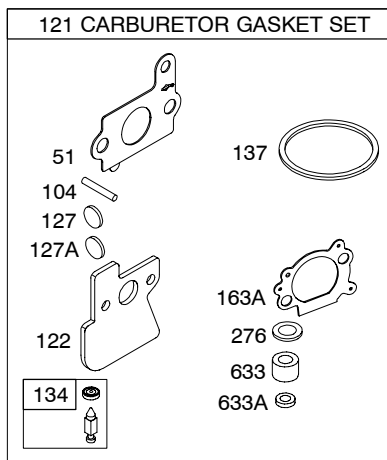

110600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly	24	222698	Key-Flywheel	32	691664	Screw
2	399269	Kit-Bushing/Seal (Magnet Side)	25	790359	Piston Assembly			(Connecting Rod)
3	★299819	Seal-Oil (Magnet Side)			----- Note -----	32A	695759	Screw
4	493279	Sump-Engine			499430 Piston			(Connecting Rod)
		----- Note -----			Assembly			(Used After Code Date
		498983 Sump-Engine			(.010" Oversize)			00022000).
		Used on Type No(s).			791326 Piston	33	499642	Valve-Exhaust
		0117.			Assembly	34	499641	Valve-Intake
					(.020" Oversize)	35	691304	Spring-Valve
4A	493365	Sump-Engine			(Used After Code Date	36	691304	Spring-Valve
		(Auxiliary PTO)			04102100).			(Exhaust)
		Used on Type No(s).			499431 Piston	37	694086	Guard-Flywheel
		0114.			Assembly	40	692194	Retainer-Valve
5	695276	Head-Cylinder			(.020" Oversize)	43	691997	Slinger-Governor/Oil
7	★△695166	Gasket-Cylinder Head			(Used Before Code	45	690977	Tappet-Valve
8	495786	Breather Assembly			Date 97011300).	46	694039	Camshaft
9	★272481	Gasket-Breather			499432 Piston			(Used After Code Date
10	691125	Screw			Assembly			99030700).
		(Breather Assembly)	26	790360	(.030" Oversize)			----- Note -----
11A	499675	Tube-Breather			Ring Set			694035 Camshaft
12	★692232	Gasket-Crankcase			(Standard)			(Used Before Code
13	691137	Screw			(Used After Code Date			Date 99030800).
		(Cylinder Head)			04040400).	46A	694037	Camshaft
15	691680	Plug-Oil Drain			----- Note -----			(Counterclockwise)
		(Square Socket)			499425 Ring Set			(Used After Code Date
15A	691093	Plug-Oil Drain			(Standard)			99030700).
		(Hex Socket)			(Used Before Code			Used on Type No(s).
16	692676	Crankshaft			Date 04040500).			0114.
20	★399781	Seal-Oil			499426 Ring Set			----- Note -----
		(PTO Side)			(.010" Oversize)			694033 Camshaft
20A	★691952	Seal-Oil			791324 Ring Set			(Counterclockwise)
		(PTO Side)			(.020" Oversize)			(Used Before Code
		(Auxiliary PTO)			(Used After Code Date			Date 99030800).
22	691092	Screw			04102100).			Used on Type No(s).
		(Crankcase			499427 Ring Set			0114.
		Cover/Sump)			(.020" Oversize)	51★◆△692668		Gasket-Intake
23	699569	Flywheel			(Used Before Code	55	691421	Housing-Rewind
		----- Note -----			Date 97011300).			Starter
		692693 Flywheel			499428 Ring Set	58	697316	Rope-Starter
		Used on Type No(s).			(.030" Oversize)			(Cut To Required
		0117.	27	691866	Lock-Piston Pin			Length)
			28	499423	Pin-Piston			
			29	692671	Rod-Connecting			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***6013-9**

Assemblies include all parts shown in frames.

10/11/2005

110600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
60	281434	Grip-Starter Rope	118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600). ----- Note -----	130	691203	Valve-Throttle ----- Note -----
65	690837	Screw (Rewind Starter)						696564 Valve-Thottle (Used With Plastic Throttle Shaft)
78	691108	Screw (Flywheel Guard)				130A	691181	Valve-Throttle
83	690527	Shaft-Auxiliary Drive Used on Type No(s). 0114.			498975 Jet-Main (High Altitude) (Used Before Code Date 03110700 and After Code Date 99030700). 497315 Jet-Main (High Altitude) (Used Before Code Date 99030800).	133	398187	Float-Carburetor
95	691636	Screw (Throttle Valve)				134	●398188	Kit-Needle/Seat
97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)				137	●●693981	Gasket-Float Bowl
98	398185	Kit-Idle Speed	118A	497315	Jet-Main (High Altitude) ----- Note -----	146	690979	Key-Timing
101	691623	Pin-Shaft			497466 Jet-Main (High Altitude) Used on Type No(s). 0118.	163A★●◆692667		Gasket-Air Cleaner
104	●691242	Pin-Float Hinge				187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note -----
108	691182	Valve-Choke						691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).
109	693866	Shaft-Choke Used on Type No(s). 0117. ----- Note ----- 499779 Shaft-Choke Used on Type No(s). 0118.	121	692703	Kit-Carburetor Overhaul	188	693168	Screw (Control Bracket)
			122★●◆692799		Spacer-Carburetor	190	690940	Screw (Fuel Tank)
117	498981	Jet-Main (Standard) (Used After Code Date 03110600). ----- Note ----- 498978 Jet-Main (Standard) (Used Before Code Date 03110700 and After Code Date 99030700). 692677 Jet-Main (Standard) (Used Before Code Date 99030800).	125	790120	Carburetor (Primer System) (Used After Code Date 99030700). ----- Note ----- 692649 Carburetor (Primer System) (Used Before Code Date 99030800).	192	694543	Adjustor-Rocker Arm
						202	691303	Link-Mechanical Governor
117A	494870	Jet-Main (Standard) ----- Note ----- 498978 Jet-Main (Standard) Used on Type No(s). 0118.	125A	696131	Carburetor (Choke System) Used on Type No(s). 0117. ----- Note ----- 694205 Carburetor (Choke System) Used on Type No(s). 0118.	209	691851	Spring-Governor ----- Note ----- 692906 Spring-Governor Used on Type No(s). 0118. 691291 Spring-Governor Used on Type No(s). 0133, 0135. 691290 Spring-Governor Used on Type No(s). 0117. 690319 Spring-Governor Used on Type No(s). 0102, 0105, 0136.
			127	●694468	Plug-Welch			
			127A	●691739	Plug-Welch			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***6013-10**

Assemblies include all parts shown in frames.

10/11/2005

110600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211	692434	Spring-Governor Idle	305	691108	Screw	529	692937	Grommet
217	690354	Spring-Choke Return			(Blower Housing)	529A	691923	Grommet
222A	692672	Bracket-Control	306	691232	Shield-Cylinder	562	691119	Bolt
222B	693378	Bracket-Control	307	691108	Screw			(Governor Control Lever)
222G	697923	Bracket-Control			(Cylinder Shield)	564	691673	Screw
227	691467	Lever-Governor Control	332	690662	Nut			(Control Cover)
					(Flywheel)	564A	693808	Screw
236	691826	Link-Lockout	333	802574	Armature-Magneto			(Control Cover)
238	691300	Cap-Valve	334	691061	Screw	578B	398153	Wire Assembly
265	690798	Clamp-Casing			(Magneto Armature)	584	697734	Cover-Breather Passage
265A	691024	Clamp-Casing	337	692051	Plug-Spark	585	★691879	Gasket-Breather Passage
267	691044	Screw	356	692390	Wire-Stop			
		(Casing Clamp)	358	694090	Gasket Set-Engine	592	690800	Nut
268	691072	Casing-Control Wire (Cut To Required Length)	363	19069	Puller-Flywheel			(Rewind Starter)
			365	691136	Screw	597	691696	Screw
269	691026	Wire-Control (Cut To Required Length)			(Carburetor)			(Pawl Friction Plate)
			374	691074	Washer	601	95162	Clamp-Hose
					(Camshaft)	604	692669	Cover-Control
270	691027	Nut	383	19374	Wrench-Spark Plug	604A	693807	Cover-Control
		(Control Wire Casing)	404	690272	Washer	608	497680	Starter-Rewind
271	691028	Lever-Control			(Governor Crank)	613	691108	Screw
276 ♦	271716	Washer-Sealing (Float Bowl)	425	690670	Screw			(Muffler)
					(Air Cleaner Cover)	613A	691140	Screw
287	690940	Screw	443	691637	Screw			(Muffler)
		(Dipstick Tube)			(Air Cleaner Primer Base)	615	690340	Retainer-Governor Shaft
300	694248	Muffler	443A	692523	Screw	616	691308	Crank-Governor
		(Used After Code Date 99030700).			(Air Cleaner Primer Base)	619	698801	Screw
		----- Note -----	445	491588	Filter-Air Cleaner Cartridge			(Cylinder Head Plate)
		692275 Muffler	455	695161	Cup-Flywheel	621	692310	Switch-Stop
		(Used Before Code Date 99030800).	456	692299	Plate-Pawl Friction	633 ♦	693867	Seal-Choke/Throttle Shaft
300B	699769	Muffler	459	281505	Pawl-Ratchet			
		Used on Type No(s). 0114, 0118.	472	693809	Knob-Choke Shaft	633A ♦	691321	Seal-Choke/Throttle Shaft
					Used on Type No(s). 0117.			(Throttle Shaft)
304	499677	Housing-Blower	505	691251	Nut	635	66538	Boot-Spark Plug
		----- Note -----			(Governor Control Lever)	670	692294	Spacer-Fuel Tank
		499676 Housing-Blower	523	499621	Dipstick	676	397931	Deflector-Muffler
		Used on Type No(s). 0117.	524	★692296	Seal-Dipstick Tube	676B	396548	Deflector-Muffler
			525	495265	Tube-Dipstick	676C	497682	Deflector-Muffler

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6013-11

Assemblies include all parts shown in frames.

10/11/2005

110600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	690661	Screw (Muffler Deflector)	847	692047	Dipstick/Tube Assembly	972	699374	Tank–Fuel (Plastic)
684	690345	Screw (Breather Passage Cover)	851	493880	Terminal–Spark Plug	975	493640	Bowl–Float
689	691855	Spring–Friction	868	★△692044	Seal–Valve	976	694395	Primer–Carburetor
692	690572	Spring–Detent	883	★△691893	Gasket–Exhaust	977	692704	Gasket Set–Carburetor
715	691147	Screw (Stop Shaft)	886	696268	Gasket Kit–Cylinder Head/Plate	993	★△694088	Gasket–Cylinder Head Plate
718	690959	Pin–Locating	914	691108	Screw (Rocker Cover)	1005	691346	Fan–Flywheel
721	690449	Stop–Shaft	921B	697921	Cover–Blower Housing	1019	695811	Kit–Label
741	790345	Gear–Timing (Use Without Woodruff Key)	922	691831	Spring–Brake	1022	★△691890	Gasket–Rocker Cover
		----- Note -----	923	691994	Brake	1023	499624	Cover–Rocker
		691830 Gear–Timing (Uses Woodruff Key)	925	690595	Cover–Linkage	1026	692045	Rod–Push
743	691772	Gear–Drive (Counterclockwise) Used on Type No(s). 0114.	930A	692675	Guard–Rewind	1029	691230	Arm–Rocker
			957	692046	Cap–Fuel Tank (Plastic) (Radiused Edge)	1034	691343	Guide–Push Rod
745	691648	Screw (Brake)	966	692673	Base–Air Cleaner Primer	1036		Label–Emission (Available From An Authorized Briggs & Statton Service Dealer)
830	694543	Stud–Rocker Arm	966A	693863	Base–Air Cleaner Primer (Choke System) Used on Type No(s). 0117, 0118.	1058	276348	Manual–Owner's
832	691466	Guard–Muffler				1059	692311	Kit–Screw/Washer (Fuel Tank)
832C	695593	Guard–Muffler	967	493537	Filter–Pre Cleaner	1095	694091	Gasket Set–Valve
836	691147	Screw (Muffler Guard)	968	692298	Cover–Air Cleaner	1102	691255	Pilot–Guide Used on Type No(s). 0117.
836A	692551	Screw (Muffler Guard)	969	691138	Screw (Blower Housing Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
842	★691031	Seal–O Ring (Dipstick Tube)	969A	697922	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
843	691884	Sleeve–Lever				1330	272147	Manual–Repair

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6013–12

Assemblies include all parts shown in frames.

10/11/2005