



120300

Illustrated Parts List

Model Series

120300

TYPE NUMBERS
0036 through 0433.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7



PRINTED IN U.S.A.












COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

120300





1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

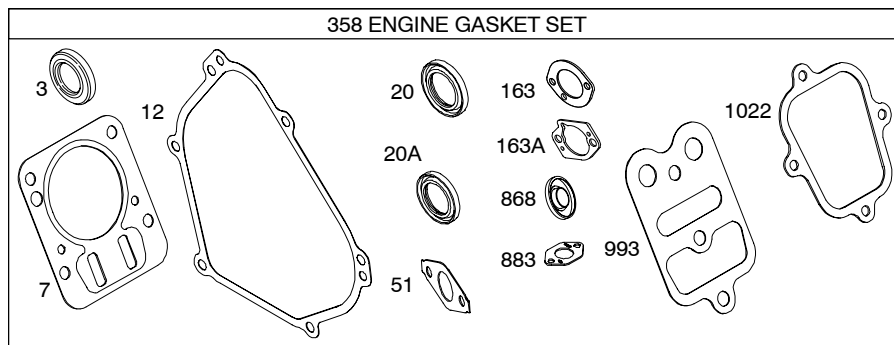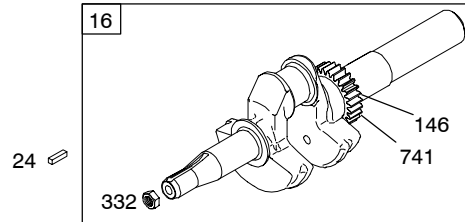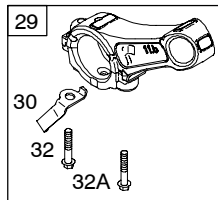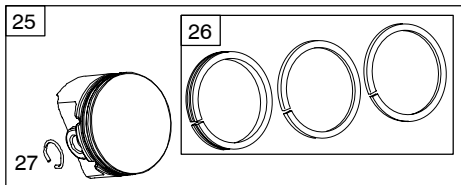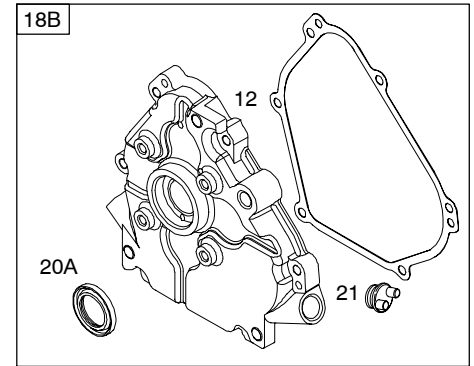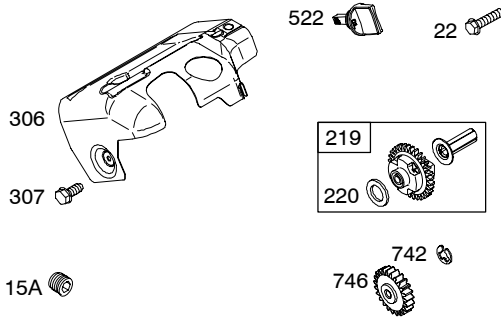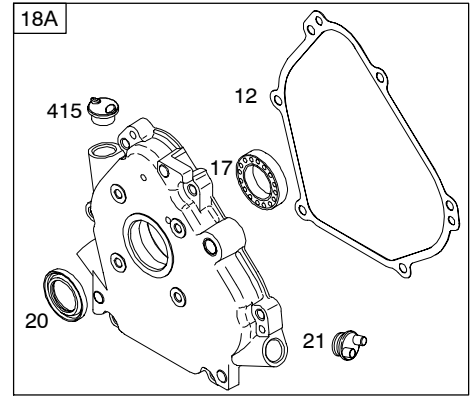
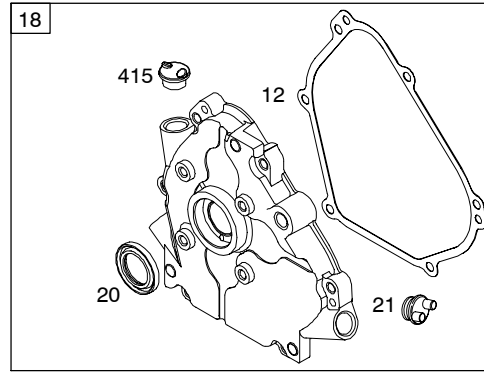
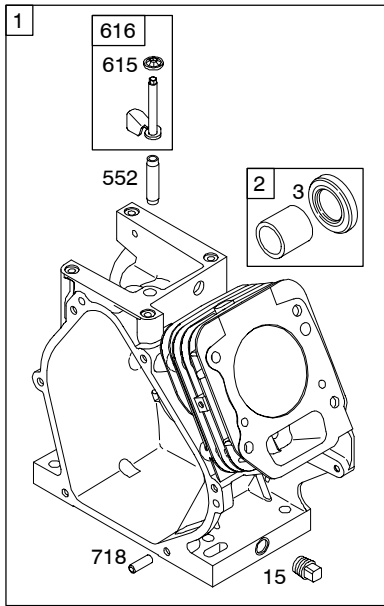


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

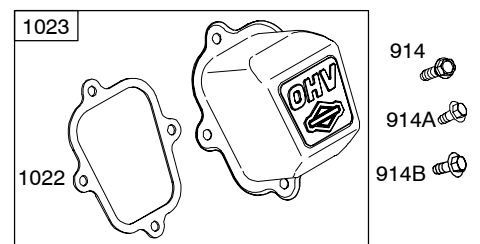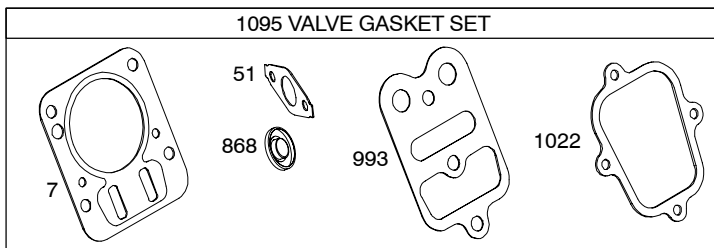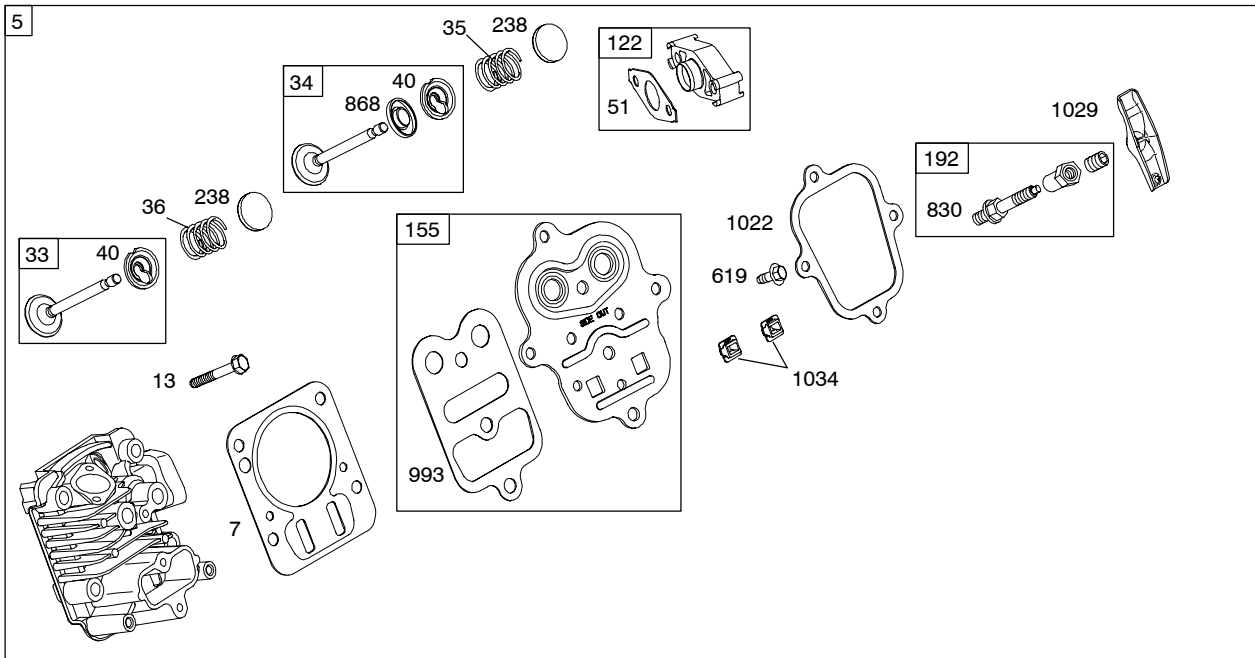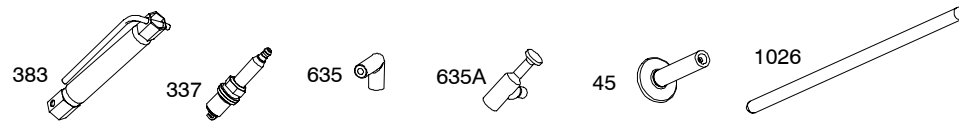


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120300

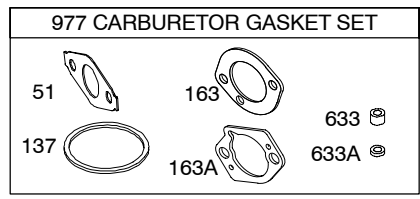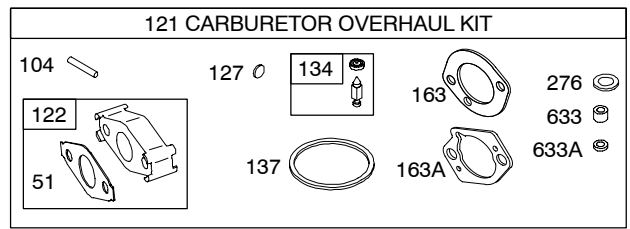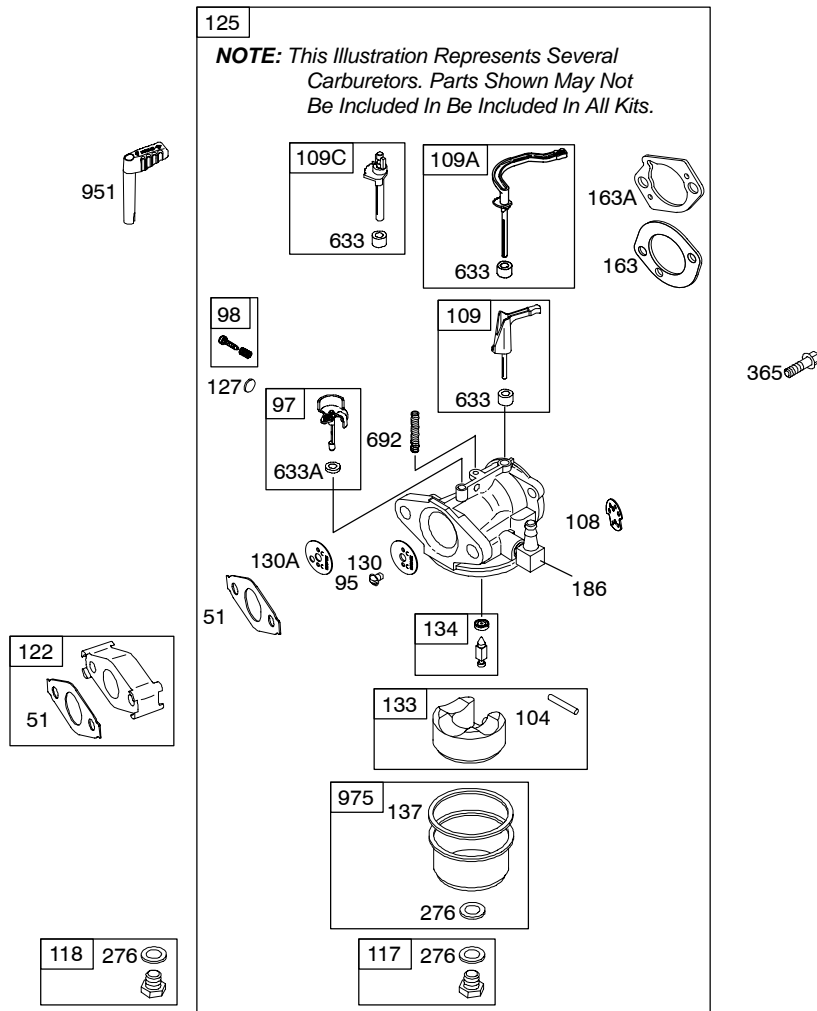


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.



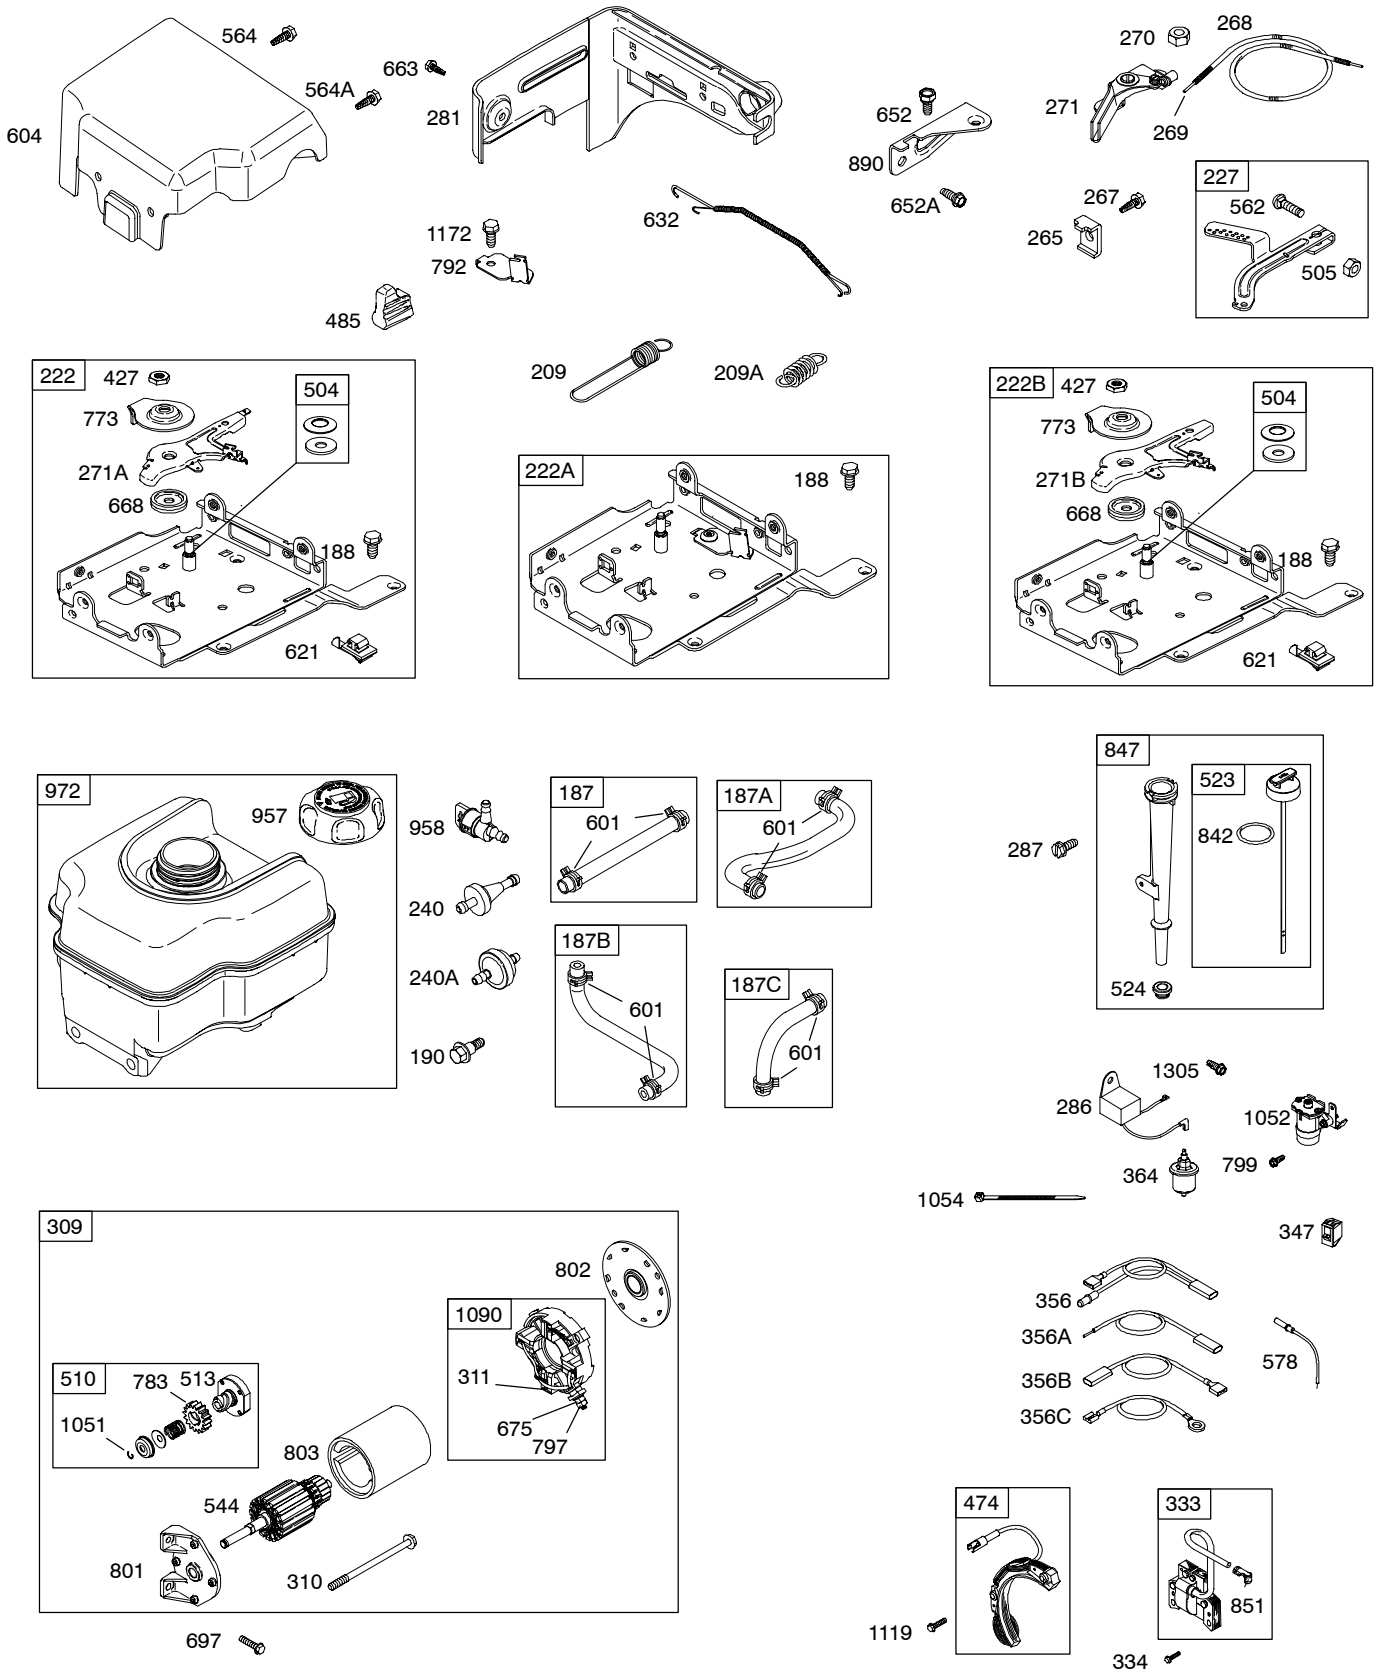


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5640-5 Assemblies include all parts shown in frames. 11/01/2005

120300

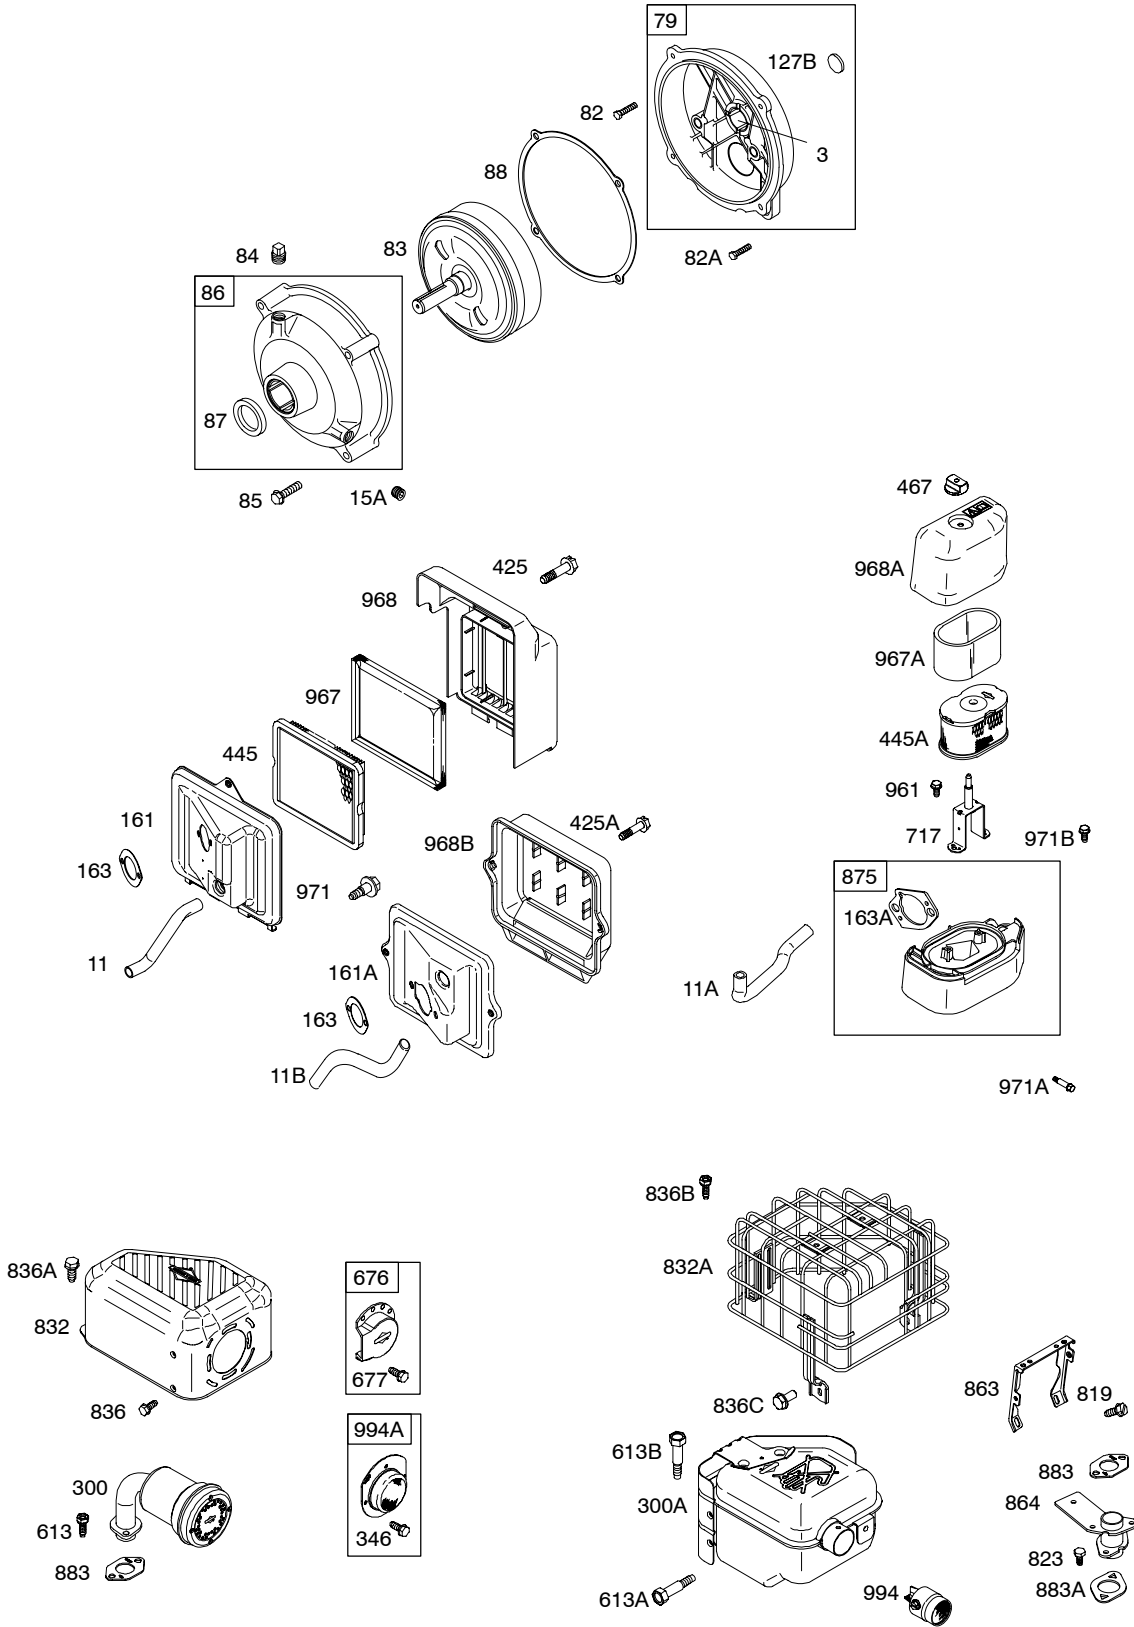

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

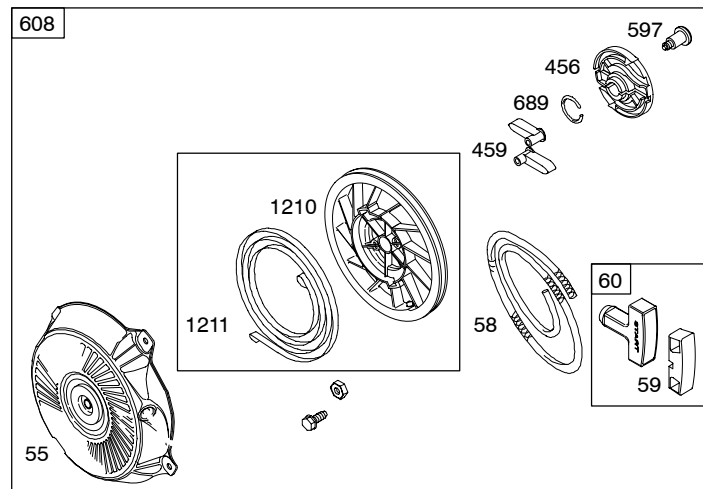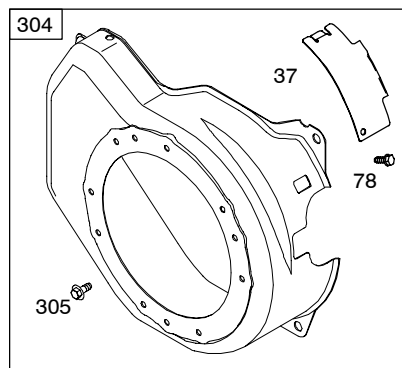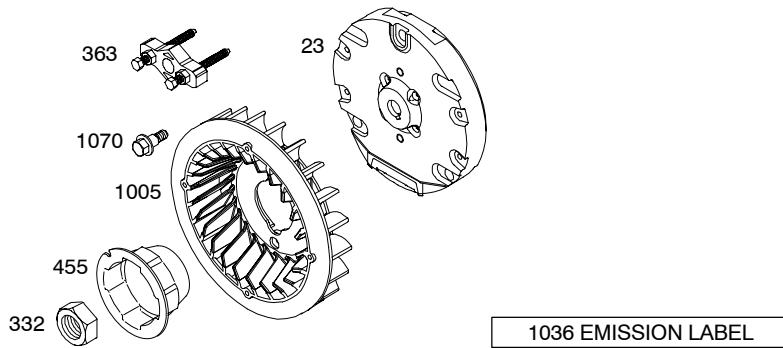

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5640-7 Assemblies include all parts shown in frames. 11/01/2005

120300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699510	Cylinder Assembly	18	699804	Cover-Crankcase	26	791969	Ring Set
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			(Standard)
3	★299819S	Seal-Oil (Magneto Side)			699696 Cover-Crankcase			(Used After Code Date 05060600).
5	699486	Head-Cylinder			Used on Type No(s). 0145, 0213, 0299, 0300, 0335, 0432, 0433.			----- Note -----
7	★Ø698210	Gasket-Cylinder Head						499631 Ring Set
11	692600	Tube-Breather (Flat Panel Air Cleaner)	18A	699672	Cover-Crankcase Used on Type No(s). 0036, 0131, 0149, 0159.			(Standard)
11A	693647	Tube-Breather (High Mount Air Cleaner)	18B	699761	Cover-Crankcase Used on Type No(s). 0137.			(Used Before Code Date 05060700).
11B	790632	Tube-Breather (Ultra Low Air Cleaner)	20	★692550	Seal-Oil (PTO Side)			791324 Ring Set (.020" Oversize)
12	★699485	Gasket-Crankcase	20A	★694171	Seal-Oil (PTO Side)			(Used After Code Date 05060600).
13	699482	Screw (Cylinder Head)			Used on Type No(s). 0135, 0137.			692786 Ring Set (.020" Oversize)
15	691686	Plug-Oil Drain (Square Head)	21	281658S	Cap-Oil Fill	27	691866	Lock-Piston Pin
15A	691682	Plug-Oil Drain (Flush)	22	699478	Screw (Crankcase Cover/Sump)	28	499423	Pin-Piston
16	699445	Crankshaft				29	690124	Rod-Connecting
		----- Note -----				30	692562	Dipper-Connecting Rod
		699443 Crankshaft Used on Type No(s). 0036, 0131, 0149, 0159.	23	699488	Flywheel	32	691664	Screw (Connecting Rod)
		699447 Crankshaft Used on Type No(s). 0132, 0135, 0137, 0138, 0145.			----- Note -----	32A	695759	Screw (Connecting Rod)
		699452 Crankshaft Used on Type No(s). 0158, 0321, 0414.			699514 Flywheel Used on Type No(s). 0121.	33	499642	Valve-Exhaust
		699449 Crankshaft Used on Type No(s). 0242, 0299, 0327.	24	222698S	Key-Flywheel	34	499641	Valve-Intake
		699451 Crankshaft Used on Type No(s). 0150.	25	791968	Piston Assembly (Standard)	35	691304	Spring-Valve (Intake)
		699444 Crankshaft Used on Type No(s). 0147.			(Used After Code Date 05060600).	36	691304	Spring-Valve (Exhaust)
17	692517	Bearing-Ball			----- Note -----	37	699661	Guard-Flywheel
					690021 Piston Assembly (Standard)	40	692194	Retainer-Valve
					(Used Before Code Date 05060700).	45	690977	Tappet-Valve
					791326 Piston Assembly (.020" Oversize)	46	693404	Camshaft
					(Used After Code Date 05060600).	51★◆Ø692555		Gasket-Intake (2 Required)
					694168 Piston Assembly (.020" Oversize)	55	691422	Housing-Rewind Starter
					(Used Before Code Date 05060700).	58	693389	Rope-Starter (Cut to Required Length)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
59	490653	Grip-Insert	118	498976	Jet-Main (High Altitude) ----- Note -----	161	699207	Base-Air Cleaner (Flat Panel Air Cleaner)
60	490652	Grip-Starter Rope (2 Piece)				161A	790631	Base-Air Cleaner (Ultra Low Air Cleaner)
78	699205	Screw (Flywheel Guard)			694176 Jet-Main (High Altitude) Used on Type No(s). 0147, 0158, 0213, 0335.	163★◆696024		Gasket-Air Cleaner (Flat Panel Air Cleaner)
79	694511	Case-Gear Reduction			695042 Jet-Main (High Altitude) Used on Type No(s). 0132, 0135, 0137, 0138, 0145.	163A★◆696979		Gasket-Air Cleaner (High Mount)
82	690369	Screw (Gear Reduction Case)	121	696998	Kit-Carburetor Overhaul	186	692317	Connector-Hose
82A	790197	Screw (Gear Reduction Case)	122	★693749	Spacer-Carburetor	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note -----
83	690374	Shaft-Auxiliary Drive	125	698474	Carburetor ----- Note -----			691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).
84	691121	Plug-Breather			698475 Carburetor Used on Type No(s). 0147, 0158, 0213, 0335.	187A	791867	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note -----
85	692551	Screw (Gear Cover to Gear Reduction)			698810 Carburetor Used on Type No(s). 0135, 0137, 0138.			692601 Line-Fuel (Molded) (Used Before Code Date 05070100).
86	690608	Cover-Gear	127	◆691739	Plug-Welch	187B	791874	Line-Fuel (Molded)
87	691582	Seal-Gear Reduction	127B	691585	Plug-Welch	187C	791866	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note -----
88	691600	Gasket-Gear Reduction Cover	130	691181	Valve-Throttle			694486 Line-Fuel (Molded) (Used Before Code Date 05070100).
95	691636	Screw (Throttle Valve)	130A	691203	Valve-Throttle Used on Type No(s). 0132, 0135, 0137, 0138, 0145.			
97	690024	Shaft-Throttle			133 398187 Float-Carburetor			
98	398185	Kit-Idle Speed (Carburetor)			134 ◆398188 Kit-Needle/Seat			
104	◆691242	Pin-Float Hinge			137 ◆◆693981 Gasket-Float Bowl			
108	692567	Valve-Choke			146 690979 Key-Timing			
109	690023	Shaft-Choke			155 ★698214 Plate-Cylinder Head			
109A	693628	Shaft-Choke						
109C	790624	Shaft-Choke						
117	690048	Jet-Main (Standard) ----- Note ----- 698344 Jet-Main (Standard) Used on Type No(s). 0147, 0158, 0213, 0335. 691428 Jet-Main (Standard) Used on Type No(s). 0132, 0135, 0137, 0138, 0145.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	699479	Screw (Control Bracket)	270	691027	Nut (Control Wire Casing)	358	699638	Gasket Set-Engine
190	699220	Screw (Fuel Tank)	271	691028	Lever-Control	363	19069	Puller-Flywheel
192	694543	Adjustor-Rocker Arm	271A	694256	Lever-Control	364	695693	Terminal-Oil Plug
209	692571	Spring-Governor	271B	695743	Lever-Control	365	699484	Screw (Carburetor)
		----- Note -----	276	●271716	Washer-Sealing	383	19374S	Wrench-Spark Plug
		693206 Spring-Governor	281	699639	Panel-Control	415	693463	Plug
		Used on Type No(s). 0121, 0132, 0135, 0137, 0138, 0141, 0145.	286	698611	Module-Oil Sensor	425	699208	Screw (Air Cleaner Cover)
209A	691278	Spring-Governor	287	699629	Screw (Dipstick Tube)	425A	699492	Screw (Air Cleaner Cover)
219	693578	Gear-Governor	300	693593	Muffler	427	694255	Nut (Control Bracket)
220	691724	Washer (Governor Gear)	300A	699231	Muffler	445	491588S	Filter-Air Cleaner Cartridge (Flat Panel)
222	699589	Bracket-Control	304	699598	Housing-Blower	445A	697029	Filter-Air Cleaner Cartridge (High Mount)
222A	699493	Bracket-Control Used on Type No(s). 0132, 0145.	305	699480	Screw (Blower Housing)	455	692591	Cup-Flywheel
		----- Note -----	306	693610	Shield-Cylinder	456	692299	Plate-Pawl Friction
		699590 Bracket-Control	307	699483	Screw (Cylinder Shield)	459	281505S	Pawl-Ratchet
		Used on Type No(s). 0135, 0137, 0138.	309	694504	Motor-Starter	467	691668	Knob-Air Cleaner
222B	699591	Bracket-Control Used on Type No(s). 0143, 0146.	310	690323	Screw (Starter Motor)	474	694457	Alternator
227	692573	Lever-Governor Control	311	497608	Brush Set	504	694254	Washer Set-Friction
238	691300	Valve-Cap	332	699359	Nut (Flywheel)	485	695755	Knob-Control
240	694485	Filter-Fuel	333	695711	Armature-Magneto	505	691251	Nut (Governor Control Lever)
240A	394358S	Filter-Fuel	334	699477	Screw (Magneto Armature)	510	499308	Drive-Starter
265	691024	Clamp-Casing	337	491055S	Plug-Spark (Resistor)	513	692024	Drive-Clutch
267	699492	Screw (Casing Clamp)			----- Note -----	522	697689	Plug-Dipstick/Fill
268	691025	Casing-Control Wire (72" Long) (Cut to Required Length)	346	690661	Screw (Spark Arrestor)	523	693618	Dipstick ----- Note -----
269	691026	Wire-Control (78" Long) (Cut to Required Length)	347	697854	Switch-Rocker			790546 Dipstick Used on Type No(s). 0327.
					----- Note -----	524	281370S	Seal-Dipstick Tube
					698338 Switch-Rocker	544	692966	Armature-Starter
					Used on Type No(s). 0132, 0135, 0137, 0138.	552	692346	Bushing-Governor Crank
			356	693651	Wire-Stop	562	691119	Bolt (Governor Control Lever)
			356A	692390	Wire-Stop			
			356B	692602	Wire-Stop			
			356C	695630	Wire-Stop			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5640-10

Assemblies include all parts shown in frames.

11/01/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
564	699491	Screw (Control Cover)	668	694257	Spacer	832	693583	Guard-Muffler
564A	699492	Screw (Control Cover)	675	691261	Washer (Brush Retainer)	832A	697818	Guard-Muffler
		----- Note -----	676	393757	Deflector-Muffler	836	699203	Screw (Muffler Guard)
		699206 Screw (Control Cover)	677	690661	Screw (Muffler Deflector)	836A	699632	Screw (Muffler Guard)
		Used on Type No(s). 0132, 0145.	689	691855	Spring-Friction	836B	699209	Screw (Muffler Guard)
578	692306	Wire Assembly	692	690572	Spring-Detent	836C	699234	Screw (Muffler Guard)
597	691696	Screw (Pawl Friction Plate)	697	790537	Screw (Starter Motor)	842	691031	Seal-O Ring (Dipstick Tube)
601	95162S	Clamp-Hose			----- Note -----	847	693617	Dipstick/Tube Assembly
604	697326	Cover-Control			699773 Screw (Starter Motor)			----- Note -----
608	693394	Starter-Rewind			(Used Before Code Date 04110900).			790545 Dipstick/Tube Assembly
613	699209	Screw (Muffler)	717	693462	Bracket-Air Cleaner			Used on Type No(s). 0327.
613A	699230	Screw (Muffler)	718	690959	Pin-Locating	851	493880S	Terminal-Spark Plug
613B	697812	Screw (Muffler)	727	698039	Cover-Starter Drive	863	699229	Bracket-Muffler
615	692576	Retainer-Governor Shaft	732	699200	Screw (Starter Drive Cover)	864	699232	Adapter-Muffler
616	692547	Crank-Governor	741	692565	Gear-Timing	868	★692044	Seal-Valve
619	699230	Screw (Cylinder Head Plate)	742	692564	Retainer-E Ring	875	697030	Base-Air Cleaner (High Mount)
621	692310	Switch-Stop	746	692566	Gear-Idler	883	★691893	Gasket-Exhaust
632	693408	Spring/Link-Mechanical Governor	773	694258	Retainer	883A	★692237	Gasket-Exhaust
633	◆693867	Seal-Choke/Throttle Shaft	783	692353	Gear-Pinion	890	790203	Bracket-Support
633A	◆691321	Seal-Choke/Throttle Shaft	792	694259	Bracket-Fixed Speed	914	699481	Screw (Rocker Cover) (Bottom)
635	692076	Boot-Spark Plug	797	691029	Nut (Brush Retainer)	914A	692557	Screw (Rocker Cover) (Top)
635A	692927	Boot-Spark Plug	799	699202	Screw (Oil Sensor)	914B	697551	Screw (Rocker Cover) (Center)
652	699755	Screw (Support Bracket)	801	694482	Cap-Drive	951	790630	Lever-Choke
652A	699230	Screw (Support Bracket)	802	691286	Cap-End	957	694261	Cap-Fuel Tank
663	699206	Screw (Control Panel)	803	693757	Housing-Starter	958	698180	Valve-Fuel Shut Off
			819	699233	Screw (Muffler Bracket)			
			823	699209	Screw (Muffler Adapter)			
			830	694544	Stud-Rocker Arm			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
961	698304	Screw (Air Cleaner Bracket)	993	Ø694088	Gasket-Cylinder Head Plate	1090	691293	Retainer-Brush
967	493537S	Filter-Pre Cleaner (Flat Panel)	994	790153	Arrester-Spark	1095	698215	Gasket Set-Valve
967A	273356S	Filter-Pre Cleaner (High Mount)	994A	399541	Arrester-Spark	1119	699772	Screw (Alternator)
968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1005	692592	Fan-Flywheel	1172	699230	Screw (Fixed Speed Bracket)
968A	693460	Cover-Air Cleaner (High Mount)	1019	694852	Kit-Label	1210	498144	Pulley/Spring Assembly (Pulley)
968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)	1022	★Ø691890	Gasket-Rocker Cover	1211	498144	Pulley/Spring Assembly (Spring)
971	690370	Screw (Air Cleaner Base)	1023	499924	Cover-Rocker Arm	1305	691140	Screw (Oil Sensor Module)
971A	690349	Screw (Air Cleaner Base)	1026	790287	Rod-Push	----- Note -----		
971B	699629	Screw (Air Cleaner Base)	1029	691230	Arm-Rocker	699691	Screw (Oil Sensor Module)	
972	694260	Tank-Fuel	1034	691343	Guide-Push Rod	Used on Type No(s). 0159.		
975	493640	Bowl-Float	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)	1330	272147	Repair Manual
977	697001	Gasket Set-Carburetor	1051	691265	Ring-Retaining			
			1052	790141	Sensor-Oil			
			1054	280275	Cable-Tie			
			1058	276355	Owner's Manual			
			1070	699201	Screw (Flywheel Fan)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.