



120600

Illustrated Parts List

Model Series

120600

TYPE NUMBERS
0100 through 0265.

TABLE OF CONTENTS


Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

120600





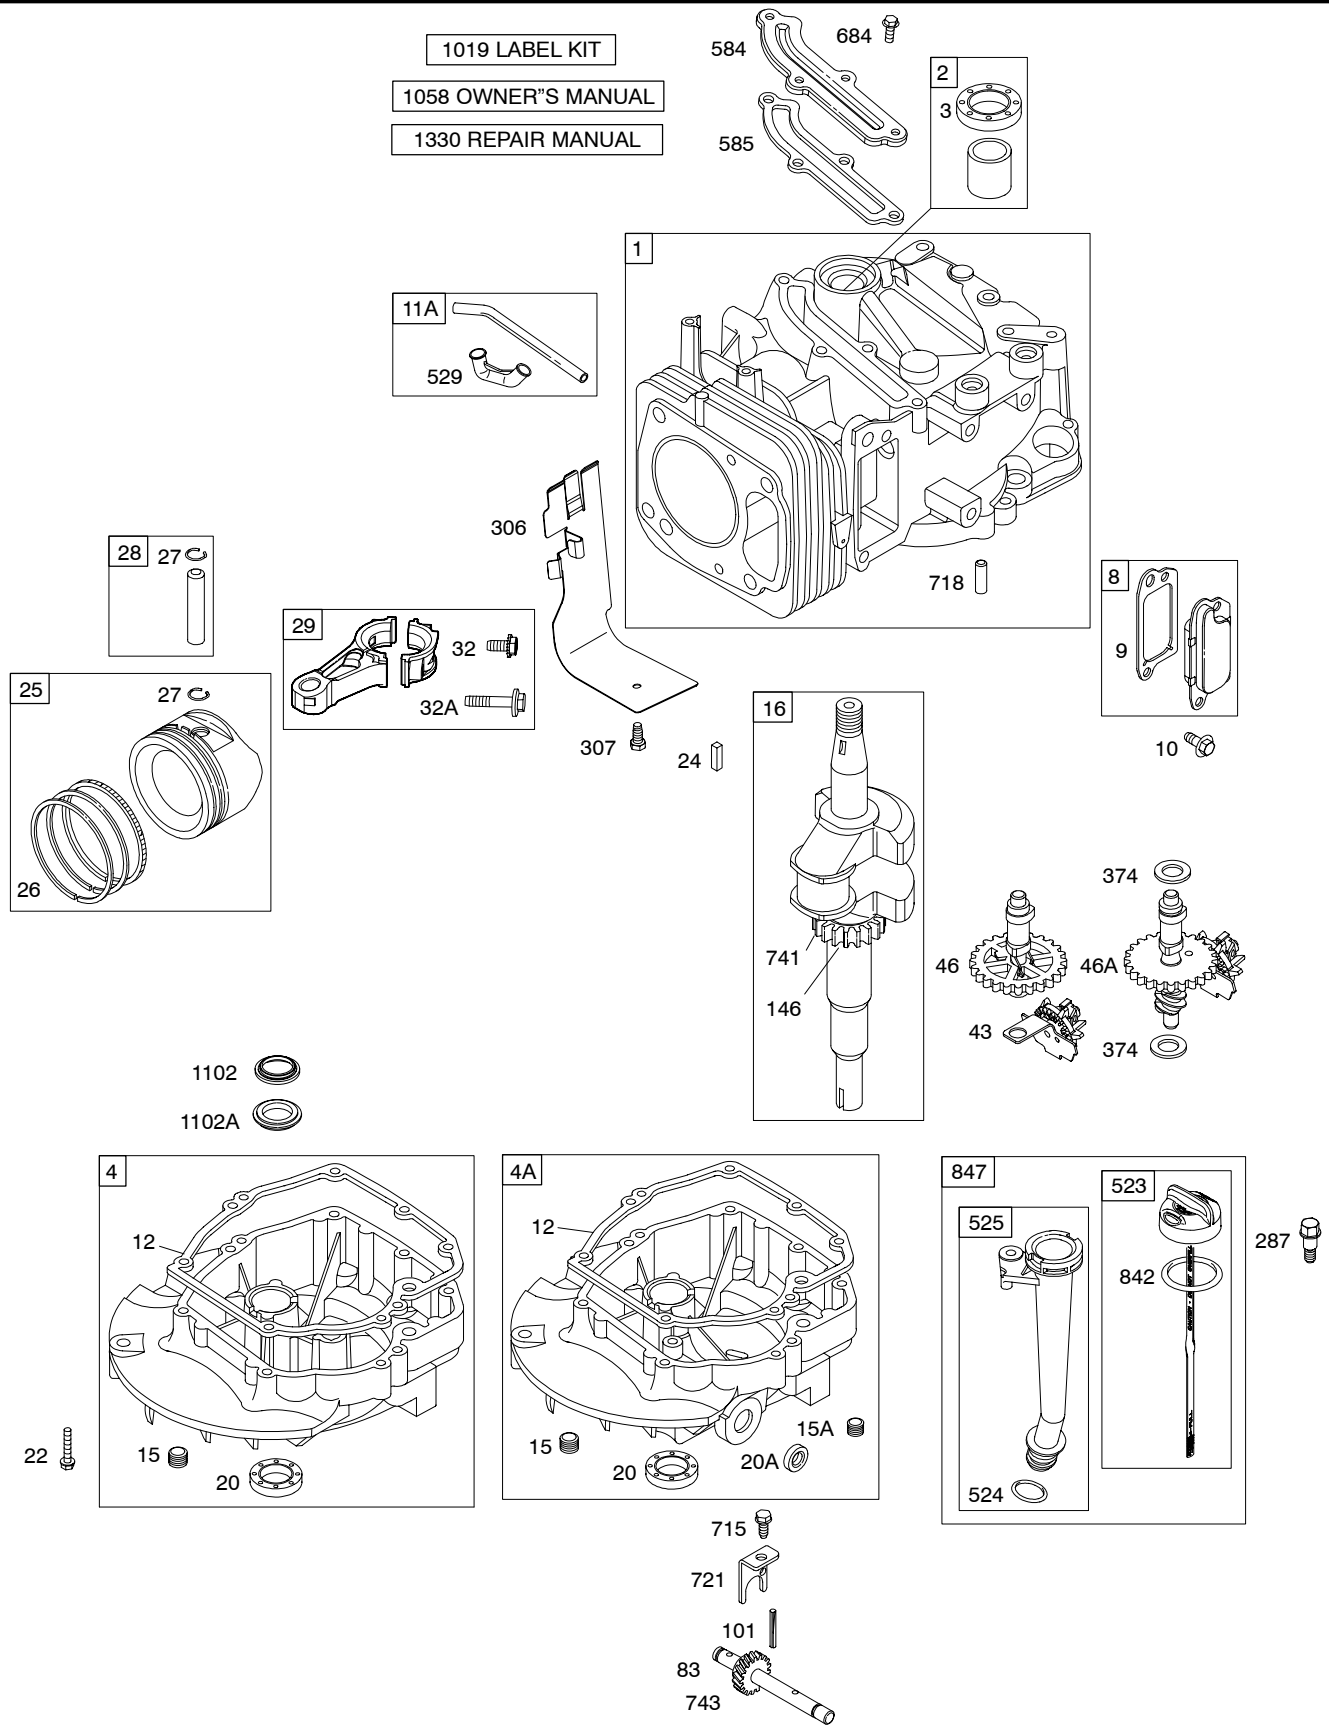


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6134-2 Assemblies include all parts shown in frames. 10/11/2005

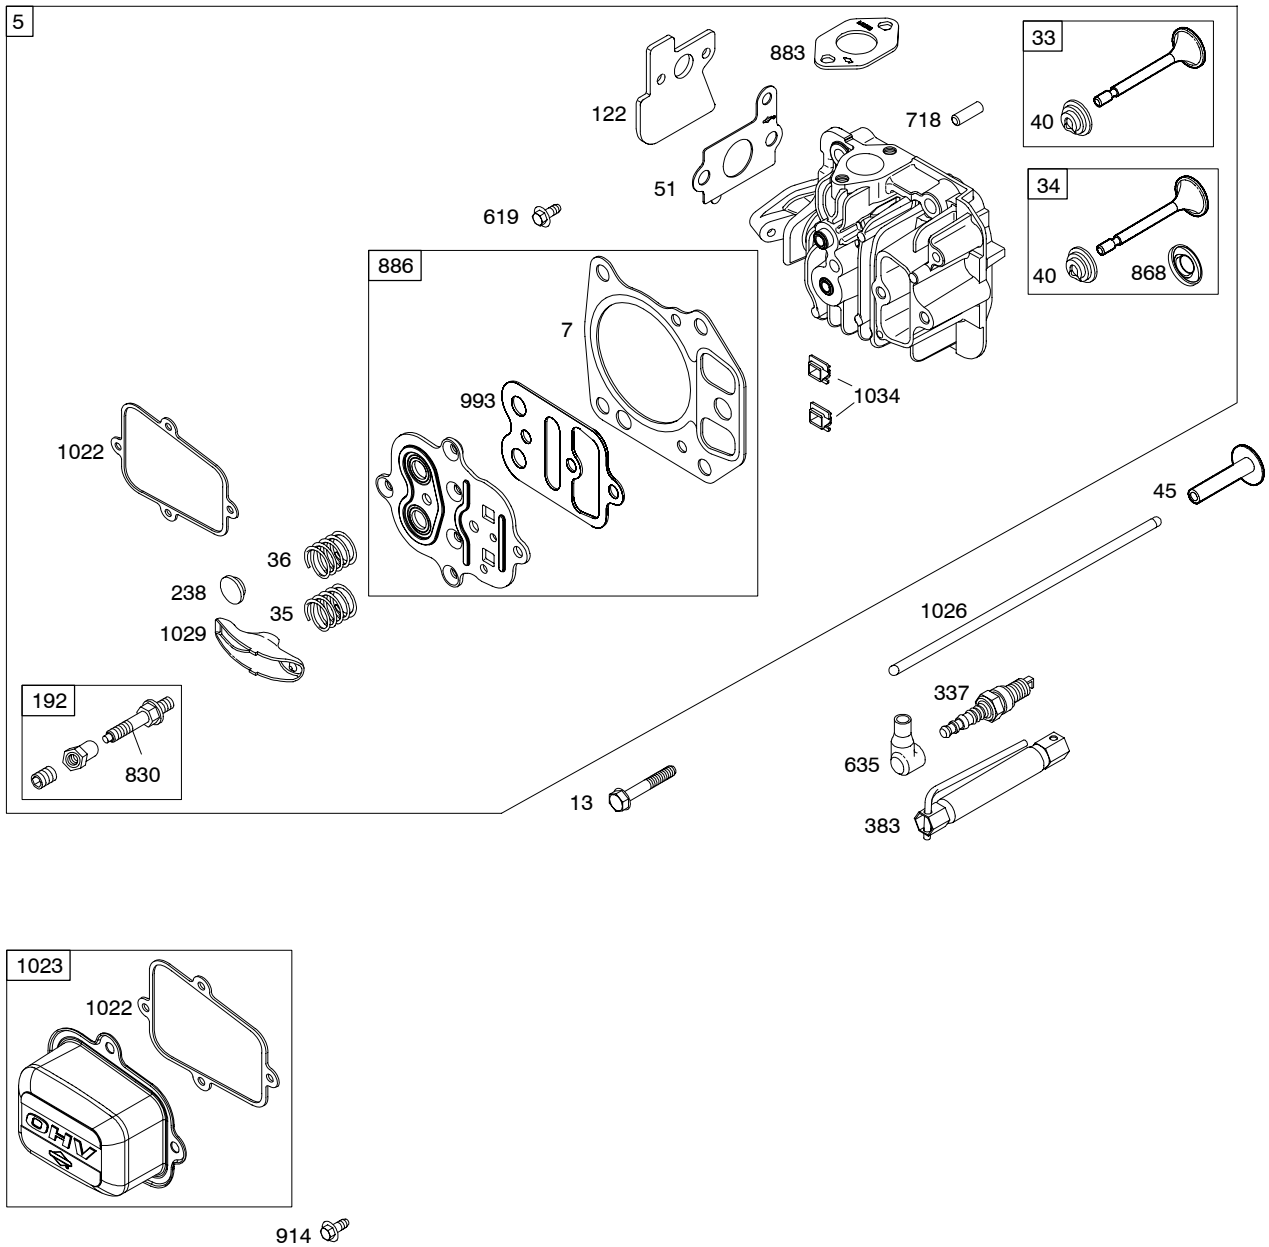


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6134-3 Assemblies include all parts shown in frames. 10/11/2005

120600

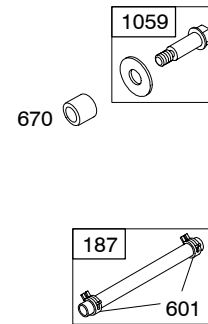
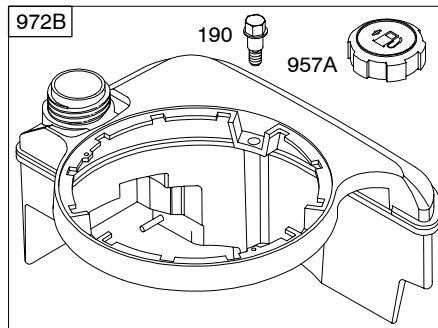
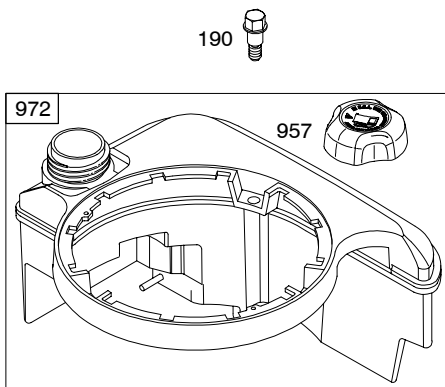
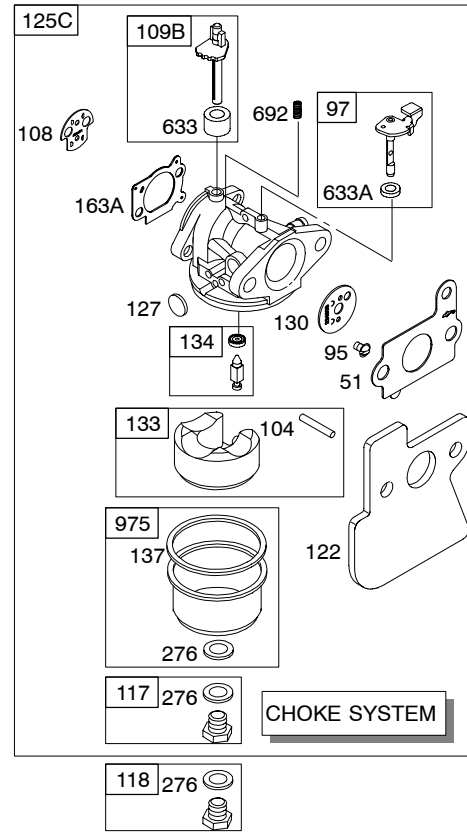
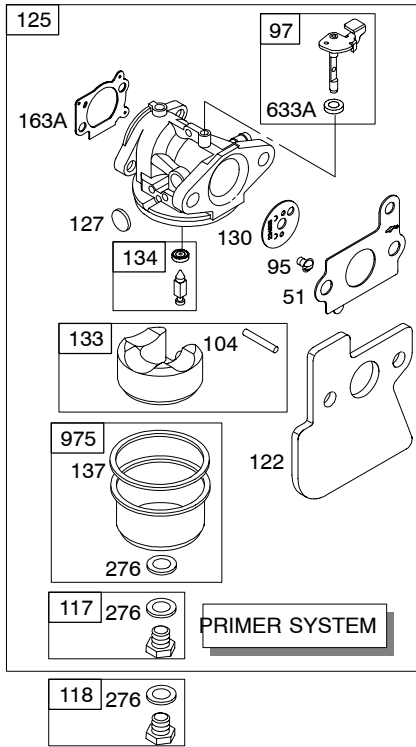


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6134-4 Assemblies include all parts shown in frames. **10/11/2005**

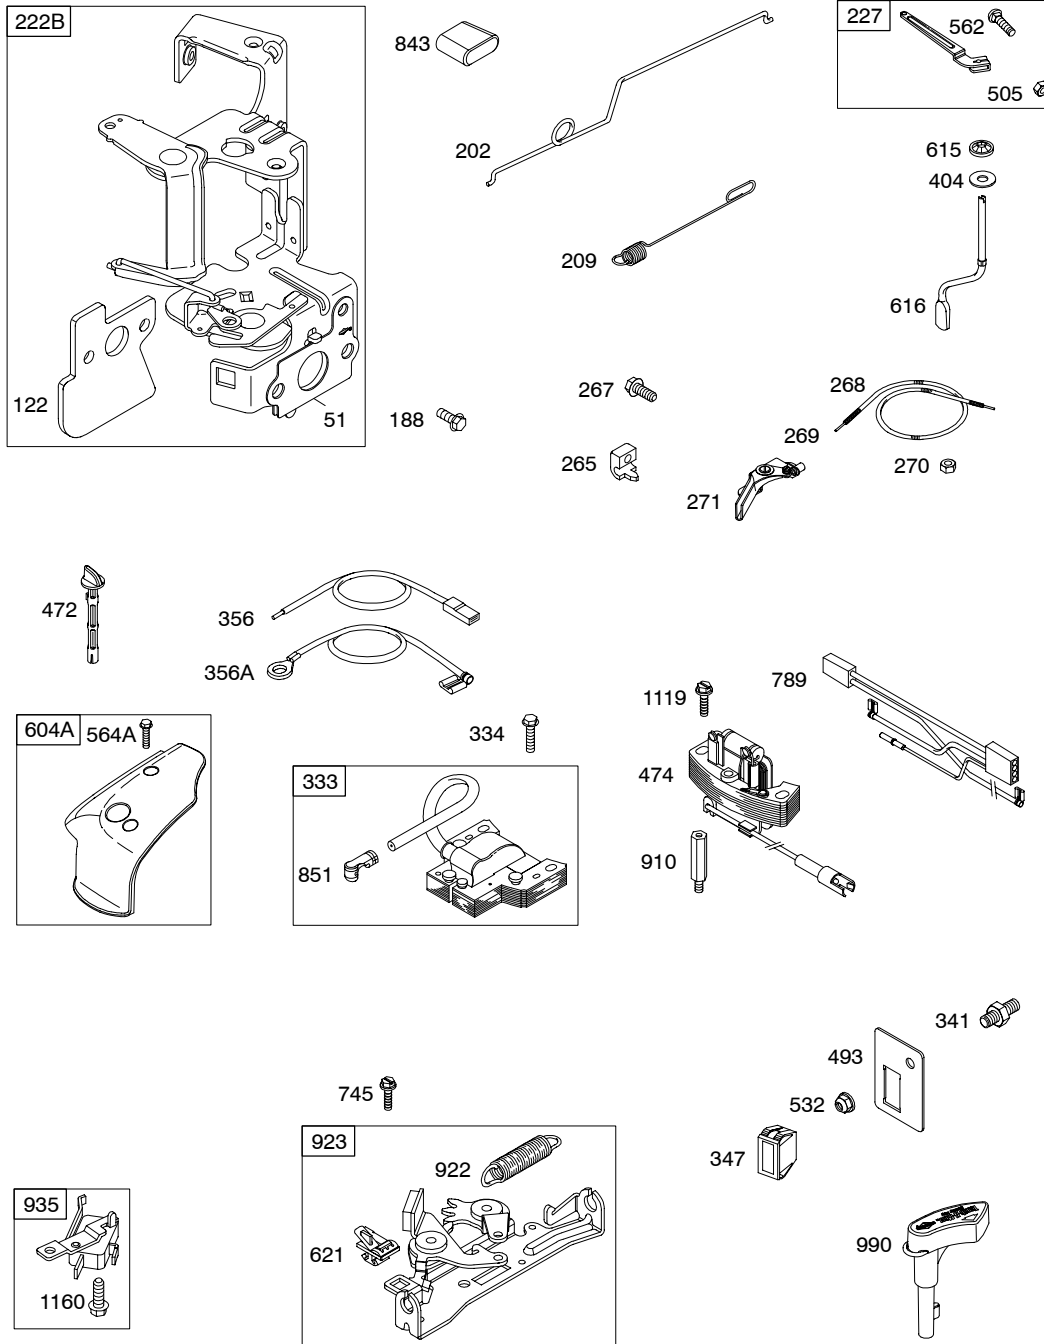

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6134-5 Assemblies include all parts shown in frames. 10/11/2005

120600

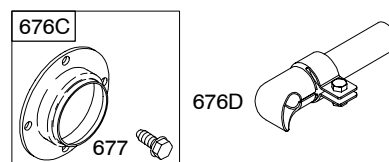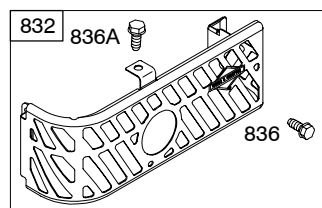
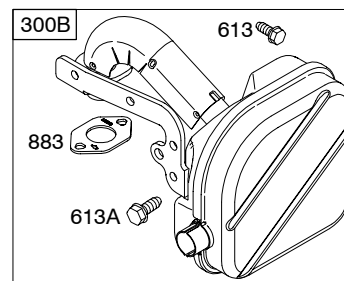
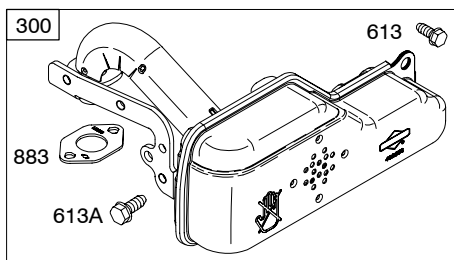
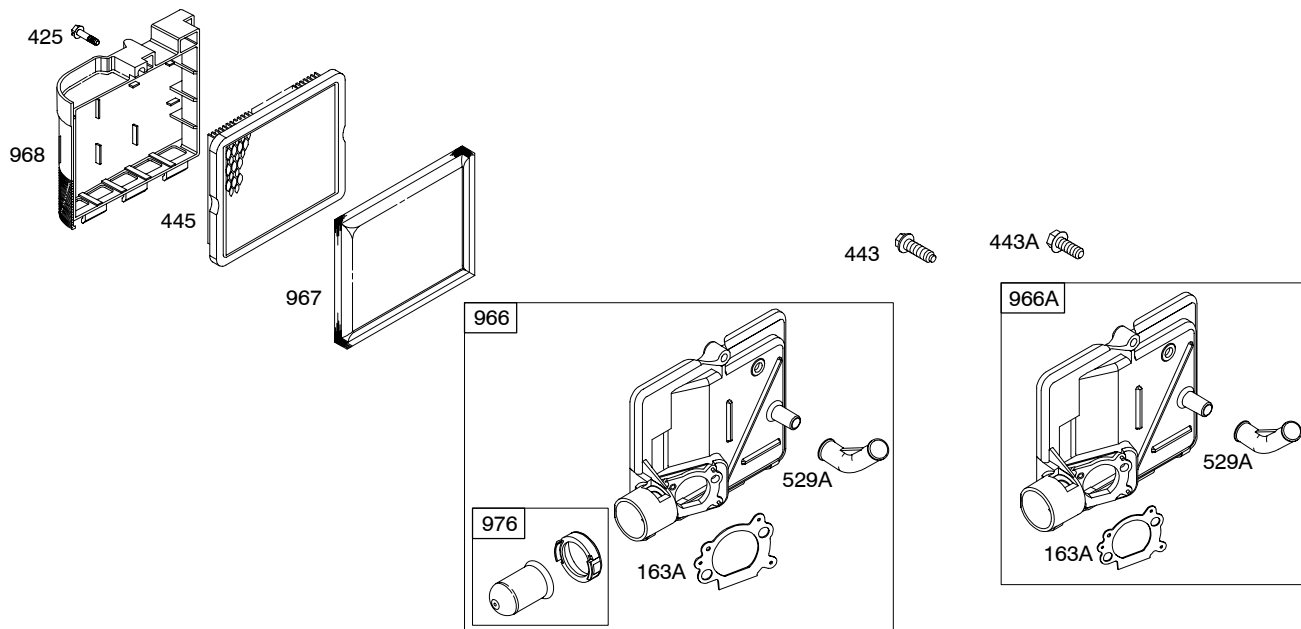


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.




6134-6

Assemblies include all parts shown in frames.

10/11/2005



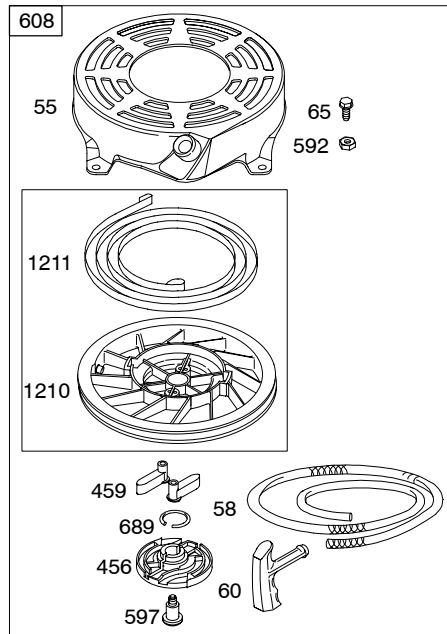
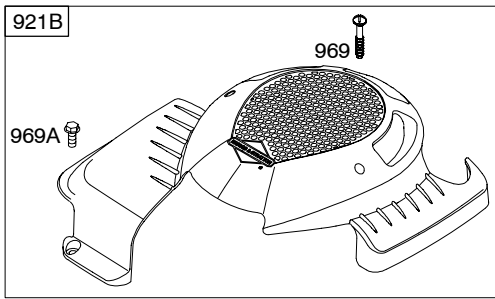


1036 Emission Label

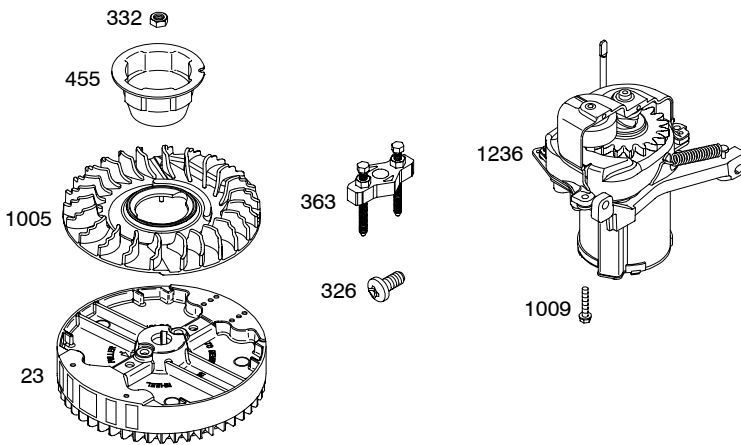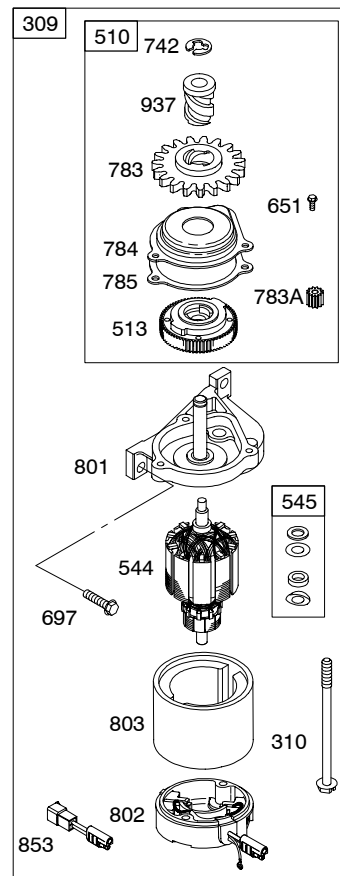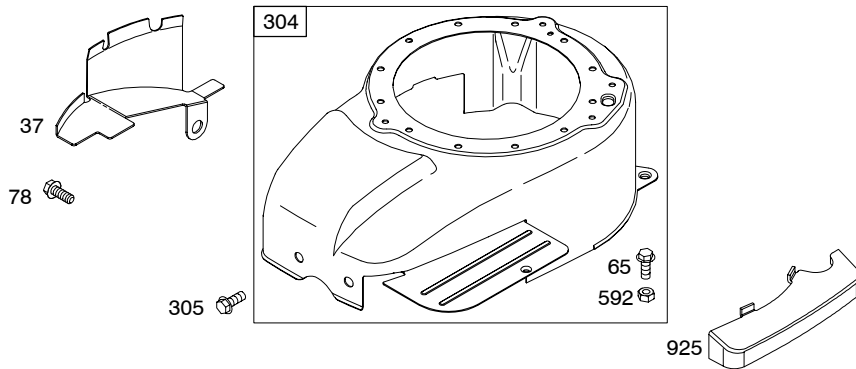

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6134-7 Assemblies include all parts shown in frames. 10/11/2005

120600

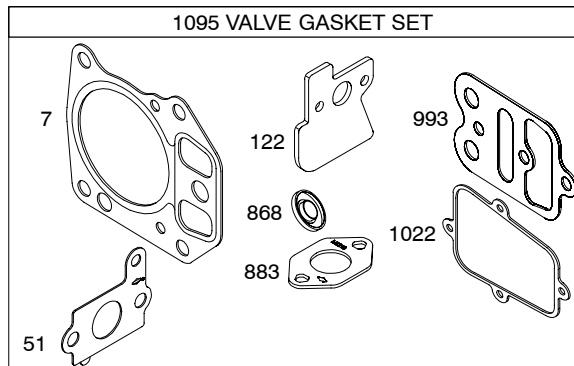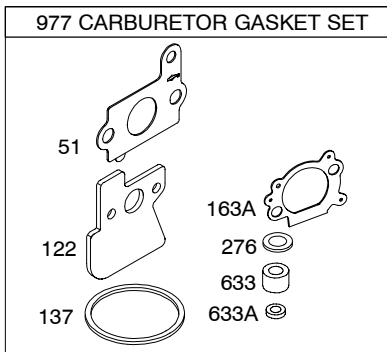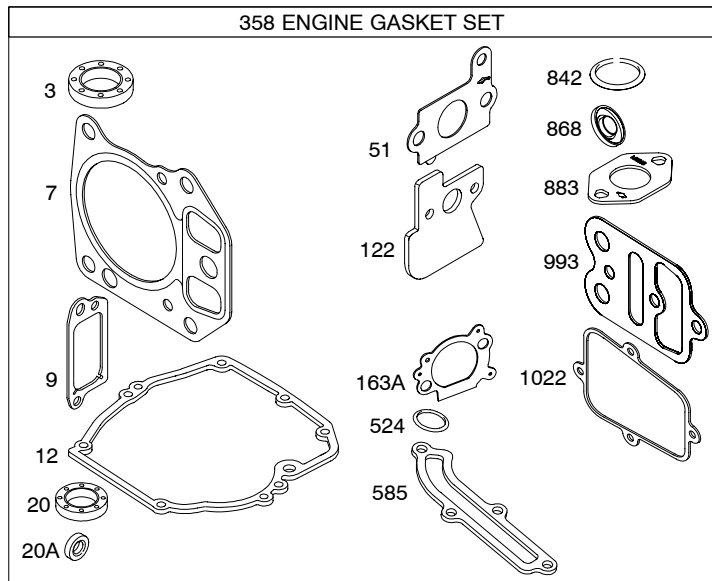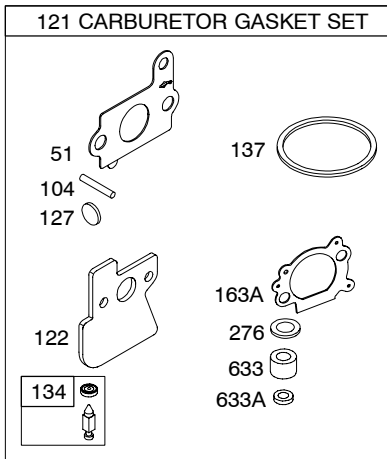

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	692670	Cylinder Assembly	20	★399781	Seal-Oil (PTO Side)	26	791969	Ring Set (Standard)	
2	399269	Kit-Bushing/Seal (Magneto Side)	20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			(Used After Code Date 04040400). ----- Note -----	
3	★299819	Seal-Oil (Magneto Side)	22	691092	Screw (Crankcase Cover/Sump)			499631 Ring Set (Standard) (Used Before Code Date 04040500).	
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0110, 0117, 0132, 0133, 0149, 0177. 696294 Sump-Engine Used on Type No(s). 0112.	23	692693	Flywheel ----- Note ----- 692987 Flywheel Used on Type No(s). 0119, 0133, 0149. 696569 Flywheel Used on Type No(s). 0100, 0105, 0120, 0121, 0128, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0152, 0153, 0154, 0164, 0195, 0200, 0265. 697271 Flywheel Used on Type No(s). 0112.			692785 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100). 692786 Ring Set (.020" Oversize) (Used Before Code Date 04102200). 692787 Ring Set (.030" Oversize)	
4A	493365	Sump-Engine (Auxiliary PTO)	24	222698	Key-Flywheel	27	691866	Lock-Piston Pin	
5	695276	Head-Cylinder	25	791968	Piston Assembly (Standard) (Used After Code Date 04040400). ----- Note -----	28	499423	Pin-Piston	
7	★△695166	Gasket-Cylinder Head			690021 Piston Assembly (Standard) (Used Before Code Date 04040500). 694167 Piston Assembly (.010" Oversize) 791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100). 694168 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200). 694169 Piston Assembly (.030" Oversize)	29	499424	Rod-Connecting	
8	495786	Breather Assembly				32	691664	Screw (Connecting Rod)	
9	★272481	Gasket-Breather				32A	695759	Screw (Connecting Rod) (Used After Code Date 00042200).	
10	691125	Screw (Breather Assembly)				33	499642	Valve-Exhaust	
11A	499675	Tube-Breather				34	499641	Valve-Intake	
12	★692232	Gasket-Crankcase				35	691304	Spring-Valve (Intake)	
13	691137	Screw (Cylinder Head)							
15	691680	Plug-Oil Drain (Square Socket)							
15A	691093	Plug-Oil Drain (Hex Socket)							
16	693291	Crankshaft ----- Note ----- 692824 Crankshaft Used on Type No(s). 0110, 0115. 692823 Crankshaft Used on Type No(s). 0111, 0119, 0129, 0130, 0142, 0143, 0150, 0182. 692803 Crankshaft Used on Type No(s). 0133, 0149. 691457 Crankshaft Used on Type No(s). 0105, 0112, 0117, 0120, 0128, 0131, 0132, 0138, 0139, 0146, 0153, 0154, 0164, 0177, 0195, 0200, 0265.							

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
36	691304	Spring-Valve (Exhaust)	108	691182	Valve-Choke	118	497315	Jet-Main (High Altitude)
37	694086	Guard-Flywheel	109B	693866	Shaft-Choke			(Used After Code Date 00010600).
40	692194	Retainer-Valve	117	692677	Jet-Main (Standard)			----- Note -----
43	691997	Slinger-Governor/Oil ----- Note ----- 691486 Slinger-Governor/Oil Used on Type No(s). 0110, 0132, 0133, 0149, 0177.			(Used After Code Date 00010600).			497466 Jet-Main (High Altitude) (Used After Code Date 99030700 and Before Code Date 00010700).
45	690977	Tappet-Valve			----- Note ----- 498981 Jet-Main (Standard) (Used After Code Date 99030700 and Before Code Date 00010700).			496495 Jet-Main (High Altitude) (Used Before Code Date 99030800).
46	694039	Camshaft (Used After Code Date 99030700). ----- Note ----- 694035 Camshaft (Used Before Code Date 99030800).			497466 Jet-Main (Standard) (Used Before Code Date 99030800).			497466 Jet-Main (High Altitude) (Used After Code Date 03110600). Used on Type No(s). 0111, 0112, 0119, 0120, 0121, 0128, 0129, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0153, 0154, 0164, 0195, 0200, 0265.
46A	694033	Camshaft			498981 Jet-Main (Standard) (Used After Code Date 03110600).			
51	692668	Gasket-Intake ----- Note ----- 697735 Gasket-Intake Used on Type No(s). 0265.			Used on Type No(s). 0111, 0112, 0119, 0120, 0121, 0128, 0129, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0153, 0154, 0164, 0195, 0200, 0265.			498975 Jet-Main (High Altitude) (Used After Code Date 99030700 and Before Code Date 03110700).
55	691421	Housing-Rewind Starter						
58	697316	Rope-Starter (Cut To Required Length)			498978 Jet-Main (Standard) (Used After Code Date 99030700 and Before Code Date 03110700).			
59	396892	Insert-Grip						
60	281434	Grip-Starter Rope						
60A	393152	Grip-Starter Rope						
65	690837	Screw (Rewind Starter)			Used on Type No(s). 0111, 0112, 0119, 0120, 0121, 0128, 0129, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0153, 0154, 0164, 0195, 0200, 0265.			
78	691108	Screw (Flywheel Guard)						
83	690527	Shaft-Auxiliary Drive						
95	691636	Screw (Throttle Valve)						
97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)			494870 Jet-Main (Standard) (Used Before Code Date 99030800). Used on Type No(s). 0131, 0146.			497315 Jet-Main (High Altitude) (Used Before Code Date 99030800). Used on Type No(s). 0131, 0146.
101	691623	Pin-Shaft						
104	691242	Pin-Float Hinge						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	692703	Kit-Carburetor Overhaul	209	691290	Spring-Governor ----- Note -----	227	691467	Lever-Governor Control
122	◆◆692799	Spacer-Carburetor		693032	Spring-Governor	238	691300	Cap-Valve
125	790120	Carburetor Used on Type No(s). 0111, 0112, 0119, 0120, 0121, 0128, 0129, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0153, 0154, 0164, 0195, 0200, 0265.			Used on Type No(s). 0133.	265	690798	Clamp-Casing
125C	694505	Carburetor		691851	Spring-Governor Used on Type No(s). 0112, 0128, 0130, 0139, 0142, 0143, 0146, 0153, 0154, 0164.	267	691044	Screw (Casing Clamp)
127	◆694468	Plug-Welch		691292	Spring-Governor Used on Type No(s). 0149.	268	691072	Casing-Control Wire (Cut To Required Length)
130	691203	Valve-Throttle ----- Note ----- 696564 Valve-Throttle (Used With Plastic Throttle Shaft)		691291	Spring-Governor Used on Type No(s). 0111, 0119, 0129, 0182.	269	691026	Wire-Control (Cut To Required Length)
133	398187	Float-Carburetor		690319	Spring-Governor Used on Type No(s). 0120, 0121.	270	691027	Nut (Control Wire Casing)
134	◆398188	Kit-Needle/Seat	222B	693378	Bracket-Control ----- Note -----	271	691028	Lever-Control
137	◆◆693981	Gasket-Float Bowl		698952	Bracket-Control Used on Type No(s). 0265.	276	◆◆271716	Washer-Sealing
146	690979	Key-Timing		693897	Bracket-Control Used on Type No(s). 0112, 0128, 0130, 0131, 0133, 0142, 0143, 0149, 0154, 0164, 0182, 0195, 0200.	287	690940	Screw (Dipstick Tube)
187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).		692672	Bracket-Control Used on Type No(s). 0100, 0105, 0120, 0121, 0137, 0138, 0139, 0146, 0150, 0153.	300	694248	Muffler-Exhaust (Used After Code Date 99030700). ----- Note ----- 692275 Muffler-Exhaust (Used Before Code Date 99030800).
163A	◆◆692667	Gasket-Air Cleaner				300B	699769	Muffler-Exhaust
188	691147	Screw (Control Bracket)				304	499676	Housing-Blower ----- Note ----- 697270 Housing-Blower Used on Type No(s). 0112. 695976 Housing-Blower Used on Type No(s). 0100, 0142, 0143, 0153, 0164, 0195, 0200. 499677 Housing-Blower Used on Type No(s). 0105, 0120, 0121, 0128, 0130, 0131, 0137, 0138, 0139, 0146, 0154, 0200.
190	690940	Screw (Fuel Tank)						
192	694543	Adjuster-Rocker Arm						
202	691303	Link-Mechanical Governor						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	505	691251	Nut (Governor Control Lever)	615	690340	Retainer-Governor Shaft
306	691232	Shield-Cylinder	510	494147	Drive-Starter	616	698801	Crank-Governor
307	690345	Screw (Cylinder Shield)	513	692358	Clutch-Drive	619	691108	Screw (Cylinder Head Plate)
309	695550	Motor-Starter	523	499621	Dipstick	621	692310	Switch-Stop
310	692327	Bolt (Starter Motor)	524	★692296	Seal-Dipstick Tube	633	◆691321	Seal-Choke/Throttle Shaft
326	691108	Screw (Rewind Guard)	525	495265	Tube-Dipstick	633A	◆693867	Seal-Choke/Throttle Shaft
332	690662	Nut (Flywheel)	529	692937	Grommet	635	66538	Boot-Spark Plug
333	802574	Armature-Magneto	529A	691923	Grommet	651	691660	Screw (Starter Gear Cover)
334	691061	Screw (Magneto Armature)	532	692851	Nut (Mounting Bracket)	670	692294	Spacer-Fuel Tank
337	692051	Plug-Spark	544	690786	Armature-Starter	676C	497682	Deflector-Muffler
341	690368	Stud (Mounting Bracket)	545	492919	Washer Set (Starter Motor)	676D	692957	Deflector-Muffler
347	691396	Switch-Rocker	562	691119	Bolt (Governor-Control Lever)	677	690661	Screw (Muffler Deflector)
356	692390	Wire-Stop	564A	693808	Screw (Control Cover)	684	690345	Screw (Breather Passage Cover)
356A	693010	Wire-Stop	584	697734	Cover-Breather Passage	689	691855	Spring-Friction
358	694090	Gasket Set-Engine	585	★691879	Gasket-Breather Passage	692	690572	Spring-Detent
363	19069	Puller-Flywheel	592	690800	Nut (Rewind Starter)	697	691127	Screw (Drive Cap)
365	691136	Screw (Carburetor)	597	691696	Screw (Pawl Friction Plate)	715	691147	Screw (Shaft Stop)
374	691074	Washer (Camshaft)	601	95162	Clamp-Hose	718	690959	Pin-Locating
383	19374	Wrench-Spark Plug	604A	693807	Cover-Control	721	690449	Stop-Shaft
404	690272	Washer (Governor Crank)	----- Note -----			741	790345	Gear-Timing (Use Without Woodruff Key)
425	690670	Screw (Air Cleaner Cover)	692669 Cover-Control Used on Type No(s). 0111, 0112, 0119, 0120, 0121, 0128, 0130, 0131, 0137, 0138, 0139, 0142, 0143, 0146, 0153, 0154, 0164, 0195, 0200.			----- Note -----		
443	691637	Screw (Air Cleaner Primer Base)	608	497680	Starter-Rewind	742	93941	Retainer-E Ring
443A	692523	Screw (Air Cleaner Primer Base)	613	691108	Screw (Muffler)	743	691772	Gear-Drive
445	491588	Filter-Air Cleaner Cartridge	613A	691140	Screw (Muffler)	745	691648	Screw (Brake)
455	695161	Cup-Flywheel				783	691918	Gear-Pinion
456	692299	Plate-Pawl Friction				783A	691269	Gear-Pinion
459	281505	Pawl-Ratchet				784	692341	Cover-Gear
472	693809	Knob-Choke Shaft				785	692352	Gasket-Starter Cover
474	691991	Alternator						
493	692877	Bracket-Mounting						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
789	696547	Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 691372 Harness-Wiring (Used Before Code Date 00040700).	836A	690664	Screw (Muffler Guard) ----- Note ----- 691147 Screw (Muffler Guard) Used on Type No(s). 0105, 0111, 0117, 0119, 0120, 0121, 0200.	957	692046	Cap-Fuel Tank (Plastic)
801	690782	Cap-Drive	842	*691031	Seal-O Ring (Dipstick Tube)	957A	397974	Cap-Fuel Tank (Plastic) Used on Type No(s). 0112.
802	695267	Cap-End (Used After Code Date 00040600). ----- Note ----- 695975 Cap-End (Used Before Code Date 00040700).	843	691884	Sleeve-Lever	966	692673	Base-Air Cleaner Primer
803	695266	Housing-Starter (Used After Code Date 00040600). ----- Note ----- 695975 Housing-Starter (Used Before Code Date 00040700).	847	692047	Dipstick/Tube Assembly	966A	693863	Base-Air Cleaner Primer (Choke System) Used on Type No(s). 0105, 0117, 0132, 0152, 0177, 0182.
830	694544	Stud-Rocker Arm	851	493880	Terminal-Spark Plug	967	493537	Filter-Pre Cleaner
832	691466	Guard-Muffler ----- Note ----- 695593 Guard Muffler Used on Type No(s). 0111, 0200.	853	695268	Adapter-Wire	968	692298	Cover-Air Cleaner
836	692198	Screw (Muffler Guard) ----- Note ----- 697551 Screw (Muffler Guard) Used on Type No(s). 0105, 0117, 0119, 0120, 0121, 0164. 692557 Screw (Muffler Guard) Used on Type No(s). 0111, 0200.	868	*Δ692044	Seal-Valve	969	691138	Screw (Blower Housing Cover)
			883	*Δ691893	Gasket-Valve	969A	697922	Screw (Blower Housing Cover)
			886	696268	Gasket Set-Cylinder Head Plate	972	699374	Tank-Fuel (Plastic)
			910	691094	Stud (Alternator)	972B	699387	Tank-Fuel (Plastic)
			914	691108	Screw (Rocker Arm Cover)	975	493640	Bowl-Float
			921B	697921	Cover-Blower Housing	976	694395	Primer-Carburetor
			922	691831	Spring-Brake ----- Note ----- 692135 Spring-Brake Used on Type No(s). 0100, 0142, 0143, 0153, 0195, 0265.	977	692704	Gasket Set-Carburetor
			923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 0100, 0142, 0143, 0153, 0195, 0265.	990	695951	Key Set
			925	690595	Cover-Linkage	993	*Δ694088	Gasket-Cylinder Head Plate
			930A	692675	Guard-Rewind	1005	691346	Fan-Flywheel
			935	499421	Switch-Interlock	1009	696255	Screw (Starter Motor)
			937	691325	Spline-Starter	1019	693868	Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow)
						1022	*Δ691890	Gasket-Rocker Cover
						1023	499624	Cover-Rocker Arm

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

120600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1026	692045	Rod-Push	1059	692311	Kit-Screw/Washer	1119	692979	Screw (Alternator)
1029	691230	Arm-Rocker			----- Note -----	1160	691627	Screw (Interlock Switch)
1034	691343	Guide-Push Rod		696293	Kit-Screw/Washer	1210	498144	Pulley/Spring Assembly (Pulley)
1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)			Used on Type No(s). 0112.	1211	498144	Pulley/Spring Assembly (Spring)
1058	276348	Manual-Owner's ----- Note ----- 276347 Manual-Owner's (Touch N Mow)	1095	694091	Gasket Set-Valve	1236	695959	Starter-Mechanical
			1102	691255	Pilot-Guide Used on Type No(s). 0110, 0117, 0132, 0149, 0177.	1330	272147	Manual-Repair
			1102A	691266	Pilot-Guide Used on Type No(s). 0133.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6134-14

Assemblies include all parts shown in frames.

10/11/2005