



**120K00**

# Illustrated Parts List

## Model Series

# 120K00

TYPE NUMBERS  
0361 through 0535.

### TABLE OF CONTENTS


|                                     |       |
|-------------------------------------|-------|
| <b>Air Cleaner</b> .....            | 4     |
| <b>Blower Housing/Shrouds</b> ..... | 5     |
| <b>Camshaft</b> .....               | 2     |
| <b>Carburetor</b> .....             | 3     |
| <b>Controls</b> .....               | 4     |
| <b>Crankshaft</b> .....             | 2     |
| <b>Cylinder</b> .....               | 2     |
| <b>Electrical</b> .....             | 4     |
| <b>Engine Sump</b> .....            | 2     |
| <b>Exhaust System</b> .....         | 4     |
| <b>Flywheel</b> .....               | 5     |
| <b>Flywheel Brake</b> .....         | 4     |
| <b>Fuel Supply</b> .....            | 3     |
| <b>Governor Spring</b> .....        | 4     |
| <b>Ignition</b> .....               | 4     |
| <b>Kits/Gaskets</b> .....           | 2 & 3 |
| <b>Lubrication</b> .....            | 2     |
| <b>Piston Group</b> .....           | 2     |
| <b>Rewind Starter</b> .....         | 5     |
| <b>Valves</b> .....                 | 2     |








PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 120K00

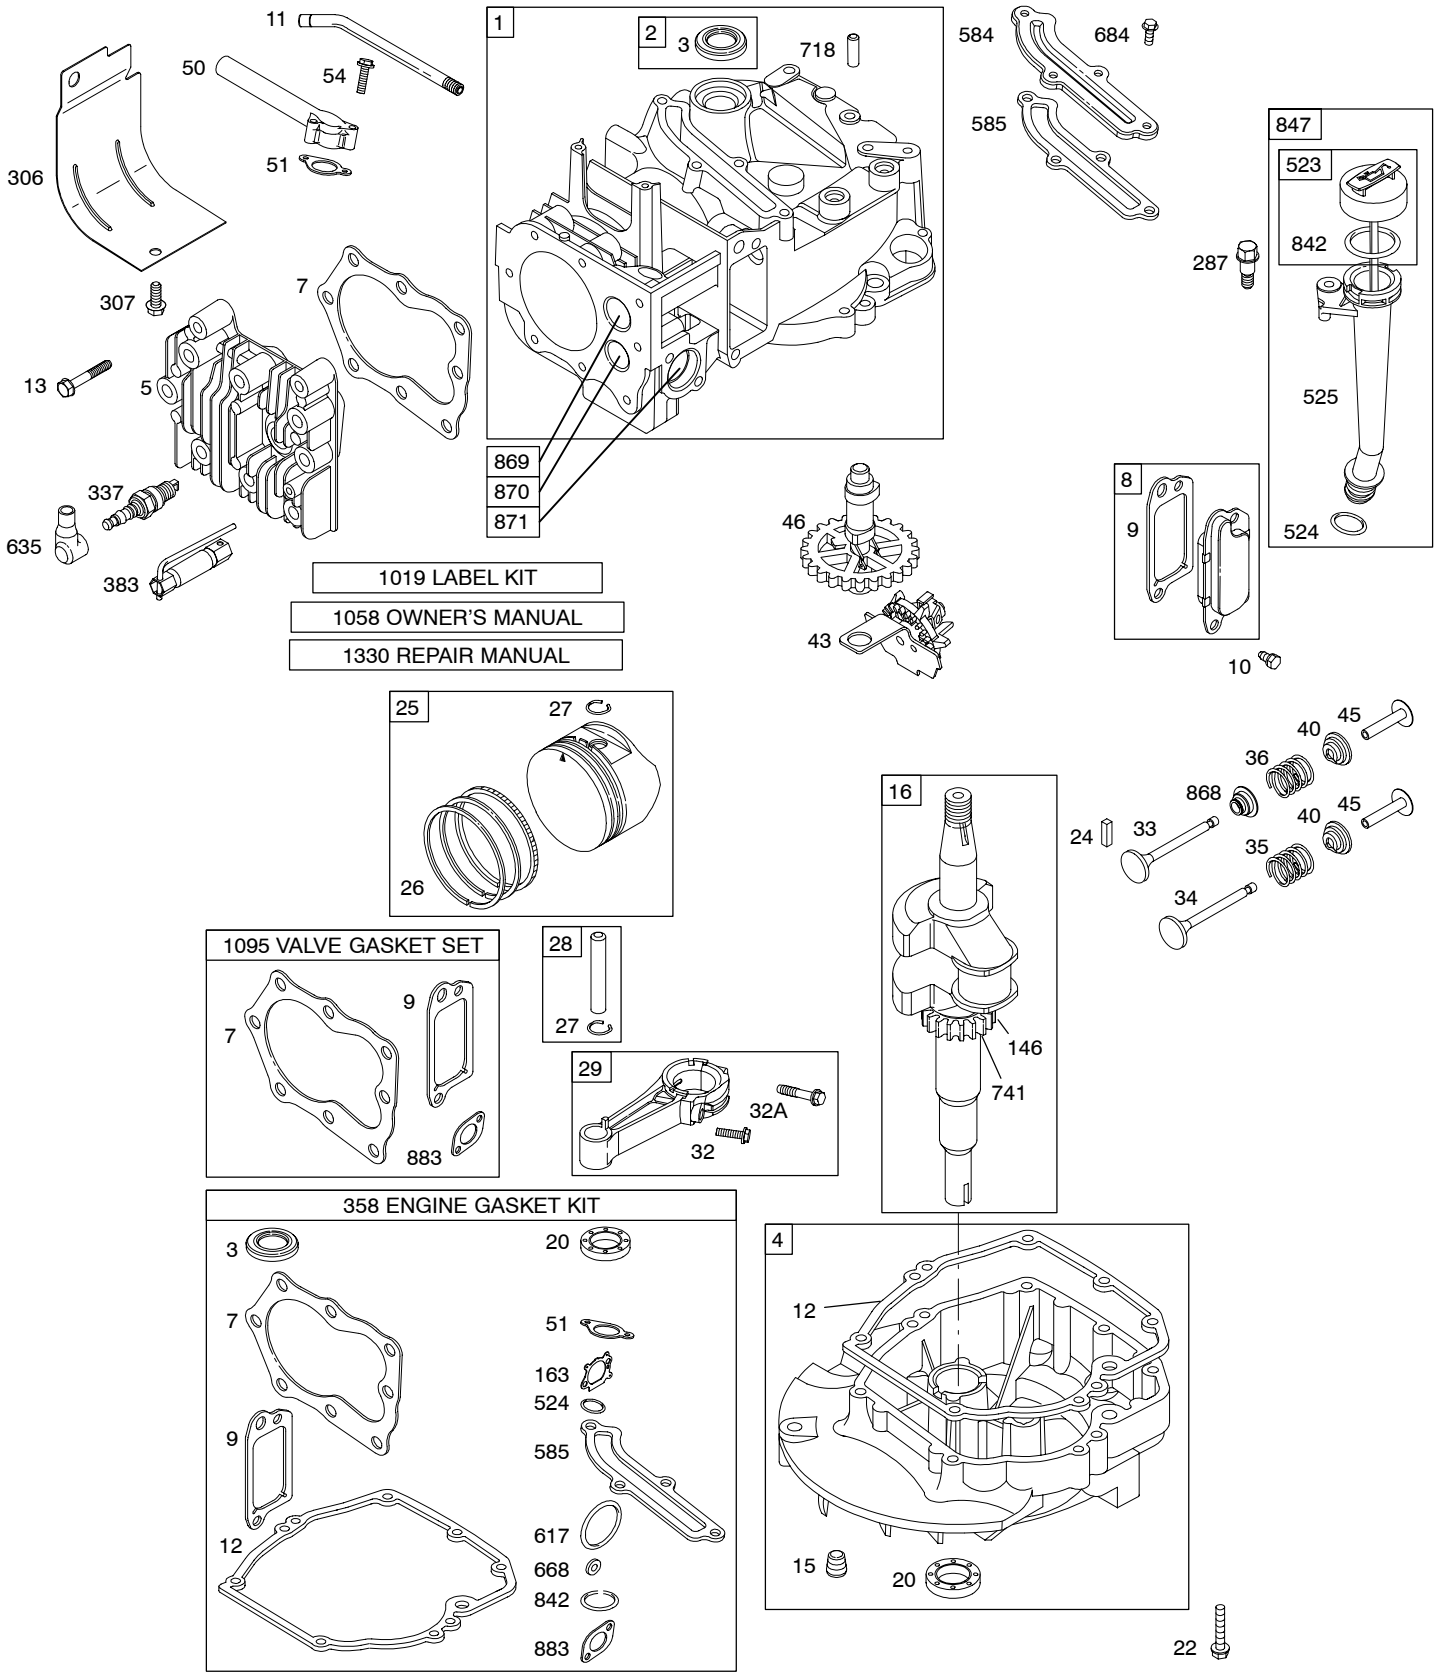


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3398-2 Assemblies include all parts shown in frames. 10/05/2005

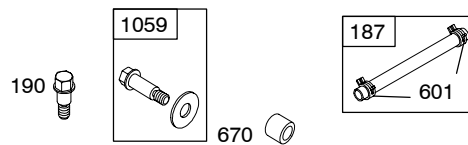
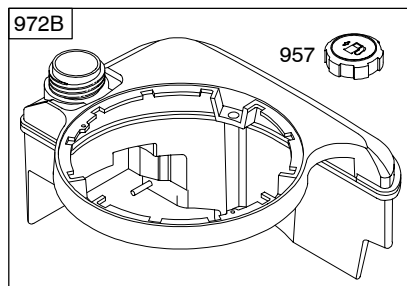
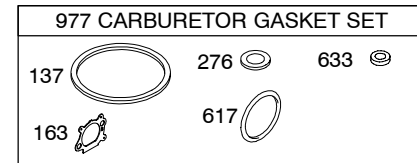
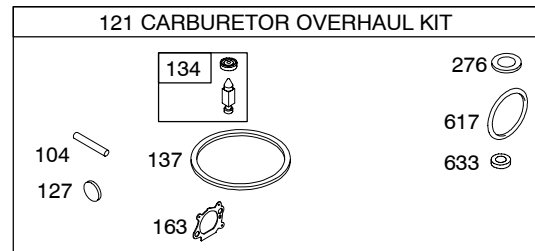
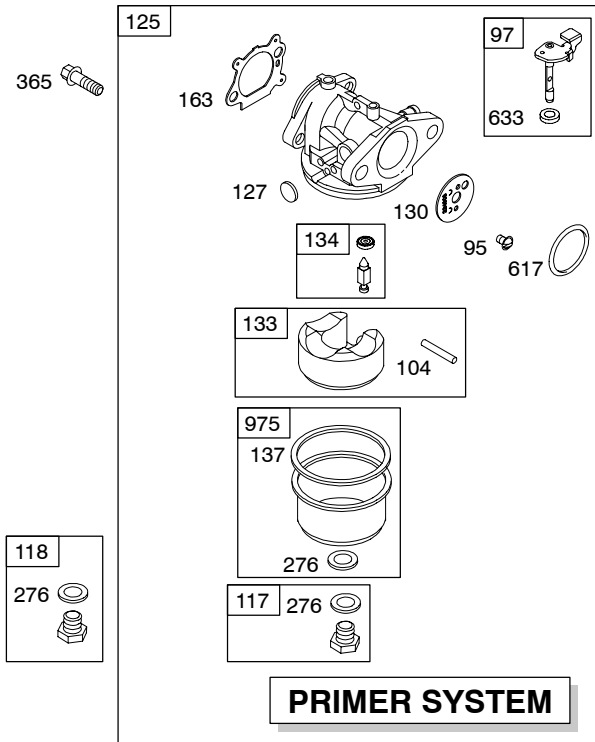


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3398-3 Assemblies include all parts shown in frames. 10/05/2005


# 120K00

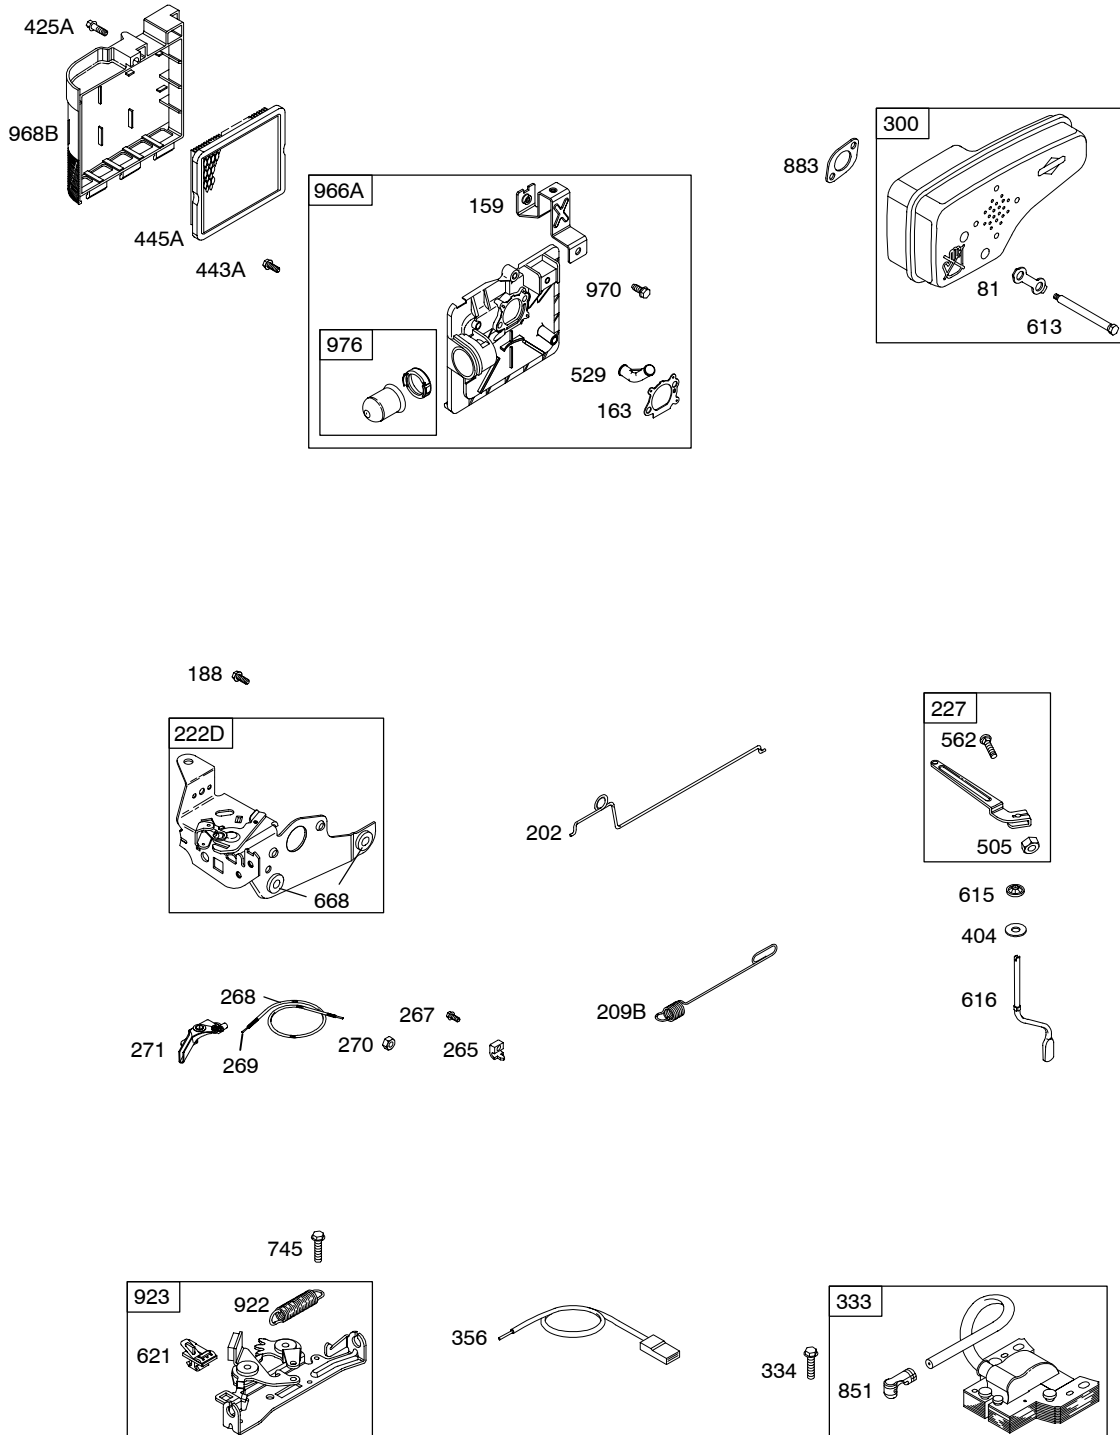

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
3398-4 Assemblies include all parts shown in frames. 10/05/2005

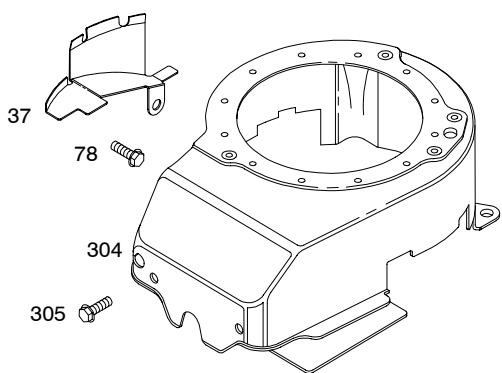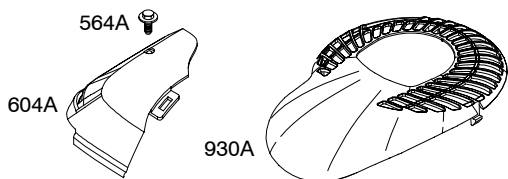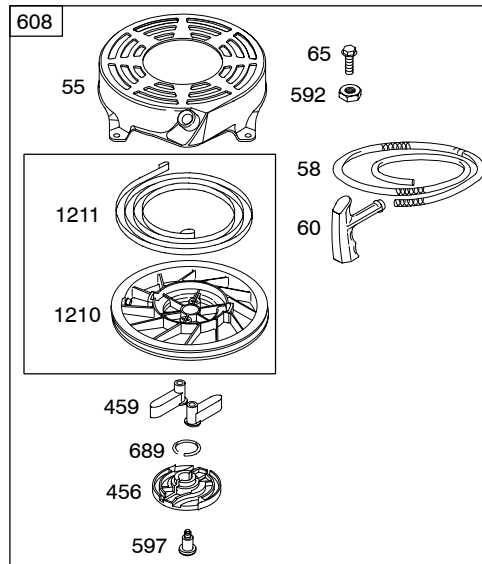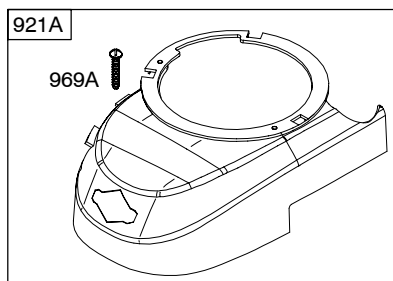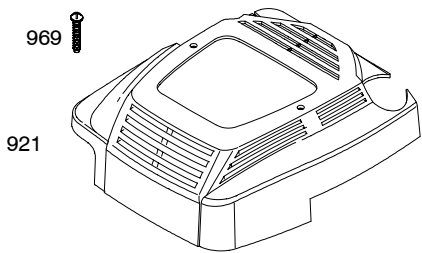

1036 EMISSION LABEL

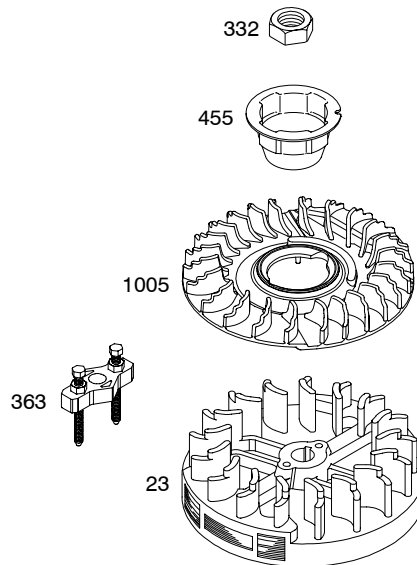

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
3398-5 Assemblies include all parts shown in frames.

10/05/2005

# 120K00

| REF. NO. | PART NO. | DESCRIPTION  | REF. NO. | PART NO. | DESCRIPTION                                 | REF. NO.                | PART NO.  | DESCRIPTION   |
|----------|----------|--|----------|----------|---|-------------------------|-----------|---|
| 1        | 697322   | Cylinder Assembly  | 27       | 691866   | Lock-Piston Pin                             | 133                     | 398187    | Float-Carburetor  |
| 2        | 399269   | Kit-Bushing/Seal<br>(Magneto Side)   | 28       | 499423   | Pin-Piston<br>(Standard)                    | 134                     | ●398188   | Kit-Needle/Seat   |
| 3        | ★299819  | Seal-Oil<br>(Magneto Side)   | 29       | 499424   | Rod-Connecting<br>(Standard)                | 137                     | ●◆693981  | Gasket-Float Bowl   |
| 4        | 493279   | Sump-Engine  | 32       | 691664   | Screw<br>(Connecting Rod)                   | 146                     | 690979    | Key-Timing  |
| 5        | 691160   | Head-Cylinder  | 32A      | 695759   | Screw<br>(Connecting Rod)                   | 159                     | 691753    | Bracket-Air Cleaner<br>Primer   |
| 7        | ★∅692249 | Gasket-Cylinder Head   | 33       | 262651   | Valve-Exhaust                               | 163                     | ★◆◆272653 | Gasket-Air Cleaner  |
| 8        | 695250   | Breather Assembly  | 34       | 262652   | Valve-Intake                                | 187                     | 791766    | Line-Fuel<br>(Cut to Required<br>Length)<br>(Used After Code Date<br>05063000). |
| 9        | ★∅696125 | Gasket-Breather  | 35       | 691270   | Spring-Valve<br>(Intake)                    | ----- <b>Note</b> ----- |           |   |
| 10       | 691125   | Screw<br>(Breather Assembly)   | 36       | 691270   | Spring-Valve<br>(Exhaust)                   | 188                     | 693399    | Screw<br>(Control Bracket)  |
| 11       | 691781   | Tube-Breather  | 37       | 694086   | Guard-Flywheel                              | 190                     | 690940    | Screw<br>(Fuel Tank)  |
| 12       | ★692232  | Gasket-Crankcase   | 40       | 692194   | Retainer-Valve                              | 202                     | 691829    | Link-Mechanical<br>Governor   |
| 13       | 690912   | Screw<br>(Cylinder Head)   | 43       | 691997   | Slinger-Governor/Oil                        | 209B                    | 699056    | Spring-Governor   |
| 15       | 691680   | Plug-Oil Drain<br>(Square Socket)  | 45       | 690548   | Tappet-Valve                                | 222D                    | 791128    | Bracket-Control<br>(Fixed Speed)  |
| 16       | 694849   | Crankshaft<br>Used on Type No(s).<br>0361, 0362.<br>----- <b>Note</b> -----<br>691451 Crankshaft<br>Used on Type No(s).<br>0418, 0528, 0529.<br>691455 Crankshaft<br>Used on Type No(s).<br>0368.<br>691450 Crankshaft<br>Used on Type No(s).<br>0534, 0535. | 46       | 691449   | Camshaft                                    | 227                     | 690783    | Lever-Governor<br>Control   |
| 20       | ★399781  | Seal-Oil<br>(PTO Side)   | 50       | 497465   | Manifold-Intake                             | 265                     | 690798    | Clamp-Casing  |
| 22       | 691092   | Screw<br>(Crankcase Cover/<br>Sump)  | 51       | ★272199  | Gasket-Intake                               | 267                     | 691044    | Screw<br>(Casing Clamp)   |
| 23       | 692315   | Flywheel   | 54       | 691650   | Screw<br>(Intake Manifold)                  | 268                     | 691072    | Casing-Control Wire<br>(Cut to Required<br>Length)                              |
| 24       | 222698   | Key-Flywheel   | 55       | 691421   | Housing-Rewind<br>Starter                   | 269                     | 691026    | Wire-Control<br>(Cut to Required<br>Length)                                     |
| 25       | 790359   | Piston Assembly<br>(Standard)<br>----- <b>Note</b> -----<br>791326 Piston<br>Assembly<br>(.020" Oversize)  | 58       | 697316   | Rope-Starter<br>(Cut To Required<br>Length) | 270                     | 691027    | Nut<br>(Control Wire Casing)  |
| 26       | 790360   | Ring Set<br>(Standard)<br>----- <b>Note</b> -----<br>791324 Ring Set<br>(.020" Oversize)   | 60       | 281434   | Grip-Starter Rope                           | 271                     | 691028    | Lever-Control   |
|          |          |  | 65       | 690837   | Screw<br>(Rewind Starter)                   | 276                     | ◆◆271716  | Washer-Sealing<br>(Main Jet)  |
|          |          |  | 78       | 691108   | Screw<br>(Flywheel Guard)                   | 287                     | 690940    | Screw<br>(Dipstick Tube)  |
|          |          |  | 81       | 691740   | Lock-Muffler Screw                          | 300                     | 496106    | Muffler   |
|          |          |  | 95       | 691636   | Screw<br>(Throttle Valve)                   | 304                     | 695892    | Housing-Blower  |
|          |          |  | 97       | 696565   | Shaft-Throttle                              | 305                     | 691108    | Screw<br>(Blower Housing)   |
|          |          |  | 104      | ◆691242  | Pin-Float Hinge                             |                         |           |   |
|          |          |  | 117      | 498978   | Jet-Main<br>(Standard)                      |                         |           |   |
|          |          |  | 118      | 497466   | Jet-Main<br>(High Altitude)                 |                         |           |   |
|          |          |  | 121      | 498260   | Kit-Carburetor<br>Overhaul                  |                         |           |   |
|          |          |  | 125      | 498170   | Carburetor<br>(Primer System)               |                         |           |   |
|          |          |  | 127      | ◆694468  | Plug-Welch                                  |                         |           |   |
|          |          |  | 130      | 696564   | Valve-Throttle                              |                         |           |   |

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

**120K00**

| REF. NO. | PART NO. | DESCRIPTION                           | REF. NO.         | PART NO. | DESCRIPTION                                  | REF. NO. | PART NO.            | DESCRIPTION  |
|----------|----------|---------------------------------------|------------------|----------|--|----------|---------------------|--|
| 306      | 690450   | Shield-Cylinder                       | 601              | 95162    | Clamp-Hose                                   | 883      | ★ <del>691881</del> | Gasket-Exhaust   |
| 307      | 690345   | Screw<br>(Cylinder Shield)            | 604A             | 691344   | Cover-Control                                | 921      | 497233              | Cover-Blower Housing   |
| 332      | 690662   | Nut<br>(Flywheel)                     | 608              | 497680   | Starter-Rewind                               | 921A     | 695886              | Cover-Blower Housing   |
| 333      | 802574   | Armature-Magneto                      | 613              | 691340   | Screw<br>(Muffler)                           | 922      | 692135              | Spring-Brake   |
| 334      | 691061   | Screw<br>(Magneto Armature)           | 615              | 690340   | Retainer-Governor<br>Shaft                   | 923      | 695891              | Brake  |
| 337      | 802592   | Plug-Spark<br>(Resistor)              | 616              | 698801   | Crank-Governor                               | 930A     | 691345              | Guard-Rewind   |
| 356      | 692390   | Wire-Stop                             | 617              | ★◆270344 | Seal-O Ring<br>(Intake Manifold)             | 957      | 397974              | Cap-Fuel Tank<br>(Plastic)   |
| 358      | 497316   | Gasket Set-Engine                     | 621              | 692310   | Switch-Stop                                  | 966A     | 496116              | Base-Air Cleaner<br>Primer   |
| 363      | 19069    | Flywheel Puller                       | 633              | ◆691321  | Seal-Choke/Throttle<br>Shaft                 | 968B     | 692298              | Cover-Air Cleaner  |
| 365      | 691688   | Screw<br>(Carburetor)                 | 635              | 66538    | Boot-Spark Plug                              | 969      | 690700              | Screw<br>(Blower Housing<br>Cover)   |
| 383      | 89838    | Wrench-Spark Plug                     | 668              | ★493823  | Spacer                                       | 969A     | 691138              | Screw<br>(Blower Housing<br>Cover)   |
| 404      | 690272   | Washer<br>(Governor Crank)            | 670              | 692294   | Spacer-Fuel Tank                             | 970      | 691669              | Screw<br>(Air Cleaner Primer<br>Bracket)   |
| 425A     | 690670   | Screw<br>(Air Cleaner Cover)          | 684              | 690345   | Screw<br>(Breather Passage<br>Cover)         | 972B     | 699374              | Tank-Fuel<br>(Plastic)   |
| 443A     | 692523   | Screw<br>(Air Cleaner Primer<br>Base) | 689              | 691855   | Spring-Friction                              | 975      | 493640              | Bowl-Float   |
| 445A     | 491588   | Filter-Air Cleaner<br>Cartridge       | 718              | 690959   | Pin-Locating                                 | 976      | 694395              | Primer-Carburetor  |
| 455      | 695161   | Cup-Flywheel                          | 741              | 790345   | Gear-Timing<br>(Use Without Woodruff<br>Key) | 977      | 498261              | Gasket Set-Carburetor  |
| 456      | 692299   | Plate-Pawl Friction                   | ----- Note ----- |          |  | 1005     | 691346              | Fan-Flywheel   |
| 459      | 281505   | Plate-Ratchet                         | 745              | 691648   | Screw<br>(Dipstick Tube)                     | 1019     | 494256              | Kit-Label  |
| 505      | 691251   | Nut<br>(Governor Control<br>Lever)    | 842              | ★691031  | Seal-O Ring<br>(Brake)                       | 1036     |                     | Label-Emission<br>(Available From An<br>Authorized Briggs &<br>Statton Service Dealer) |
| 523      | 495264   | Dipstick                              | 847              | 692017   | Dipstick/Tube<br>Assembly                    | 1058     | 276171              | Manual-Owner's   |
| 524      | ★692296  | Seal-Dipstick Tube                    | 851              | 493880   | Terminal-Spark Plug                          | 1059     | 692311              | Kit-Screw/Washer   |
| 525      | 495265   | Tube-Dipstick                         | 868              | 697338   | Seal-Valve                                   | 1095     | 498528              | Gasket Set-Valve   |
| 529      | 691923   | Grommet                               | 869              | 691155   | Seat-Valve<br>(Intake)                       | 1210     | 498144              | Pulley/Spring<br>Assembly<br>(Pulley)  |
| 562      | 92613    | Bolt<br>(Governor Control<br>Lever)   | 870              | 690380   | Seat-Valve<br>(Exhaust)                      | 1211     | 498144              | Pulley/Spring<br>Assembly<br>(Spring)  |
| 564A     | 691142   | Screw<br>(Control Cover)              | 871              | 262001   | Bushing-Valve Guide<br>(Exhaust)             | 1330     | 270962              | Manual-Repair  |
| 584      | 697734   | Cover-Breather<br>Passage             | ----- Note ----- |          |  |          |                     |  |
| 585      | ★691879  | Gasket-Breather<br>Passage            | 63709            |          | Bushing-Valve<br>Guide<br>(Intake)           |          |                     |  |
| 592      | 690800   | Nut<br>(Rewind Starter)               |                  |          |  |          |                     |  |
| 597      | 691696   | Screw<br>(Pawl Friction Plate)        |                  |          |  |          |                     |  |

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*