



121600

Illustrated Parts List

Model Series

121600

TYPE NUMBERS
0015 through 0665.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




121600

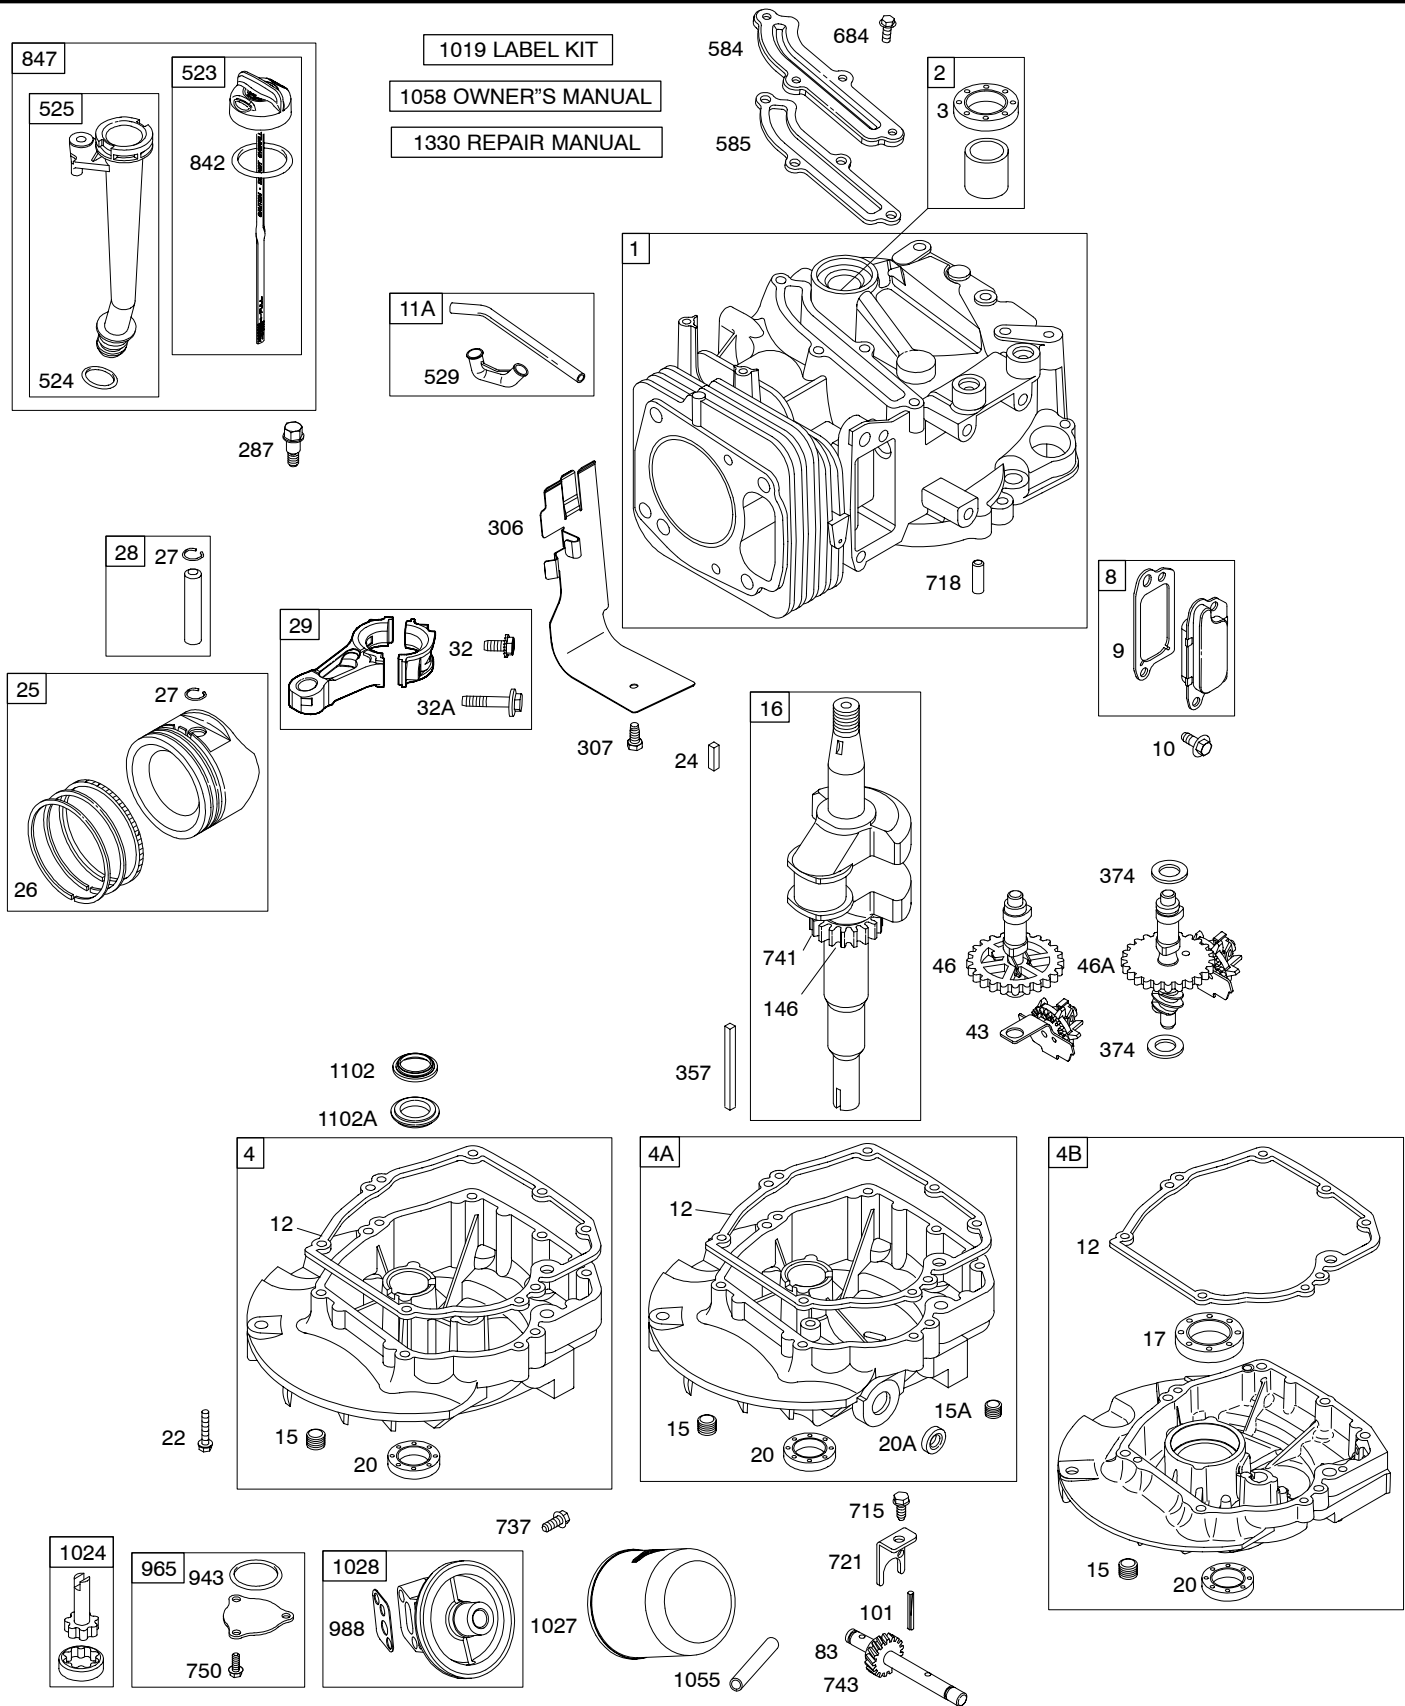


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
2143-2 Assemblies include all parts shown in frames. 10/11/2005

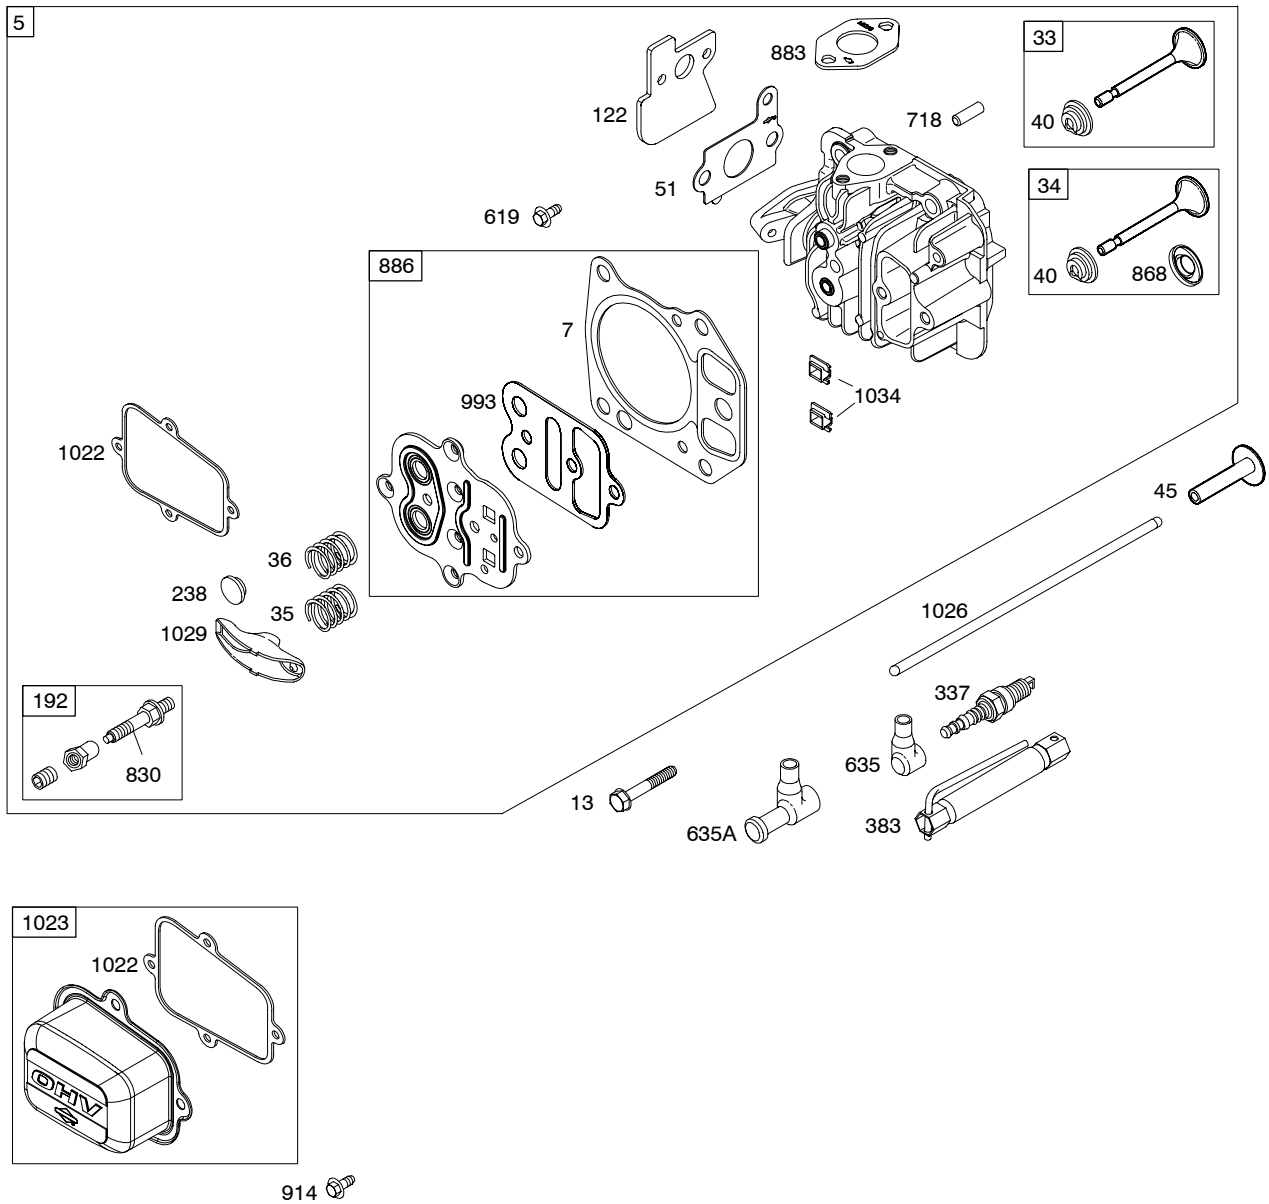

121600












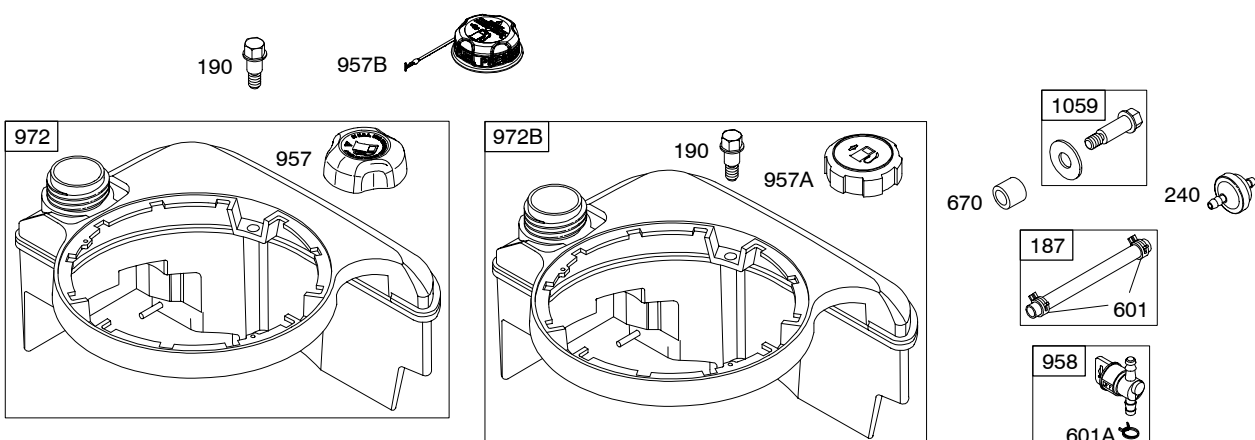
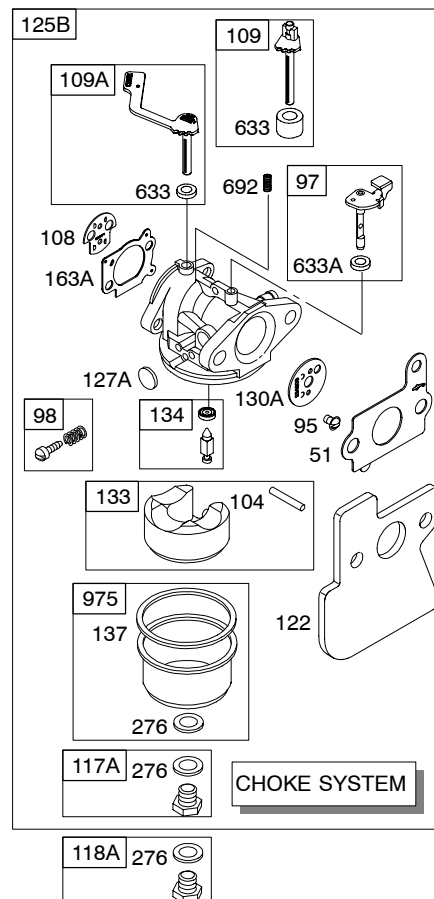
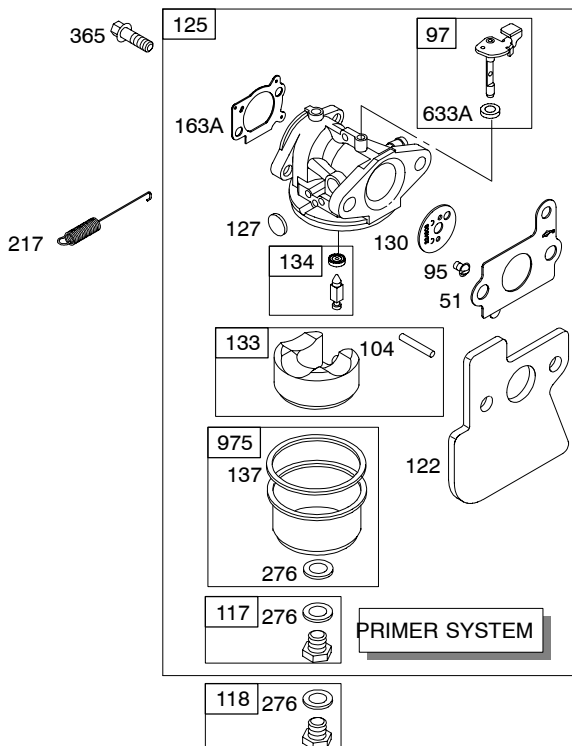


121600

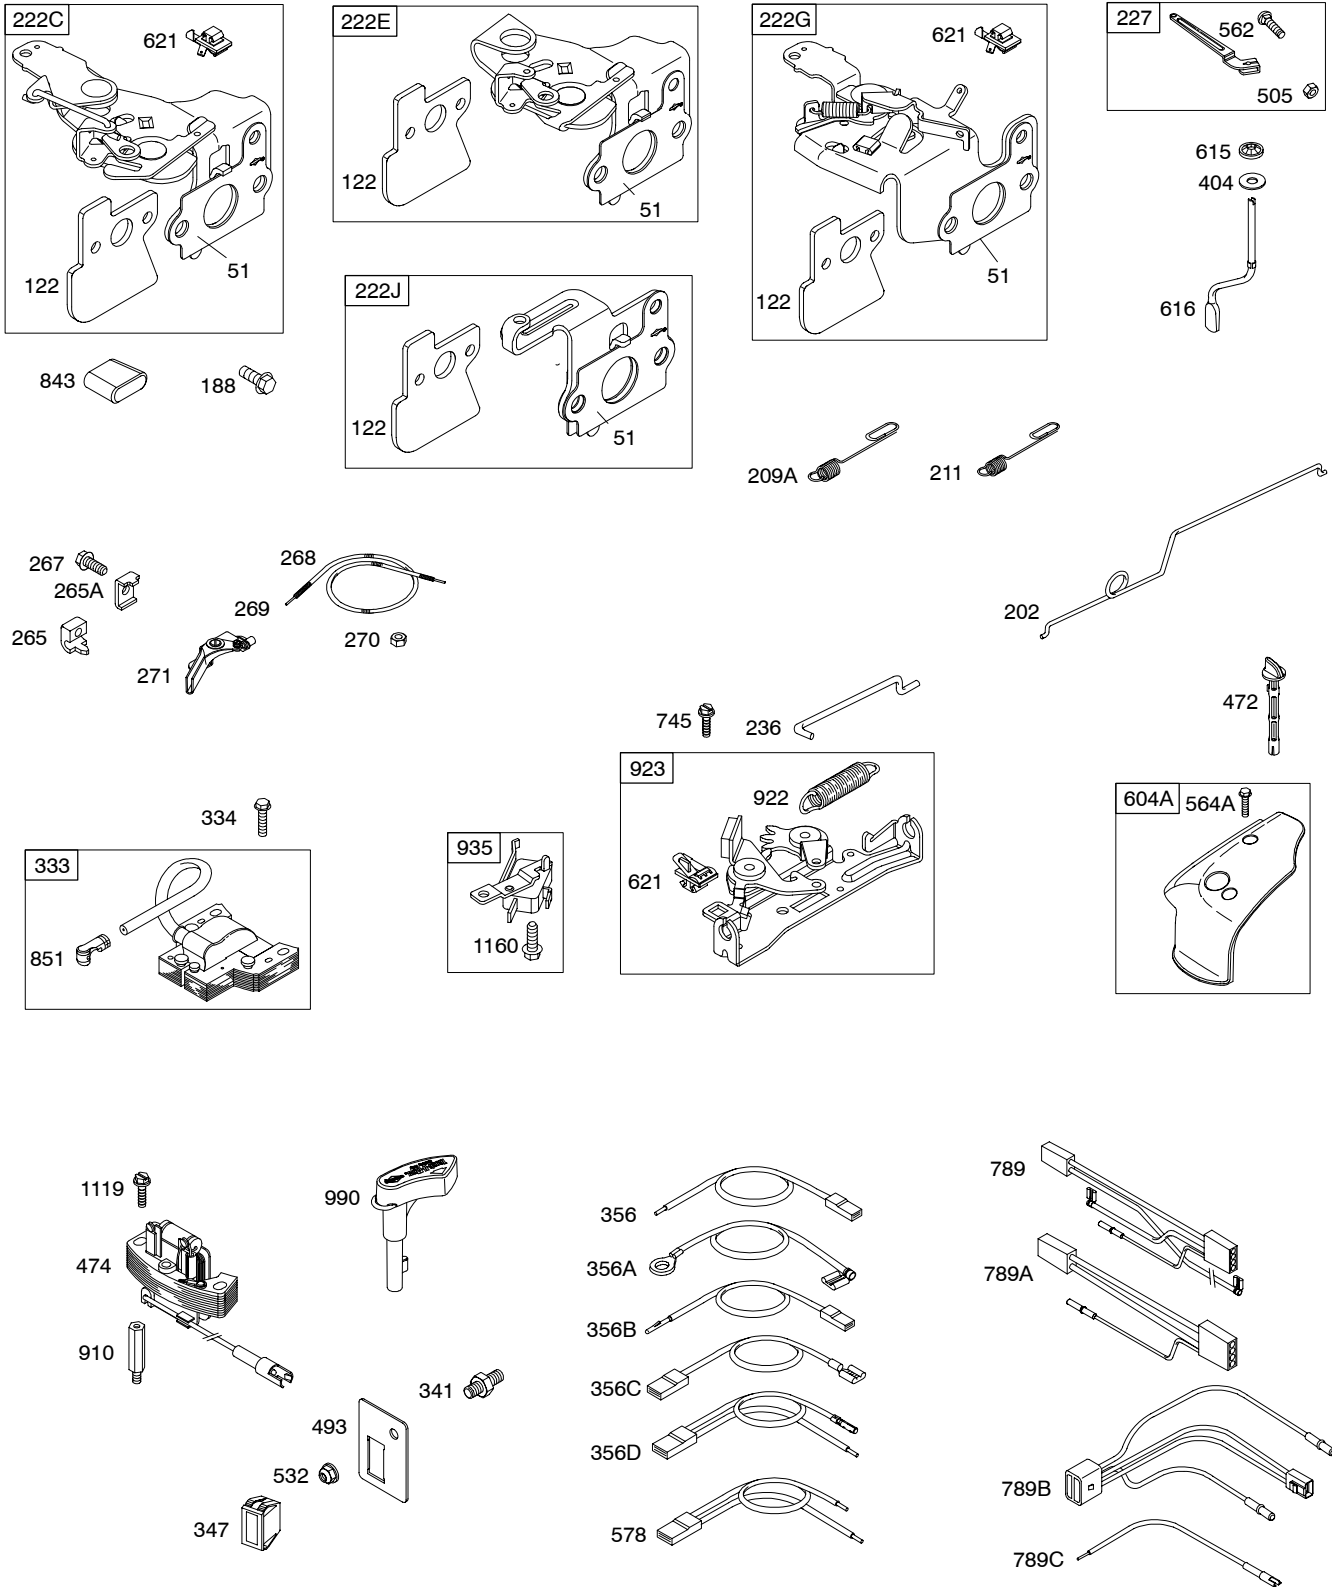


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
2143-5 Assemblies include all parts shown in frames. **10/11/2005**

121600

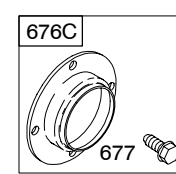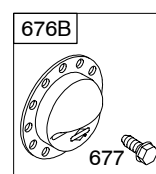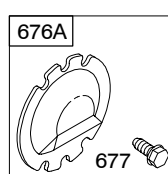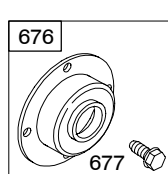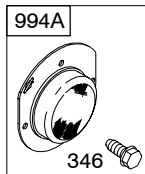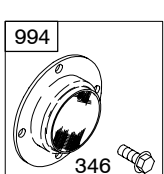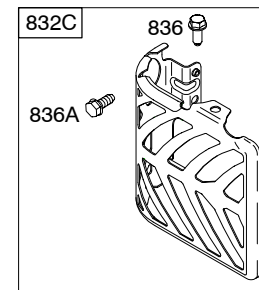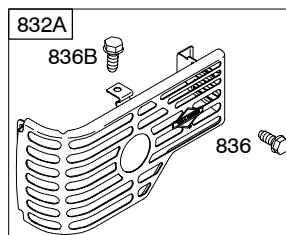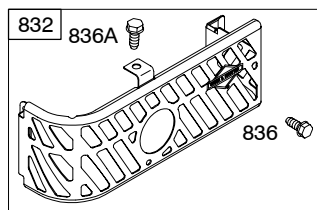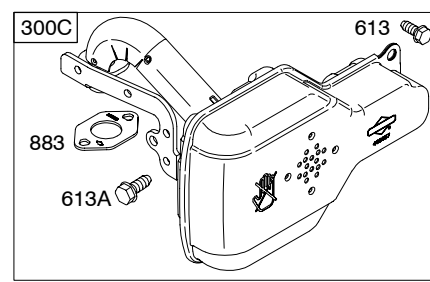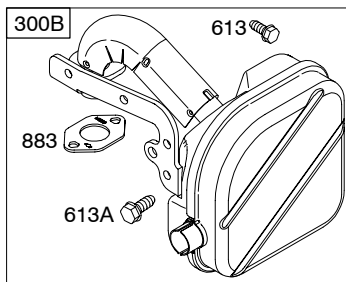
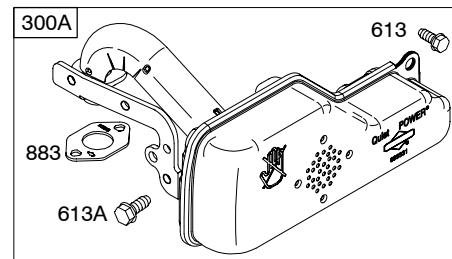
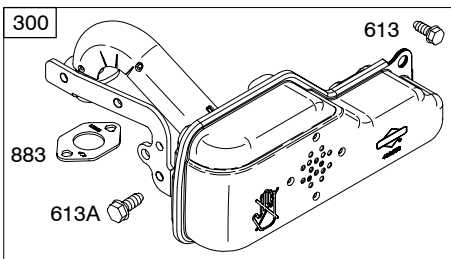
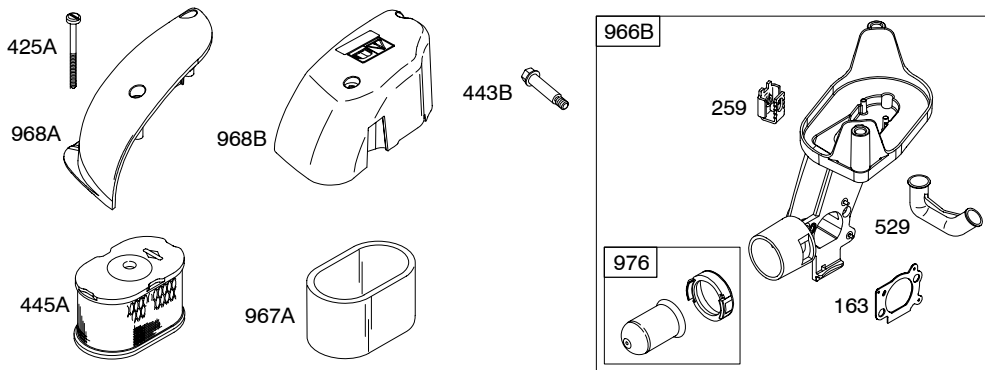


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2143-6 Assemblies include all parts shown in frames. 10/11/2005

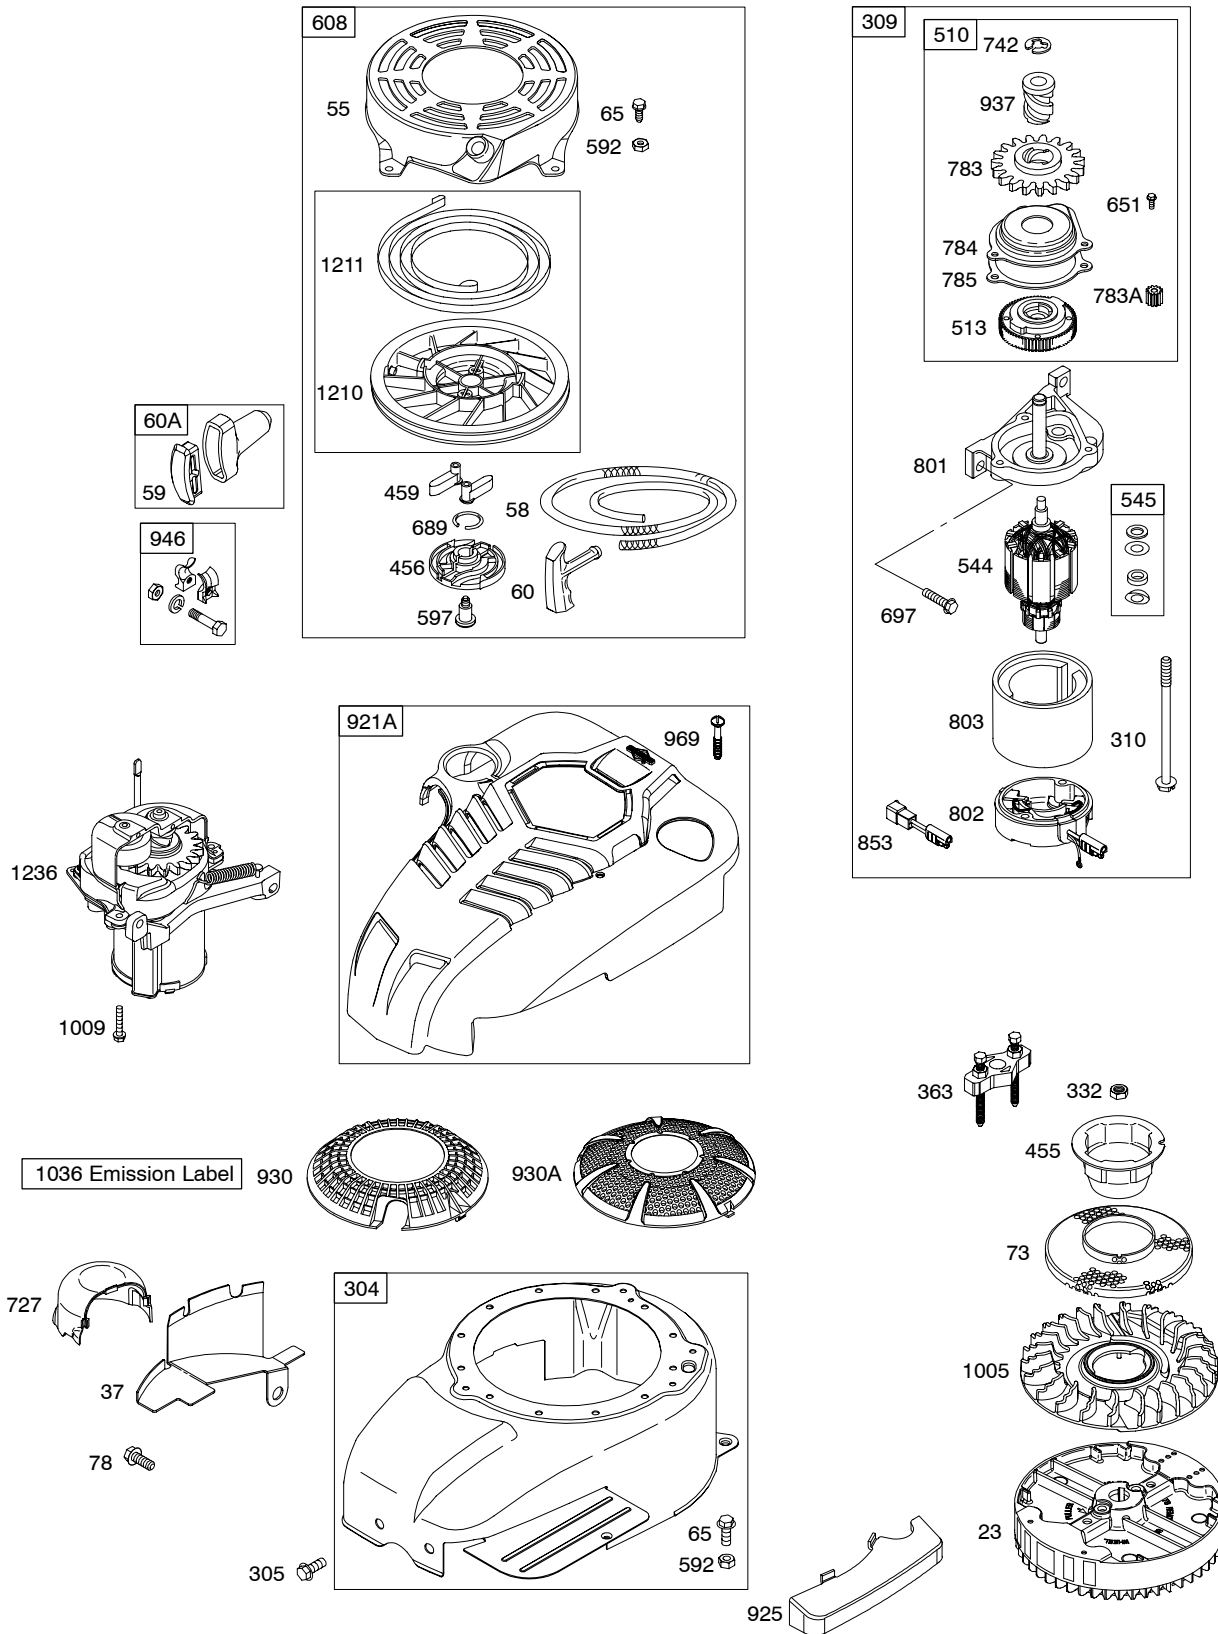

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2143-7 Assemblies include all parts shown in frames. 10/11/2005

121600

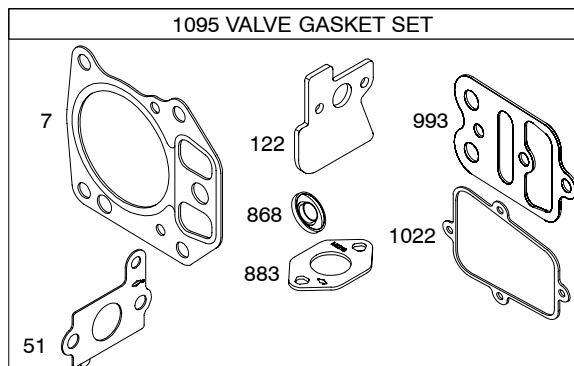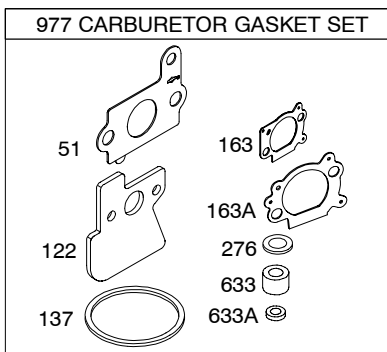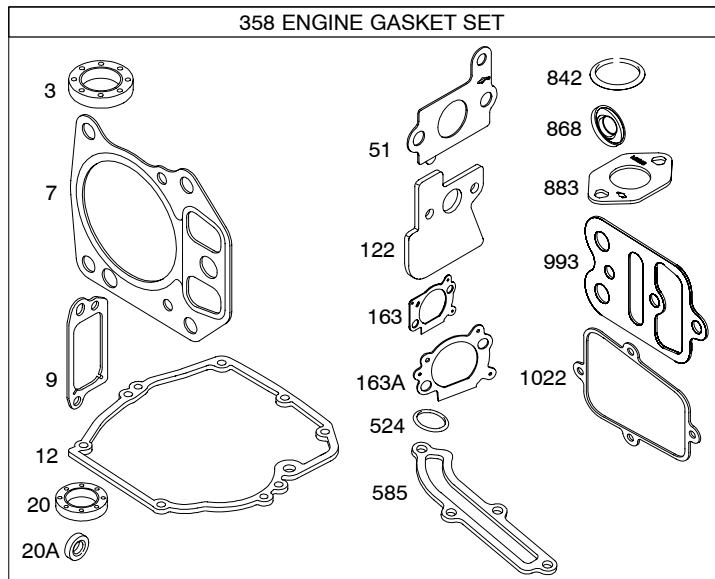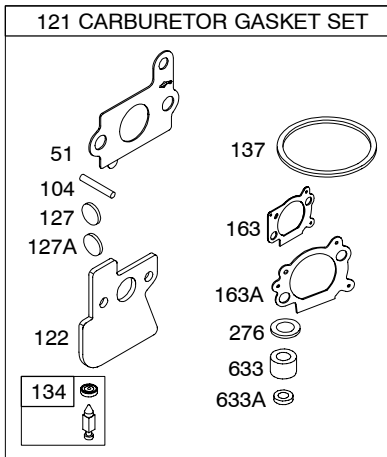

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500). 790363 Cylinder Assembly (Used After Code Date 04040400). Used on Type No(s). 0324, 0333, 0343, 0365, 0372, 0373, 0382. 697639 Cylinder Assembly (Used Before Code Date 04040500). Used on Type No(s). 0324, 0333, 0343, 0365, 0372, 0373.	5	695276	Head-Cylinder	16	691457	Crankshaft ----- Note ----- 691456 Crankshaft Used on Type No(s). 0025,0058,0112,0126, 0133,0137,0158,0163, 0167,0169,0171,0199, 0204,0228,0255,0266, 0269,0270,0271,0273, 0307,0320,0335,0336, 0349,0358,0363,0369, 0370,0373,0376,0377, 0467,0525,0527,0528, 0529,0555,0662,0665. 693291 Crankshaft Used on Type No(s). 0021,0127,0143,0166, 0172,0185,0187,0195, 0197,0206,0222,0234, 0259,0283,0305,0315, 0323,0325,0329,0331, 0355,0384,0392,0521, 0621. 691458 Crankshaft Used on Type No(s). 0150,0153,0256,0319. 692716 Crankshaft Used on Type No(s). 0174,0201,0202,0215, 0220,0264,0272,0311, 0314,0360. 692803 Crankshaft Used on Type No(s). 0045,0188,0235,0545. 692823 Crankshaft Used on Type No(s). 0016,0022,0193,0194, 0227,0240,0241,0301, 0522,0622. 692824 Crankshaft Used on Type No(s). 0142. 694491 Crankshaft Used on Type No(s). 0026,0374,0375,0526. 695860 Crankshaft Used on Type No(s). 0281, 0393. 696607 Crankshaft Used on Type No(s). 0291, 0293. 790156 Crankshaft Used on Type No(s). 0379, 0383.
2	399269	Kit-Bushing/Seal (Magneto Side)	7	★△695166	Gasket-Cylinder Head			
3	★299819	Seal-Oil (Magneto Side)	8	495786	Breather Assembly			
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 0030, 0045, 0142, 0188, 0189, 0235, 0313, 0386, 0545. 696294 Sump-Engine Used on Type No(s). 0288, 0295, 0323, 0325, 0329, 0345, 0347. 696340 Sump-Engine Used on Type No(s). 0359.	9	★272481	Gasket-Breather			
4A	493365	Sump-Engine (Auxiliary PTO)	10	691125	Screw (Breather Assembly)			
4B	692509	Sump-Engine Used on Type No(s). 0270.	11A	499675	Tube-Breather			
			12	★692232	Gasket-Crankcase			
			13	691137	Screw (Cylinder Head)			
			15	691680	Plug-Oil Drain (Square Socket)			
			15A	691093	Plug-Oil Drain (Hex Socket)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2143-9

Assemblies include all parts shown in frames.

10/11/2005

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
17	692517	Bearing-Ball	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030800). 692788 Piston Assembly (.010" Oversize) 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030700). 499435 Piston Assembly (.020" Oversize) (Used Before Code Date 05030800). 692790 Piston Assembly (.030" Oversize)	32	691664	Screw (Connecting Rod)
20	★399781	Seal-Oil (PTO Side)				32A	695759	Screw (Connecting Rod) (Used After Code Date 00042200).
20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)				33	499642	Valve-Exhaust
22	691092	Screw (Crankcase Cover/Sump)				34	499641	Valve-Intake
23	696569	Flywheel ----- Note ----- 692693 Flywheel Used on Type No(s). 0016, 0030, 0061, 0117, 0119, 0120, 0135, 0142, 0149, 0152, 0160, 0172, 0174, 0183, 0186, 0187, 0189, 0193, 0194, 0197, 0198, 0200, 0201, 0202, 0206, 0207, 0209, 0211, 0217, 0218, 0220, 0222, 0242, 0253, 0254, 0260, 0261, 0262, 0266, 0275, 0281, 0289, 0293, 0296, 0298, 0302, 0303, 0313, 0314, 0316, 0317, 0318, 0327, 0330, 0334, 0335, 0348, 0350, 0354, 0357, 0369, 0379, 0383, 0384, 0386, 0387, 0388, 0389, 0505, 0561, 0562. 692987 Flywheel Used on Type No(s). 0045, 0188, 0235, 0545. 697271 Flywheel Used on Type No(s). 0288, 0295, 0323, 0325, 0329, 0345, 0347. 697637 Flywheel Used on Type No(s). 0147, 0324, 0333, 0343, 0351, 0365, 0372, 0373, 0382. 699488 Flywheel Used on Type No(s). 0393.	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030800). 692785 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 05030700). 692786 Ring Set (.020" Oversize) (Used Before Code Date 05030800). 692787 Ring Set (.030" Oversize)	45	690977	Tappet-Valve
						46	694039	Camshaft (Used After Code Date 99030700). ----- Note ----- 694035 Camshaft (Used Before Code Date 99030800). ----- Note ----- 694040 Camshaft (Used After Code Date 99030700). Used on Type No(s). 0270.
			27	691866	Lock-Piston Pin	46A	694038	Camshaft (Clockwise) (Used After Code Date 99030700). ----- Note ----- 694034 Camshaft (Clockwise) (Used Before Code Date 99030800). 694037 Camshaft (Counterclockwise) (Used After Code Date 99030700). 694033 Camshaft (Counterclockwise) (Used Before Code Date 99030800).
			28	499423	Pin-Piston			
			29	499424	Rod-Connecting			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 ★♦♦	692668	Gasket-Intake	117	498981	Jet-Main (Standard) (Used After Code Date 03110600). ----- Note -----	125	790120	Carburetor (Primer System)
55	691421	Housing-Rewind Starter				125B	698056	Carburetor (Choke System) (Used After Code Date 02051200). Used on Type No(s). 0149,0152,0160,0161, 0162,0197,0199,0200, 0201,0202,0211,0220, 0243,0247,0259,0265, 0293,0296,0311,0314, 0327,0348,0369,0372, 0373,0379,0383,0389, 0393.
58	697316	Rope-Starter (Cut To Required Length)			498978 Jet-Main (Standard) (Used After Code Date 99030700 and Before Code Date 03110700). 692677 Jet-Main (Standard) (Used Before Code Date 99030800).			----- Note ----- 694205 Carburetor (Choke System) (Used Before Code Date 02051300). Used on Type No(s). 0149,0197,0199,0200, 0201,0202,0211,0220, 0247,0259,0265,0293, 0296,0311,0314,0327.
59	396892	Insert-Grip						698055 Carburetor (Choke System) (Used After Code Date 02050500). Used on Type No(s). 0016,0030,0045,0142, 0183,0188,0189,0194, 0198,0206,0222,0235, 0275,0301,0313,0324, 0350,0351,0386.
60	281434	Grip-Starter Rope						694203 Carburetor (Choke System) (Used Before Code Date 02050600). Used on Type No(s). 0016,0030,0045,0142, 0183,0188,0189,0194, 0198,0206,0222,0227, 0235,0275,0301,0313, 0324.
60A	393152	Grip-Starter Rope						697914 Carburetor (Choke System) Used on Type No(s). 0147, 0152, 0207, 0262, 0298, 0303, 0317, 0318, 0343.
65	690837	Screw (Rewind Starter)						
73	691221	Screen-Rotating						
78	691108	Screw (Flywheel Guard)						
83	691778	Shaft-Auxiliary Drive ----- Note ----- 690522 Shaft-Auxiliary Drive Used on Type No(s). 0147, 0150, 0153, 0158, 0343, 0371. 690527 Shaft-Auxiliary Drive Used on Type No(s). 0122, 0241.	117A	694250	Jet-Main (Standard) (Used After Code Date 02050500). ----- Note ----- 498978 Jet-Main (Standard) (Used Before Code Date 02050600).			
			118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet-Main (High Altitude) (Used After Code Date 99030700 and Before Code Date 03110700). 497315 Jet-Main (High Altitude) (Used Before Code Date 99030800).			
95	691636	Screw (Throttle Valve)						
97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)						
98	398185	Kit-Idle Speed						
101	691623	Pin-Shaft						
104	♦ 691242	Pin-Float Hinge						
108	691182	Valve-Choke (Used After Code Date 97080300). ----- Note ----- 224783 Valve-Choke (Used Before Code Date 97080400). Used on Type No(s). 0152.	118A	497466	Jet-Main (High Altitude) (Used After Code Date 02050500). ----- Note ----- 498975 Jet-Main (High Altitude) (Used Before Code Date 02050600).			
109	499779	Shaft-Choke						
109A	499681	Shaft-Choke	121	692703	Kit-Carburetor Overhaul			
			122 ♦♦♦	692799	Spacer-Carburetor			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2143-11

Assemblies include all parts shown in frames.

10/11/2005

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
127	●694468	Plug–Welch	209A	690319	Spring–Governor			692906 Spring–Governor
127A	●691739	Plug–Welch			----- Note -----			Used on Type No(s).
130	691203	Valve–Throttle			691290 Spring–Governor			0149, 0160, 0161, 0162, 0197, 0199, 0200, 0211, 0247, 0259, 0261, 0262, 0265, 0293, 0296, 0303, 0314, 0318, 0327, 0379, 0383, 0393.
		----- Note -----			Used on Type No(s).			692433 Spring–Governor
		696564 Valve–Throttle (Used With Plastic Throttle Shaft)			0016, 0030, 0142, 0183, 0189, 0193, 0194, 0198, 0206, 0215, 0219, 0222, 0275, 0289, 0295, 0301, 0306, 0324, 0359, 0360, 0386.			Used on Type No(s).
130A	691181	Valve–Throttle			691291 Spring–Governor			0201, 0202, 0220, 0311, 0365, 0369, 0373, 0389.
		----- Note -----			Used on Type No(s).			693031 Spring–Governor
		691203 Valve–Throttle			0019, 0133, 0137, 0154, 0155, 0158, 0167, 0168, 0169, 0173, 0174, 0204, 0205, 0217, 0218, 0221, 0228, 0253, 0254, 0255, 0269, 0270, 0271, 0273, 0291, 0292, 0297, 0320, 0336, 0350, 0351, 0370, 0527, 0528, 0529.			Used on Type No(s).
		Used on Type No(s).			691851 Spring–Governor			0147, 0152, 0207, 0298, 0317, 0318, 0343, 0348, 0372.
		0016, 0030, 0045, 0142, 0183, 0188, 0189, 0194, 0198, 0206, 0222, 0235, 0275, 0301.			Used on Type No(s).			693032 Spring–Governor
133	398187	Float–Carburetor			0015, 0018, 0021, 0022, 0023, 0025, 0026, 0050, 0051, 0058, 0060, 0061, 0100, 0105, 0112, 0115, 0117, 0118, 0121, 0122, 0127, 0137, 0172, 0175, 0190, 0191, 0195, 0240, 0241, 0265, 0279, 0286, 0288, 0331, 0332, 0338, 0339, 0340, 0349, 0358, 0363, 0371, 0376, 0392, 0393, 0505, 0515, 0521, 0522, 0525, 0526, 0530, 0550, 0551, 0560, 0561, 0562, 0615, 0621, 0622, 0625, 0662, 0665.			Used on Type No(s).
134	●398188	Kit–Needle/Seat						0045, 0188, 0545.
137	●693981	Gasket–Float Bowl						691292 Spring–Governor
146	690979	Key–Timing						Used on Type No(s).
163	♦♦691894	Gasket–Air Cleaner						0302, 0315, 0316, 0320, 0322, 0328, 0329, 0330, 0375, 0377, 0384, 0467.
163A	♦♦692667	Gasket–Air Cleaner						791156 Spring–Governor
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000).						Used on Type No(s).
		----- Note -----						0235.
		691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).						211 692434 Spring–Governed Idle
188	693168	Screw (Control Bracket)						217 690354 Spring–Choke Return
190	690940	Screw (Fuel Tank)						
192	694543	Adjuster–Rocker Arm						
202	691303	Link–Mechanical Governor						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222C	692618	Bracket-Control ----- Note ----- 692617 Bracket-Control Used on Type No(s). 0018, 0023, 0100, 0101, 0105, 0115, 0118, 0121, 0122, 0127, 0136, 0155, 0163, 0165, 0166, 0168, 0171, 0175, 0189, 0190, 0191, 0195, 0221, 0227, 0240, 0241, 0249, 0251, 0256, 0263, 0270, 0271, 0283, 0286, 0291, 0297, 0301, 0305, 0307, 0315, 0319, 0320, 0321, 0328, 0331, 0332, 0336, 0344, 0346, 0349, 0350, 0351, 0355, 0358, 0374, 0375, 0385, 0392, 0467, 0555.	227	691467	Lever-Governor Control	304	499677	Housing-Blower ----- Note ----- 499676 Housing-Blower Used on Type No(s). 0016, 0030, 0117, 0119, 0120, 0133, 0135, 0137, 0142, 0147, 0149, 0150, 0152, 0153, 0154, 0167, 0169, 0172, 0173, 0174, 0182, 0183, 0186, 0187, 0188, 0189, 0193, 0194, 0197, 0198, 0200, 0201, 0202, 0204, 0205, 0206, 0207, 0209, 0211, 0217, 0218, 0235, 0242, 0253, 0254, 0255, 0260, 0262, 0266, 0281, 0289, 0293, 0296, 0298, 0302, 0303, 0308, 0311, 0313, 0314, 0316, 0317, 0318, 0324, 0327, 0330, 0333, 0334, 0335, 0343, 0348, 0350, 0351, 0360, 0369, 0372, 0373, 0379, 0382, 0383, 0384, 0386, 0387, 0388, 0389, 0390, 0393, 0505, 0561, 0562. 695976 Housing-Blower Used on Type No(s). 0100, 0112, 0127, 0279, 0291, 0297, 0307, 0331, 0332, 0338, 0346, 0358, 0370, 0377, 0392, 0467, 0528, 0529, 0555. 697270 Housing-Blower Used on Type No(s). 0288, 0295, 0323, 0325, 0329, 0345, 0347.
222E	692723	Bracket-Control	236	691826	Link-Lockout			
222G	692615	Bracket-Control ----- Note ----- 692616 Bracket-Control Used on Type No(s). 0147, 0152, 0207, 0262, 0298, 0303, 0317, 0318, 0343. 692722 Bracket-Control Used on Type No(s). 0161, 0162, 0199, 0201, 0202, 0247, 0259, 0264, 0265, 0311, 0314, 0348, 0372.	238	691300	Cap-Valve			
			240	298090	Filter-Fuel			
			259	691189	Bracket-Casing Clamp			
			265	690798	Clamp-Casing			
			265A	691024	Clamp-Casing			
			267	691044	Screw (Casing Clamp)			
			268	691072	Casing-Control Wire (Cut To Required Length)			
			269	691026	Wire-Control (Cut To Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever-Control			
			276	271716	Washer-Sealing			
			287	690940	Screw (Dipstick Tube)			
			300	692275	Muffler (Super Quiet Lo Tone)			
			300A	692276	Muffler (Quiet Lo Tone)			
			300B	699769	Muffler (Square Lo Tone)			
			300C	694248	Muffler (Super Quiet Power Lo Tone)			
222J	697614	Bracket-Control						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***2143-13**

Assemblies include all parts shown in frames.

10/11/2005

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	456	692299	Plate-Pawl Friction	604A	693807	Cover-Control
306	691232	Shield-Cylinder	459	281505	Ratchet-Pawl			----- Note -----
307	690345	Screw (Cylinder Shield)	472	693809	Knob-Choke Shaft			692669 Cover-Control
309	695550	Motor-Starter	474	691991	Alternator			Used on Type No(s). 0137.
310	692327	Bolt (Starter Motor)			----- Note -----	608	497680	Starter-Rewind
332	690662	Nut (Flywheel)			695730 Alternator	613	691108	Screw (Muffler)
333	802574	Armature-Magneto			Used on Type No(s). 0147, 0324, 0333, 0343, 0351, 0365, 0372, 0373, 0382.	613A	691140	Screw (Muffler)
334	691061	Screw (Magneto Armature)	493	692877	Bracket-Mounting	615	690340	Retainer-Governor Shaft
337	692051	Plug-Spark (Resistor)	505	691251	Nut (Governor Control Lever)	616	698801	Crank-Governor
		----- Note -----	510	494147	Drive-Starter	619	691108	Screw (Cylinder Head Plate)
		692720 Plug-Spark	513	692358	Clutch-Drive	621	692310	Switch-Stop
		(EMS)	523	499621	Dipstick	633	◆+693867	Seal-Choke/Throttle Shaft
341	690368	Stud (Mounting Bracket)	524	★692296	Seal-Dipstick Tube			(Choke Shaft)
346	690661	Screw (Spark Arrestor)	525	495265	Tube-Dipstick	633A	◆+691321	Seal-Choke/Throttle Shaft
347	691396	Switch-Rocker	529	692937	Grommet			(Throttle Shaft)
356	692390	Wire-Stop	532	692851	Nut (Mounting Bracket)	635	66538	Boot-Spark Plug
356A	499690	Wire-Stop	544	690786	Armature-Starter	635A	692927	Boot-Spark Plug
356B	692151	Wire-Stop	545	492919	Washer Set (Starter Motor)	651	691660	Screw (Starter Gear Cover)
356C	693010	Wire-Stop	562	691119	Bolt (Governor Control Lever)	670	692294	Spacer-Fuel Tank
356D	691418	Wire-Stop				676	397931	Deflector-Muffler (Direct Out)
357	692191	Key-Drive Pulley	564A	693808	Screw (Control Cover)			(3/4" Diameter)
358	694090	Gasket Set-Engine	578	398153	Wire Assembly	676A	393756	Deflector-Muffler (Flanged Side Out)
363	19069	Puller-Flywheel	584	697734	Cover-Breather Passage			----- Note -----
365	691136	Screw (Carburetor)	585	★691879	Gasket-Breather Passage			393760 Deflector- Muffler
374	691074	Washer (Camshaft)	592	690800	Nut (Rewind Starter)			(Side Out)
383	19374	Wrench-Spark Plug	597	691696	Screw (Pawl Friction Plate)			Used on Type No(s). 0317, 0318, 0348, 0372.
404	690272	Washer (Governor Crank)	601	95162	Clamp-Hose (Green)	676B	396548	Deflector-Muffler (Single Louver)
425A	690244	Screw (Air Cleaner Cover)	601A	691038	Clamp-Hose (Black)	676C	497682	Deflector-Muffler (Direct Out)
443B	690255	Screw (Air Cleaner Primer Base)						(1 3/16" Diameter)
445A	697029	Filter-Air Cleaner Cartridge				676D	697915	Deflector-Muffler (Square Lo Tone)
455	695161	Cup-Flywheel						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2143-14

Assemblies include all parts shown in frames.

10/11/2005

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
677	690661	Screw (Muffler Deflector)	789	696547	Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 691372 Harness-Wiring (Used Before Code Date 00040700). 696546 Harness-Wiring Used on Type No(s). 0298, 0303, 0311, 0314, 0324, 0343, 0351, 0365, 0372, 0373, 0562.	801	690782	Cap-Drive
684	690345	Screw (Breather Passage Cover)				802	695267	Cap-End (Used After Code Date 00040600). ----- Note ----- 695975 Cap-End (Used Before Code Date 00040700).
689	691855	Spring-Friction				803	695266	Housing-Starter (Used After Code Date 00040600). ----- Note ----- 695975 Housing-Starter (Used Before Code Date 00040700).
692	690572	Spring-Friction						
697	691127	Screw (Drive Cap)						
715	691147	Screw (Shaft Stop)						
718	690959	Pin-Locating						
721	690449	Stop-Shaft						
727	692934	Cover-Starter Drive						
737	692511	Screw (Oil Filter Adapter)						
741	790345	Gear-Timing (Use Without Woodruff Key) ----- Note ----- 691830 Gear-Timing (Uses Woodruff Key)	789A	696546	Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 690790 Harness-Wiring (Used Before Code Date 00040700). 696545 Harness-Wiring Used on Type No(s). 0302, 0330, 0333, 0334, 0382.	830	694544	Stud-Rocker Arm
742	93941	Retainer-E-Ring				832	691466	Guard-Muffler (Super Lo Tone)
743	690516	Gear-Drive (Clockwise) ----- Note ----- 691772 Gear-Drive (Counterclockwise) Used on Type No(s). 0112, 0122, 0147, 0150, 0158, 0160, 0161, 0162, 0205, 0236, 0241, 0251, 0328, 0343, 0375.				832A	692984	Guard Muffler (Quiet Lo Tone)
						832C	695593	Guard Muffler (Square Lo Tone)
745	691648	Screw (Brake)				836	691147	Screw (Muffler Guard)
750	691683	Screw (Oil Pump Cover)				836A	697551	Screw (Muffler Guard)
783	691918	Gear-Pinion (19 Teeth) (Starter Drive)	789B	695553	Harness-Wiring (Used After Code Date 00040300). Used on Type No(s). 0260. ----- Note ----- 694497 Harness-Wiring (Used Before Code Date 00040400). Used on Type No(s). 0260.	836B	692198	Screw (Muffler Guard)
783A	691269	Gear-Pinion (12 Teeth)				842	★691031	Seal-O Ring (Dipstick Tube)
784	692341	Cover-Starter Gear				843	691884	Sleeve-Lever
785	692352	Gasket-Starter Cover	789C	694498	Harness-Wiring Used on Type No(s). 0302, 0330, 0333, 0334, 0382.	847	692047	Dipstick/Tube Assembly
						851	493880	Terminal-Spark Plug
						853	695268	Adaptor-Wire ----- Note ----- 696842 Adapter-Wire Used on Type No(s). 0389, 0562, 0660, 0662.
						868	★△692044	Seal-Valve
						883	★△691893	Gasket-Exhaust

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2143-15

Assemblies include all parts shown in frames.

10/11/2005

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
886	696268	Gasket Kit-Cylinder Head/Plate	935	499421	Switch-Interlock	993	★△694088	Gasket-Cylinder Head Plate
910	691094	Stud (Alternator)	937	691325	Spline-Starter	994	692957	Arrestor-Spark
914	691108	Screw (Rocker Cover)	943	692514	Seal-O Ring (Oil Pump Cover)	994A	398067	Arrestor-Spark
921A	699633	Cover-Blower Housing	946	396526	Guide-Rope	1005	691346	Fan-Flywheel
922	691831	Spring-Brake	957	692046	Cap-Fuel Tank (Plastic)	1009	696255	Screw (Starter Motor)
		----- Note -----	957A	397974	Cap-Fuel Tank (Plastic)	1019	499691	Kit-Label
		692135 Spring-Brake Used on Type No(s). 0100, 0112, 0127, 0279, 0291, 0297, 0307, 0331, 0332, 0338, 0346, 0358, 0370, 0377, 0392, 0467, 0528, 0529, 0555.	957B	699985	Cap-Fuel Tank (Plastic)			----- Note -----
			958	698183	Valve-Fuel Shut-Off (Plastic)	790231		Kit-Label (Touch N Mow)
			965	692507	Cover-Oil Pump	1022	★△691890	Gasket-Rocker Cover
			966B	690243	Base-Air Cleaner Primer	1023	499624	Cover-Rocker
			967A	273356	Filter-Pre Cleaner	1024	692508	Pump-Oil
923	691994	Brake	968A	691342	Cover-Air Cleaner	1026	692045	Rod-Push
		----- Note -----	968B	692435	Cover-Air Cleaner	1027	692513	Filter-Oil
		695891 Brake Used on Type No(s). 0100, 0112, 0127, 0279, 0291, 0297, 0307, 0331, 0332, 0338, 0346, 0358, 0370, 0377, 0392, 0467, 0528, 0529, 0555.	969	691138	Screw (Blower Housing Cover)	1028	692516	Adapter-Oil Filter
						1029	691230	Arm-Rocker
925	690595	Cover-Linkage	972	699374	Tank-Fuel (Plastic)	1034	691343	Guide-Push Rod
930	691919	Guard-Rewind	972B	699387	Tank-Fuel (Plastic)	1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)
		----- Note -----			Used on Type No(s). 0288, 0295, 0323, 0325, 0329, 0345, 0347.	1055	692623	Tube-Oil Pump
		499679 Guard-Rewind Used on Type No(s). 0298, 0303, 0324, 0365.	975	493640	Bowl-Float	1058	276348	Owner's Manual
930A	692675	Guard-Rewind	976	694395	Primer-Carburetor			----- Note -----
			977	692704	Gasket Set-Carburetor			276347 Owner's Manual (Touch N Mow)
			988	692515	Gasket-Oil Adapter	1059	692311	Kit-Screw/Washer
			990	695951	Key Set (Touch N Mow)			----- Note -----
						1095	694091	Gasket Set-Valve
								696293 Kit-Screw/Washer (Touch N Mow)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1102	691255	Pilot-Guide Used on Type No(s). 0045, 0189, 0235, 0313, 0545.	1119	692979	Screw (Alternator) ----- Note ----- 691183 Screw (Alternator) Used on Type No(s). 0324, 0333, 0343, 0351, 0365, 0372, 0373.	1160	691627	Screw (Interlock Switch)
1102A	691266	Pilot-Guide Used on Type No(s). 0030, 0142, 0188.				1210	498144	Pulley/Spring Assembly (Pulley)
						1211	498144	Pulley/Spring Assembly (Spring)
						1236	695959	Starter-Mechanical
						1330	272147	Manual-Repair

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**2143-17**

Assemblies include all parts shown in frames.

10/11/2005