



**122100**

# Illustrated Parts List

## Model Series

# 122100

TYPE NUMBERS  
0110.

### TABLE OF CONTENTS


<b>Air Cleaner</b> .....	5
<b>Blower Housing</b> .....	6
<b>Camshaft</b> .....	2
<b>Carburetor</b> .....	4
<b>Controls</b> .....	5
<b>Crankcase Cover</b> .....	2
<b>Crankshaft</b> .....	2
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	3
<b>Exhaust System</b> .....	5
<b>Flywheel</b> .....	6
<b>Fuel Supply</b> .....	4
<b>Governor Spring</b> .....	5
<b>Ignition</b> .....	5
<b>Kits/Gaskets - Carburetor</b> .....	4
<b>Kits/Gaskets - Engine</b> .....	2
<b>Kits/Gaskets - Valve</b> .....	3
<b>Lubrication</b> .....	2
<b>Piston Group</b> .....	2
<b>Rewind Starter</b> .....	6











PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





# 122100

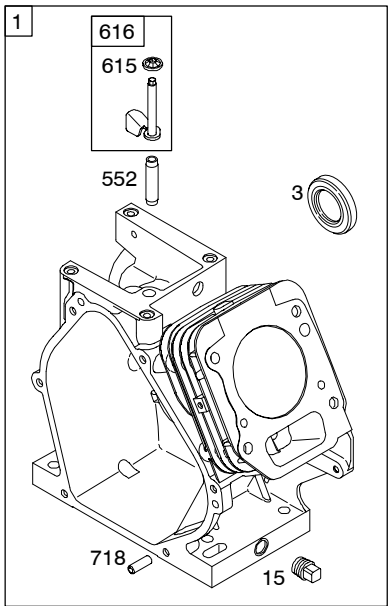

1019 LABEL KIT  
1058 OWNER'S MANUAL  
1330 REPAIR MANUAL

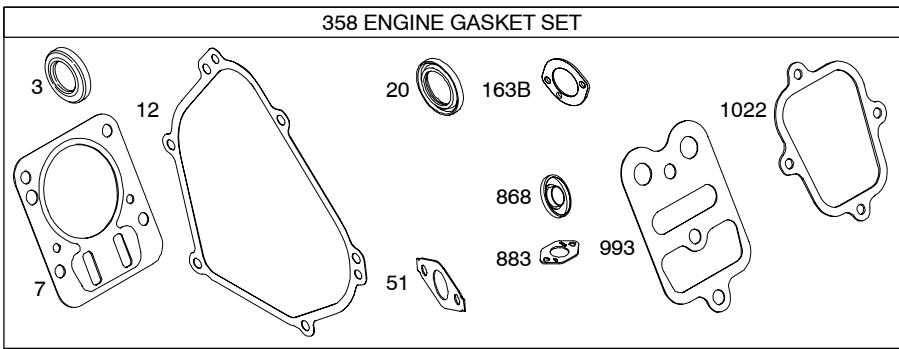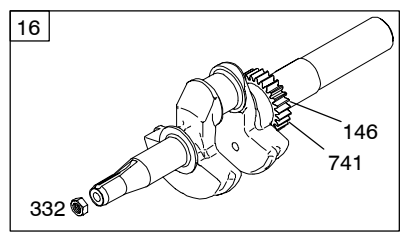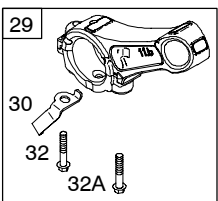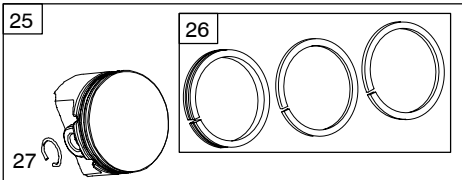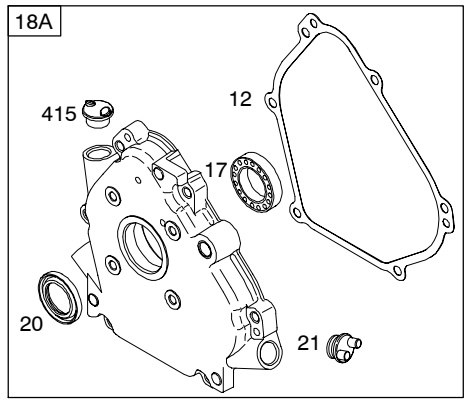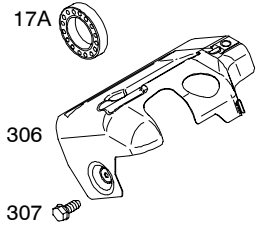






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
3375-2 Assemblies include all parts shown in frames. 11/03/2005

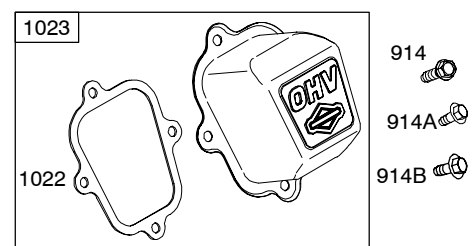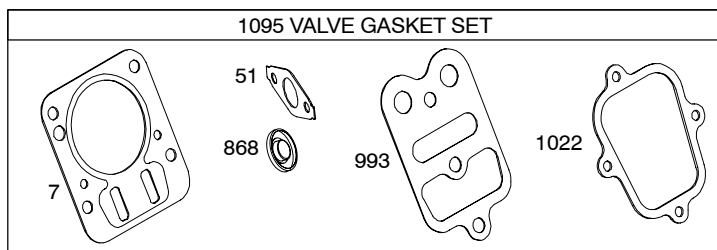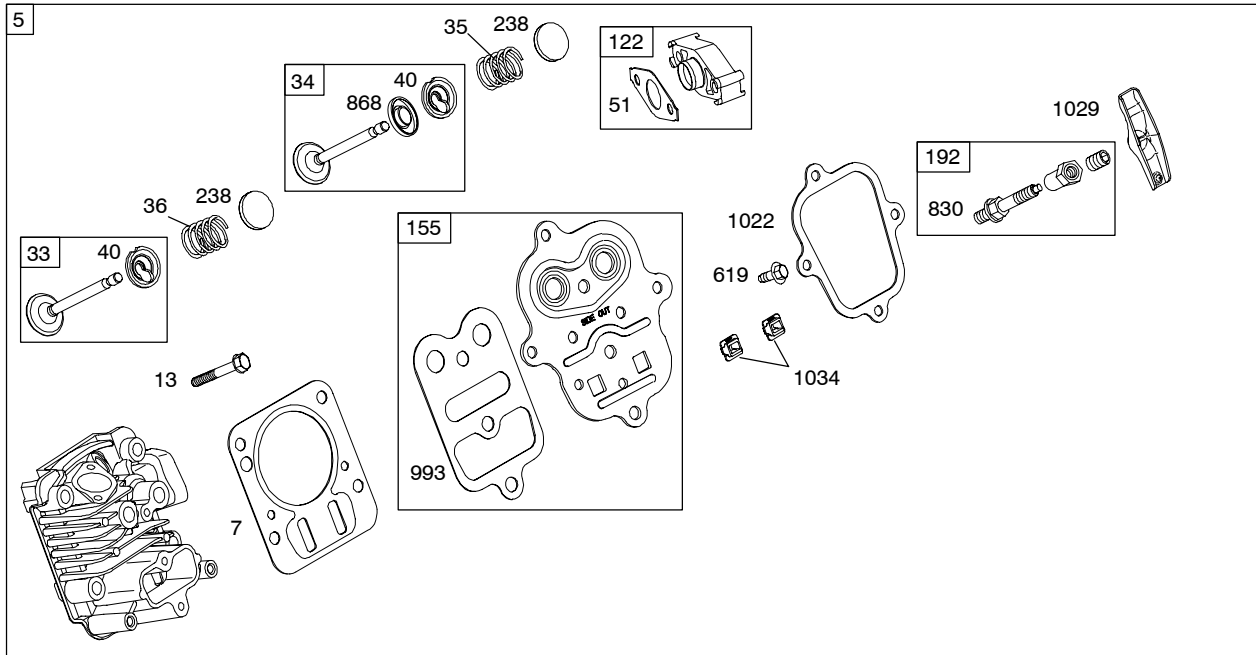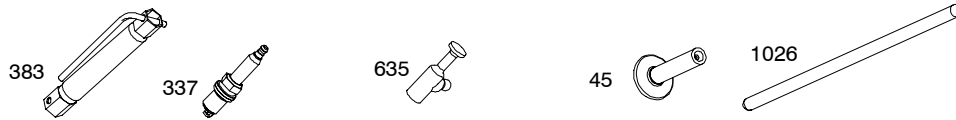



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3375-3 Assemblies include all parts shown in frames.

11/03/2005

# 122100

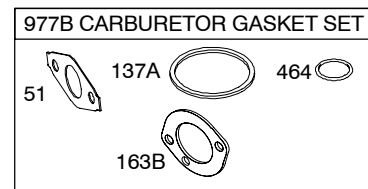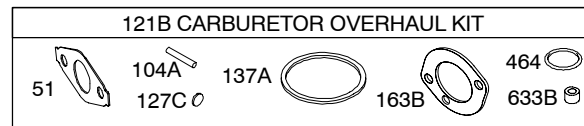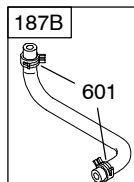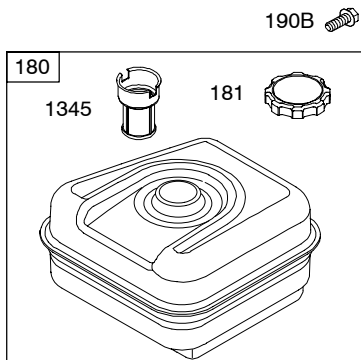
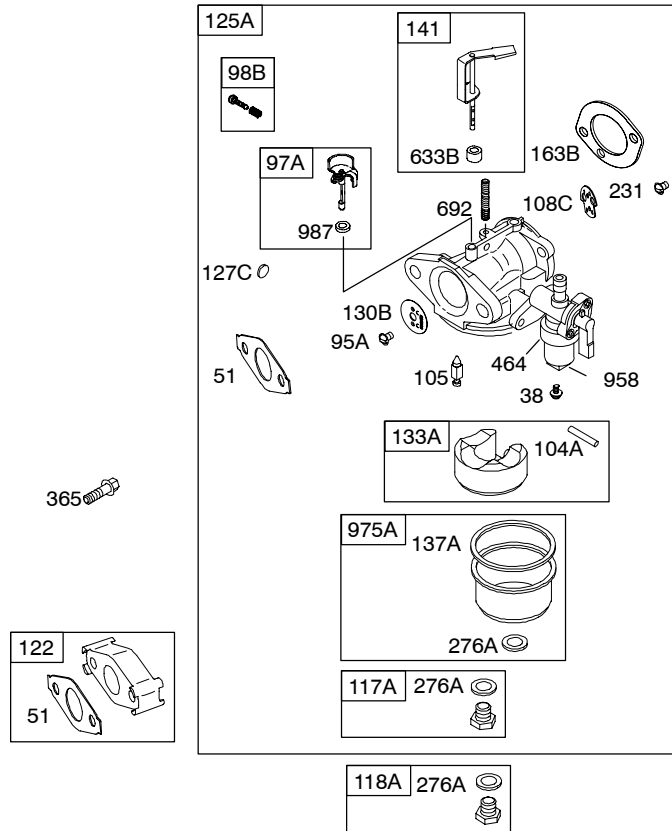


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

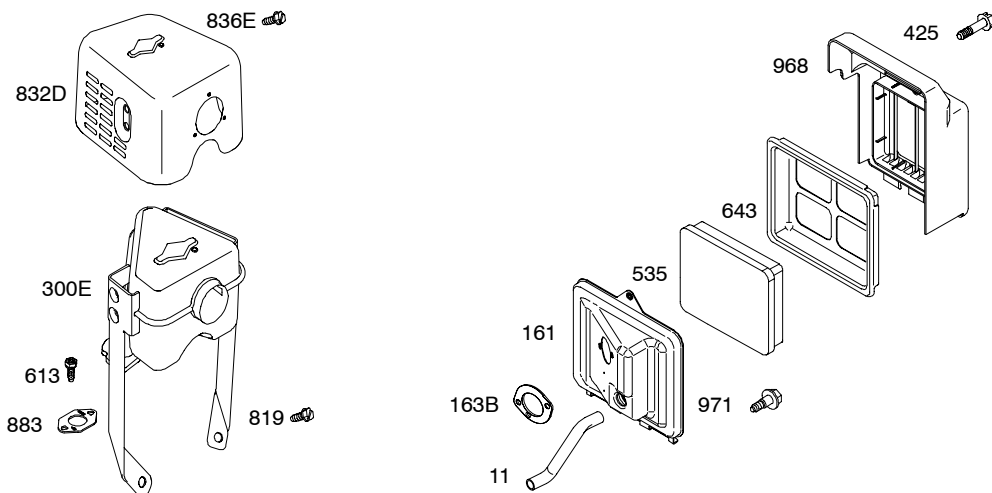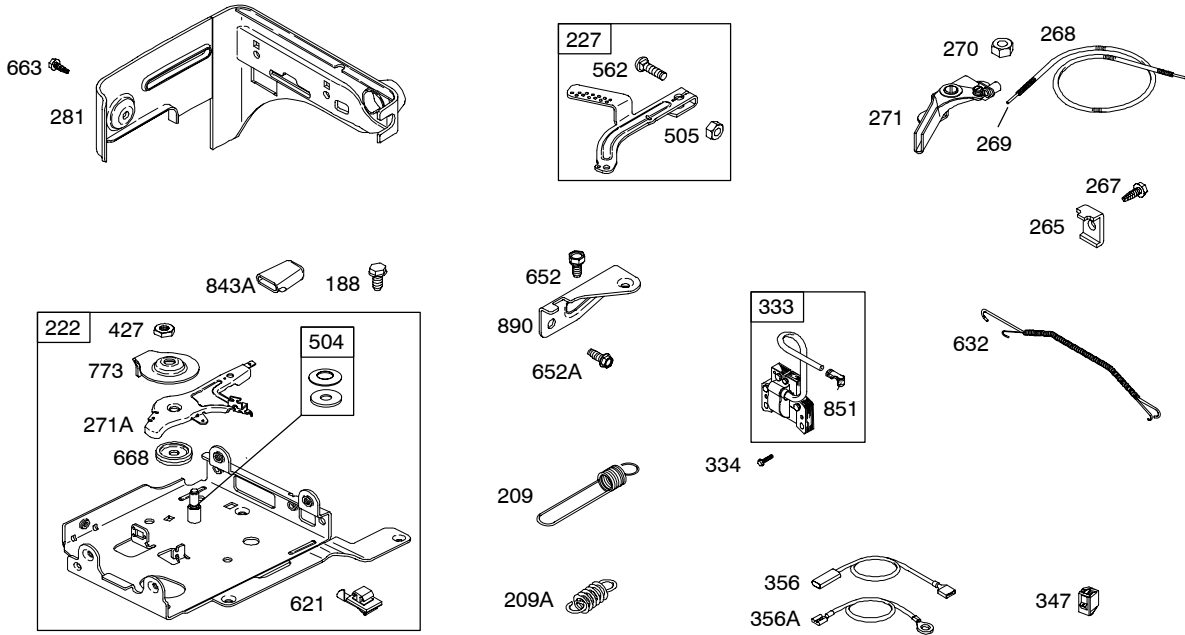


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 122100

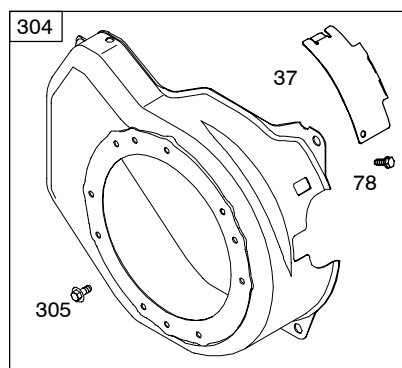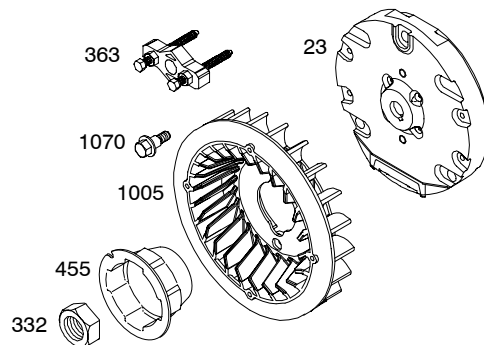

1036 EMISSION LABEL

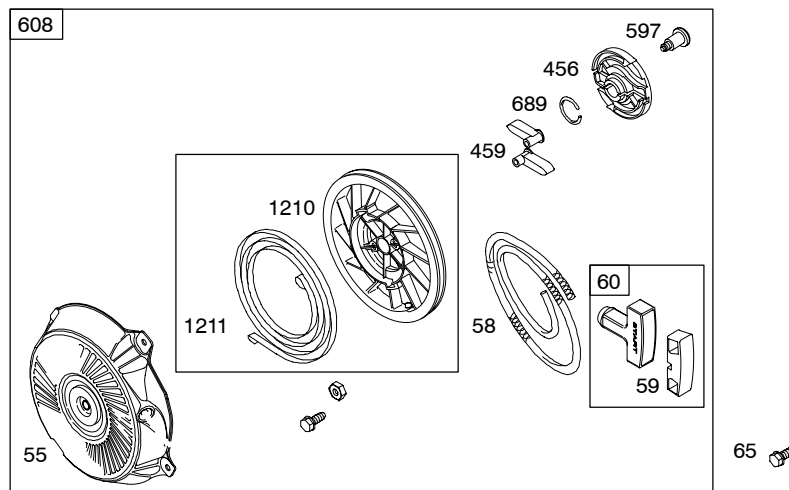

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

3375-6

Assemblies include all parts shown in frames.

11/03/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly	26	791969	Ring Set (Standard) (Used After Code Date 05093000).	60	490652	Grip-Starter Rope (2 Piece)
3	★299819S	Seal-Oil (Magneto Side)				65	699228	Screw (Rewind Starter)
5	699486	Head-Cylinder				78	699205	Screw (Flywheel Guard)
7	★∅698210	Gasket-Cylinder Head				95A	698544	Screw (Throttle Valve)
11	812208	Tube-Breather (Flat Panel Air Cleaner)				97A	698542	Shaft-Throttle
12	★699485	Gasket-Crankcase				98B	698551	Kit-Idle Speed
13	699482	Screw (Cylinder Head)				104A	●698536	Pin-Float Hinge
15	691686	Plug-Oil Drain (Square Head)				105	698537	Valve-Float Needle
15A	691682	Plug-Oil Drain (Flush)				108C	698546	Valve-Choke
16	699443	Crankshaft				117A	698670	Jet-Main (Standard)
17	692517	Bearing-Ball				118A	698552	Jet-Main (High Altitude)
17A	690824	Bearing-Ball	27	691866	Lock-Piston Pin	121B	698567	Kit-Carburetor Overhaul
18A	790337	Cover-Crankcase	28	499423	Pin-Piston			
20	★692550	Seal-Oil (PTO Side)	29	690124	Rod-Connecting	122	★●693749	Spacer-Carburetor
21	281658S	Cap-Oil Fill				125A	698535	Carburetor
22	699478	Screw (Crankcase Cover/Sump)				127C	●690727	Plug-Welch
23	699488	Flywheel				130B	698543	Valve-Throttle
24	222698S	Key-Flywheel	30	791584	Dipper-Connecting Rod	133A	698539	Float-Carburetor
25	792004	Piston Assembly (Standard) (Used After Code Date 05093000).	32	691664	Screw (Connecting Rod)	137A	●●698538	Gasket-Float Bowl
		----- Note -----	32A	695759	Screw (Connecting Rod)	141	698545	Kit-Choke Shaft
		499627 Piston Assembly (Standard) (Used Before Code Date 05100100).	33	499642	Valve-Exhaust	146	690979	Key-Timing
		791325 Piston Assembly (.020" Oversize) (Used After Code Date 05093000).	34	499641	Valve-Intake	155	★698214	Plate-Cylinder Head
		692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05100100).	35	691304	Spring-Valve (Intake)	161	699207	Base-Air Cleaner (Metal) (Flat Panel Air Cleaner)
			36	691304	Spring-Valve (Exhaust)	163B	★●●696024	Gasket-Air Cleaner (Flat Panel Air Cleaner)
			37	699661	Guard-Flywheel	180	791598	Tank-Fuel (Metal)
			38	698557	Screw (Shut Off Valve)	181	699840	Cap-Fuel Tank (Metal)
			40	692194	Retainer-Valve	187B	791874	Line-Fuel (Molded)
			45	690977	Tappet-Valve	188	699479	Screw (Control Bracket)
			46A	696813	Camshaft	190B	699839	Screw (Fuel Tank)
			51	★●●∅692555	Gasket-Intake	192	694543	Adjuster-Rocker Arm
			55	791848	Housing-Rewind Starter	209	692571	Spring-Governor
			58	66574	Rope-Starter (Cut to Required Length)	209A	691278	Spring-Governor
			59	490653	Grip-Insert	219	693578	Gear-Governor

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 122100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
220	691724	Washer (Governor Gear)	459	281505S	Pawl-Ratchet	836E	699491	Screw (Muffler Guard)
222	699589	Bracket-Control	464	◆698550	Seal-O Ring (Fuel Shut Off Valve)	843A	695588	Sleeve-Lever
227	692573	Lever-Governor Control	504	694254	Washer Set-Friction	851	493880S	Terminal-Spark Plug
231	690718	Screw (Choke Valve)	505	691251	Nut (Governor Control Lever)	868	★Ø692044	Seal-Valve
238	691300	Valve-Cap	522	697689	Plug-Dipstick/Fill	883	★691893	Gasket-Exhaust
265	691024	Clamp-Casing	535	696263	Filter-Air Cleaner Foam	890	790203	Bracket-Control
267	699492	Screw (Casing Clamp)	552	692346	Bushing-Governor Crank	914	699481	Screw (Rocker Cover) (Bottom)
268	691025	Casing-Control Wire (Cut to Required Length)	562	691119	Bolt (Governor Control Lever)	914A	692557	Screw (Rocker Cover) (Top)
269	691026	Wire-Control (Cut to Required Length)	597	691696	Screw (Pawl Friction Plate)	914B	697551	Screw (Rocker Cover) (Center)
270	691027	Nut (Control Wire Casing)	601	95162S	Clamp-Hose	958	698549	Valve-Fuel Shut Off (Plastic)
271	691028	Lever-Control	608	791670	Starter-Rewind	968	692584	Cover-Air Cleaner (Flat Panel)
271A	694256	Lever-Control	613	699209	Screw (Muffler)	971	690370	Screw (Air Cleaner Base To Carburetor)
276A	◆698540	Washer-Sealing	615	692576	Retainer-Governor Shaft	975A	698541	Bowl-Float
281	790261	Panel-Control	616	692547	Crank-Governor	977B	698568	Gasket Set-Carburetor
300E	791595	Muffler	619	699230	Screw (Cylinder Head Plate)	987	698556	Seal-Throttle Shaft
304	699598	Housing-Blower	621	692310	Switch-Stop	993	Ø694088	Gasket-Cylinder Head Plate
305	699480	Screw (Blower Housing)	632	693408	Spring/Link- Mechanical Governor	1005	692592	Fan-Flywheel
306	693610	Shield-Cylinder	633B	◆690998	Seal-Choke/Throttle Shaft	1019	694852	Kit-Label
307	699483	Screw (Cylinder Shield)	635	692927	Boot-Spark Plug	1022	★Ø691890	Gasket-Rocker Cover
332	699359	Nut (Flywheel)	643	696264	Retainer-Air Filter	1023	791585	Cover-Rocker Arm
333	695711	Armature-Magneto	652	699755	Screw (Support Bracket)	1026	790287	Rod-Push
334	699477	Screw (Magneto Armature)	652A	699230	Screw (Support Bracket)	1029	691230	Arm-Rocker
337	491055S	Plug-Spark	663	699206	Screw (Control Panel)	1034	691343	Guide-Push Rod
347	698338	Switch-Rocker	668	694257	Spacer	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
356	692602	Wire-Stop	689	691855	Spring-Friction	1058	276355	Owner's Manual
356A	695630	Wire-Stop	692	690572	Spring-Detent	1070	699201	Screw (Flywheel Fan)
358	699638	Gasket Set-Engine	718	690959	Pin-Locating	1095	698215	Gasket Set-Valve
363	19069	Puller-Flywheel	741	695087	Gear-Timing	1210	791849	Pulley/Spring Assembly (Pulley)
365	699484	Screw (Carburetor)	742	692564	Retainer-E Ring	1211	791849	Pulley/Spring Assembly (Spring)
383	19374S	Wrench-Spark Plug	746	692566	Gear-Idler	1330	272147	Repair Manual
415	693463	Plug	773	694258	Retainer	1345	699887	Filter-Filler Neck
425	699208	Screw (Air Cleaner Cover)	819	699233	Screw (Muffler Bracket)			
427	694255	Nut (Control Bracket)	830	694544	Stud-Rocker Arm			
455	692591	Cup-Flywheel	832D	791600	Guard-Muffler			
456	692299	Plate-Pawl Friction						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

3375-8

Assemblies include all parts shown in frames.

11/03/2005