



122300

Illustrated Parts List

Model Series

122300

TYPE NUMBERS
0111 through 0115.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Gear Reduction	6
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6

BRIGGS & STRATTON



PRINTED IN U.S.A.











COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

122300

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

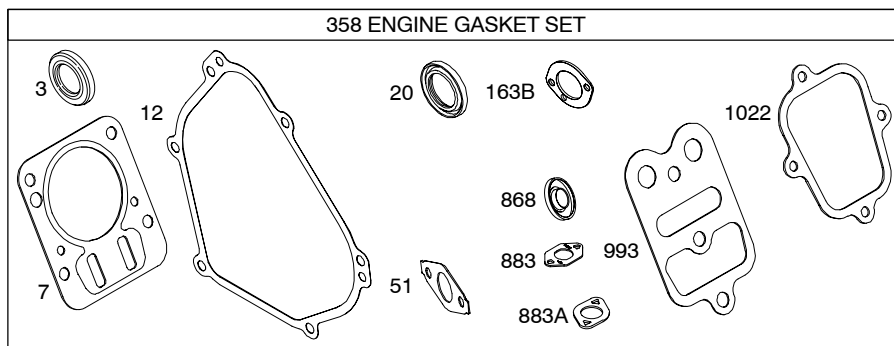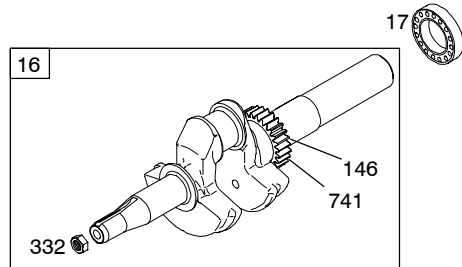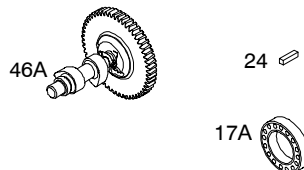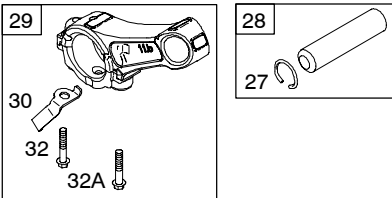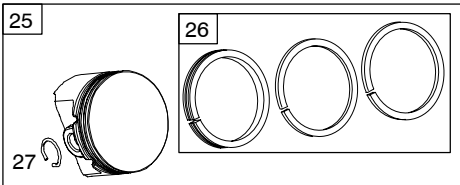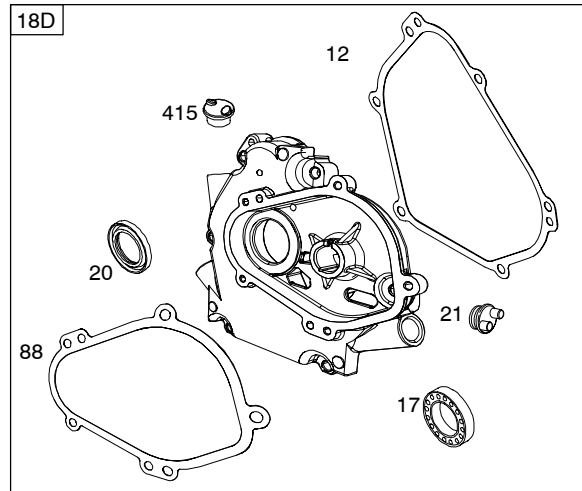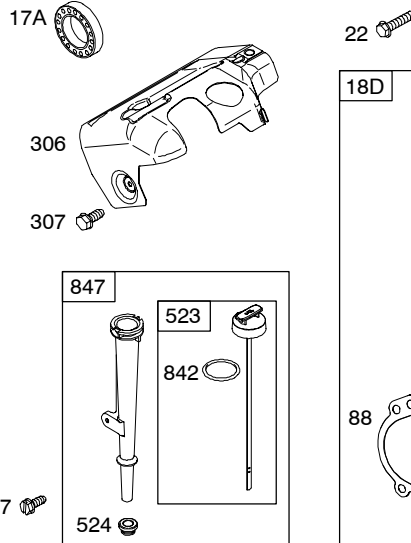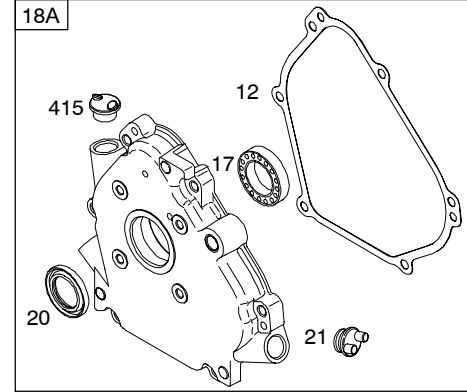
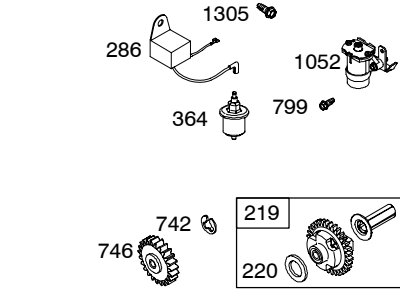
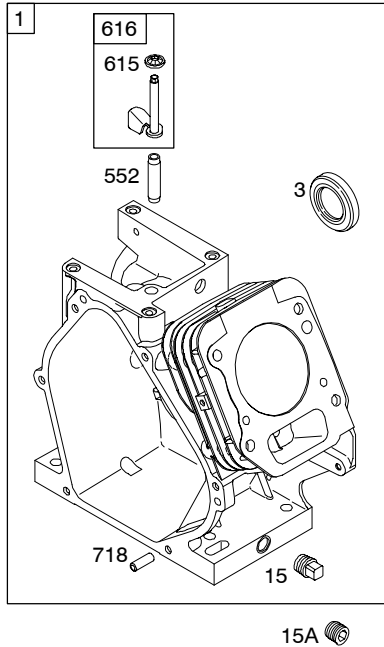


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-2

Assemblies include all parts shown in frames.

11/04/2005

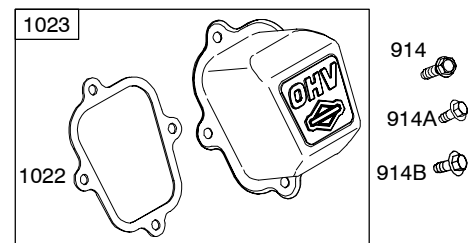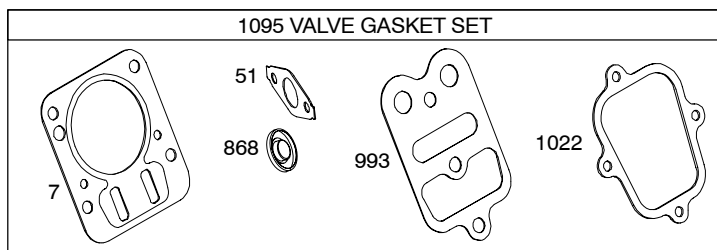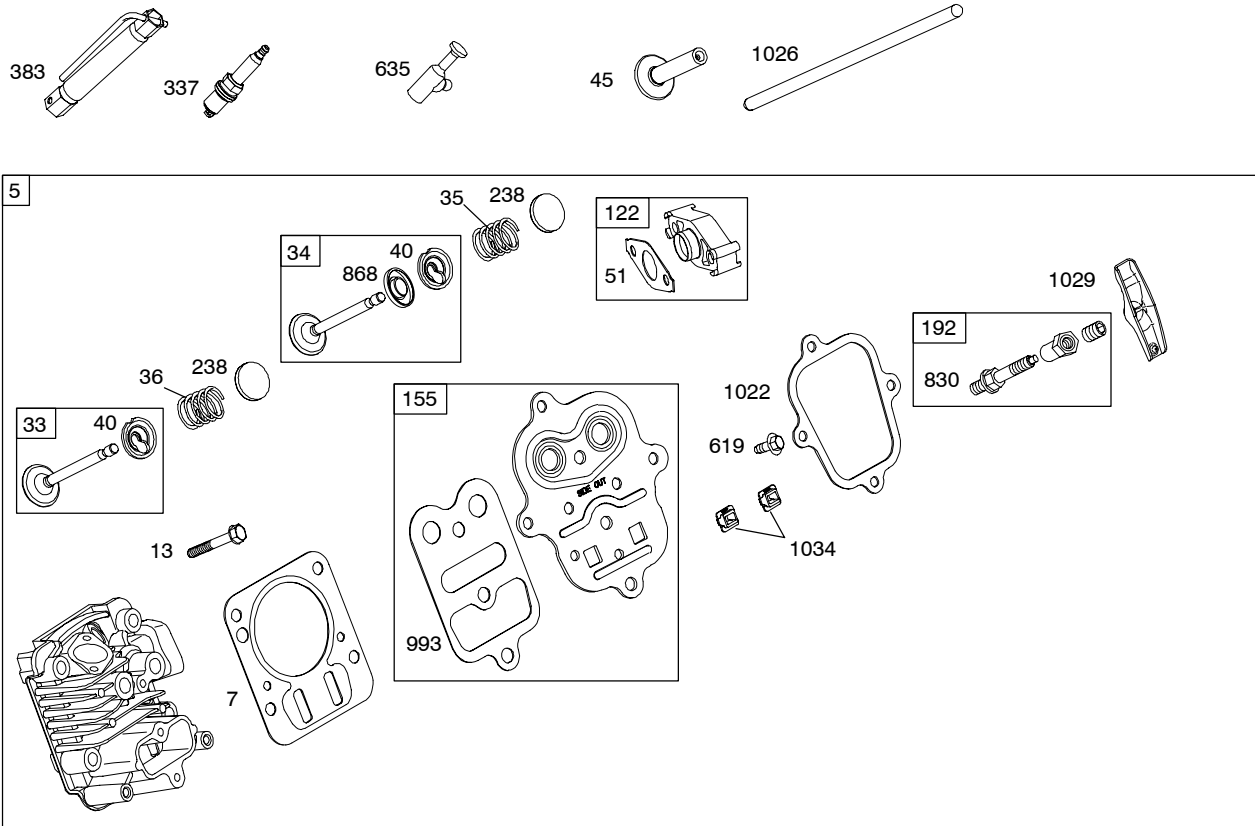



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-3

Assemblies include all parts shown in frames.

11/04/2005

122300

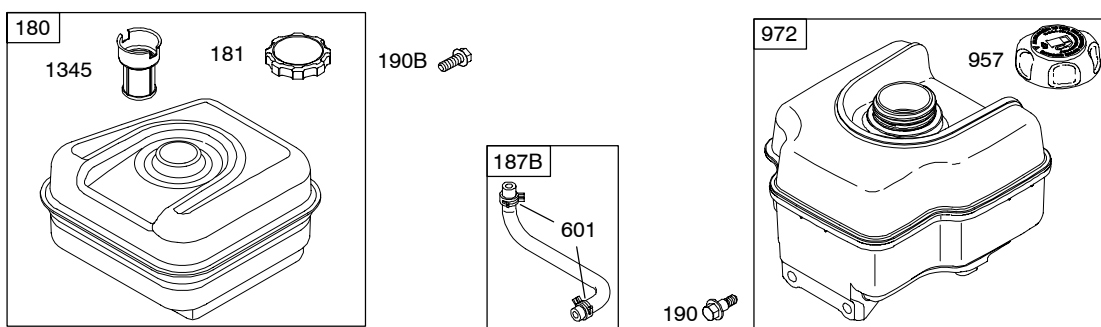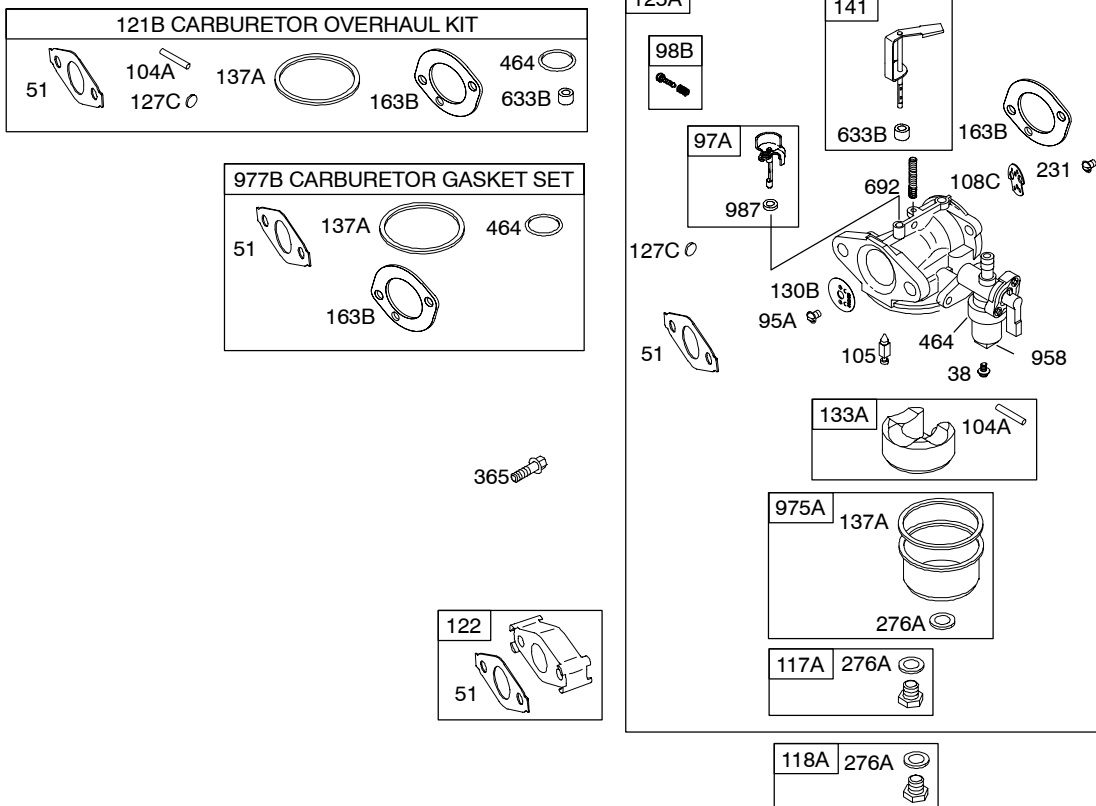


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-4

Assemblies include all parts shown in frames.

11/04/2005

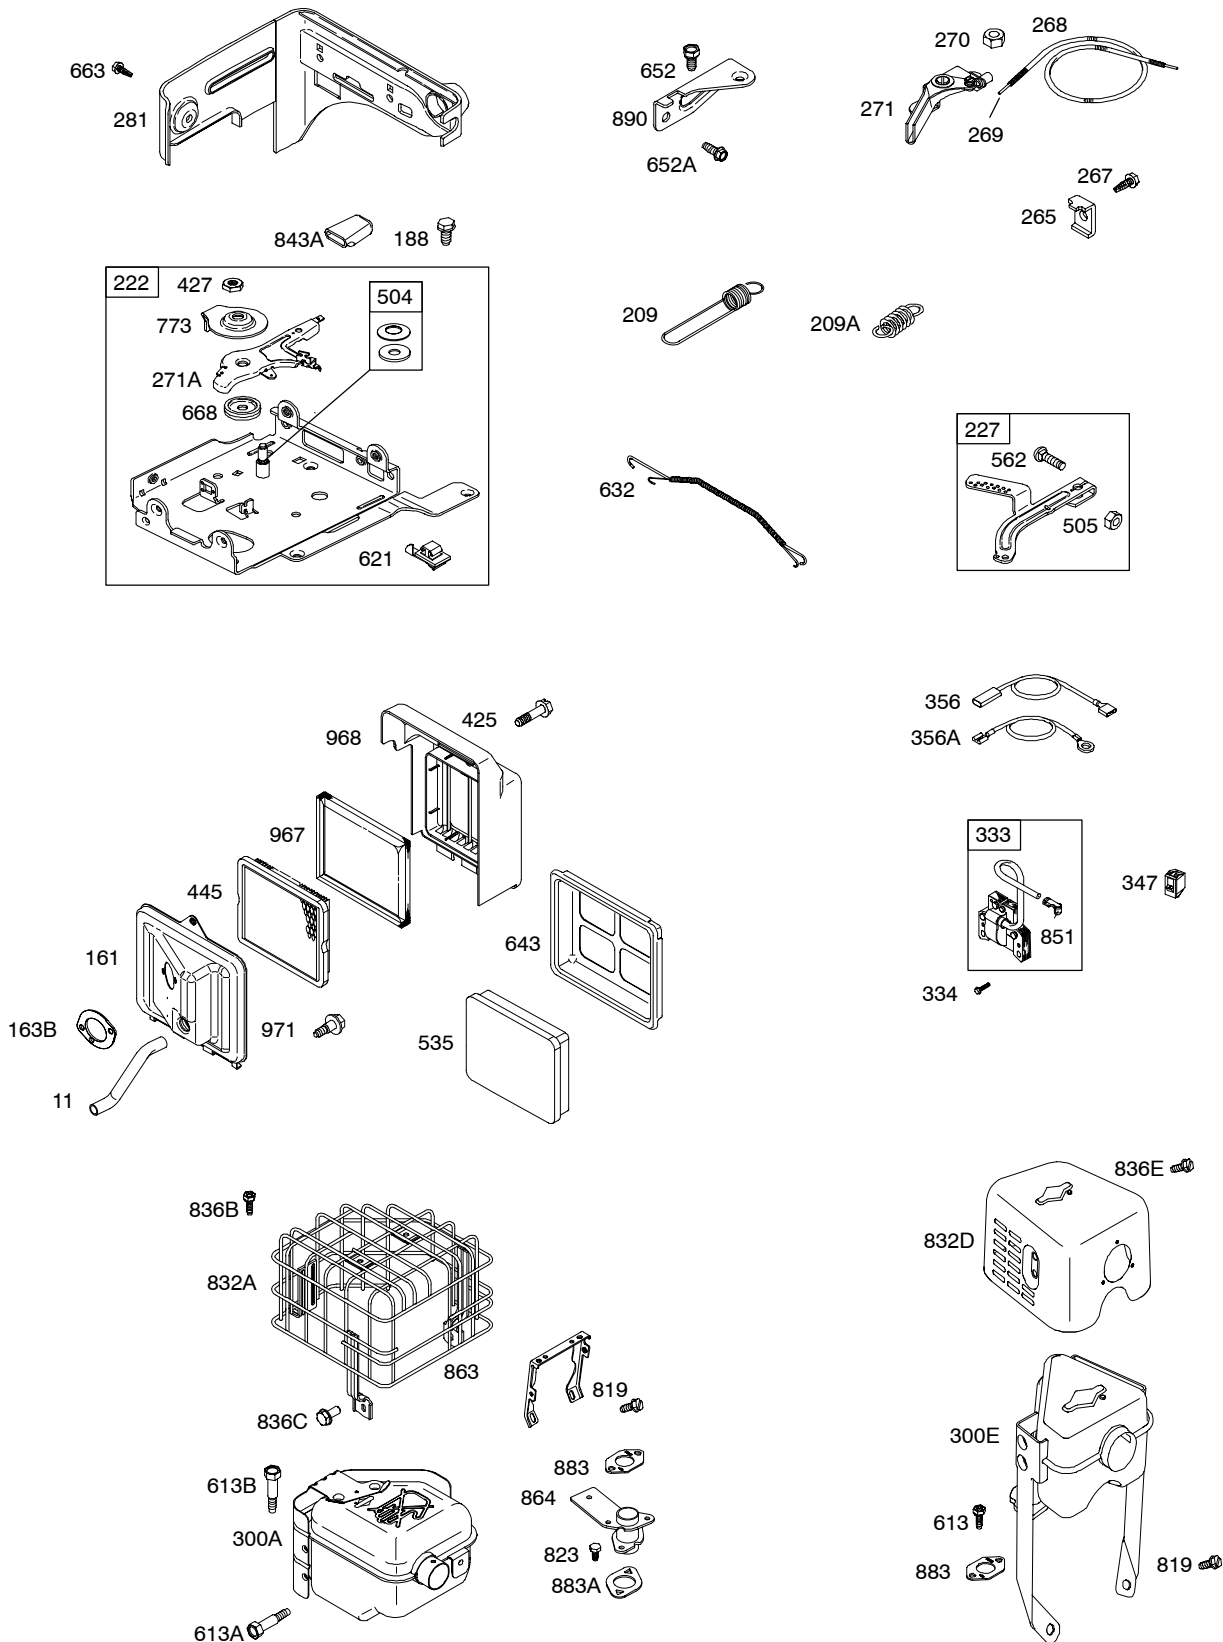




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-5



Assemblies include all parts shown in frames.

11/04/2005

122300

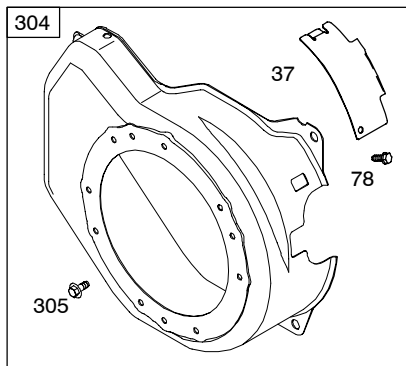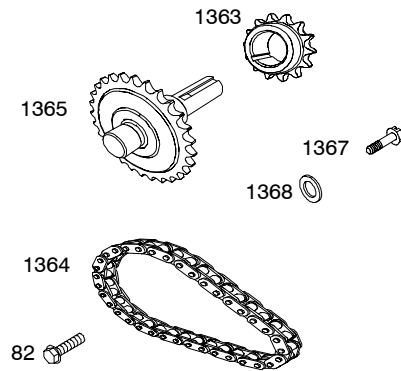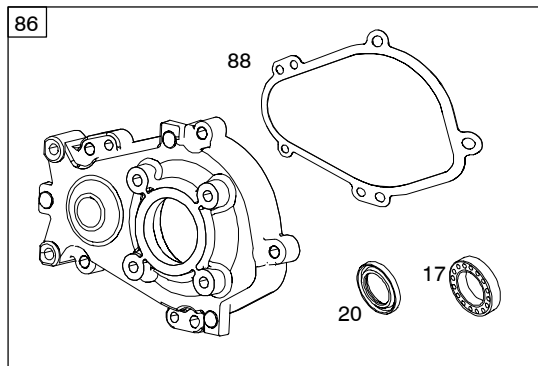

1036 EMISSION LABEL

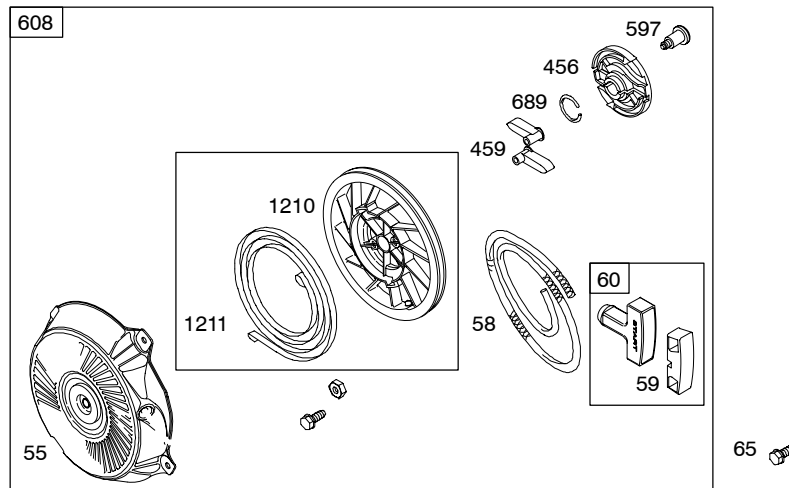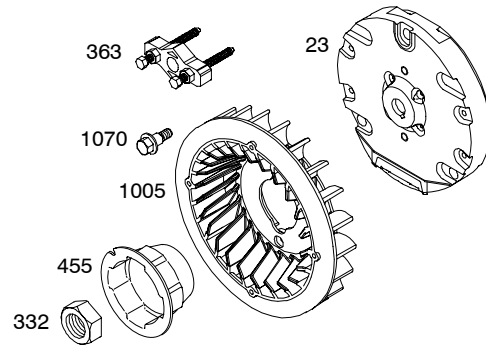

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-6

Assemblies include all parts shown in frames.

11/04/2005

122300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699490	Cylinder Assembly	25	792004	Piston Assembly (Standard) (Used After Code Date 05093000).	30	791584	Dipper-Connecting Rod
3	★299819S	Seal-Oil (Magnetoside)				32	691664	Screw (Connecting Rod)
5	699486	Head-Cylinder				32A	695759	Screw (Connecting Rod)
7	★Ø698210	Gasket-Cylinder Head			----- Note -----	33	499642	Valve-Exhaust
11	812208	Tube-Breather (Flat Panel Air Cleaner)			499627 Piston Assembly (Standard) (Used Before Code Date 05100100).	34	499641	Valve-Intake
12	★699485	Gasket-Crankcase			791325 Piston Assembly (.020" Oversize) (Used After Code Date 05093000).	35	691304	Spring-Valve (Intake)
13	699482	Screw (Cylinder Head)			692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05100100).	36	691304	Spring-Valve (Exhaust)
15	691686	Plug-Oil Drain (Square Head)			499631 Ring Set (Standard) (Used Before Code Date 05100100).	37	699661	Guard-Flywheel
15A	691682	Plug-Oil Drain (Flush)			791324 Ring Set (.020" Oversize) (Used After Code Date 05093000).	38	698557	Screw (Shut Off Valve)
16	699835	Crankshaft Used on Type No(s). 0112.	26	791969	Ring Set (Standard) (Used After Code Date 05093000).	40	692194	Retainer-Valve
		----- Note -----			----- Note -----	45	690977	Tappet-Valve
		699443 Crankshaft Used on Type No(s). 0111, 0115.			499631 Ring Set (Standard) (Used Before Code Date 05100100).	46A	696813	Camshaft
		790329 Crankshaft Used on Type No(s). 0113.			791324 Ring Set (.020" Oversize) (Used After Code Date 05093000).	51★◆Ø692555		Gasket-Intake
17	692517	Bearing-Ball			692786 Ring Set (.020" Oversize) (Used Before Code Date 05100100).	55	791848	Housing-Rewind Starter
17A	690824	Bearing-Ball			691866 Lock-Piston Pin	58	66574	Rope-Starter (Cut to Required Length)
18A	790337	Cover-Crankcase Used on Type No(s). 0111, 0112, 0115.	27	691866	Pin-Piston	59	490653	Grip-Insert
18D	790330	Cover-Crankcase Used on Type No(s). 0113.	28	499423	Rod-Connecting	60	490652	Grip-Starter Rope
20	★692550	Seal-Oil (PTO Side)	29	690124	----- Note -----	65	699228	Screw (Rewind Starter)
21	281658S	Cap-Oil Fill			792247 Rod-Connecting (.020" Undersize)	78	699205	Screw (Flywheel Guard)
22	699478	Screw (Crankcase Cover/Sump)				82	807421	Screw (Gear Reduction Case)
23	699488	Flywheel				86	790332	Cover-Gear
24	222698S	Key-Flywheel				88	790333	Gasket-Gear Reduction Cover
						95A	698544	Screw (Throttle Valve)
						97A	698542	Shaft-Throttle
						98B	698551	Kit-Idle Speed
						104A	◆698536	Pin-Float Hinge
						105	698537	Valve-Float Needle
						108C	698546	Valve-Choke

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***3378-7**

Assemblies include all parts shown in frames.

11/04/2005

122300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117A	698666	Jet–Main (Standard)	231	690718	Screw (Choke Valve)	347	698338	Switch–Rocker ----- Note -----
118A	698552	Jet–Main (High Altitude)	238	691300	Valve–Cap		697854	Switch–Rocker
121B	698567	Kit–Carburetor Overhaul	265	691024	Clamp–Casing			Used on Type No(s). 0111, 0115.
122	★693749	Spacer–Carburetor	267	699492	Screw (Casing Clamp)	356	692602	Wire–Stop
125A	698558	Carburetor	268	691025	Casing–Control Wire (Cut to Required Length)	356A	695630	Wire–Stop
127C	690727	Plug–Welch	269	691026	Wire–Control (Cut to Required Length)	358	699638	Gasket Set–Engine
130B	698543	Valve–Throttle	270	691027	Nut (Control Wire Casing)	363	19069	Puller–Flywheel
133A	698539	Float–Carburetor	271	691028	Lever–Control	364	695693	Terminal–Oil Plug
137A	◆698538	Gasket–Float Bowl	271A	694256	Lever–Control	365	699484	Screw (Carburetor)
141	698545	Kit–Choke Shaft	276A	◆698540	Washer–Sealing	383	19374S	Wrench–Spark Plug
146	790943	Key–Timing	281	790261	Panel–Control ----- Note -----	415	693463	Plug
155	★698214	Plate–Cylinder Head		699639	Panel–Control Used on Type No(s). 0115.	425	699208	Screw (Air Cleaner Cover)
161	699207	Base–Air Cleaner (Metal) (Flat Panel Air Cleaner)	286	698611	Module–Oil Sensor	427	694255	Nut (Control Bracket)
163B	★◆696024	Gasket–Air Cleaner (Flat Panel Air Cleaner)	287	699629	Screw (Dipstick Tube)	445	491588	Filter–Air Cleaner Cartridge (Flat Panel)
180	791598	Tank–Fuel (Metal)	300A	699231	Muffler	455	692591	Cup–Flywheel
181	699840	Cap–Fuel Tank (Metal)	300E	791595	Muffler	456	692299	Plate–Pawl Friction
187B	791874	Line–Fuel (Molded)	304	699598	Housing–Blower	459	281505	Pawl–Ratchet
188	699479	Screw (Control Bracket)	305	699480	Screw (Blower Housing)	464	◆698550	Seal–O Ring (Fuel Shut Off Valve)
190	699220	Screw (Fuel Tank)	306	693610	Shield–Cylinder	504	694254	Washer Set–Friction
190B	699839	Screw (Fuel Tank)	307	699483	Screw (Cylinder Shield)	505	691251	Nut (Governor Control Lever)
192	694543	Adjuster–Rocker Arm	332	699359	Nut (Flywheel)	523	693618	Dipstick
209	692571	Spring–Governor	333	695711	Armature–Magnet	524	281370S	Seal–Dipstick Tube
209A	691278	Spring–Governor	334	699477	Screw (Magnet Armature)	535	696263	Filter–Air Cleaner Foam
219	693578	Gear–Governor	337	491055S	Plug–Spark ----- Note -----	552	692346	Bushing–Governor Crank
220	691724	Washer (Governor Gear)		691043	Plug–Spark Used on Type No(s). 0115.	562	691119	Bolt (Governor Control Lever)
222	699589	Bracket–Control				597	691696	Screw (Pawl Friction Plate)
227	692573	Lever–Governor Control				601	95162S	Clamp–Hose
						608	791670	Starter–Rewind

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378–8

Assemblies include all parts shown in frames.

11/04/2005

122300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	699209	Screw (Muffler)	836B	699209	Screw (Muffler Guard)	987	698556	Seal-Throttle Shaft
613A	699230	Screw (Muffler)	836C	699234	Screw (Muffler Guard)	993	Ø694088	Gasket-Cylinder Head Plate
613B	697812	Screw (Muffler)	836E	699491	Screw (Muffler Guard)	1005	692592	Fan-Flywheel
615	692576	Retainer-Governor Shaft	842	691031	Seal-O Ring (Dipstick Tube)	1019	694852	Kit-Label
616	692547	Crank-Governor	843A	695588	Sleeve-Lever	1022	★Ø691890	Gasket-Rocker Cover
619	699230	Screw (Cylinder Head Plate)	847	693617	Dipstick/Tube Assembly	1023	791585	Cover-Rocker Arm
621	692310	Switch-Stop	851	493880S	Terminal-Spark Plug	1026	790287	Rod-Push
632	693408	Spring/Link-Mechanical Governor	863	699229	Bracket-Muffler	1029	691230	Arm-Rocker
633B	●690998	Seal-Choke/Throttle Shaft	864	699232	Adapter-Muffler	1034	691343	Guide-Push Rod
635	692927	Boot-Spark Plug	868	★Ø692044	Seal-Valve	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
643	696264	Retainer-Air Filter	883	★691893	Gasket-Exhaust	1052	790141	Sensor-Oil
652	699755	Screw (Support Bracket)	883A	★692237	Gasket-Exhaust	1058	276355	Owner's Manual
652A	699230	Screw (Support Bracket)	890	790203	Bracket-Control	1070	699201	Screw (Flywheel Fan)
663	699206	Screw (Control Panel)	914	699481	Screw (Rocker Cover) (Bottom)	1095	698215	Gasket Set-Valve
668	694257	Spacer	914A	692557	Screw (Rocker Cover) (Top)	1210	791849	Pulley/Spring Assembly (Pulley)
689	691855	Spring-Friction	914B	697551	Screw (Rocker Cover) (Center)	1211	791849	Pulley/Spring Assembly (Spring)
692	690572	Spring-Detent	957	694261	Cap-Fuel Tank	1305	699691	Screw (Oil Sensor Module)
718	690959	Pin-Locating	958	698549	Valve-Fuel Shut Off (Plastic)	1330	272147	Repair Manual
741	695087	Gear-Timing	967	493537	Filter-Pre Cleaner (Flat Panel)	1345	699887	Filter-Filler Neck
742	692564	Retainer-E Ring	968	692584	Cover-Air Cleaner (Flat Panel)	1363	790334	Sprocket-Gear Reduction
746	692566	Gear-Idler	971	690370	Screw (Air Cleaner Base To Carburetor)	1364	790335	Chain-Gear Reduction
773	694258	Retainer	972	694260	Tank-Fuel	1365	790336	Shaft-Output Gear Reduction
799	699202	Screw (Oil Sensor)	975A	698541	Bowl-Float	1367	690936	Screw (Gear Reduction Sprocket)
819	699233	Screw (Muffler Bracket)	977B	698568	Gasket Set-Carburetor	1368	690301	Washer (Gear Reduction Sprocket)
823	699209	Screw (Muffler Adapter)						
830	694544	Stud-Rocker Arm						
832A	697818	Guard-Muffler						
832D	791600	Guard-Muffler						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3378-9

Assemblies include all parts shown in frames.

11/04/2005