



123H00

Illustrated Parts List

Model Series

123H00

TYPE NUMBERS
0100 through 0111.

TABLE OF CONTENTS


Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	6
Fuel Supply	3
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2








PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

123H00







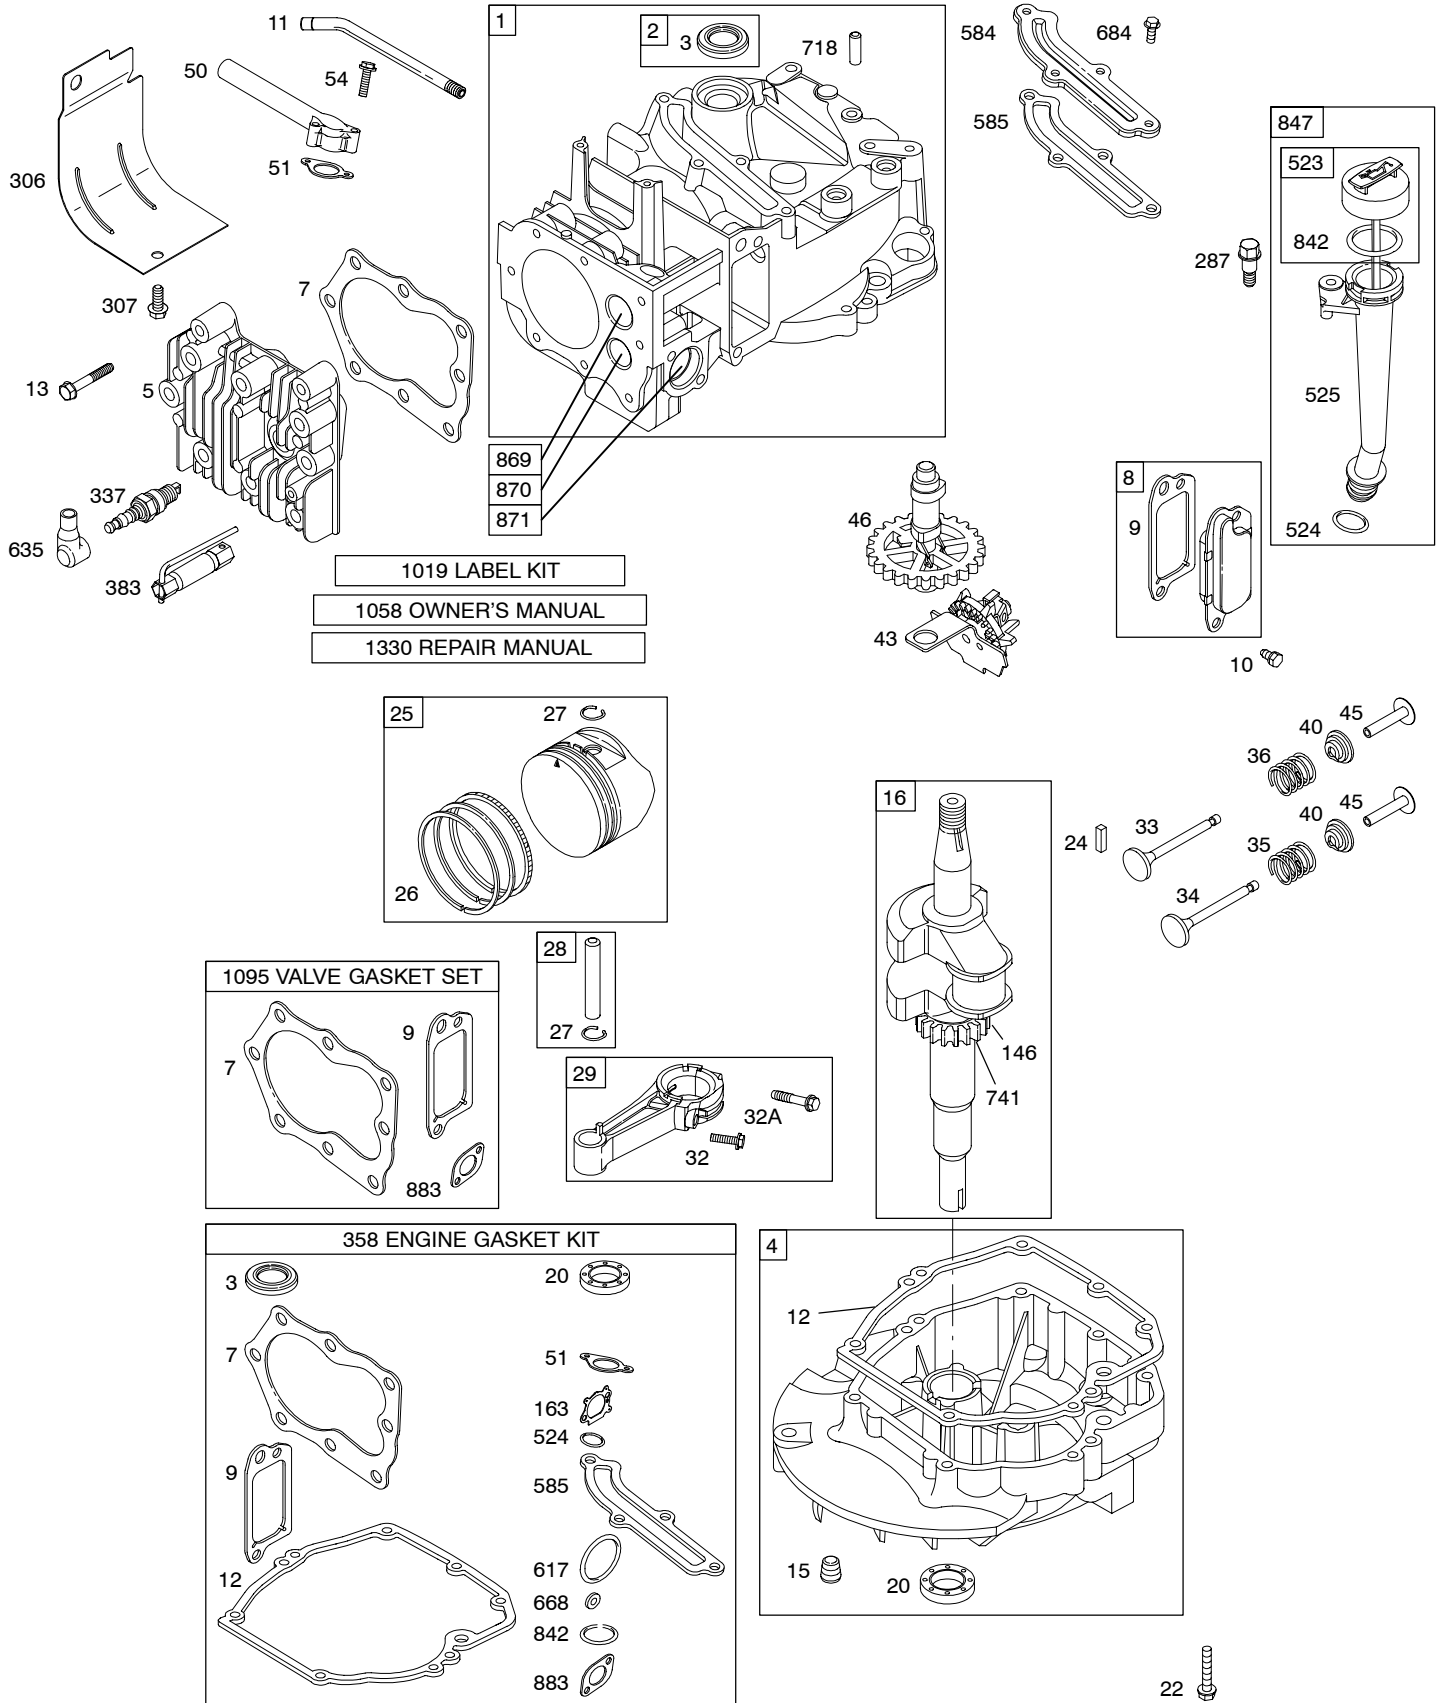


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6733-2 Assemblies include all parts shown in frames. 10/05/2005

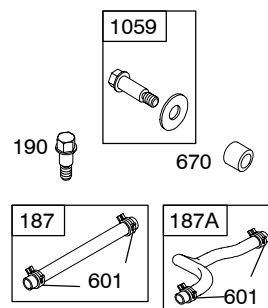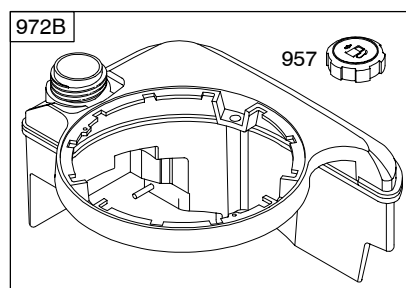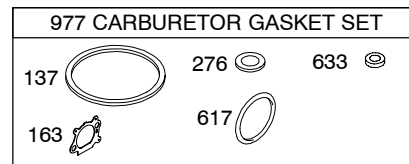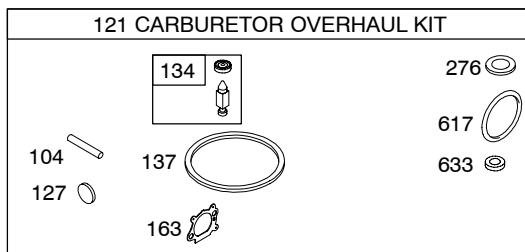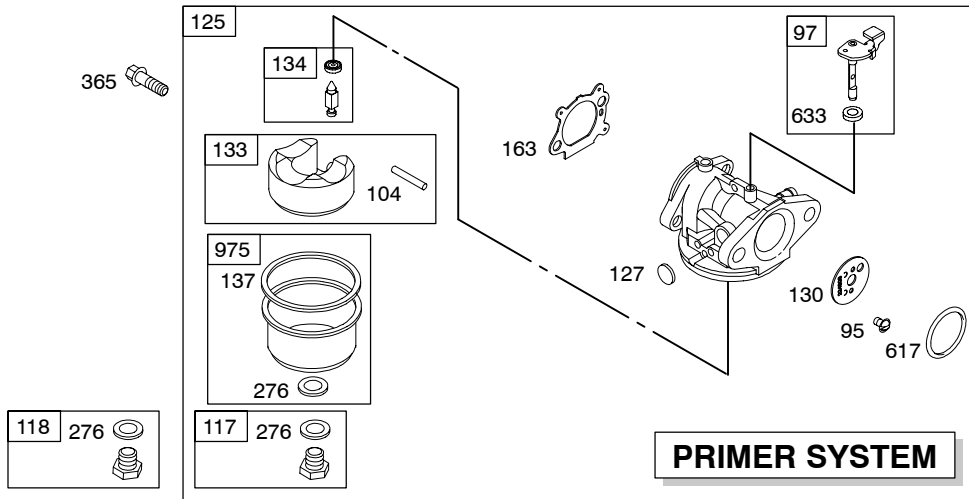

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6733-3 Assemblies include all parts shown in frames. 10/05/2005

123H00

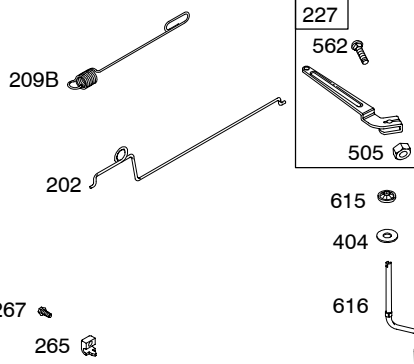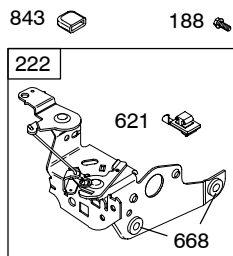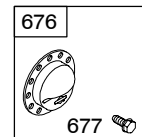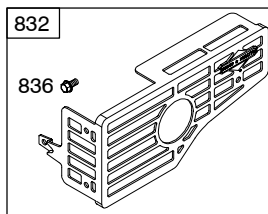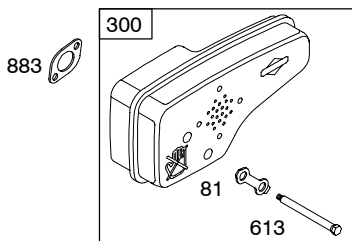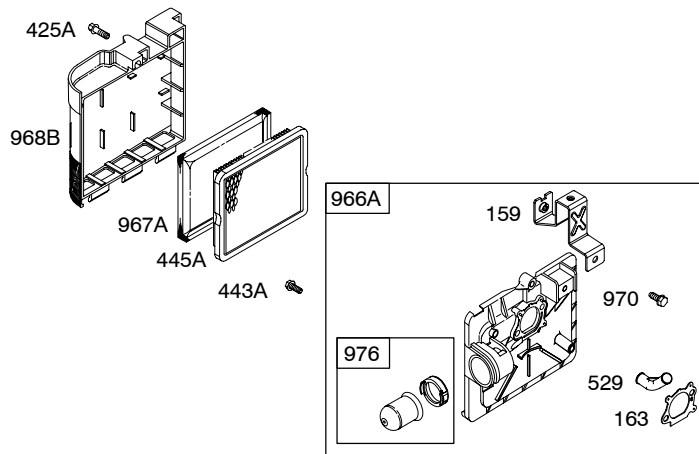


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6733-4







Assemblies include all parts shown in frames.

10/05/2005

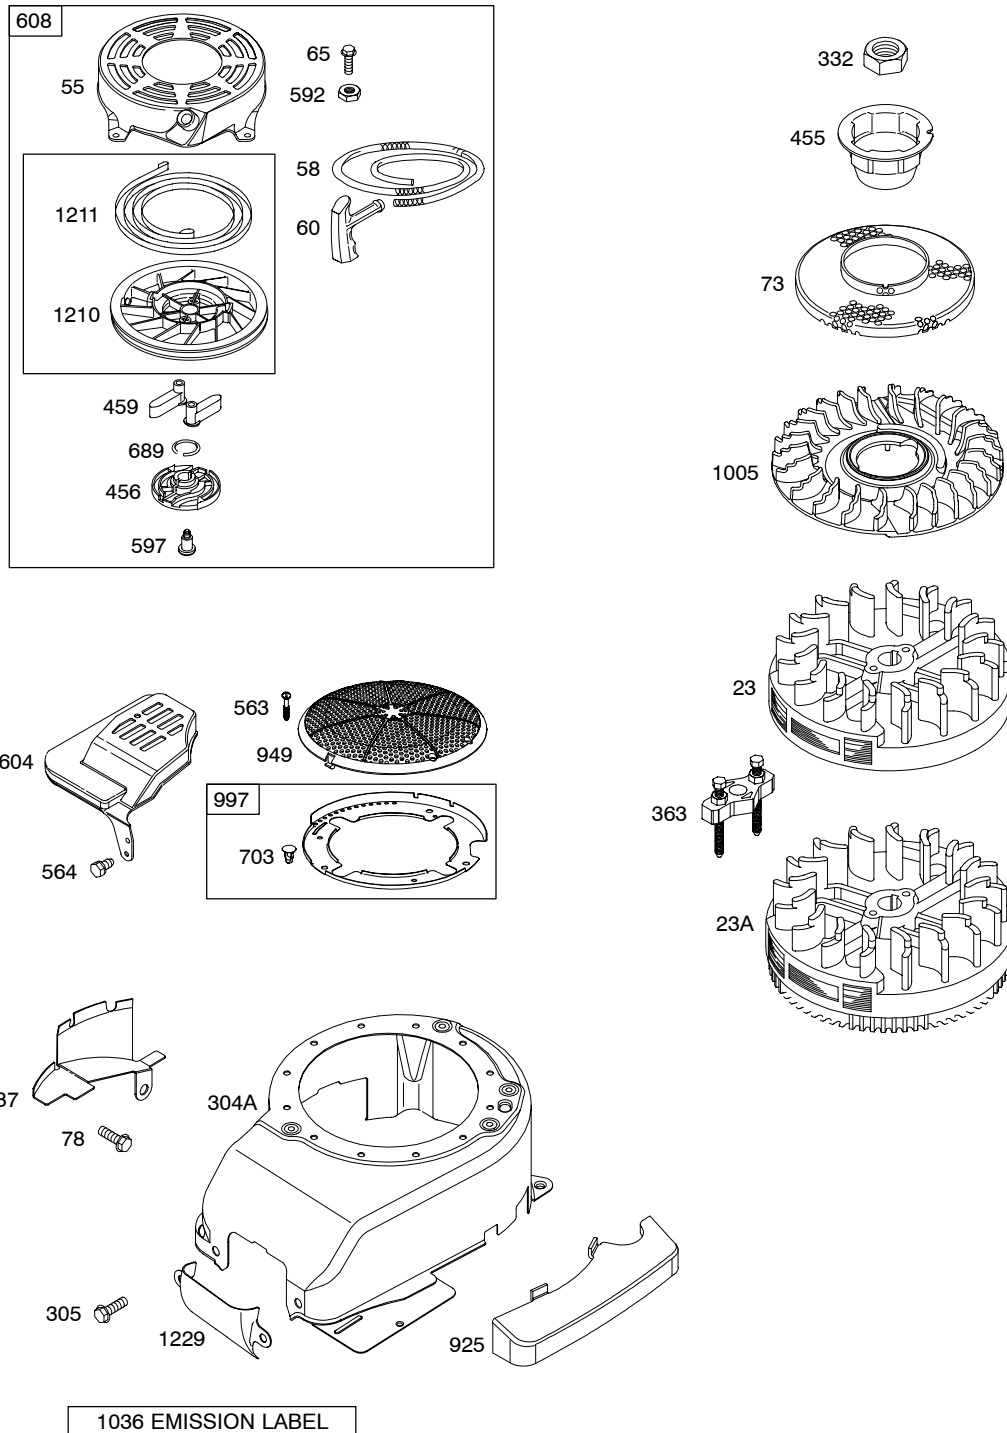

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6733-5 Assemblies include all parts shown in frames. 10/05/2005

123H00

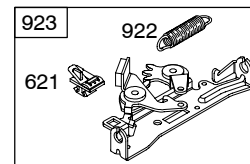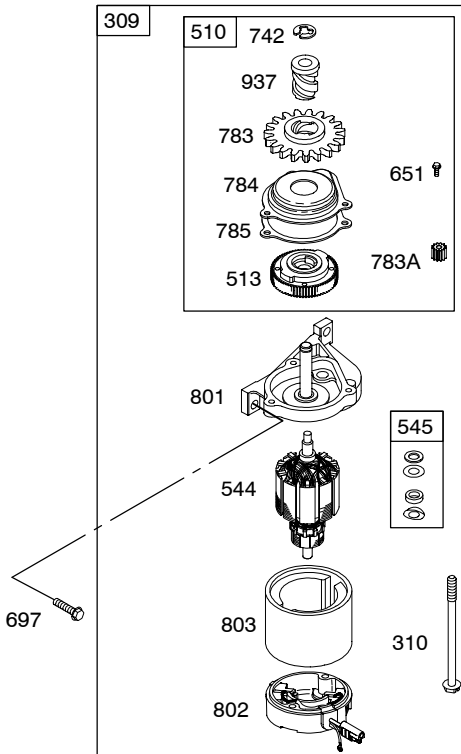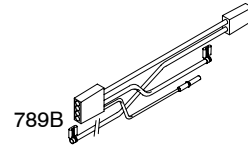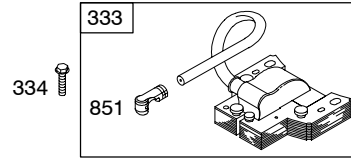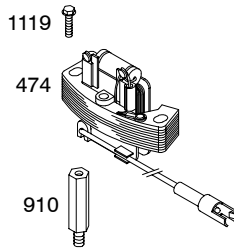

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6733-6 Assemblies include all parts shown in frames.

10/05/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697324	Cylinder Assembly	25	790358	Piston Assembly (Standard) (Used After Code Date 04031400).	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	28	499423	Pin-Piston (Standard)
3	*299819	Seal-Oil (Magneto Side)			499433 Piston Assembly (Standard) (Used Before Code Date 04031500).	29	499424	Rod-Connecting (Standard)
4	493279	Sump-Engine			499434 Piston Assembly (.010" Oversize)	32	691664	Screw (Connecting Rod)
5	691160	Head-Cylinder			791325 Piston Assembly (.020" Oversize) (Used After Code Date 04102100).	32A	695759	Screw (Connecting Rod)
7	∅692249	Gasket-Cylinder Head			499435 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200).	33	262651	Valve-Exhaust
8	695250	Breather Assembly			499436 Piston Assembly (.030" Oversize)	34	262652	Valve-Intake
9	∅272481	Gasket-Breather			26 790360 Ring Set (Standard) (Used After Code Date 04031400).	35	691270	Spring-Valve (Intake)
10	691125	Screw (Breather Assembly)			----- Note -----	36	691270	Spring-Valve (Exhaust)
11	691781	Tube-Breather			499425 Ring Set (Standard) (Used Before Code Date 04031500).	37	694086	Guard-Flywheel
12	*692232	Gasket-Crankcase			499426 Ring Set (.010" Oversize)	40	692194	Retainer-Valve
13	690912	Screw (Cylinder Head)			791324 Ring Set (.020" Oversize) (Used After Code Date 04102100).	43	691997	Slinger-Governor/Oil
15	691680	Plug-Oil Drain (Square Socket)			499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	45	690548	Tappet-Valve
16	691451	Crankshaft			499428 Ring Set (.030" Oversize)	46	691449	Camshaft
20	*399781	Seal-Oil (PTO Side)				50	497465	Manifold-Intake
22	691092	Screw (Crankcase Cover/Sump)				51	*272199	Gasket-Intake
23	692315	Flywheel (Rewind Start) Used on Type No(s). 0110.				54	691650	Screw (Intake Manifold)
23A	691992	Flywheel (Electric Start) Used on Type No(s). 0100, 0105.				55	691421	Housing-Rewind Starter
		----- Note -----				58	697613	Rope-Starter (Cut To Required Length)
		691987 Flywheel (Electric Start) Used on Type No(s). 0111, 0112.				60	281434	Grip-Starter Rope
24	222698	Key-Flywheel				65	690837	Screw (Rewind Starter)
						73	691222	Screen-Rotating
						78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						95	691636	Screw (Throttle Valve)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	227	690783	Lever-Governor Control
104	691242	Pin-Float Hinge				236	691826	Link-Lockout
117	494870	Jet-Main (Standard) (Used After Code Date 02092900). ----- Note ----- 498975 Jet-Main (Standard) (Used Before Code Date 02093000).	187A	791873	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line-Fuel (Molded) (Used Before Code Date 05070100).	265	690798	Clamp-Casing
						267	691044	Screw (Casing Clamp)
118	497315	Jet-Main (High Altitude) (Used After Code Date 02092900). ----- Note ----- 496495 Jet-Main (High Altitude) (Used Before Code Date 02093000).				268	691025	Casing-Control Wire (Cut to Required Length)
						269	691026	Wire-Control (Cut to Required Length)
121	498260	Kit-Carburetor Overhaul				270	691027	Nut (Control Wire Casing)
125	698444	Carburetor	188	690877	Screw (Control Bracket)	271	691028	Lever-Control
127	694468	Plug-Welch (3/8" Diameter)	190	690940	Screw (Fuel Tank)	276	271716	Washer-Sealing
130	691203	Valve-Throttle ----- Note ----- 696564 Valve-Throttle (Used With Plastic Throttle Shaft)	202	691829	Link-Mechanical Governor	287	690940	Screw (Dipstick Tube)
133	398187	Float-Carburetor	209B	699056	Spring-Governor Used on Type No(s). 0110, 0111, 0112. ----- Note ----- 691292 Spring- Governor Used on Type No(s). 0105 691291 Spring- Governor Used on Type No(s). 0100.	300	496106	Muffler (Tuned)
134	398188	Kit-Needle/Seat				304A	493294	Housing-Blower ----- Note ----- 493293 Housing- Blower Used on Type No(s). 0110, 0111, 0112.
137	693981	Gasket-Float Bowl				305	691108	Screw (Blower Housing)
146	690979	Key-Timing				306	690450	Shield-Cylinder
159	691753	Bracket-Air Cleaner Primer	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	307	690345	Screw (Cylinder Shield)
163	272653	Gasket-Air Cleaner				309	695550	Motor-Starter
						310	692327	Bolt (Starter Motor)
						332	690662	Nut (Flywheel)
						333	802574	Armature-Magneto
						334	691061	Screw (Magneto Armature)
						337	802592	Plug-Spark
						356	692390	Wire-Stop
						358	497316	Gasket Set-Engine

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
363	19069	Puller-Flywheel	592	690800	Nut	742	93941	Retainer-E Ring
365	691688	Screw			(Rewind Starter)	745	691648	Screw
		(Carburetor)	597	691696	Screw			(Brake)
383	89838	Wrench-Spark Plug			(Pawl Friction Plate)	783	691918	Gear-Pinion
404	690272	Washer	601	95162	Clamp-Hose			(Starter Drive)
		(Governor Crank)	604	691757	Cover-Control			(19 Teeth)
425A	690670	Screw	608	497680	Starter-Rewind	783A	691269	Gear-Pinion
		(Air Cleaner Cover)	613	691340	Screw			(12 Teeth)
443A	692523	Screw			(Muffler)	784	692341	Cover-Starter Gear
		(Air Cleaner Primer Base)	615	690340	Retainer-Governor Shaft	785	692352	Gasket-Starter Cover
445A	491588	Filter-Air Cleaner Cartridge	616	698801	Crank-Governor	789B	696547	Wire Assembly
455	695161	Cup-Flywheel	617★◆270344		Seal-O Ring	801	690782	Cap-Drive
		(Intake Manifold)			(Intake Manifold)	802	695267	Cap-End
456	692299	Plate-Pawl Friction	621	692310	Switch-Stop	803	695266	Housing-Starter
459	281505	Plate-Ratchet	633◆◆691321		Seal-Choke/Throttle Shaft	832	499034	Guard-Muffler
474	691991	Alternator				836	690664	Screw
505	691251	Nut	635	66538	Boot-Spark Plug			(Muffler Guard)
		(Governor Control Lever)	651	690345	Screw	842	★691031	Seal-O Ring
510	494147	Drive-Starter			(Starter Gear Cover)			(Dipstick Tube)
513	692358	Clutch-Drive	668	★493823	Spacer	843	691884	Sleeve-Lever
523	495264	Dipstick			(Includes 2)			(Control Bracket)
524	★692296	Seal-Dipstick Tube	670	692294	Spacer-Fuel Tank	847	692017	Dipstick/Tube Assembly
525	495265	Tube-Dipstick	676	396548	Deflector-Muffler (Louvered)	851	493880	Terminal-Spark Plug
529	691923	Grommet	677	690661	Screw	869	691155	Seat-Valve
544	690786	Armature-Starter			(Muffler Deflector)			(Intake)
545	492919	Washer Set	684	690345	Screw	870	690380	Seat-Valve
		(Starter Motor)			(Breather Passage Cover)			(Exhaust)
562	92613	Bolt	689	691855	Spring-Friction	871	262001	Bushing-Valve Guide
		(Governor Control Lever)	697	691127	Screw			(Exhaust)
563	691138	Screw			(Drive Cap)			----- Note -----
		(Debris Guard Screen)	703	696309	Clip			63709 Bushing-Valve Guide
564	690664	Screw	718	690959	Pin-Locating			(Intake)
		(Control Cover)	741	790345	Gear-Timing	883 ★∅691881		Gasket-Exhaust
578	398153	Harness-Wiring			(Use Without Woodruff Key)	910	691094	Stud
584	697734	Cover-Breather Passage			----- Note -----			(Alternator)
585	★691879	Gasket-Breather Passage			691830 Gear-Timing (Uses Woodruff Key)	922	691831	Spring-Brake
						923	691994	Brake
						925	690595	Cover-Linkage
						935	499421	Switch-Interlock

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
937	691325	Spline-Starter	975	493640	Bowl-Float	1119	691648	Screw (Alternator)
949	696306	Guard-Debris Screen	976	694395	Primer-Carburetor	1160	691627	Screw (Interlock Switch)
957	397974	Cap-Fuel Tank (Plastic)	977	498261	Gasket Set-Carburetor	1210	498144	Pulley/Spring Assembly (Pulley)
966A	496116	Base-Air Cleaner Primer	997	696310	Shield-Debris	1211	498144	Pulley/Spring Assembly (Spring)
967A	493537	Filter-Pre Cleaner	1005	691346	Fan-Flywheel	1229	696308	Extension-Blower Housing
968B	692298	Cover-Air Cleaner	1019	696438	Kit-Label	1330	270962	Manual-Repair
970	691681	Screw (Air Cleaner Primer Bracket)	1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)			
972B	699374	Tank-Fuel (Plastic)	1058	276171	Manual-Owner's			
			1059	692311	Kit-Screw/Washer			
			1095	498528	Gasket Set-Valve			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6733-10

Assemblies include all parts shown in frames.

10/05/2005