



**125600**

# Illustrated Parts List

## Model Series

# 125600

TYPE NUMBERS  
0100 through 0161.

### TABLE OF CONTENTS


<b>Air Cleaner</b> .....	6
<b>Blower Housing/Shrouds</b> .....	7
<b>Camshaft</b> .....	2
<b>Carburetor</b> .....	4
<b>Controls</b> .....	5
<b>Crankshaft</b> .....	2
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	3
<b>Engine Sump</b> .....	2
<b>Exhaust System</b> .....	6
<b>Flywheel</b> .....	7
<b>Flywheel Brake</b> .....	5
<b>Fuel Supply</b> .....	4
<b>Governor Spring</b> .....	5
<b>Ignition</b> .....	5
<b>Kits/Gaskets Sets</b> .....	8
<b>Lubrication</b> .....	2
<b>Piston Group</b> .....	2
<b>Rewind Starter</b> .....	7




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 125600


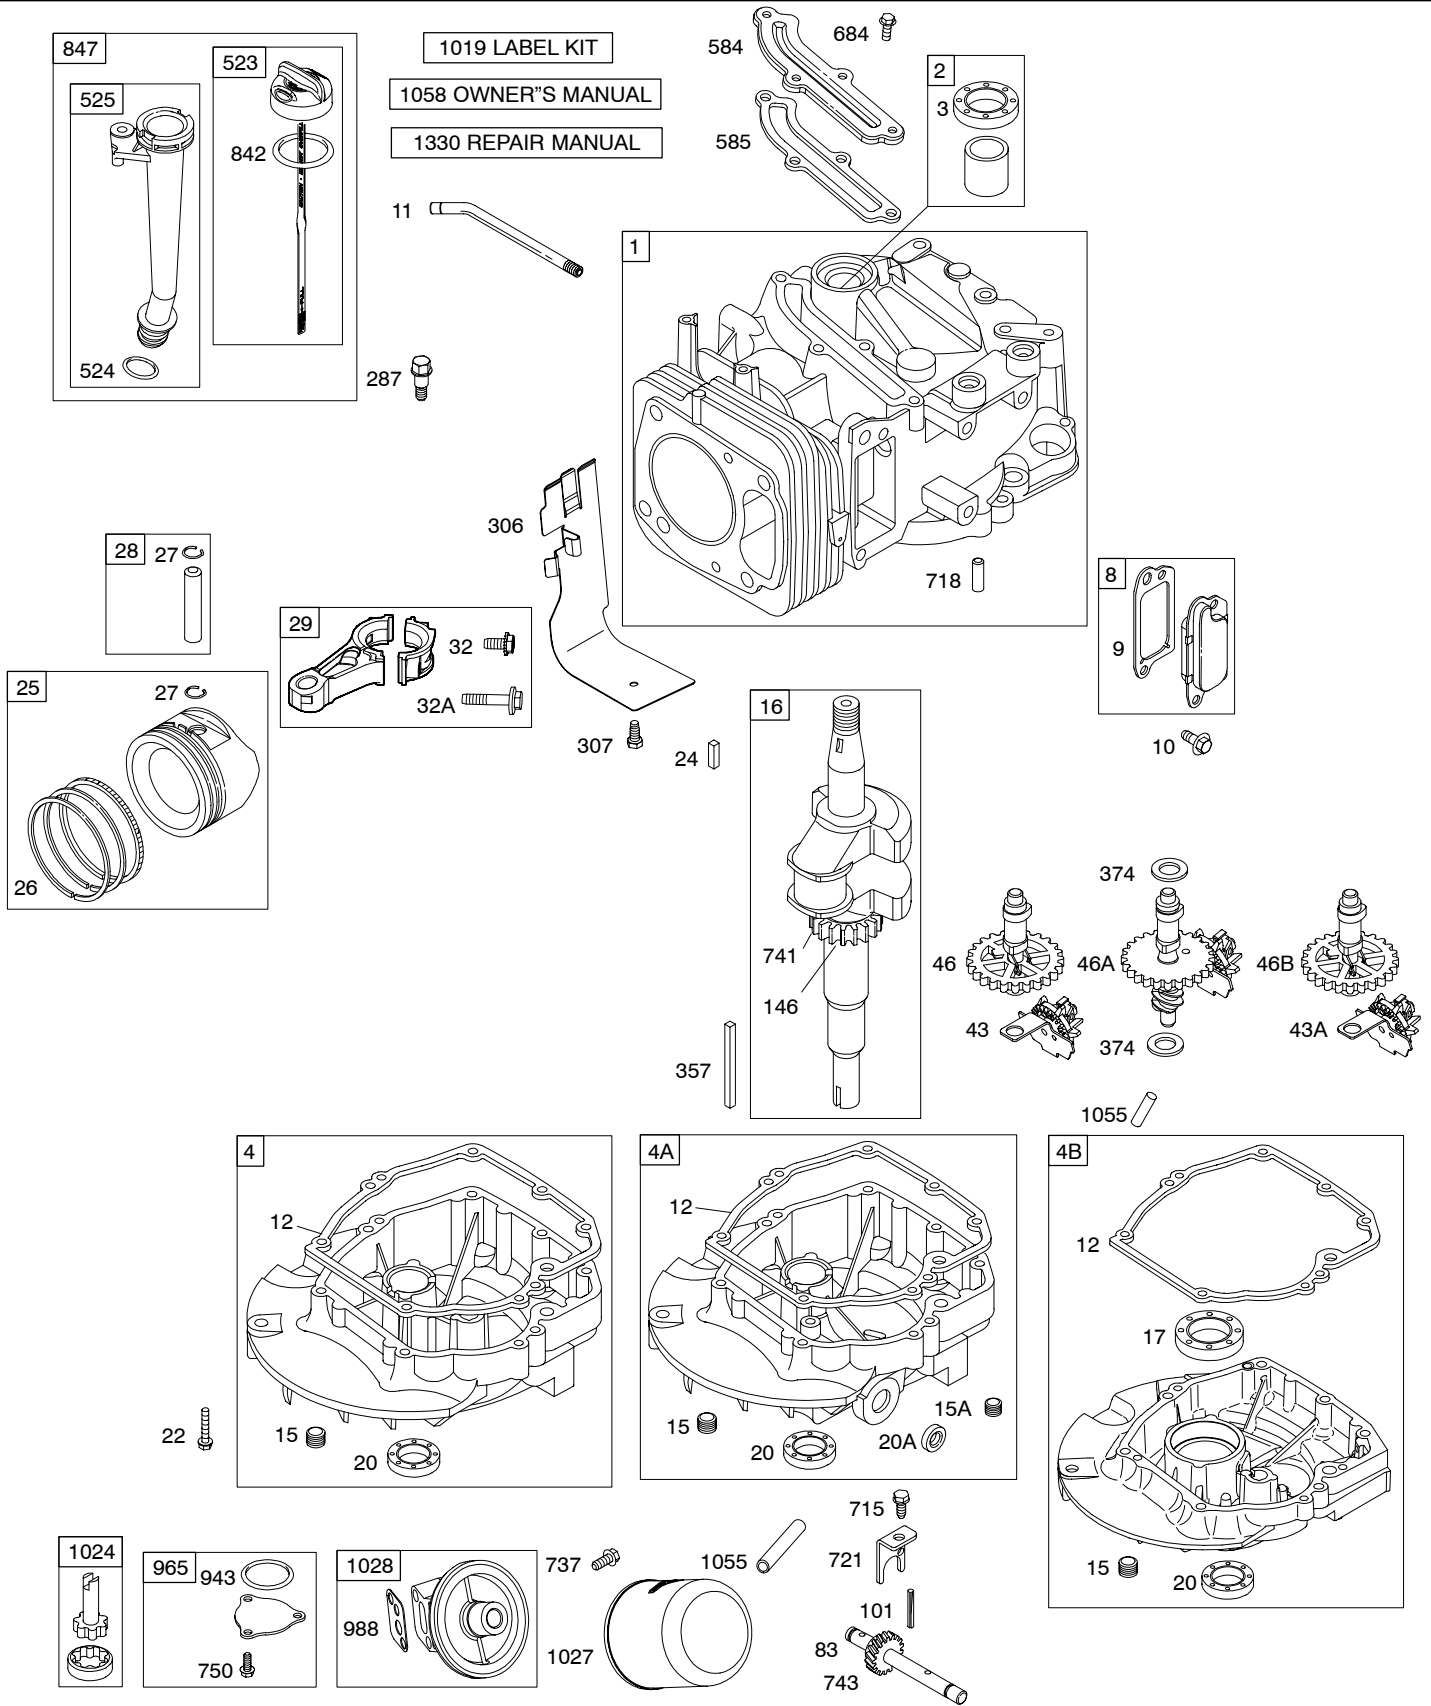


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 6537-2 Assemblies include all parts shown in frames. 10/12/2005

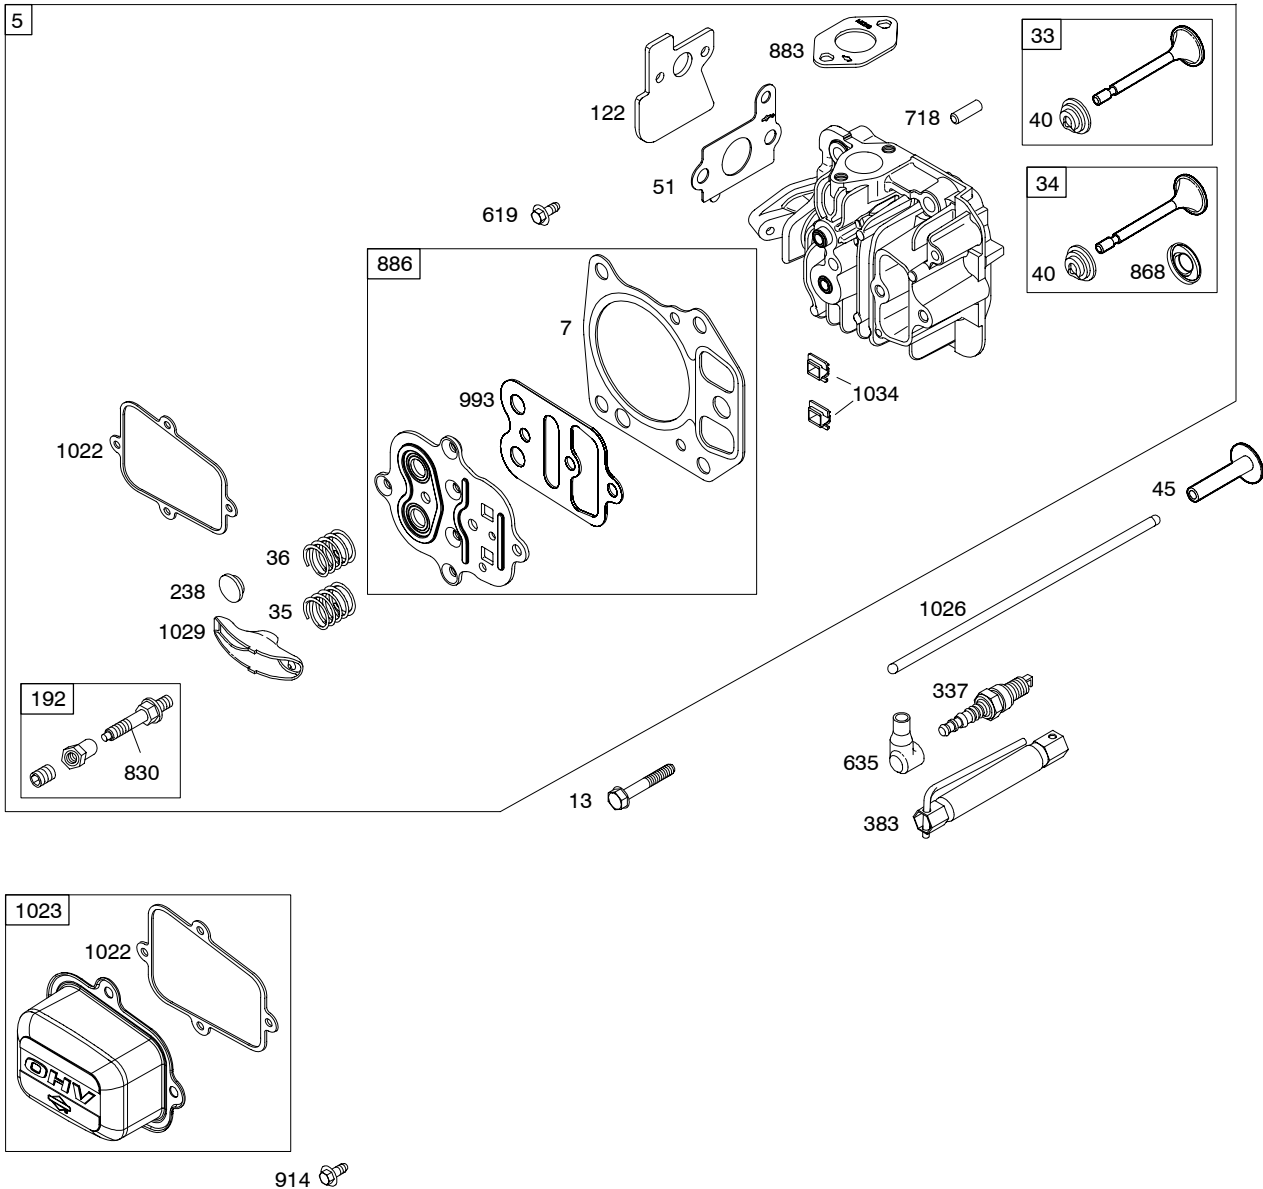


**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**6537-3** Assemblies include all parts shown in frames. **10/12/2005**

# 125600






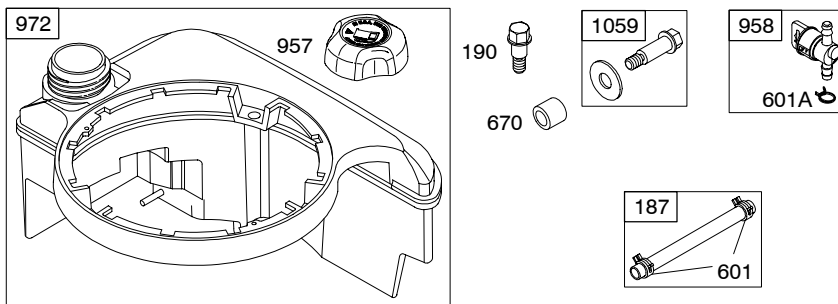
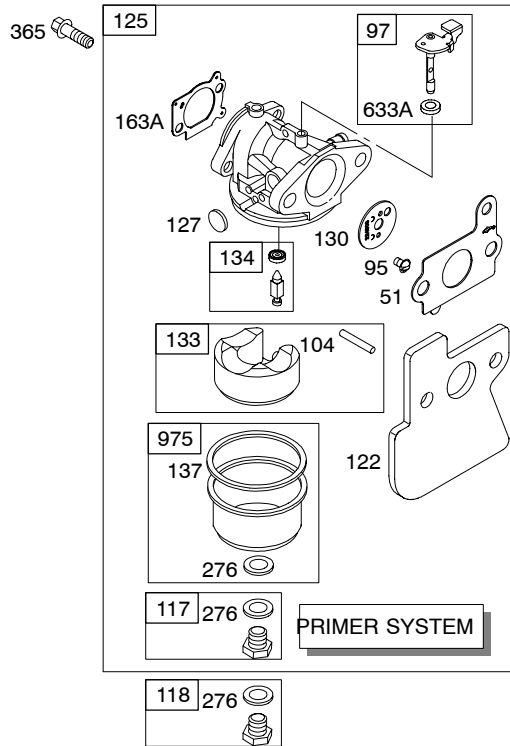


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6537-4 Assemblies include all parts shown in frames. 10/12/2005

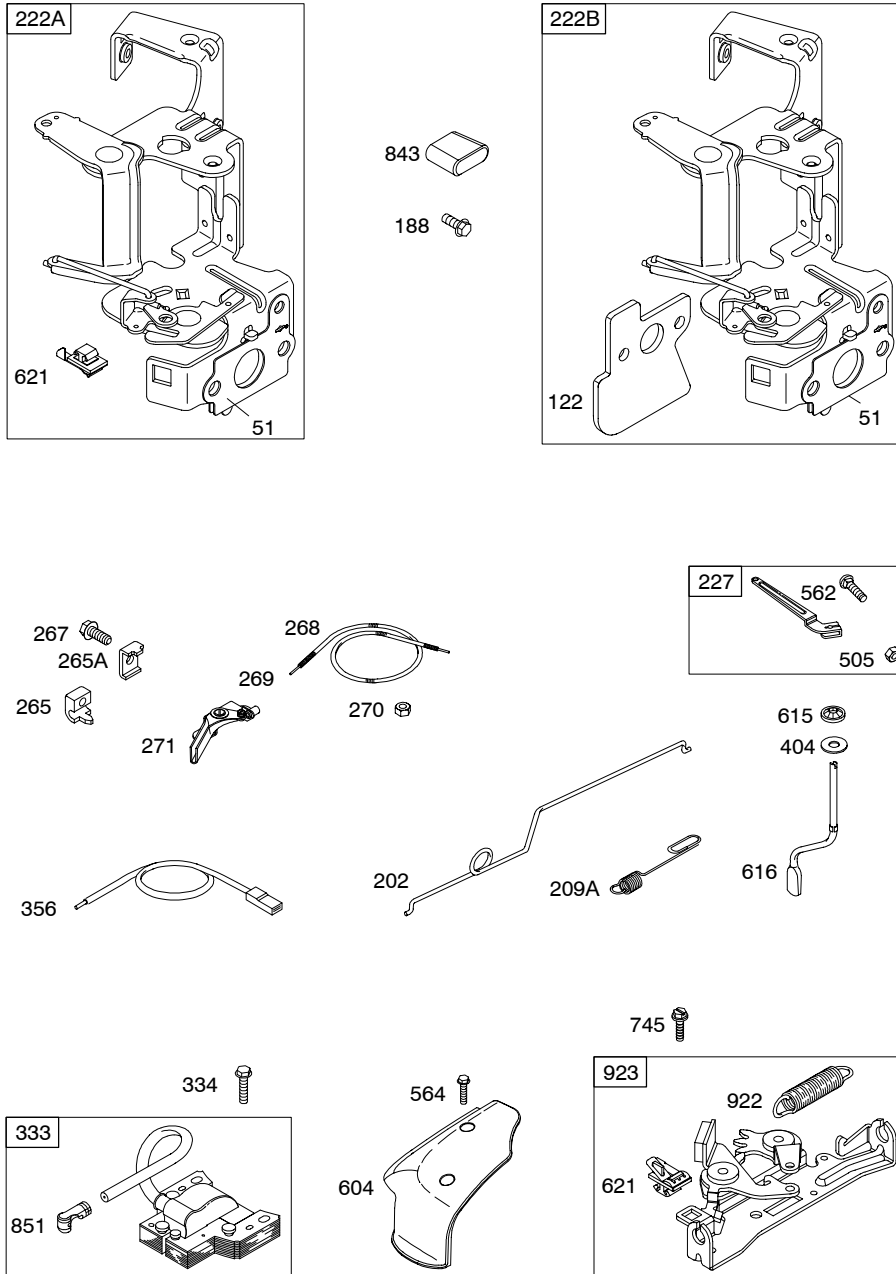


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.   
 6537-5 Assemblies include all parts shown in frames. 10/12/2005

# 125600

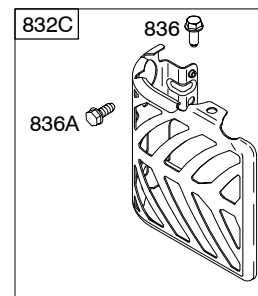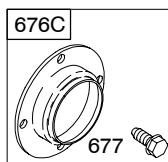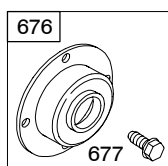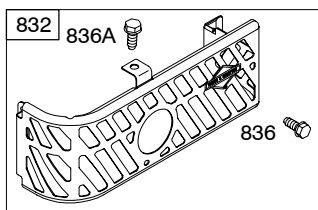
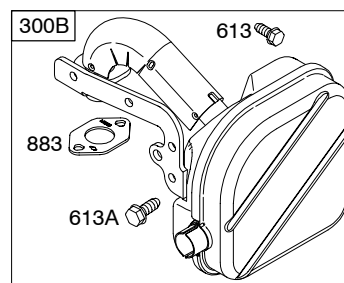
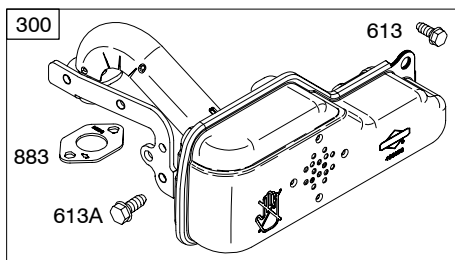
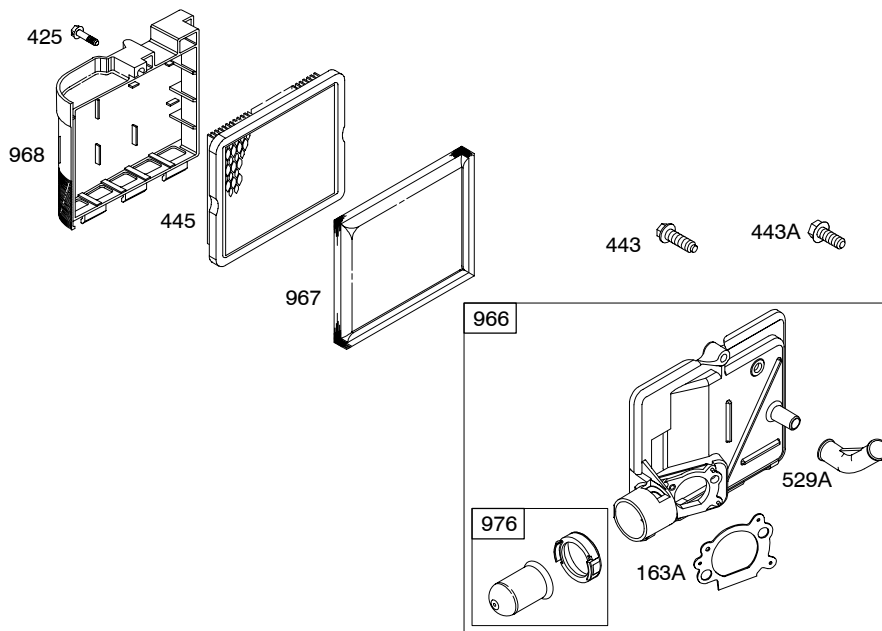


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6537-6 Assemblies include all parts shown in frames. 10/12/2005

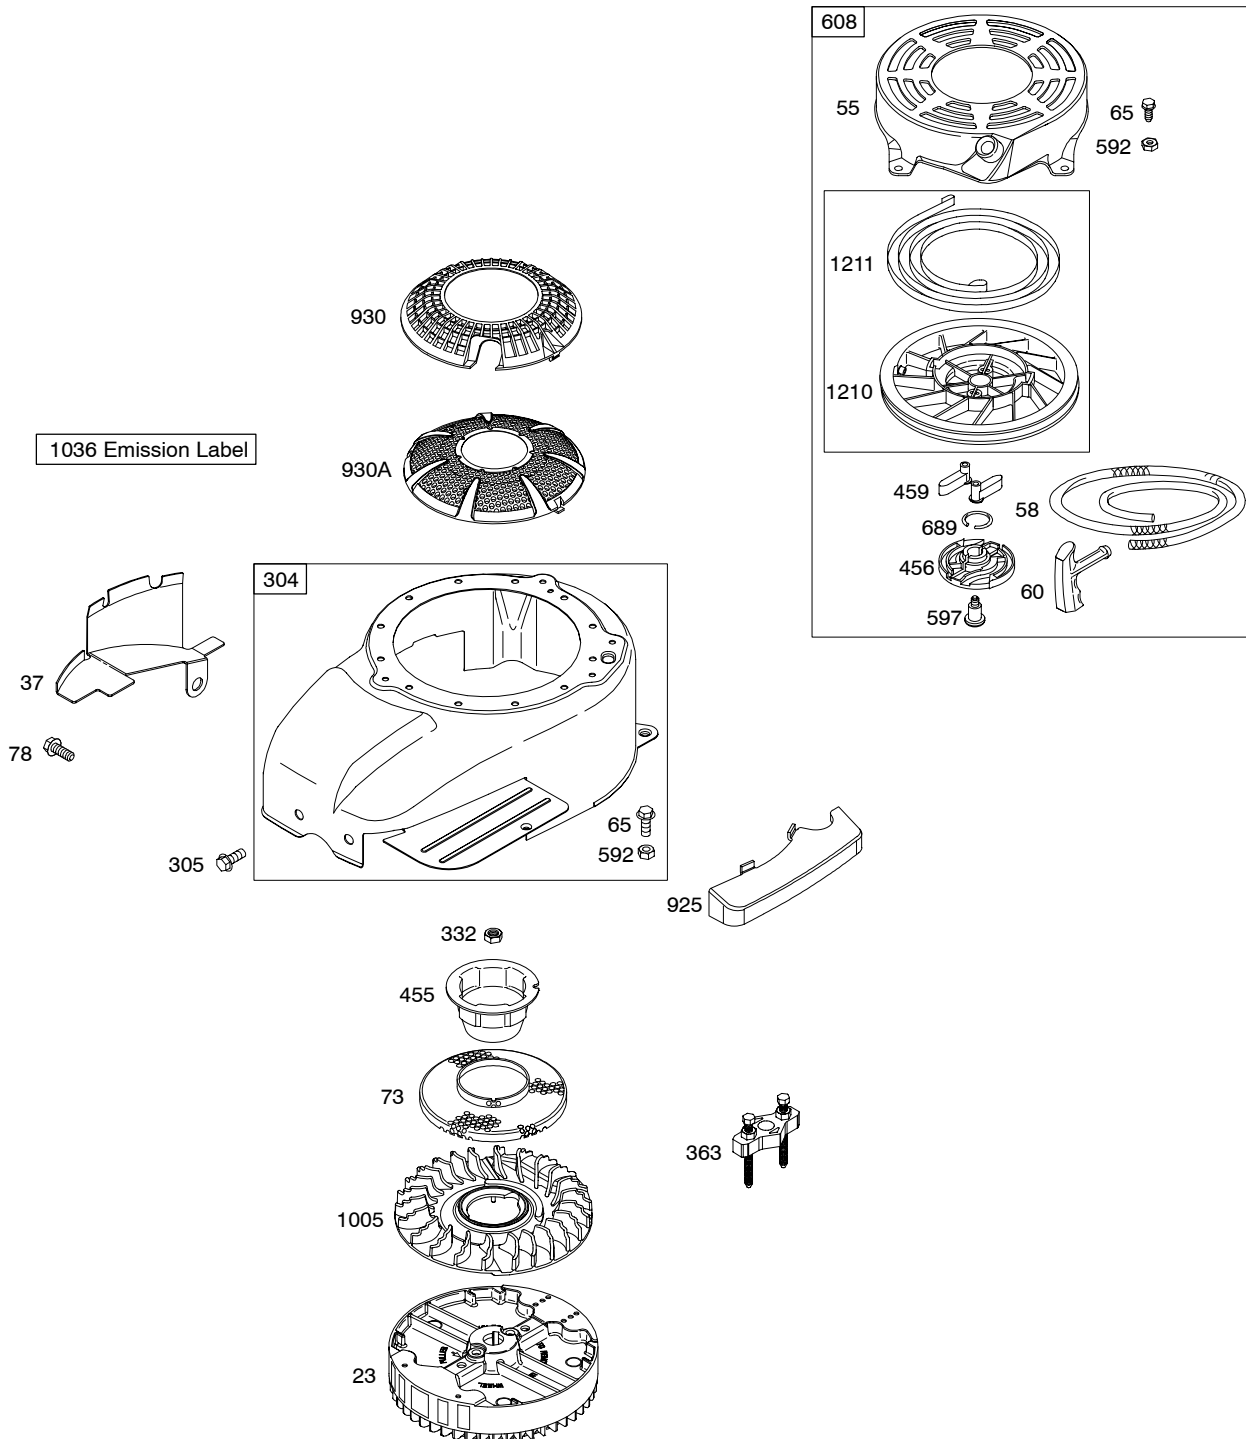

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6537-7 Assemblies include all parts shown in frames. 10/12/2005

# 125600

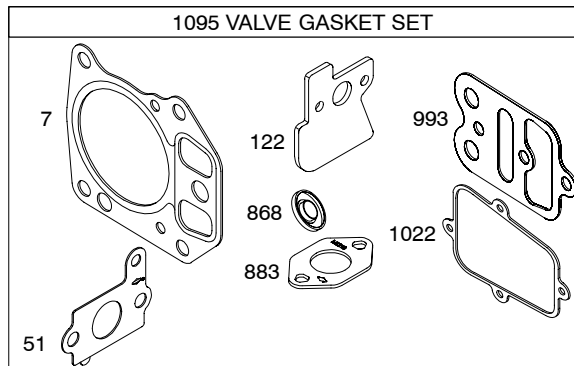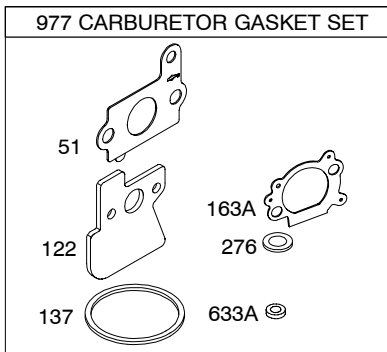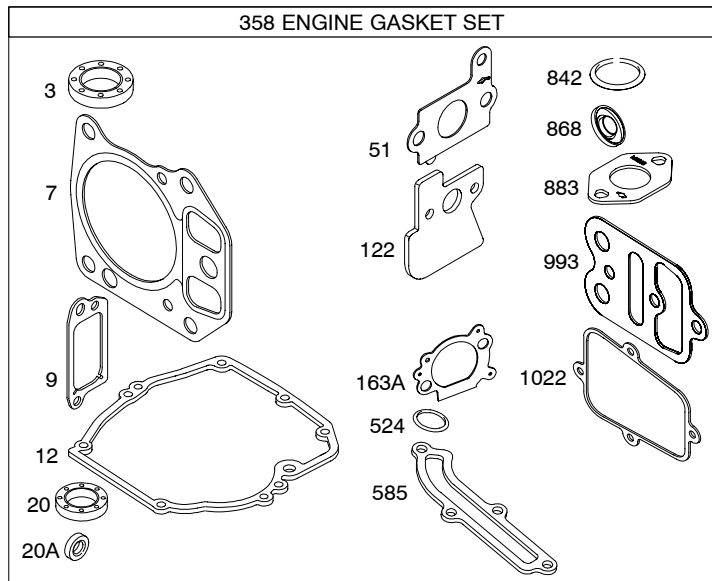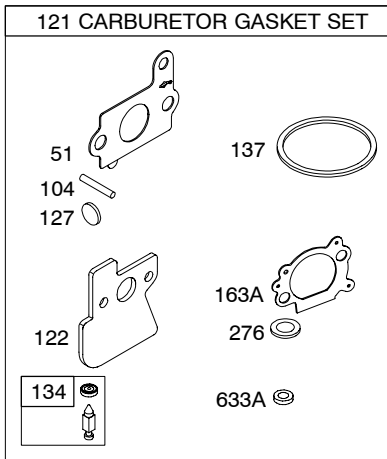

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*



**125600**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- <b>Note</b> ----- <b>499678</b> Cylinder-Assembly (Used Before Code Date 04040500).	17	692517	Bearing-Ball	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- <b>Note</b> ----- <b>499631</b> Ring Set (Standard) (Used Before Code Date 05030800).
2	399269	Kit-Bushing/Seal (Magneto Side)	20	★399781	Seal-Oil (PTO Side)			<b>692785</b> Ring Set (.010" Oversize)
3	★299819	Seal-Oil (Magneto Side)	20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			<b>791324</b> Ring Set (.020" Oversize) (Used After Code Date 05030700).
4	493279	Sump-Engine	22	691092	Screw (Crankcase Cover/Sump)			<b>692786</b> Ring Set (.020" Oversize) (Used Before Code Date 05030800).
4A	493365	Sump-Engine (Auxiliary PTO)	23	696569	Flywheel ----- <b>Note</b> ----- <b>692693</b> Flywheel Used on Type No(s). 0127, 0130, 0133, 0140.			<b>692787</b> Ring Set (.030" Oversize)
4B	692509	Sump-Engine Used on Type No(s). 0142.			<b>692987</b> Flywheel Used on Type No(s). 0121.			<b>692787</b> Ring Set (.030" Oversize)
5	695276	Head-Cylinder	24	222698	Key-Flywheel			<b>27</b> <b>691866</b> Lock-Piston Pin
7	★△695166	Gasket-Cylinder Head	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- <b>Note</b> ----- <b>499627</b> Piston Assembly (Standard) (Used Before Code Date 05030800).			<b>28</b> <b>499423</b> Pin-Piston
8	495786	Breather Assembly			<b>692788</b> Piston Assembly (.010" Oversize)			<b>29</b> <b>499424</b> Rod-Connecting
9	★272481	Gasket-Breather			<b>791325</b> Piston Assembly (.020" Oversize) (Used After Code Date 05030700).			<b>32</b> <b>691664</b> Screw (Connecting Rod)
10	691125	Screw (Breather Assembly)			<b>692789</b> Piston Assembly (.020" Oversize) (Used Before Code Date 05030800).			<b>32A</b> <b>695759</b> Screw (Connecting Rod) (Used After Code Date 00042200).
11	499675	Tube-Breather			<b>692790</b> Piston Assembly (.030" Oversize)			<b>33</b> <b>499642</b> Valve-Exhaust
12	★692232	Gasket-Crankcase						<b>34</b> <b>499641</b> Valve-Intake
13	691137	Screw (Cylinder Head)						<b>35</b> <b>691304</b> Spring-Valve (Intake)
15	691680	Plug-Oil Drain (Square Socket)						<b>36</b> <b>691304</b> Spring-Valve (Exhaust)
15A	691093	Plug (Hex Socket)						<b>37</b> <b>694086</b> Guard-Flywheel
16	691457	Crankshaft ----- <b>Note</b> ----- <b>693291</b> Crankshaft Used on Type No(s). 0117, 0158. <b>692823</b> Crankshaft Used on Type No(s). 0121. <b>692716</b> Crankshaft Used on Type No(s). 0126, 0127. <b>691456</b> Crankshaft Used on Type No(s). 0100, 0105, 0114, 0119, 0124, 0136, 0144, 0145, 0146, 0159.						<b>40</b> <b>692194</b> Retainer-Valve
								<b>43</b> <b>691997</b> Slinger-Governor/Oil
								<b>43A</b> <b>692505</b> Slinger-Governor/Oil Used on Type No(s). 0142.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 125600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	690977	Tappet-Valve	118	497466	Jet-Main (High Altitude)	209A	691291	Spring-Governor ----- <b>Note</b> -----
46	694039	Camshaft			(Used After Code Date 03110600).			<b>691851</b> Spring-Governor
46A	694037	Camshaft (Counterclockwise)			----- <b>Note</b> -----			Used on Type No(s). 0100, 0117, 0142, 0145, 0147.
46B	694040	Camshaft Used on Type No(s). 0142.			<b>498975</b> Jet-Main (High Altitude)			<b>690319</b> Spring-Governor
51	692668	Gasket-Intake			(Used Before Code Date 03110700).			Used on Type No(s). 0118, 0133, 0157, 0158.
55	691421	Housing-Rewind Starter	121	692703	Kit-Carburetor Overhaul	222A	693378	Bracket-Control
58	697316	Rope-Starter (Cut To Required Length)	122	692799	Spacer-Carburetor	222B	692672	Bracket-Control Used on Type No(s). 0100, 0105, 0118, 0119, 0134, 0142, 0144, 0157, 0158, 0161.
60	281434	Grip-Starter Rope	125	790120	Carburetor			
65	690837	Screw (Rewind Starter)	127	694468	Plug-Welch			
73	691222	Screen-Rotating	130	691203	Valve-Throttle ----- <b>Note</b> -----			
78	691108	Screw (Flywheel Guard)			<b>696564</b> Valve-Throttle (Used With Plastic Throttle Shaft)	227	691467	Lever-Governor Control
83	691778	Shaft-Auxiliary Drive ----- <b>Note</b> -----	133	398187	Float-Carburetor	238	691300	Cap-Valve
		<b>690524</b> Shaft-Auxiliary Drive Used on Type No(s). 0112, 0128.	134	398188	Kit-Needle/Seat	265	690798	Clamp-Casing
		<b>690522</b> Shaft-Auxiliary Drive Used on Type No(s). 0144, 0157.	137	693981	Gasket-Float Bowl	265A	691024	Clamp-Casing
95	691636	Screw (Throttle Valve)	146	690979	Key-Timing	267	691044	Screw (Casing Clamp)
97	499682	Shaft-Throttle (Metal) ----- <b>Note</b> -----	163A	692667	Gasket-Air Cleaner	268	691025	Casing-Control Wire (Cut To Required Length)
		<b>790121</b> Shaft-Throttle (Plastic)	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000).	269	691026	Wire-Control (Cut To Required Length)
101	691623	Pin-Shaft			----- <b>Note</b> -----	270	691027	Nut (Control Wire Casing)
104	691242	Pin-Float Hinge			<b>691050</b> Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	271	691028	Lever-Control
117	498981	Jet-Main (Standard) (Used After Code Date 03110600).	188	691147	Screw (Control Bracket)	276	271716	Washer-Sealing
		----- <b>Note</b> -----	190	690940	Screw (Fuel Tank)	287	690940	Screw (Dipstick Tube)
		<b>498978</b> Jet-Main (Standard) (Used Before Code Date 03110700).	192	694543	Adjuster-Rocker Arm	300	694248	Muffler
			202	691303	Link-Mechanical Governor	300B	699769	Muffler
						304	499676	Housing-Blower ----- <b>Note</b> -----
								<b>499677</b> Housing-Blower Used on Type No(s). 0105, 0115, 0119, 0126, 0133, 0134, 0140, 0142, 0144, 0157, 0158, 0161.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	529A	691923	Grommet	718	690959	Pin-Locating
306	691232	Shield-Cylinder	562	691119	Bolt (Governor Control Lever)	721	690449	Shaft-Stop
307	690345	Screw (Cylinder Shield)	564	693808	Screw (Control Cover)	737	692511	Screw (Oil Filter Adapter)
332	690662	Nut (Flywheel)	584	697734	Cover-Breather Passage	741	790345	Gear-Timing (Use Without Woodruff Key)
333	802574	Armature-Magneto	585	*691879	Gasket-Breather Passage			----- <b>Note</b> ----- <b>691830</b> Gear-Timing (Uses Woodruff Key)
334	691061	Screw (Magneto Armature)	592	690800	Nut (Rewind Starter)	743	691772	Gear-Drive (Counterclockwise)
337	692051	Plug-Spark (Resistor)	597	691696	Screw (Pawl Friction Plate)			----- <b>Note</b> ----- <b>690516</b> Gear-Drive (Clockwise)
		----- <b>Note</b> ----- <b>692720</b> Plug-Spark (EMS)	601	95162	Clamp-Hose (Green)	745	691648	Screw (Brake)
356	692390	Wire-Stop	601A	691038	Clamp-Hose (Black)	750	691683	Screw (Oil Pump Cover)
357	692191	Key-Drive Pulley	604	692669	Cover-Control	830	694544	Stud-Rocker Arm
358	694090	Gasket Set-Engine	608	497680	Starter-Rewind	832	691466	Guard-Muffler
363	19069	Puller-Flywheel	613	691108	Screw (Muffler)	832C	695593	Guard-Muffler
365	691136	Screw (Carburetor)	613A	691140	Screw (Muffler)	836	691147	Screw (Muffler Guard)
374	691074	Washer (Camshaft)	615	690340	Retainer-Governor Shaft	836A	697551	Screw (Muffler Guard)
383	19374	Wrench-Spark Plug	616	698801	Crank-Governor	842	*691031	Seal-O Ring (Dipstick Tube)
404	690272	Washer (Governor Crank)	619	691108	Screw (Cylinder Head Plate)	843	691884	Sleeve-Lever
425	690670	Screw (Air Cleaner Cover)	621	692310	Switch-Stop	847	692047	Dipstick/Tube Assembly
443	692523	Screw (Air Cleaner Primer Base)	633A◆	691321	Seal-Choke/Throttle Shaft (Throttle Shaft)	851	493880	Terminal-Spark Plug
443A	691637	Screw (Air Cleaner Primer Base)	635	66538	Boot-Spark Plug	868	*Δ692044	Seal-Valve
445	491588	Filter-Air Cleaner Cartridge	670	692294	Spacer-Fuel Tank	883	*Δ691893	Gasket-Exhaust
455	695161	Cup-Flywheel	676	397931	Deflector-Muffler	886	696268	Gasket Kit-Cylinder Head/Plate
456	692299	Plate-Pawl Friction	676C	497682	Deflector-Muffler	914	691108	Screw (Rocker Cover)
459	281505	Ratchet-Pawl	677	690661	Screw (Muffler Deflector)	922	691831	Spring-Brake
505	691251	Nut (Governor Control Lever)	684	690345	Screw (Breather Passage Cover)	922	691831	Spring-Brake ----- <b>Note</b> ----- <b>692135</b> Spring-Brake Used on Type No(s). 0100.
523	499621	Dipstick	689	691855	Spring-Friction			
524	*692296	Seal-Dipstick Tube	715	691147	Screw (Stop Shaft)			
525	495265	Tube-Dipstick						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 125600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake ----- <b>Note</b> ----- <b>695891</b> Brake Used on Type No(s). 0100.	968	692298	Cover-Air Cleaner	1029	691230	Arm-Rocker
925	690595	Cover-Linkage	972	699374	Tank-Fuel (Plastic)	1034	691343	Guide-Push Rod
930	691919	Guard-Rewind	975	493640	Bowl-Float	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
930A	692675	Guard-Rewind	976	694395	Primer-Carburetor	1055	692623	Tube-Oil Pump
943	692514	Seal-O Ring (Oil Pump Cover)	977	692704	Gasket Set-Carburetor	1058	276348	Manual-Owner's
957	692046	Cap-Fuel Tank (Plastic)	988	692515	Gasket-Oil Adapter	1059	692311	Kit-Screw/Washer
958	698183	Valve-Fuel Shut Off (Plastic)	993	★△694088	Gasket-Cylinder Head Plate	1095	694091	Gasket Set-Valve
965	692507	Cover-Oil Pump	1005	691346	Fan-Flywheel	1210	498144	Pulley/Spring Assembly (Pulley)
966	692673	Base-Air Cleaner Primer	1019	695247	Kit-Label	1211	498144	Pulley/Spring Assembly (Spring)
967	493537	Filter-Pre Cleaner	1022	★△691890	Gasket-Rocker Cover	1330	272147	Manual-Repair
			1023	499624	Cover-Rocker			
			1024	692508	Pump-Oil			
			1026	692045	Rod-Push			
			1027	692513	Filter-Oil			
			1028	692516	Adapter-Oil Filter			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*