



127300

Illustrated Parts List

Model Series

127300

TYPE NUMBERS
0036 through 0176.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7

BRIGGS & STRATTON



PRINTED IN U.S.A.













COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

127300

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

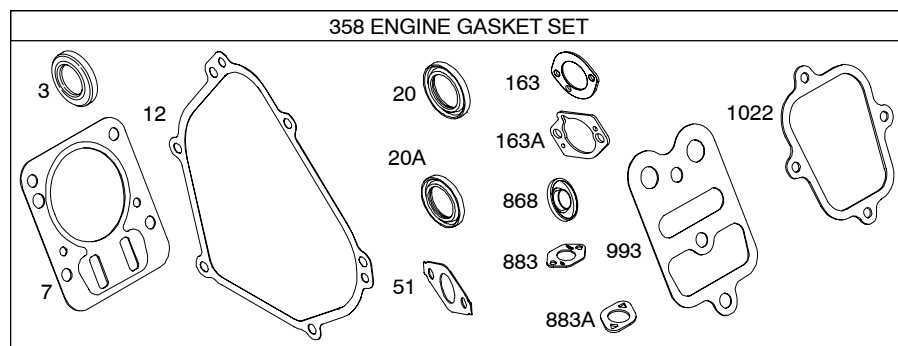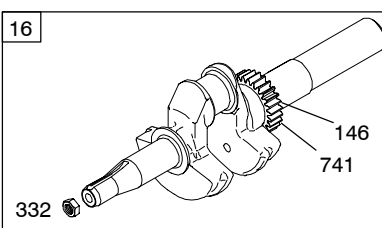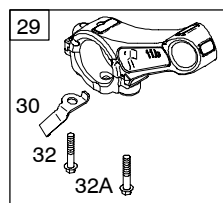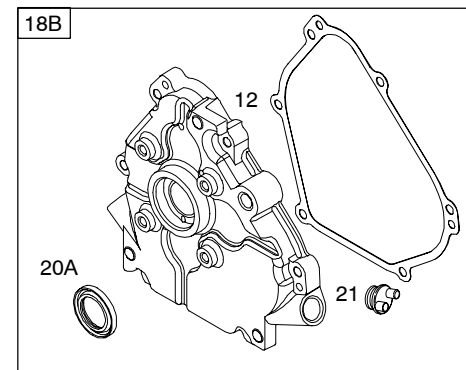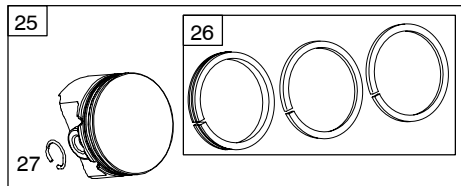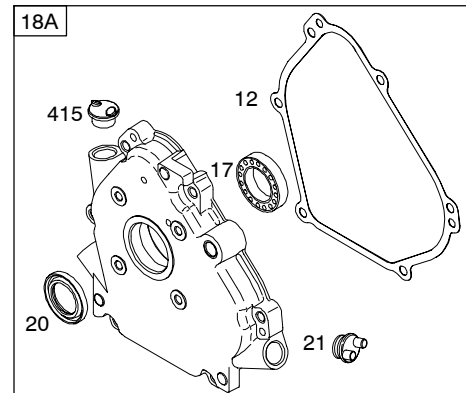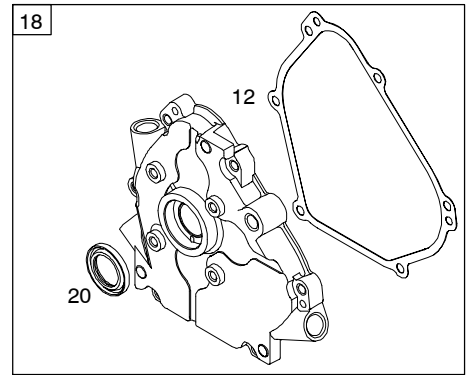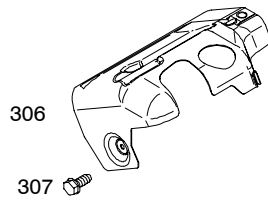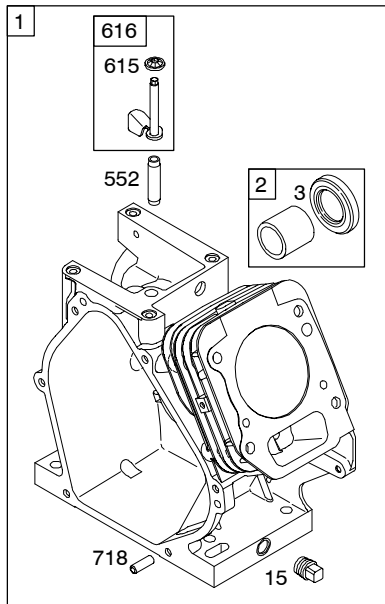


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-2

Assemblies include all parts shown in frames.

11/08/2005

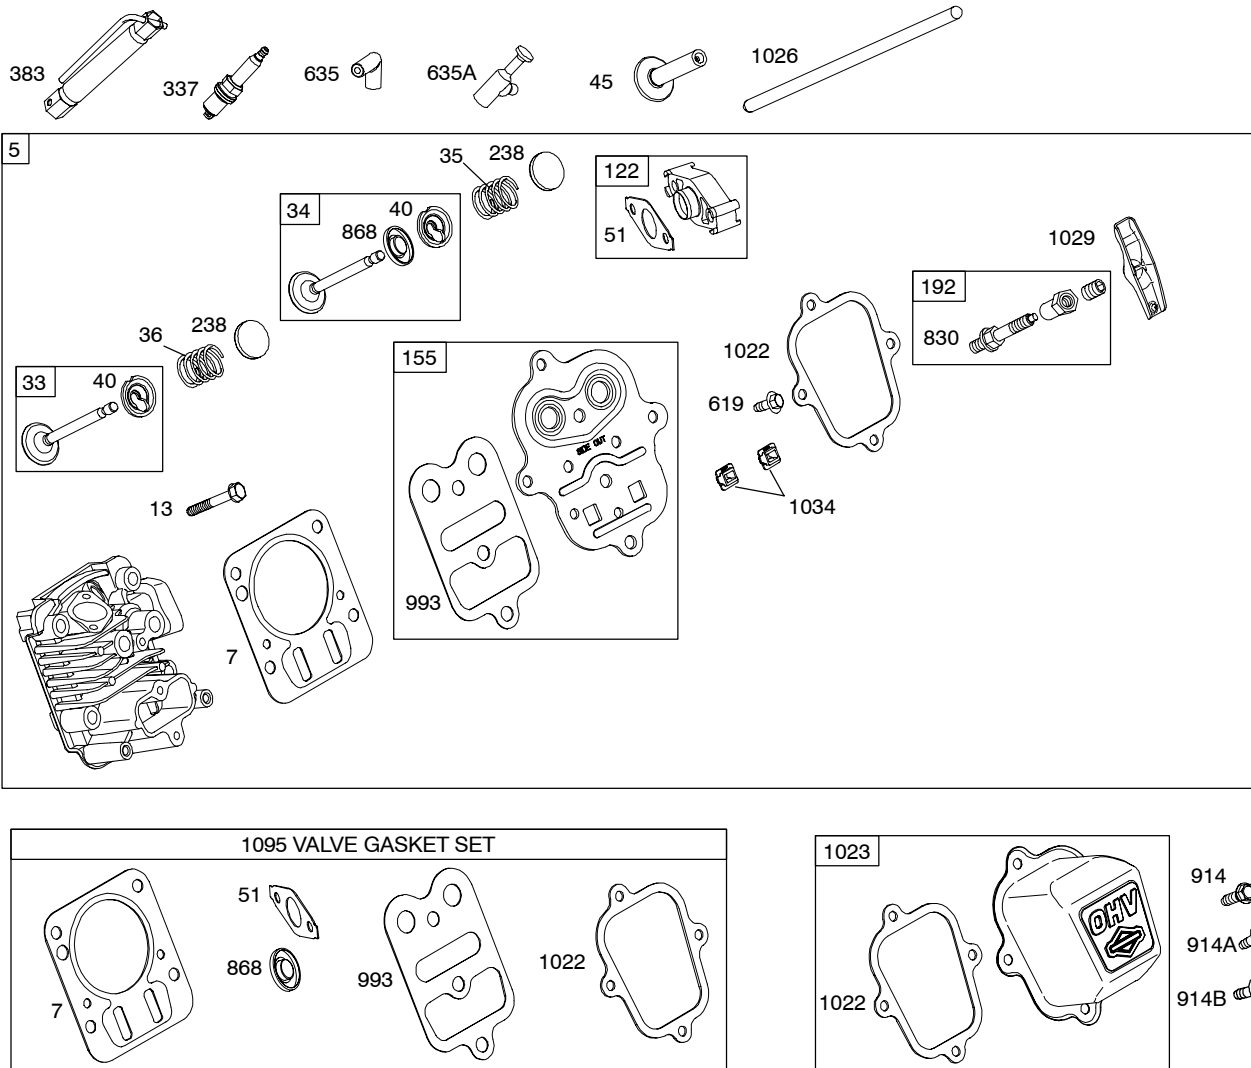




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-3

Assemblies include all parts shown in frames.

11/08/2005

127300

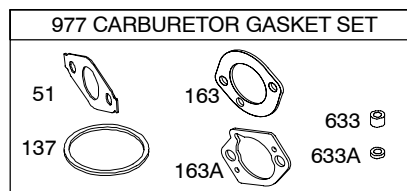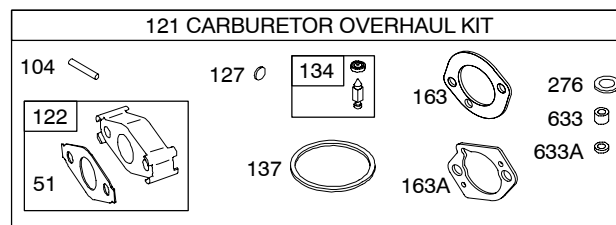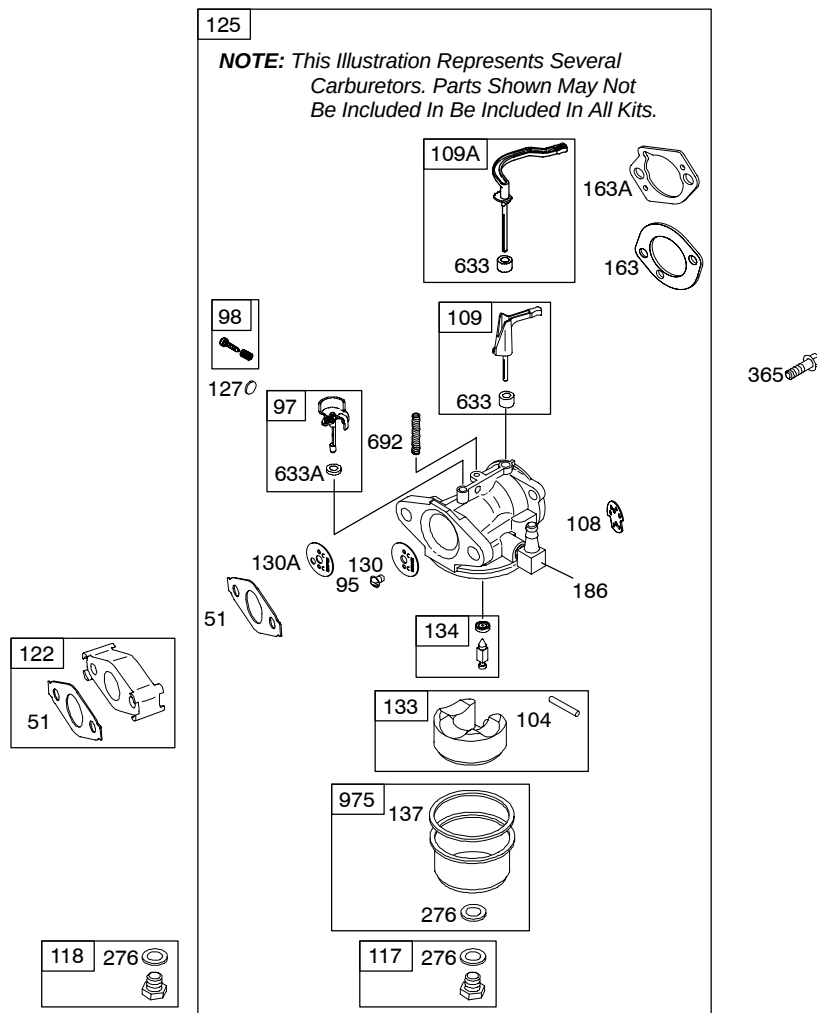


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-4

Assemblies include all parts shown in frames.

11/08/2005

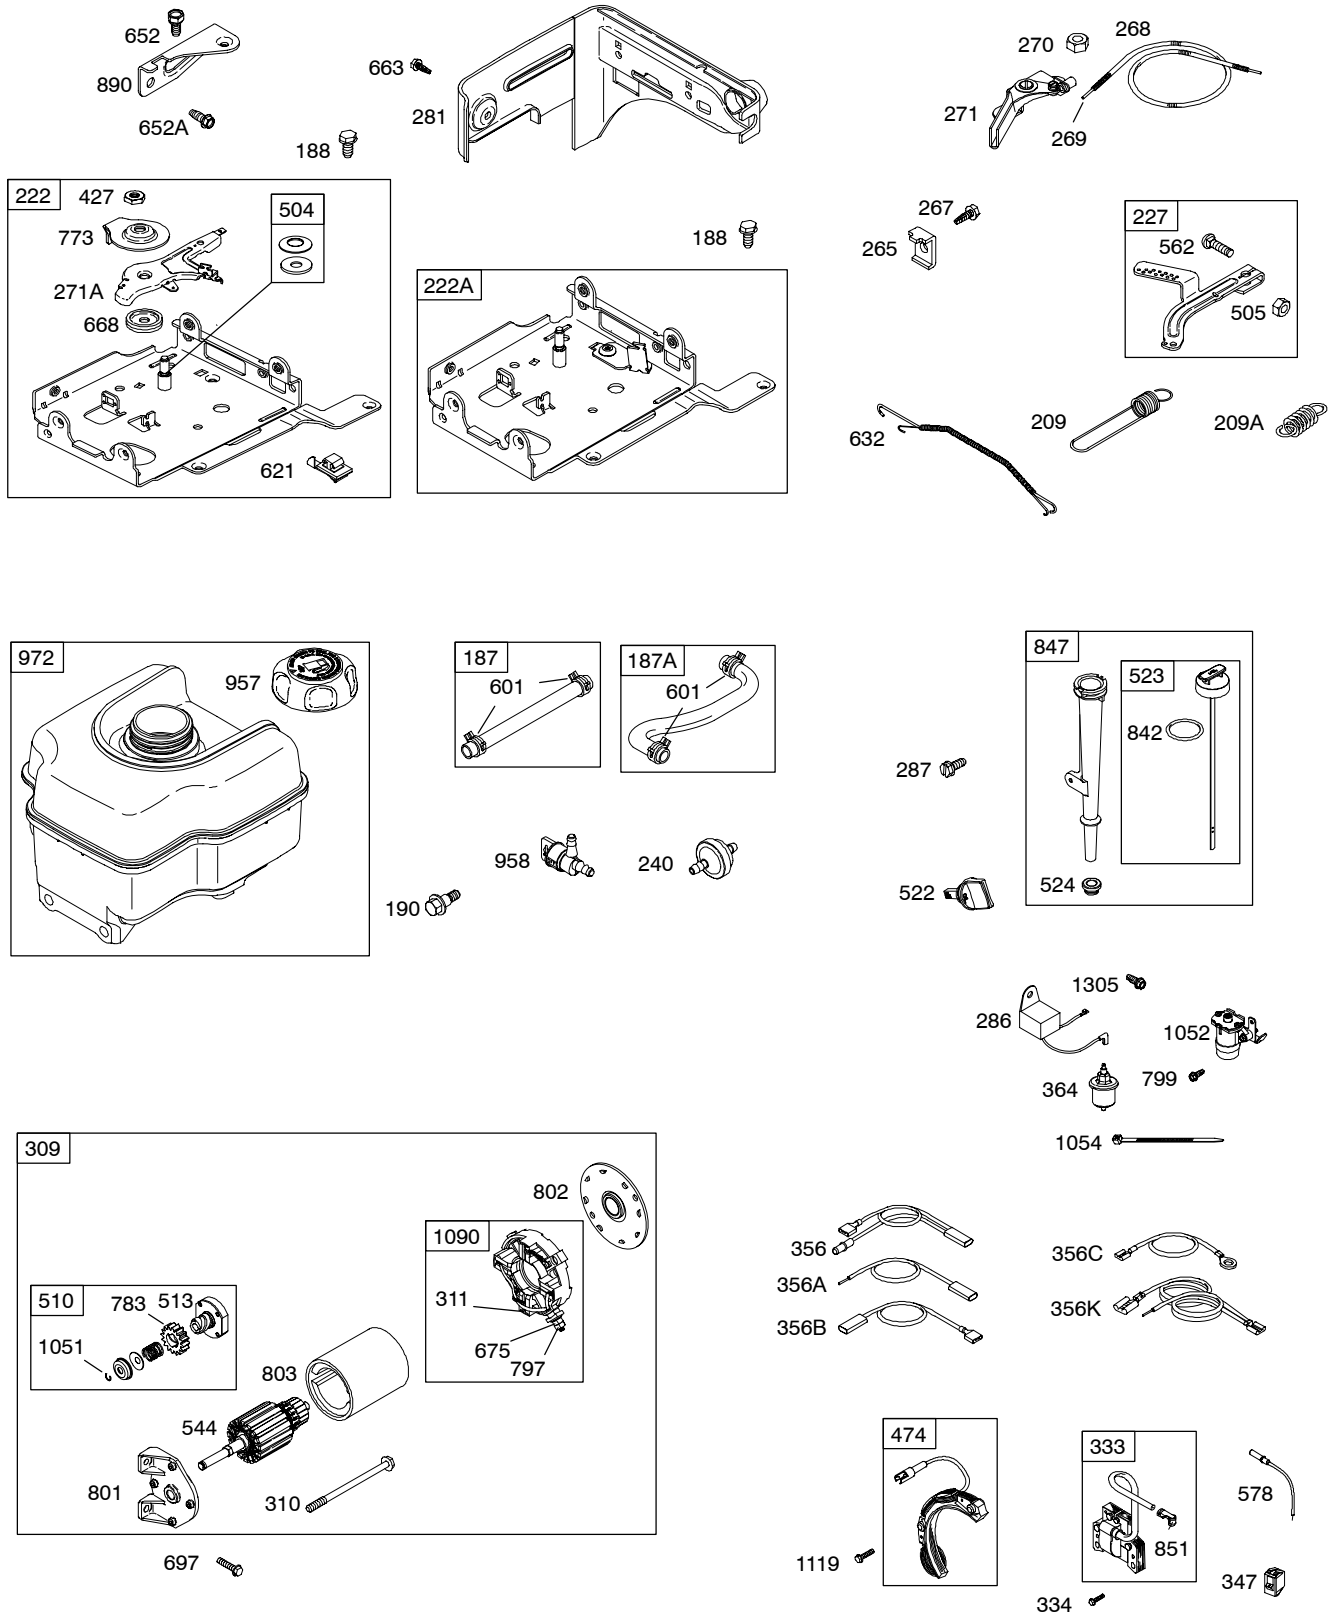


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-5

Assemblies include all parts shown in frames.

11/08/2005

127300



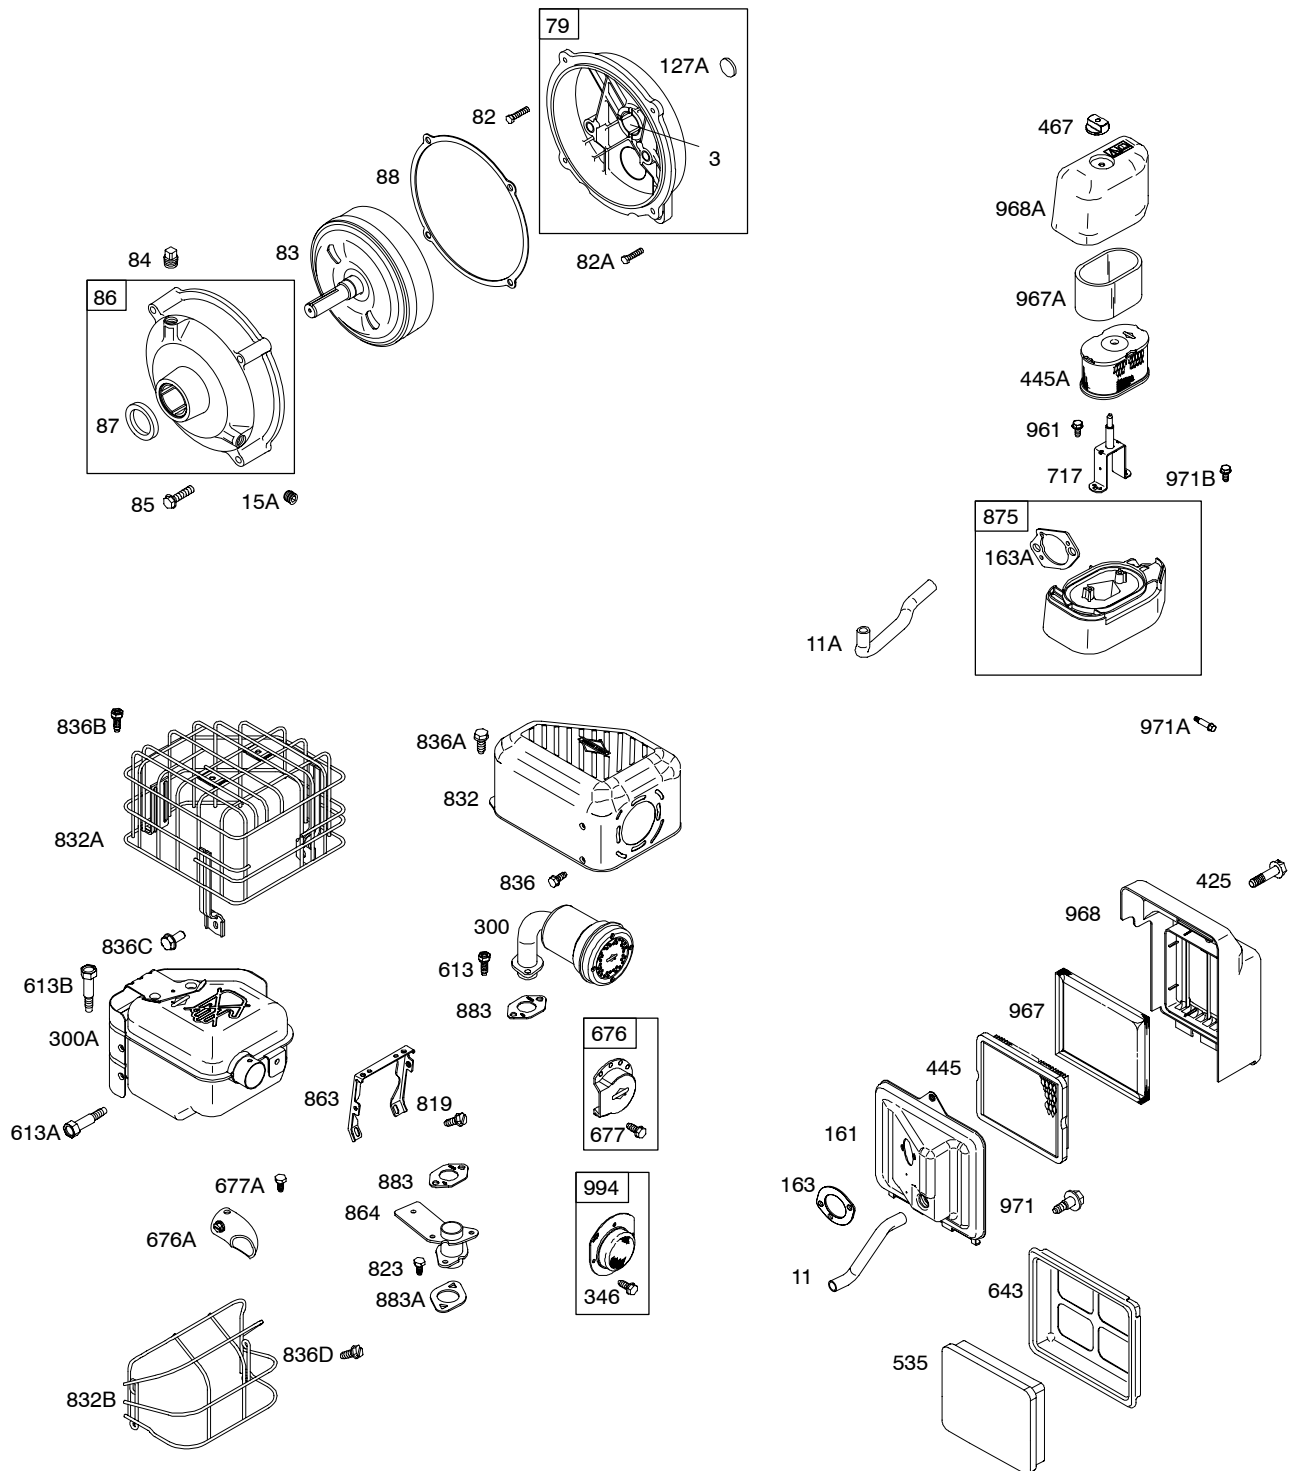


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-6

Assemblies include all parts shown in frames.

11/08/2005

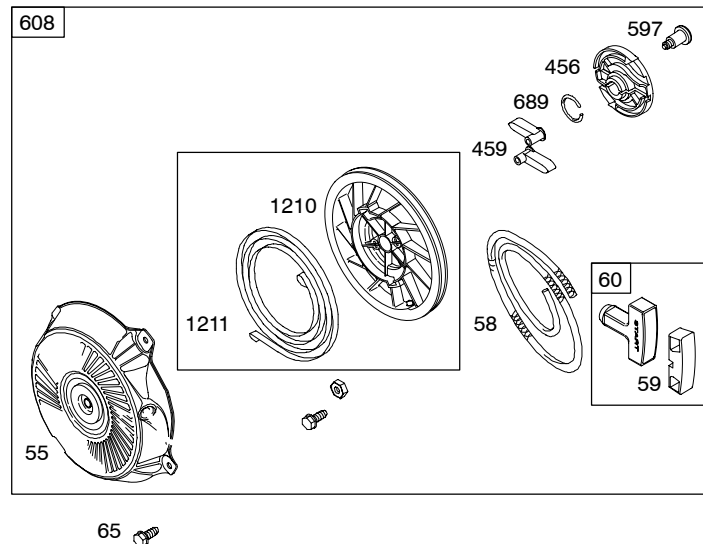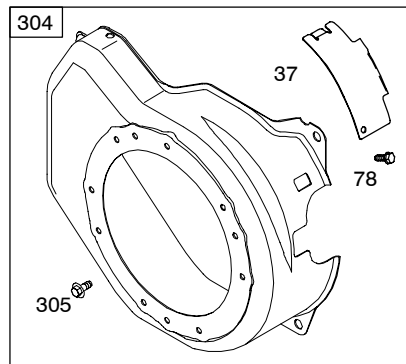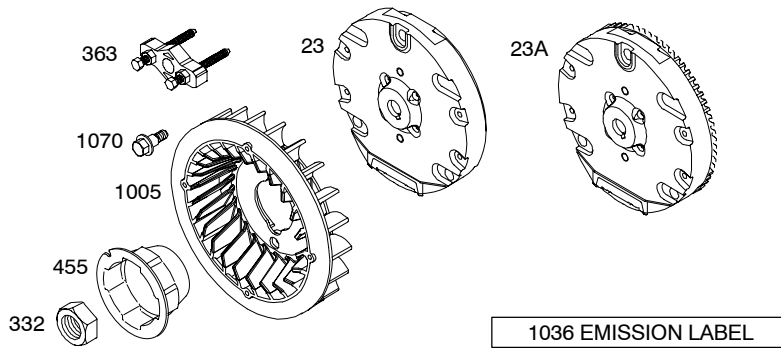

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-7

Assemblies include all parts shown in frames.

11/08/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly ----- Note ----- 699490 Cylinder-Assembly Used on Type No(s). 0116.	17	692517	Bearing-Ball	26	791969	Ring Set (Standard) (Used After Code Date 05030800). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030900).
2	399269	Kit-Bushing/Seal (Magneto Side)	18	699804	Cover-Crankcase ----- Note ----- 699696 Cover-Crankcase Used on Type No(s). 0112.			791324 Ring Set (.020" Oversize) (Used After Code Date 05030800).
3	*299819S	Seal-Oil (Magneto Side)	18A	699672	Cover-Crankcase			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).
5	699486	Head-Cylinder	18B	699761	Cover-Crankcase	27	691866	Lock-Piston Pin
7	*Ø698210	Gasket-Cylinder Head	20	*692550	Seal-Oil (PTO Side)	28	499423	Pin-Piston
11	692600	Tube-Breather (Flat Panel Air Cleaner)	20A	*694171	Seal-Oil (PTO Side)	29	690124	Rod-Connecting
11A	693647	Tube-Breather (High Mount Air Cleaner)	21	281658S	Cap-Oil Fill	30	692562	Dipper-Connecting Rod
12	*699485	Gasket-Crankcase	22	699478	Screw (Crankcase Cover/Sump)	32	691664	Screw (Connecting Rod)
13	699482	Screw (Cylinder Head)	23	699488	Flywheel	32A	695759	Screw (Connecting Rod)
15	691686	Plug-Oil Drain (Square Head)	23A	699514	Flywheel Used on Type No(s). 0118, 0126, 0169.	33	499642	Valve-Exhaust
15A	691682	Plug-Oil Drain (Flush)	24	222698S	Key-Flywheel	34	499641	Valve-Intake
16	699443	Crankshaft ----- Note ----- 699451 Crankshaft Used on Type No(s). 0111, 0126, 0131, 0154, 0171, 0173. 699442 Crankshaft Used on Type No(s). 0127, 0138, 0169, 0170, 0176. 699441 Crankshaft Used on Type No(s). 0116, 0141, 0161. 699444 Crankshaft Used on Type No(s). 0049, 0134, 0139, 0152, 0153, 0163. 699445 Crankshaft Used on Type No(s). 0112, 0145. 699452 Crankshaft Used on Type No(s). 0113.	25	792004	Piston Assembly (Standard) (Used After Code Date 05030800). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	35	691304	Spring-Valve (Intake)
						36	691304	Spring-Valve (Exhaust)
						37	699661	Guard-Flywheel
						40	692194	Retainer-Valve
						45	690977	Tappet-Valve
						46	693404	Camshaft
						51	*♦♦Ø692555	Gasket-Intake
						55	691422	Housing-Rewind Starter
						58	693389	Rope-Starter (Cut to Required Length)
						59	490653	Grip-Insert
						60	490652	Grip-Starter Rope (2 Piece)
						65	699228	Screw (Rewind Starter)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-8

Assemblies include all parts shown in frames.

11/08/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
78	699205	Screw (Flywheel Guard)	118	494870	Jet–Main (High Altitude) ----- Note -----	137	♦♦693981	Gasket–Float Bowl
79	694511	Case–Gear Reduction				146	690979	Key–Timing
82	690369	Screw (Gear Reduction Case)				155	★698214	Plate–Cylinder Head
82A	790197	Screw (Gear Reduction Case)				161	699207	Base–Air Cleaner (Flat Panel Air Cleaner)
83	690374	Shaft–Auxiliary Drive						----- Note -----
84	691121	Plug–Breather						699504 Base–Air Cleaner (Flat Panel Air Cleaner) Used on Type No(s). 0169, 0170.
85	692551	Screw (Gear Cover to Gear Reduction)						
86	690608	Cover–Gear						
87	691582	Seal–Gear Reduction	121	696998	Kit–Carburetor Overhaul	163	♦♦696024	Gasket–Air Cleaner (Flat Panel Air Cleaner)
88	691600	Gasket–Gear Reduction Cover	122	★♦693749	Spacer–Carburetor			
95	691636	Screw (Throttle Valve)	125	697354	Carburetor ----- Note -----	163A	♦♦696979	Gasket–Air Cleaner (High Mount Air Cleaner)
97	690024	Shaft–Throttle						
98	398185	Kit–Idle Speed (Carburetor)				170	699818	Stud (Crankcase Cover)
104	♦691242	Pin–Float Hinge				186	692317	Connector–Hose
108	692567	Valve–Choke ----- Note -----				187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000).
		699111 Valve–Choke Used on Type No(s). 0127, 0138, 0169, 0170, 0176.						----- Note -----
109	690023	Shaft–Choke						691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).
109A	693628	Shaft–Choke	127	♦691739	Plug–Welch ----- Note -----			
117	697355	Jet–Main (Standard) ----- Note -----						
		498976 Jet–Main (Standard) Used on Type No(s). 0127, 0169, 0170, 0176.				187A	791867	Line–Fuel (Molded) (Used After Code Date 05063000).
		498975 Jet–Main (Standard) Used on Type No(s). 0138.	127A	691585	Plug–Welch			----- Note -----
			130	691181	Valve–Throttle			692601 Line–Fuel (Molded) (Used Before Code Date 05070100).
			130A	691203	Valve–Throttle Used on Type No(s). 0127, 0138, 0169, 0170, 0176.			
			133	398187	Float–Carburetor			
			134	♦398188	Kit–Needle/Seat			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720–9

Assemblies include all parts shown in frames.

11/08/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
188	699479	Screw (Control Bracket)	287	699629	Screw (Dipstick Tube)	425	699208	Screw (Air Cleaner Cover)	
190	699220	Screw (Fuel Tank)	300	693593	Muffler	427	694255	Nut (Control Bracket)	
192	694543	Adjustor-Rocker Arm	300A	699231	Muffler	445	491588S	Filter-Air Cleaner Cartridge (Flat Panel)	
209	692571	Spring-Governor ----- Note ----- 693206 Spring-Governor Used on Type No(s). 0111, 0116, 0125, 0141.	304	699598	Housing-Blower	445A	697029	Filter-Air Cleaner Cartridge (High Mount)	
209A	691278	Spring-Governor	305	699480	Screw (Blower Housing)	455	692591	Cup-Flywheel	
219	693578	Gear-Governor	306	693610	Shield-Cylinder	456	692299	Plate-Pawl Friction	
220	691724	Washer (Governor Gear)	307	699483	Screw (Cylinder Shield)	459	281505S	Pawl-Ratchet	
222	699589	Bracket-Control	309	694504	Motor-Starter	467	691668	Knob-Air Cleaner	
222A	699493	Bracket-Control ----- Note ----- 699590 Bracket-Control Used on Type No(s). 0127, 0138, 0176.	310	690323	Screw (Starter Motor)	474	694457	Alternator Used on Type No(s). 0169.	
227	692573	Lever-Governor Control	311	497608	Brush Set	----- Note ----- 695730 Alternator Used on Type No(s). 0126.	504	694254	Washer Set-Friction
238	691300	Valve-Cap	332	699359	Nut (Flywheel)	505	691251	Nut (Governor Control Lever)	
240	298090S	Filter-Fuel	333	695711	Armature-Magneto	510	499308	Drive-Starter	
265	691024	Clamp-Casing	334	699477	Screw (Magneto Armature)	513	692024	Drive-Clutch	
267	699492	Screw (Casing Clamp)	337	491055S	Plug-Spark (Resistor) ----- Note ----- 691043 Plug-Spark (EMS)	522	697689	Plug-Dipstick/Fill	
268	691025	Casing-Control Wire (Cut to Required Length)	346	690661	Screw (Spark Arrestor)	523	693618	Dipstick	
269	691026	Wire-Control (Cut to Required Length)	347	697854	Switch-Rocker ----- Note ----- 698338 Switch-Rocker Used on Type No(s). 0122, 0139, 0154, 0156, 0171.	524	281370S	Seal-Dipstick Tube	
270	691027	Nut (Control Wire Casing)	356	693651	Wire-Stop	524	281370S	Seal-Dipstick Tube	
271	691028	Lever-Control	356A	692390	Wire-Stop	544	692966	Armaturel-Starter	
271A	694256	Lever-Control	356B	692602	Wire-Stop	535	696263	Filter-Air Cleaner Foam	
276	●271716	Washer-Sealing	356C	695630	Wire-Stop	552	692346	Bushing-Governor Crank	
281	699639	Panel-Control	356K	791765	Wire-Stop	562	691119	Bolt (Governor Control Lever)	
286	698611	Module-Oil Sensor	358	699638	Gasket Set-Engine	578	692306	Wire Assembly	
			363	19069	Puller-Flywheel	597	691696	Screw (Pawl Friction Plate)	
			364	695693	Terminal-Oil Plug	601	95162S	Clamp-Hose	
			365	699484	Screw (Carburetor)	608	693394	Starter-Rewind	
			383	19374S	Wrench-Spark Plug				
			415	693463	Plug				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-10

Assemblies include all parts shown in frames.

11/08/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	699209	Screw (Muffler)	717	693462	Bracket-Air Cleaner	883	★691893	Gasket-Exhaust
613A	699230	Screw (Muffler)	718	690959	Pin-Locating	883A	★692237	Gasket-Exhaust
613B	697812	Screw (Muffler)	727	698039	Cover-Starter Drive	890	790203	Bracket-Support
615	692576	Retainer-Governor Shaft	732	699200	Screw (Starter Drive Cover)	914	699481	Screw (Rocker Cover) (Bottom)
616	692547	Crank-Governor	741	695087	Gear-Timing	914A	692557	Screw (Rocker Cover) (Top)
619	699230	Screw (Cylinder Head Plate)	742	692564	Retainer-E Ring	914B	697551	Screw (Rocker Cover) (Center)
621	692310	Switch-Stop	746	692566	Gear-Idler	957	694261	Cap-Fuel Tank
632	693408	Spring/Link-Mechanical Governor	773	694258	Retainer	958	698180	Valve-Fuel Shut Off
633	◆693867	Seal-Choke/Throttle Shaft	783	692353	Gear-Pinion	961	698304	Screw (Air Cleaner Bracket)
633A	◆691321	Seal-Choke/Throttle Shaft	797	691029	Nut (Brush Retainer)	967	493537S	Filter-Pre Cleaner (Flat Panel)
635	692076	Boot-Spark Plug	799	699202	Screw (Oil Sensor)	967A	273356S	Filter-Pre Cleaner (High Mount)
635A	692927	Boot-Spark Plug	801	694482	Cap-Drive	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)
643	696264	Retainer-Air Filter	802	691286	Cap-End	968A	693460	Cover-Air Cleaner (High Mount)
652	699755	Screw (Support Bracket)	803	693757	Housing-Starter	971	690370	Screw (Air Cleaner Base)
652A	699230	Screw (Support Bracket)	819	699233	Screw (Muffler Bracket)	971A	690349	Screw (Air Cleaner Base)
663	699206	Screw (Control Panel)	823	699209	Screw (Muffler Adapter)	971B	699629	Screw (Air Cleaner Base)
668	694257	Spacer	830	694544	Stud-Rocker Arm	972	694260	Tank-Fuel
675	691261	Washer (Brush Retainer)	832	693583	Guard-Muffler	975	493640	Bowl-Float
676	393757	Deflector-Muffler	832A	697818	Guard-Muffler	977	697001	Gasket Set-Carburetor
676A	697816	Deflector-Muffler	832B	696516	Guard-Muffler	993	Ø694088	Gasket-Cylinder Head Plate
677	690661	Screw (Muffler Deflector)	836	699203	Screw (Muffler Guard)	994	399541	Arrester-Spark
677A	699776	Screw (Muffler Deflector)	836A	699632	Screw (Muffler Guard)	1005	692592	Fan-Flywheel
689	691855	Spring-Friction	836B	699209	Screw (Muffler Guard)	1019	694852	Kit-Label
692	690572	Spring-Detent	836C	699234	Screw (Muffler Guard)	1022	★Ø691890	Gasket-Rocker Cover
697	790537	Screw (Starter Motor) (Used After Code Date 04110800).	836D	699204	Screw (Muffler Guard)	1023	499924	Cover-Rocker Arm
		----- Note -----	842	691031	Seal-O Ring (Dipstick Tube)	1026	790287	Rod-Push
		699773 Screw (Starter Motor) (Used Before Code Date 04110900).	847	693617	Dipstick/Tube Assembly	1029	691230	Arm-Rocker
			851	493880S	Terminal-Spark Plug	1034	691343	Guide-Push Rod
			863	699229	Bracket-Muffler			
			864	699232	Adapter-Muffler			
			868	★Ø692044	Seal-Valve			
			875	697030	Base-Air Cleaner (High Mount)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5720-11

Assemblies include all parts shown in frames.

11/08/2005

127300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)	1090	691293	Retainer-Brush	1211	498144	Pulley/Spring Assembly (Spring)
1051	691265	Ring-Retaining	1095	698215	Gasket Set-Valve	1305	699691	Screw (Oil Sensor Module)
1052	790141	Sensor-Oil	1119	699772	Screw (Alternator)	1330	272147	Repair Manual
1054	280275	Cable-Tie	1210	498144	Pulley/Spring Assembly (Pulley)			
1058	276355	Owner's Manual						
1070	699201	Screw (Flywheel Fan)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5720-12**

Assemblies include all parts shown in frames.

11/08/2005