



127700

Illustrated Parts List

Model Series

127700

TYPE NUMBERS
0100 through 4715.

TABLE OF CONTENTS


Alternator	7
Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	7
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	7
Fuel Supply	5
Governor Spring	5
Ignition	7
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2

BRIGGS & STRATTON







PRINTED IN U.S.A.





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



127700










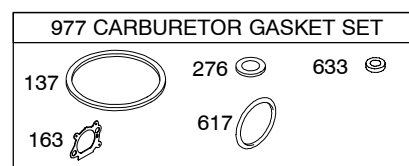
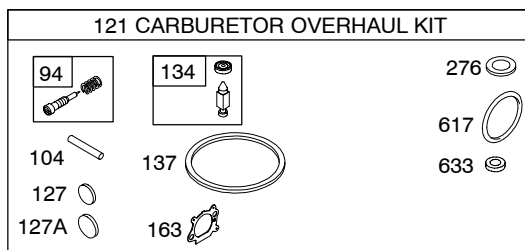
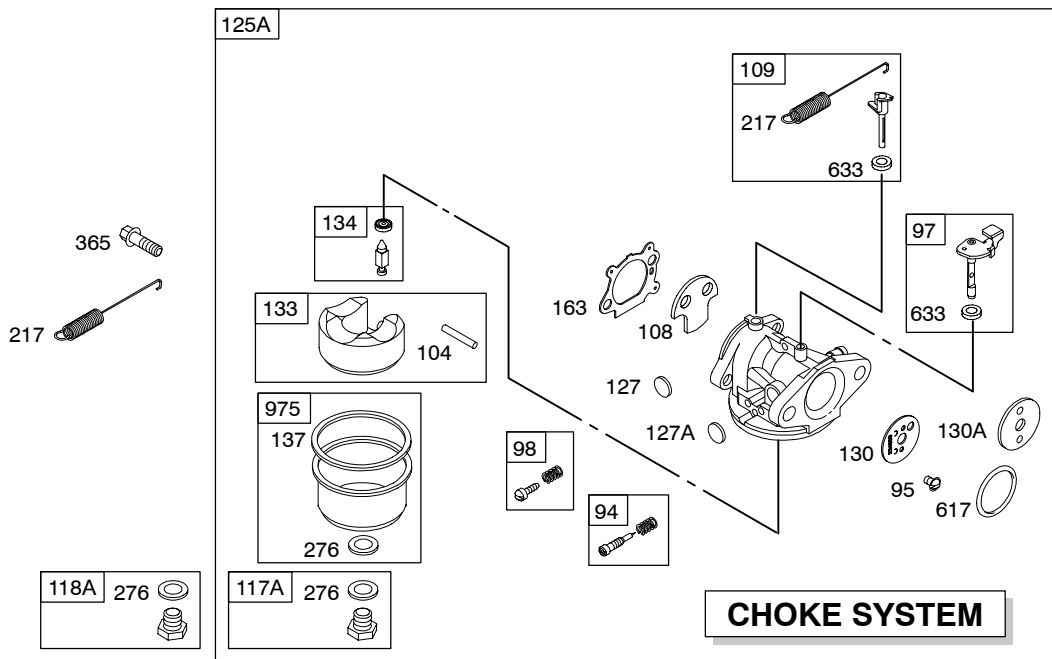
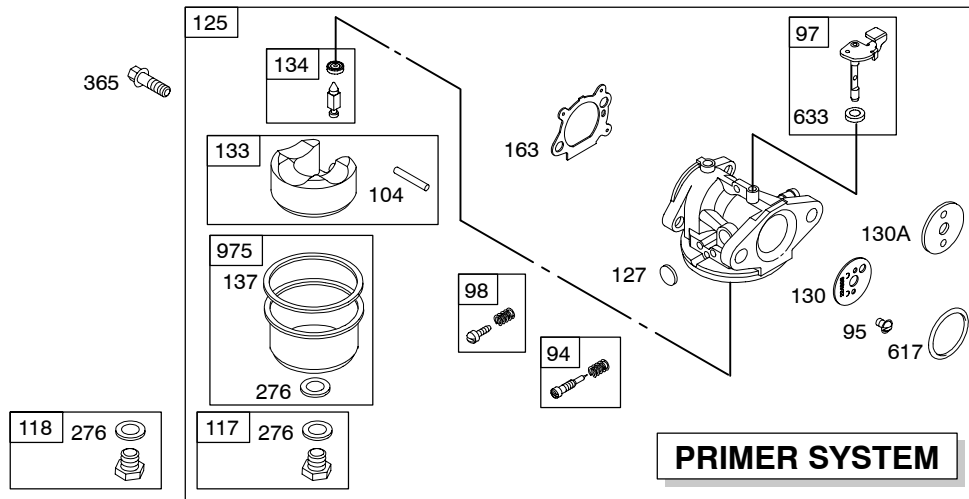


127700


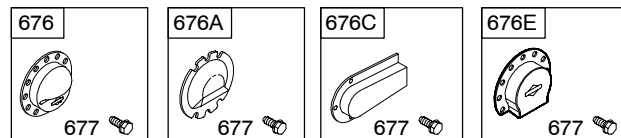
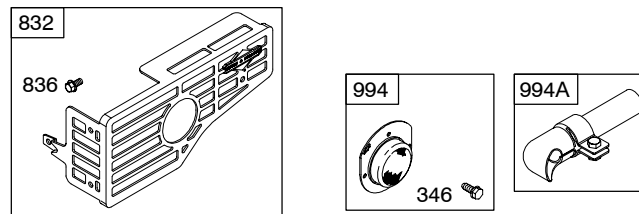
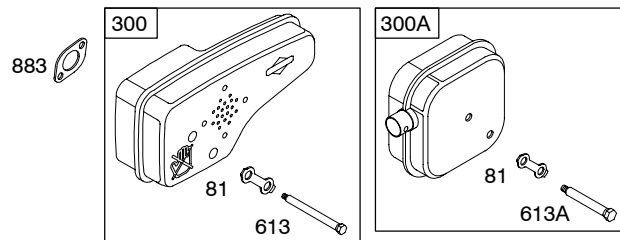
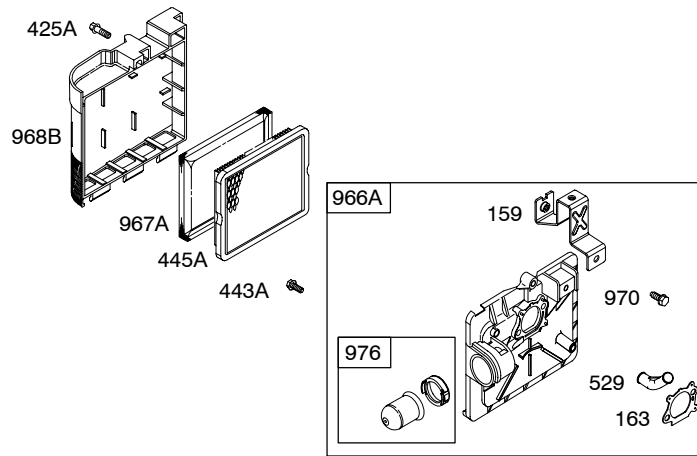


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0567-4 Assemblies include all parts shown in frames. **09/19/2005**

127700

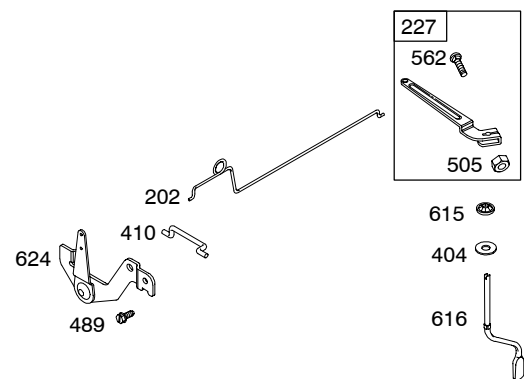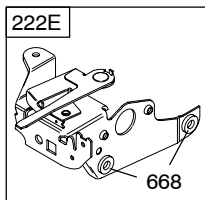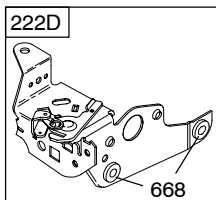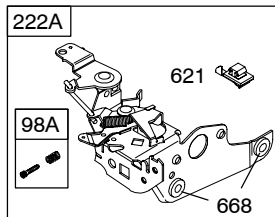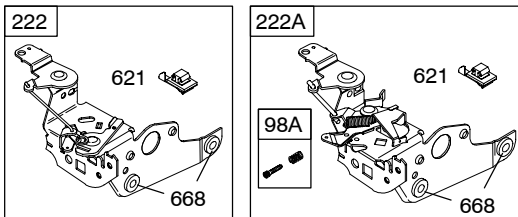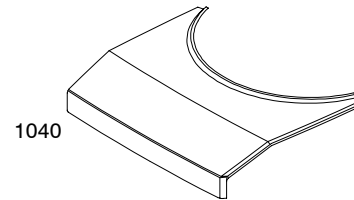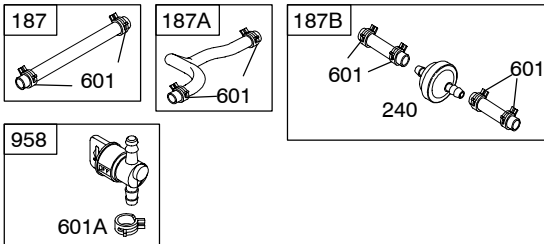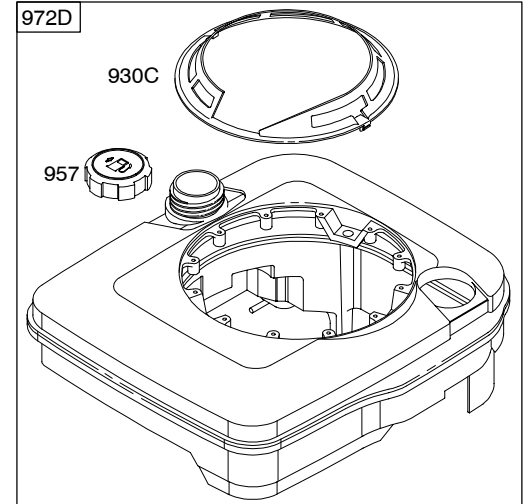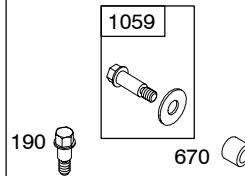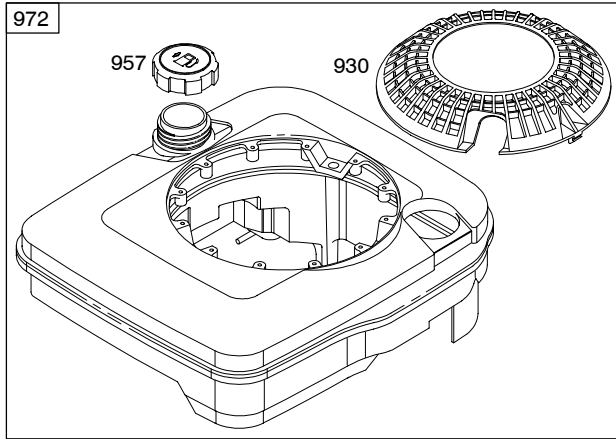


127700

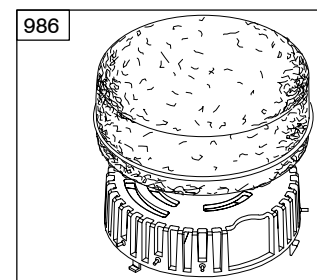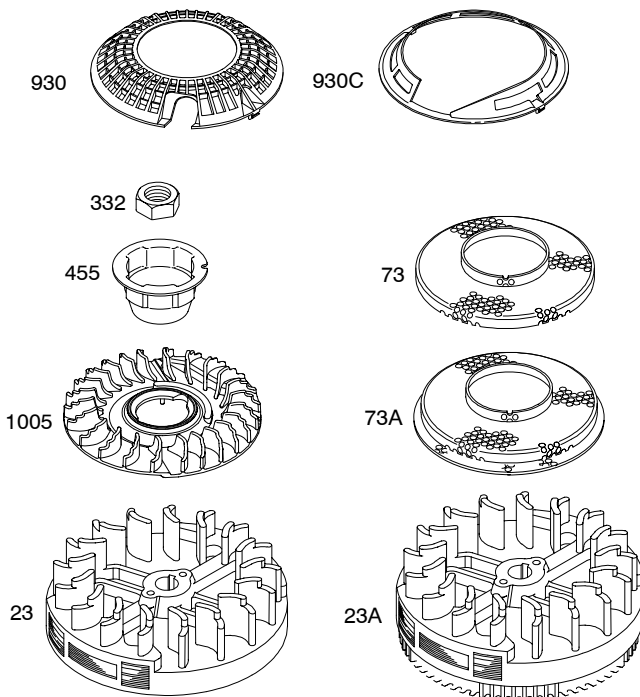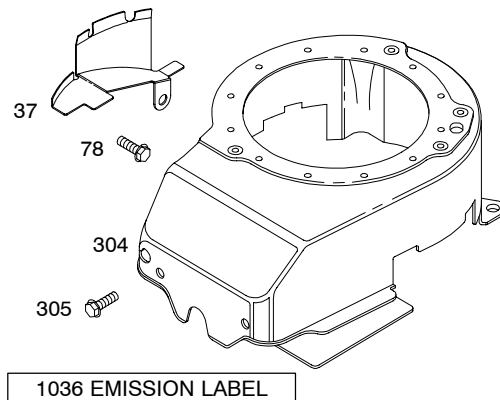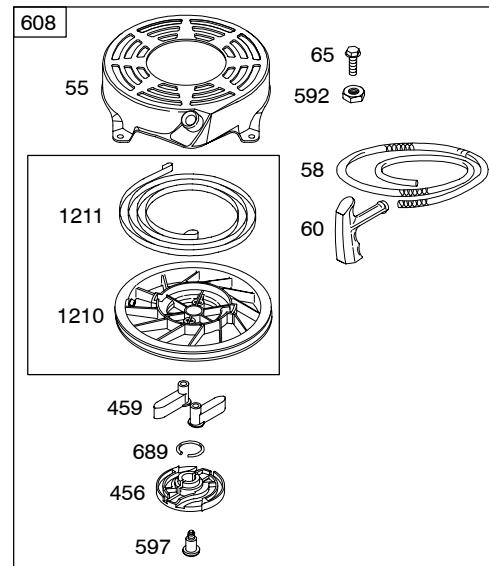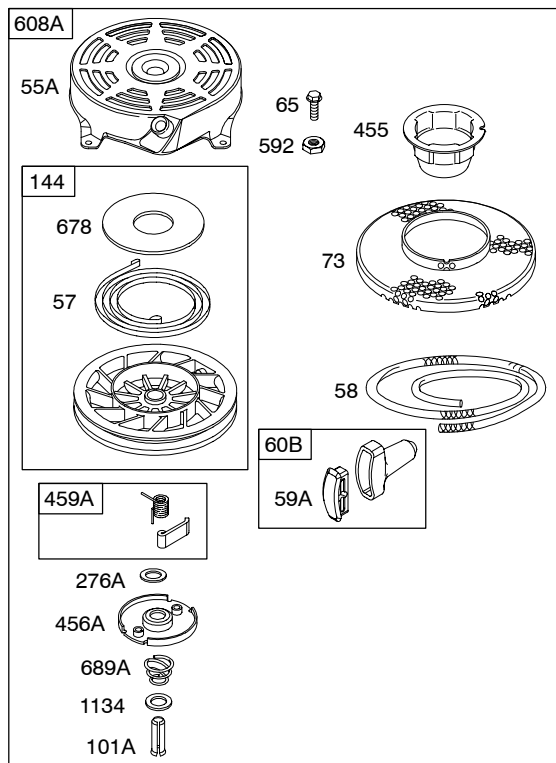

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0567-6 Assemblies include all parts shown in frames. 09/19/2005

127700

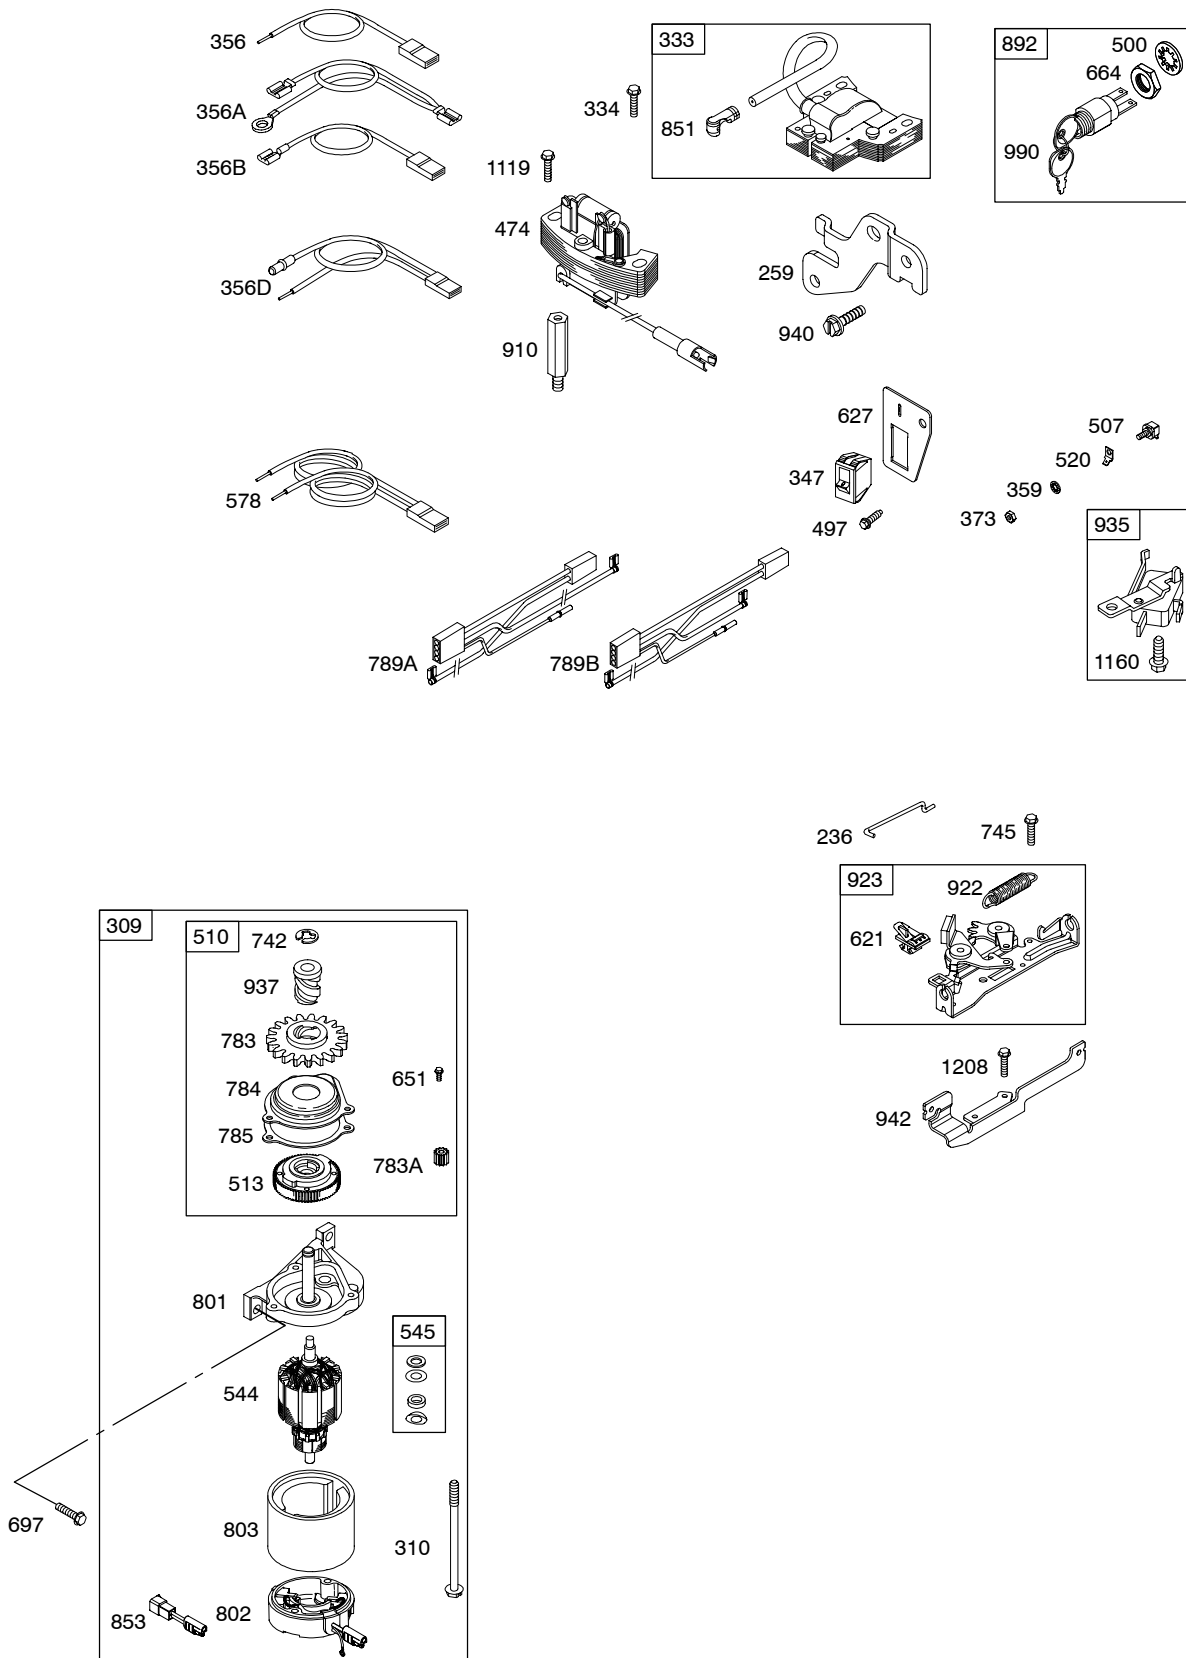

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0567-7 Assemblies include all parts shown in frames. 09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft (Used After Code Date 97011200). ----- Note ----- 694442 Crankshaft (Used Before Code Date 97011300). ----- 691450 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0600, 0608, 0623, 0627, 0629, 0632, 0633, 0639, 0640, 0641, 1700, 1708, 1746. 694440 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0100, 0120, 0123, 0600, 0608, 0623, 0627, 0632. ----- 691452 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0617, 0618, 0624, 0647, 1709, 1711, 1716, 1722, 1723, 1724, 1736, 1740, 1791, 1792. 694059 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0617, 0618, 0624.			691454 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0646. 692000 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0646. ----- 691455 Crankshaft (Used After Code Date 97011200). Used on Type No(s). 0660, 0672, 0674, 4711. 691375 Crankshaft (Used Before Code Date 97011300). Used on Type No(s). 0660, 0672. ----- 694443 Crankshaft Used on Type No(s). 0115, 0131, 0645, 1745. 691482 Crankshaft Used on Type No(s). 1783.
2	399269	Kit-Bushing/Seal (Magneto Side)						
3	★299819	Seal-Oil (Magneto Side)						
4	493279	Sump-Engine ----- Note ----- 498983 Sump-Engine Used on Type No(s). 1762.						
4A	493365	Sump-Engine						
5	691160	Head-Cylinder						
6	690371	Washer (Cylinder Head) Used on Type No(s). 0618, 0624.						
7	★Ø692249	Gasket-Cylinder Head						
8	695250	Breather Assembly						
9	★Ø272481	Gasket-Breather						
10	691125	Screw (Breather Assembly)						
11	691781	Tube-Breather						
12	★692232	Gasket-Crankcase						
13	690912	Screw (Cylinder Head)						
14	690368	Stud (Cylinder Head) Used on Type No(s). 0618, 0624.						
15	691680	Plug-Oil Drain (Square Socket)						
15A	691093	Plug-Oil Drain (Hex Socket)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**0567-8**

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	★399781	Seal–Oil (PTO Side)	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400). ----- Note -----	26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note -----
20A	★691952	Seal–Oil (PTO Side) (Auxiliary PTO)						
22	691092	Screw (Crankcase Cover/ Sump)			499429 Piston Assembly (Standard) (Used After Code Date 97011200 and Before Code Date 04031500).			499425 Ring Set (Standard) (Used After Code Date 97011200 and Before Code Date 04031500).
23	692315	Flywheel (Rewind Start)			493262 Piston Assembly (Standard) (Used Before Code Date 97011300).			493261 Ring Set (Standard) (Used Before Code Date 97011300).
23A	691987	Flywheel (Electric Start) ----- Note ----- 691992 Flywheel (Electric Start) Used on Type No(s). 0660, 0672, 0674, 1770, 1783, 4711, 4715.			499430 Piston Assembly (.010" Oversize) (Used After Code Date 97011200).			499426 Ring Set (.010" Oversize) (Used After Code Date 97011200).
24	222698	Key–Flywheel			493385 Piston Assembly (.010" Oversize) (Used Before Code Date 97011300).			493388 Ring Set (.010" Oversize) (Used Before Code Date 97011300).
					791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100).			791324 Ring Set (.020" Oversize) (Used After Code Date 04102100).
					499431 Piston Assembly (.020" Oversize) (Used After Code Date 97011200 and Before Code Date 04102200).			499427 Ring Set (.020" Oversize) (Used After Code Date 97011200 and Before Code Date 04102200).
					493386 Piston Assembly (.020" Oversize) (Used Before Code Date 97011300).			493389 Ring Set (.020" Oversize) (Used Before Code Date 97011300).
					499432 Piston Assembly (.030" Oversize) (Used After Code Date 97011200).			499428 Ring Set (.030" Oversize) (Used After Code Date 97011200).
					493387 Piston Assembly (.030" Oversize) (Used Before Code Date 97011300).			493390 Ring Set (.030" Oversize) (Used Before Code Date 97011300).

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***0567–9**

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691866	Lock-Piston Pin (Used After Code Date 97011200). ----- Note ----- 691588 Lock-Piston Pin (Used Before Code Date 97011300).	40	692194	Retainer-Valve	55	691421	Housing-Rewind Starter
28	499423	Pin-Piston (Standard) (Used After Code Date 97011200). ----- Note ----- 298909 Pin-Piston (Standard) (Used Before Code Date 97011300). 298908 Pin-Piston (.005" Oversize) (Used Before Code Date 97011300).	43	691997	Slinger -Governor/Oil ----- Note ----- 691486 Slinger-Governor/Oil Used on Type No(s). 1762.	55A	492831	Housing-Rewind Starter
29	499424	Rod-Connecting (Standard) (Used After Code Date 97011200). ----- Note ----- 490566 Rod-Connecting (Standard) (Used Before Code Date 97011300). 490743 Rod-Connecting (.020" Undersize) (Used Before Code Date 97011300).	45	690548	Tappet-Valve	57	491889	Spring-Rewind Starter
32	691664	Screw (Connecting Rod)	46	691449	Camshaft (Used After Code Date 96060200). ----- Note ----- 492830 Camshaft (Used Before Code Date 96060300).	58	697316	Rope-Starter (Cut To Required Length)
32A	695759	Screw (Connecting Rod)	46A	691460	Camshaft (Clockwise) (Used After Code Date 96060200). Used on Type No(s). 0627. ----- Note ----- 493740 Camshaft (Clockwise) (Used Before Code Date 96060300). Used on Type No(s). 0627.	59A	396892	Insert-Grip
33	262651	Valve-Exhaust			691459 Camshaft (Counterclockwise) (Used After Code Date 96060200). Used on Type No(s). 0144, 0629, 0633, 0644, 1715, 1746, 1752, 1770.	60	281434	Grip-Starter Rope
34	262652	Valve-Intake			493738 Camshaft (Counterclockwise) (Used Before Code Date 96060300). Used on Type No(s). 0144, 0644.	60B	393152	Grip-Starter Rope
35	691270	Spring-Valve (Intake)	50	497465	Manifold-Intake	65	690837	Screw (Rewind Starter)
36	691270	Spring-Valve (Exhaust)	51	★272199	Gasket-Intake	73	691222	Screen-Rotating
37	694086	Guard-Flywheel	54	691650	Screw (Intake Manifold)	73A	224251	Screen-Rotating
						78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						83	691778	Shaft-Auxiliary Drive ----- Note ----- 690521 Shaft-Auxiliary Drive Used on Type No(s). 0144, 0644. 690522 Shaft-Auxiliary Drive Used on Type No(s). 1770.
						94	●493765	Kit-Idle Mixture
						95	691636	Screw (Throttle Valve)
						97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)
						98	398185	Kit-Idle Speed
						98A	493280	Kit-Idle Speed
						101	691623	Pin-Shaft
						101A	262626	Pin-Shaft (For Rewind Starter)
						104	●691242	Pin-Float Hinge
						108	691182	Valve-Choke
						109	494218	Shaft-Choke

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0567-10

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	494870	Jet–Main (Standard) (Used After Code Date 96060200). ----- Note ----- 497466 Jet–Main (Standard) (Used After Code Date 95102900 and Before Code Date 96060300). 497315 Jet–Main (Standard) (Used Before Code Date 95103000). 493637 Jet–Main (Standard) Used on Type No(s). 0100, 0117, 0119, 0124, 0130, 0131, 0144.	118	497315	Jet–Main (High Altitude) (Used After Code Date 96060200). ----- Note ----- 496495 Jet–Main (High Altitude) (Used After Code Date 95102900 and Before Code Date 96060300). 497348 Jet–Main (High Altitude) (Used Before Code Date 95103000). 496063 Jet–Main (High Altitude) Used on Type No(s). 0100, 0117, 0119, 0124, 0130, 0131, 0144.	127	●694468	Plug–Welch
117A	498977	Jet–Main (Standard) (Used After Code Date 96060200). ----- Note ----- 493637 Jet–Main (Standard) (Used Before Code Date 96060300).	118A	498981	Jet–Main (High Altitude) (Used After Code Date 96060200). ----- Note ----- 496063 Jet–Main (High Altitude) (Used Before Code Date 96060300). 121 498260 Kit–Carburetor Overhaul 125 498170 Carburetor (Used After Code Date 96060200). ----- Note ----- 498254 Carburetor (Used Before Code Date 96060300). 496114 Carburetor Used on Type No(s). 0100, 0117, 0119, 0124, 0130, 0131, 0144. 125A 498965 Carburetor (Used After Code Date 96060200). ----- Note ----- 494217 Carburetor (Used Before Code Date 96060300). 499059 Carburetor Used on Type No(s). 1762.	127A	●691739	Plug–Welch
						130	691203	Valve–Throttle ----- Note ----- 696564 Valve–Throttle (Primer System) (Used After Code Date 01040800). 130A 691181 Valve–Throttle 133 398187 Float–Carburetor 134 ●398188 Kit–Needle/Seat 137 ●◆693981 Gasket–Float Bowl 144 493824 Pulley/Spring Assembly 146 690979 Key–Timing 159 691753 Bracket–Air Cleaner Primer 163★◆272653 Gasket–Air Cleaner 187 791766 Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100). 187A 791873 Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line–Fuel (Molded) (Used Before Code Date 05070100). 187B 791891 Line–Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line–Fuel (Includes Filter) (Used Before Code Date 05070100). 188 690877 Screw (Control Bracket) 190 690940 Screw (Fuel Tank) 202 691829 Link–Mechanical Governor

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***0567–11**

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION																																	
209	699056	Spring-Governor ----- Note ----- 691852 Spring-Governor Used on Type No(s). 1714, 1722, 1792. 691851 Spring-Governor Used on Type No(s). 0618, 0624, 0639, 1734. 691292 Spring-Governor Used on Type No(s). 0600, 0608, 0645, 1700, 1705, 1708, 1710, 1711, 1712, 1713, 1715, 1716, 1717, 1718, 1719, 1723, 1736, 1740, 1745, 1746, 1791, 1792. 691291 Spring-Governor Used on Type No(s). 4715. 691290 Spring-Governor Used on Type No(s). 0674. 690241 Spring-Governor Used on Type No(s). 1762.	209A	691276	Spring-Governor ----- Note ----- 691835 Spring-Governor Used on Type No(s). 0646, 0647. 691834 Spring-Governor Used on Type No(s). 0117, 0119, 0123, 0144, 0629, 0633, 0641, 0648, 0651, 0653, 0654, 0678. 691833 Spring-Governor Used on Type No(s). 0626. 691275 Spring-Governor Used on Type No(s). 0120, 0124. 690569 Spring-Governor Used on Type No(s). 0627, 0632. 690568 Spring-Governor Used on Type No(s). 0672. 690567 Spring-Governor Used on Type No(s). 0660. 262661 Spring-Governor Used on Type No(s). 0100, 0115, 0131. 262659 Spring-Governor Used on Type No(s). 0130.	217 222	690354 790143	Spring-Choke Return Bracket-Control (Remote/Manual Friction) (Primer)	222A	692021	Bracket-Control (Remote, Choke A Matic, Non Compliance) ----- Note ----- 690839 Bracket-Control (Manual Friction) (Choke A Matic) Used on Type No(s). 0648, 0651, 0653, 0654, 0672, 0676, 0677, 0678.	222D	692467	Bracket-Control (Fixed Speed)	222E	692982	Bracket-Control (Fixed Speed, and 5 Position Manual Choke)	227	690783	Lever-Governor Control	236	691826	Link-Lockout	240	298090	Filter-Fuel	259	691223	Bracket-Casing Clamp	265	690798	Clamp-Casing	265A	691024	Clamp-Casing	267	691044	Screw (Casing Clamp)	268	691025	Casing-Control Wire (72" Long) (Cut to Required Length) ----- Note ----- 691072 Casing-Control Wire (48" Long) (Cut to Required Length)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***0567-12**

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
269	691026	Wire-Control (Cut to Required Length)	337	802592	Plug-Spark (Resistor)	497	690664	Screw (Stopswitch Bracket)
270	691027	Nut (Control Wire Casing)			----- Note -----	500	691086	Washer (Key Switch)
271	691028	Lever-Control		697451	Plug-Spark (EMS)	505	691251	Nut (Governor Control Lever)
276	♦271716	Washer-Sealing	346	690661	Screw (Spark Arrestor)	507	691972	Insulator
276A	280973	Washer-Sealing	347	691396	Switch-Rocker	510	494147	Drive-Starter
287	690940	Screw (Dipstick Tube)	356	692390	Wire-Stop	513	692358	Clutch-Drive
300	496106	Muffler (Tuned)	356A	690650	Wire-Stop	520	691084	Terminal-Ground
300A	494343	Muffler (Square Lo Tone)	356B	693010	Wire-Stop	523	495264	Dipstick
304	493293	Housing-Blower ----- Note ----- 493294 Housing-Blower Used on Type No(s). 0115, 0626, 0639, 0646, 0660, 0672, 0674, 1734, 1762, 1770, 1783, 4711, 4715. 695892 Housing-Blower Used on Type No(s). 1735.	356D	496381	Wire-Stop	524	★692296	Seal-Dipstick Tube
			358	497316	Gasket Set-Engine	525	495265	Tube-Dipstick
			359	691077	Washer (Ground Terminal)	529	691923	Grommet
			363	19069	Flywheel Puller	544	690786	Armature-Starter
			365	691688	Screw (Carburetor)	545	492919	Washer Set (Starter Motor)
			373	691612	Nut (Ground Terminal)	562	92613	Bolt (Governor Control Lever)
			374	691074	Washer (Camshaft)	578	398153	Wire Assembly
			383	89838	Wrench-Spark Plug	584	697734	Cover-Breather Passage
			404	690272	Washer (Governor Crank)	585	★691879	Gasket-Breather Passage
			410	690575	Link-Control	592	690800	Nut (Rewind Starter)
305	691108	Screw (Blower Housing)	425A	690670	Screw (Air Cleaner Cover)	597	691696	Screw (Pawl Friction Plate)
306	690450	Shield-Cylinder	443A	692523	Screw (Air Cleaner Primer Base)	601	95162	Clamp-Hose (Green)
307	690345	Screw (Cylinder Shield)	445A	491588	Filter-Air Cleaner Cartridge	601A	691038	Clamp-Hose (Black)
309	695550	Motor-Starter	455	695161	Cup-Flywheel	608	497680	Starter-Rewind
310	692327	Bolt (Starter Motor)	456	692299	Plate-Pawl Friction	608A	497598	Starter-Rewind
332	690662	Nut (Flywheel)	456A	224321	Plate-Pawl Friction	613	691340	Screw (Muffler)
333	802574	Armature-Magneto	459	281505	Plate-Ratchet	613A	691653	Screw (Muffler)
334	691061	Screw (Magneto Armature)	459A	492833	Pawl-Ratchet	615	690340	Retainer-Governor Shaft
			474	691991	Alternator			
			489	690664	Screw (Linkage Lever)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0567-13

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
616	698801	Crank-Governor	721	690449	Stop-Shaft	803	695266	Housing-Starter
617★◆	270344	Seal-O Ring (Intake Manifold)	741	790345	Gear-Timing (Use Without Woodruff Key)			(Used After Code Date 00040600).
621	692310	Switch-Stop			----- Note -----			----- Note -----
624	691419	Lever-Linkage			691830 Gear-Timing (Uses Woodruff Key)			695975 Housing-Starter
627	692872	Bracket-Stop Switch			(Uses Woodruff Key)			(Used Before Code Date 00040700).
633◆◆	691321	Seal-Choke/Throttle Shaft (Throttle Shaft)	742	93941	Retainer-E Ring	832	499034	Guard-Muffler
635	66538	Boot-Spark Plug	743	690516	Gear-Drive (Clockwise) Used on Type No(s). 0627.	836	690664	Screw (Muffler Guard)
651	691660	Screw (Starter Gear Cover)			----- Note -----	842	★691031	Seal-O Ring (Dipstick/Tube Assembly)
664	691087	Nut (Key Switch)			691772 Gear-Drive (Counterclockwise) Used on Type No(s). 0144, 0629, 0633, 0644, 1715, 1752, 1770.	843	691884	Sleeve-Lever (Speed Control)
668	★493823	Spacer (Includes 2)				843A	691895	Sleeve-Lever (Choke)
670	692294	Spacer-Fuel Tank	745	691648	Screw (Brake)	847	692017	Dipstick/Tube Assembly
676	396548	Deflector-Muffler (Louvered)	783	691918	Gear-Pinion (19 Teeth) (Starter Drive)	851	493880	Terminal-Spark Plug
676A	393756	Deflector-Muffler (Side Out) (Shallow)				853	695268	Adapter-Wire
676C	493871	Deflector-Muffler (Side Out) (Extended) (Horseshoe)	783A	691269	Gear-Pinion (12 Teeth)	869	691155	Seat-Valve (Intake)
676E	393760	Deflector-Muffler (Side Out) (Deep)	784	692341	Cover-Starter Gear	870	690380	Seat-Valve (Exhaust)
677	690661	Screw (Muffler Deflector)	785	692352	Gasket-Starter Cover	871	262001	Bushing-Valve Guide (Exhaust)
678	224278	Spacer-Rewind	789A	691372	Harness-Wiring (Used Before Code Date 00040700).			----- Note -----
684	690345	Screw (Breather Passage Cover)	789B	696547	Harness-Wiring (Used After Code Date 00040600).			63709 Bushing-Valve-Guide (Intake)
689	691855	Spring-Friction	801	690782	Cap-Drive	883★	691881	Gasket-Exhaust
689A	262625	Spring-Friction	802	695267	Cap-End (Used After Code Date 00040600).	892	690646	Switch-Key
697	691127	Screw (Drive Cap)			----- Note -----	910	691094	Stud (Alternator)
715	691147	Screw (Shaft Stop)			695975 Cap-End (Used Before Code Date 00040700).	922	691831	Spring-Brake
718	690959	Pin-Locating						----- Note -----
								692135 Spring-Brake Used on Type No(s). 1735.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0567-14

Assemblies include all parts shown in frames.

09/19/2005

127700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 1735.	968B	692298	Cover-Air Cleaner	1040	281252	Plate-Trim
			970	691669	Screw (Air Cleaner Primer Bracket)	1058	276171	Operator's Manual
930	691919	Guard-Rewind (Round)	972	699392	Tank-Fuel (Plastic)	1059	692311	Kit-Screw/Washer
930C	690598	Guard-Rewind (Trim Ring)	972D	497343	Tank-Fuel (Plastic)	1095	498528	Gasket Set-Valve
935	499421	Switch-Interlock	975	493640	Bowl-Float	1102	691255	Guide-Pilot
937	691325	Spline-Starter	976	694395	Primer-Carburetor	1119	691648	Screw (Alternator)
940	691044	Screw (Casing Clamp Bracket)	977	498261	Gasket Set-Carburetor	1134	224322	Washer (Pawl Friction Plate)
942	690455	Bracket-Brake	986	693514	Filter-Debris Foam	1160	691627	Screw (Interlock Switch)
957	397974	Cap-Fuel Tank (Plastic)	990	691959	Key Set	1208	691627	Screw (Brake Bracket)
958	698183	Valve-Fuel Shutoff (Plastic)	994	398067	Arrestor-Spark	1210	498144	Pulley/Spring Assembly (Pulley)
966A	496116	Base-Air Cleaner Primer	994A	692957	Arrestor-Spark	1211	498144	Pulley/Spring Assembly (Spring)
967A	493537	Filter-Pre Cleaner	1005	691346	Fan-Flywheel	1330	270962	Manual-Repair
			1019	494256	Kit-Label			
			1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***0567-15**

Assemblies include all parts shown in frames.

09/19/2005