



128600

Illustrated Parts List

Model Series

128600

TYPE NUMBERS
0100 through 0552.

TABLE OF CONTENTS


Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets Sets	8
Lubrication	2
Piston Group	2
Rewind Starter	7





PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

128600




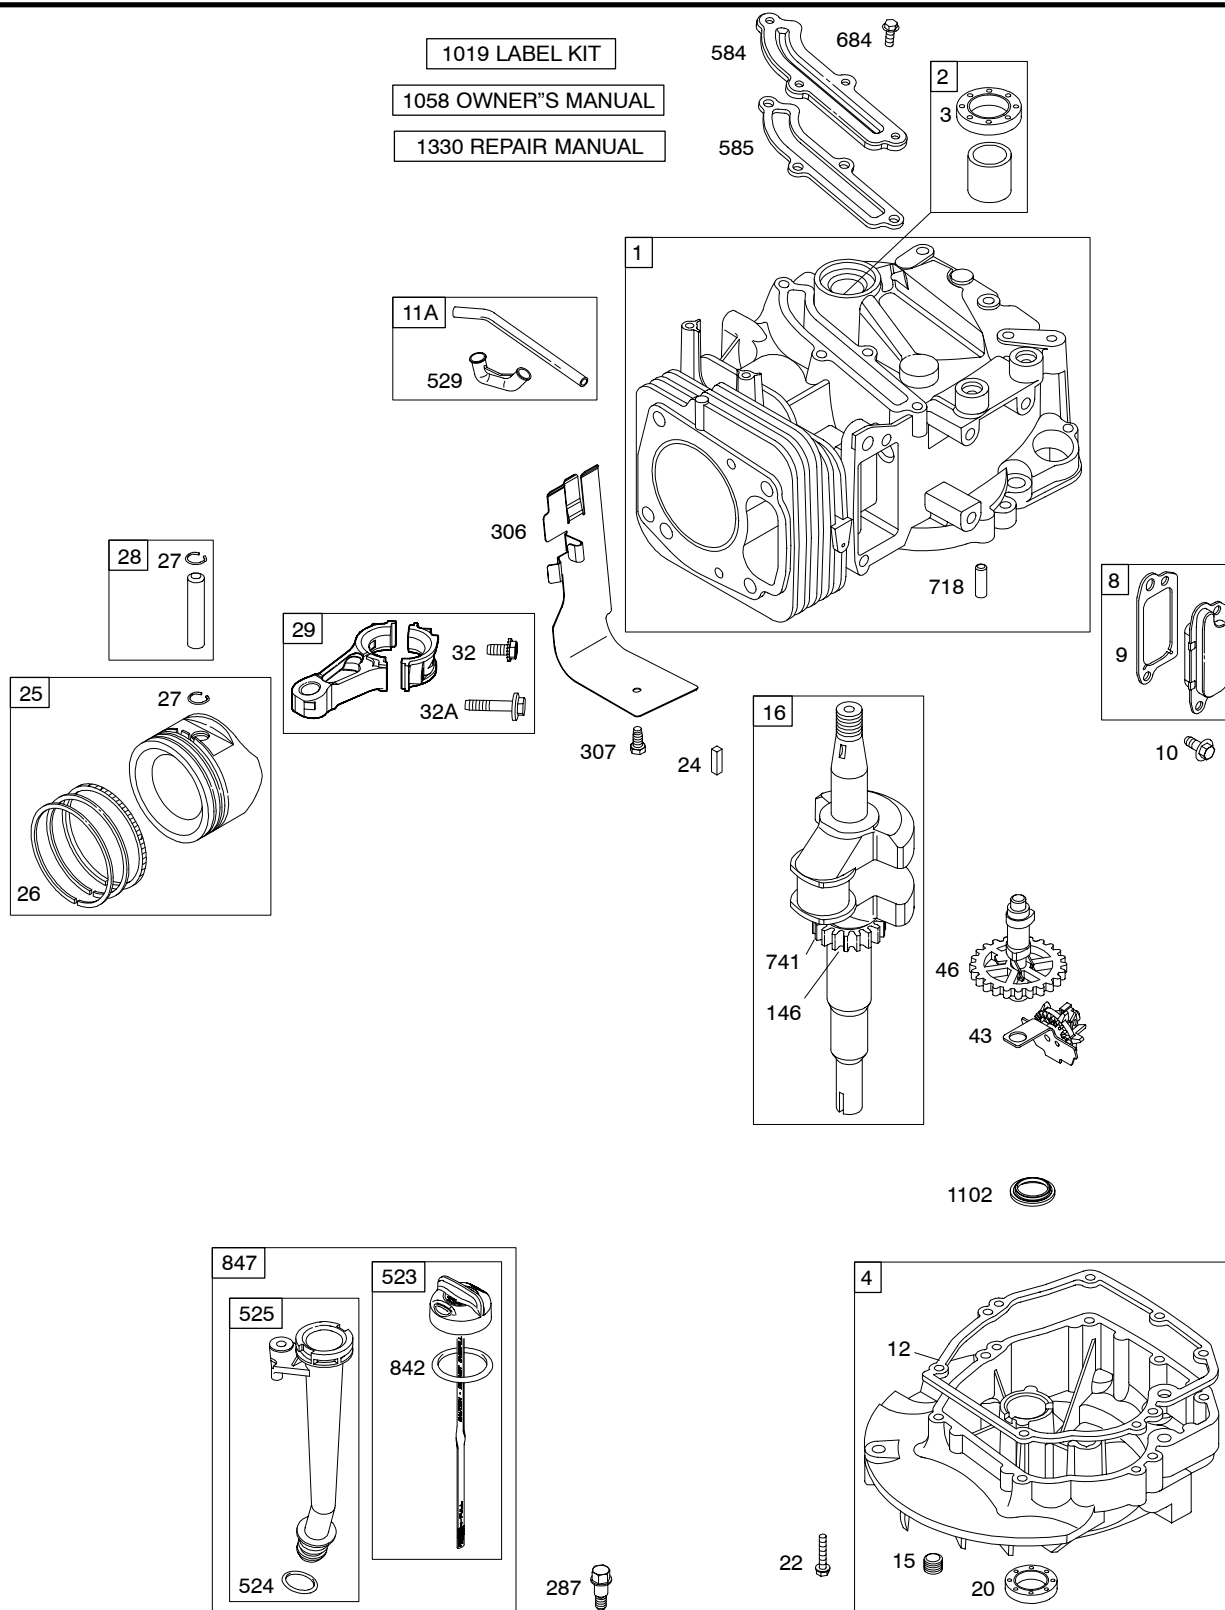


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.











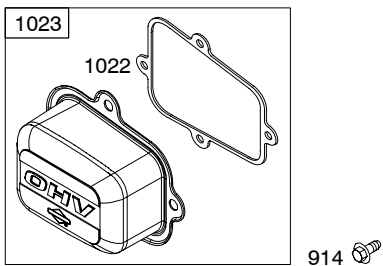
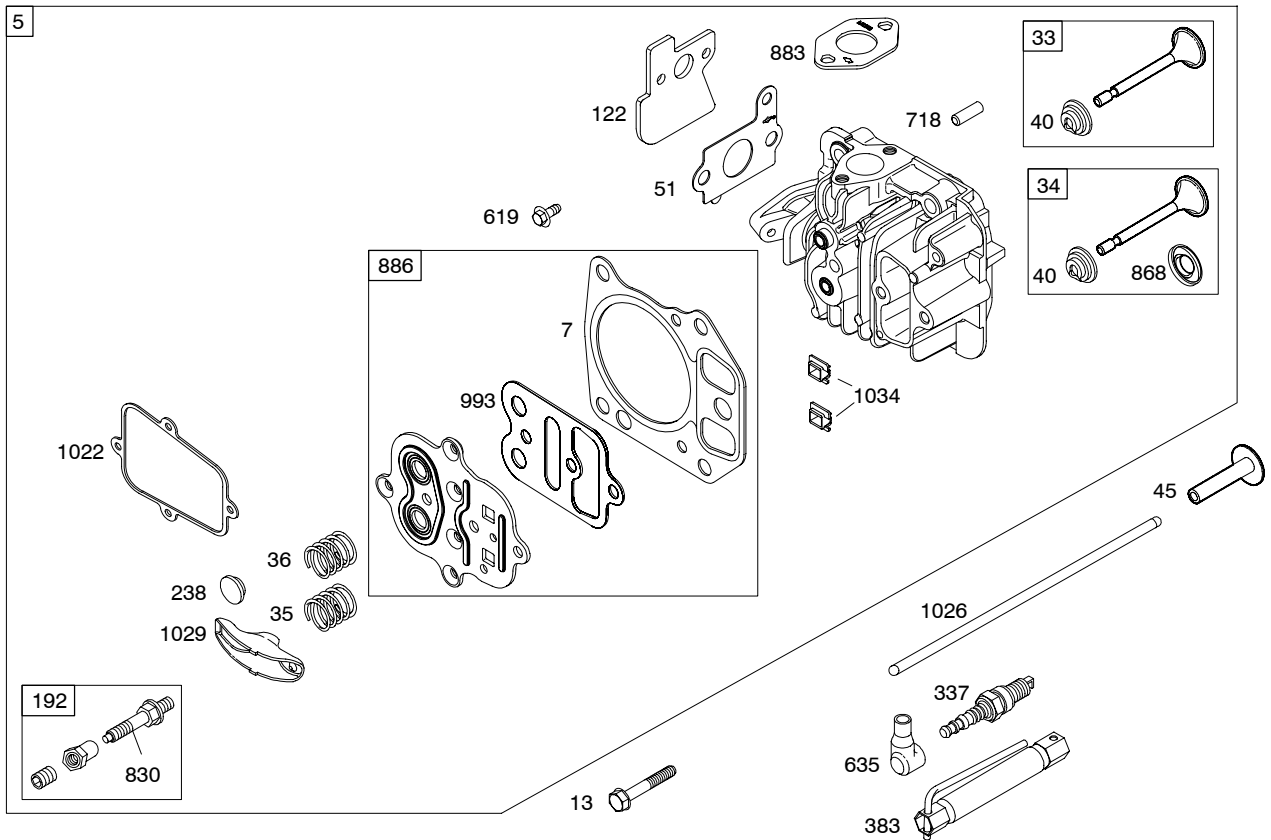


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5116-3 Assemblies include all parts shown in frames. **10/12/2005**

128600



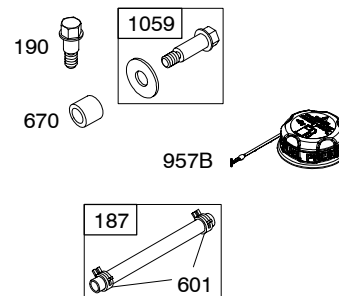
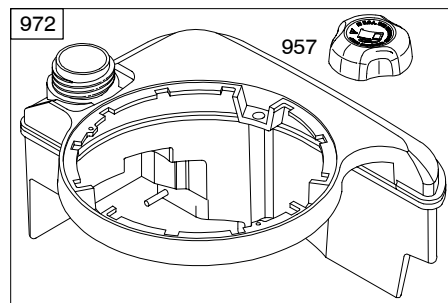
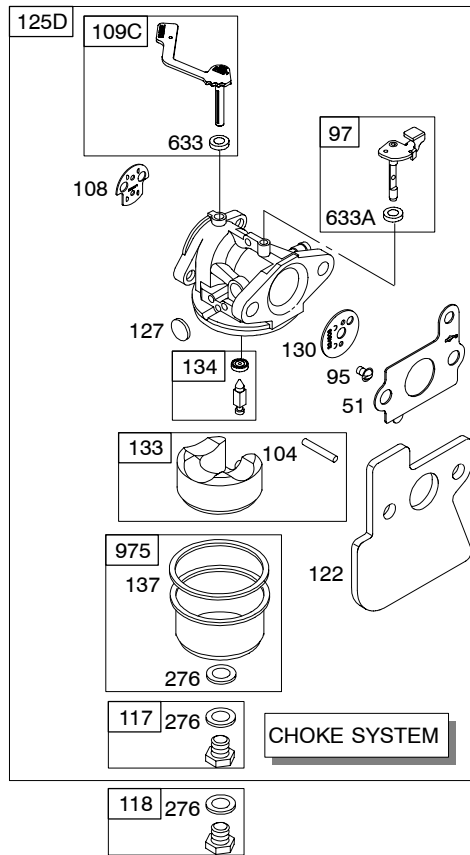
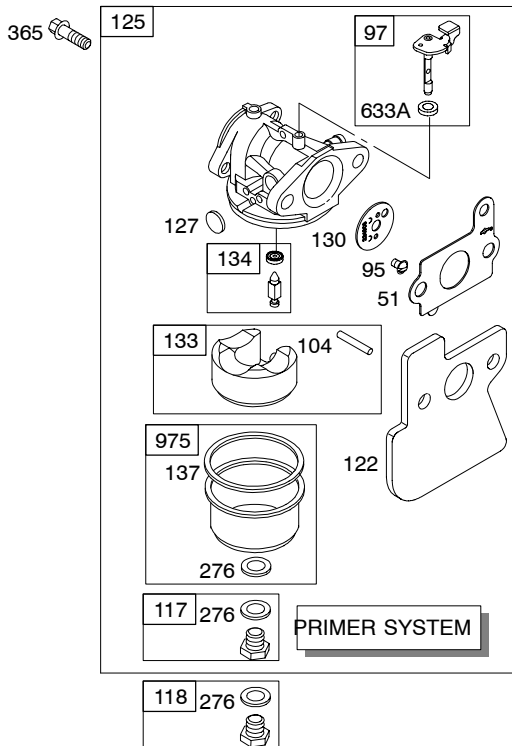


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5116-4 Assemblies include all parts shown in frames. 10/12/2005

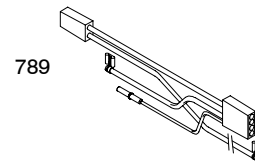
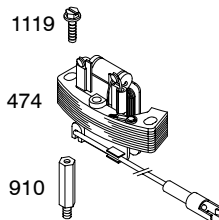
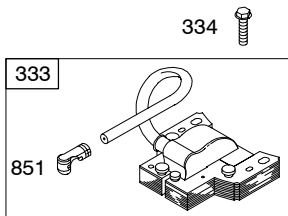

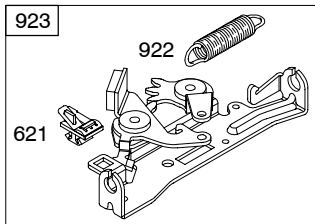


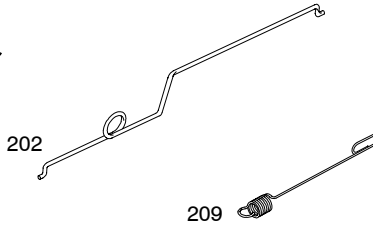
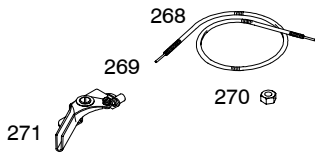
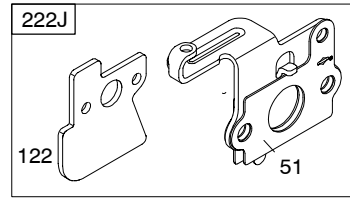
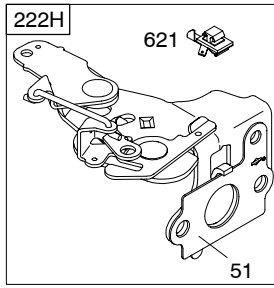
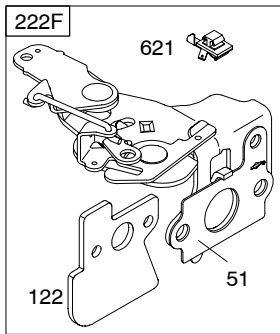


5116-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 10/12/2005

128600

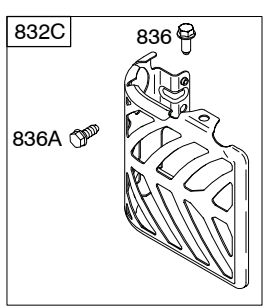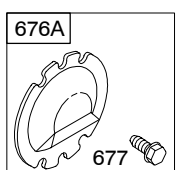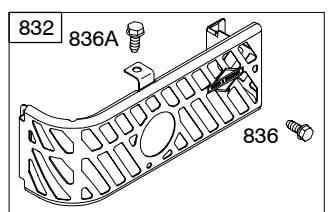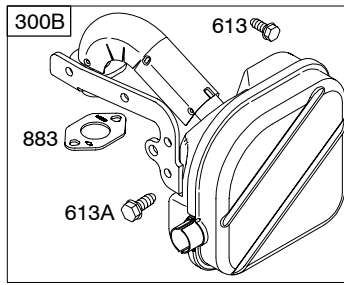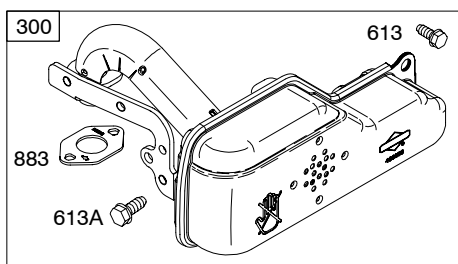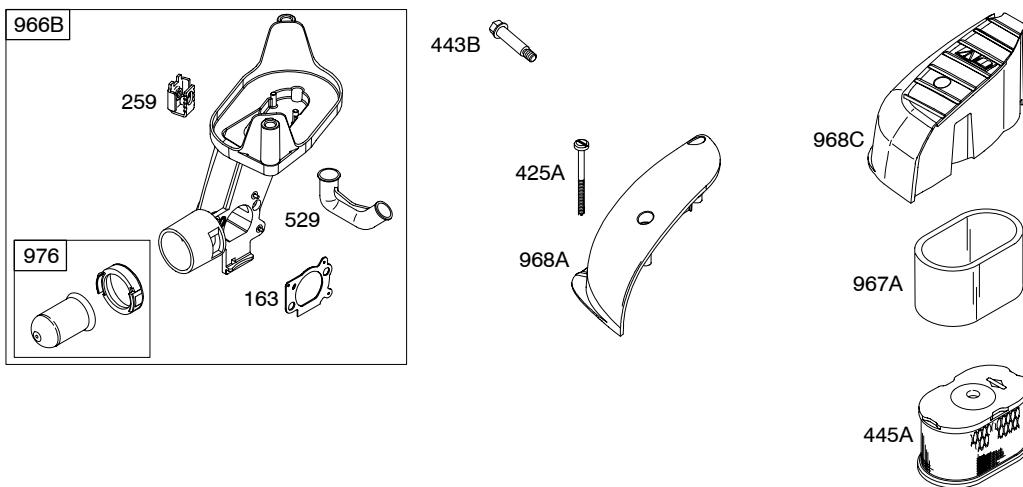





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5116-6 Assemblies include all parts shown in frames. 10/12/2005

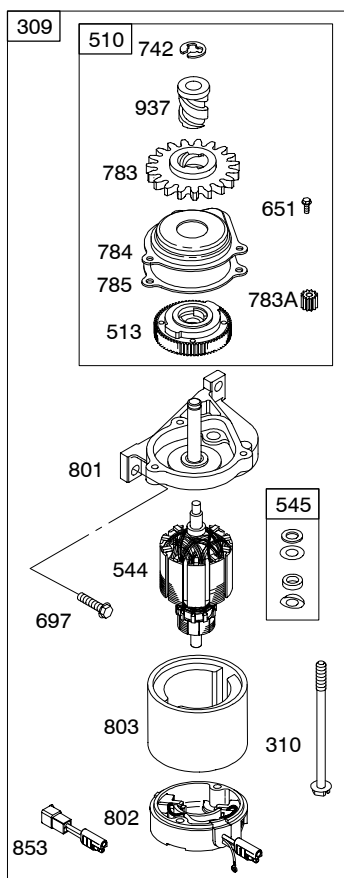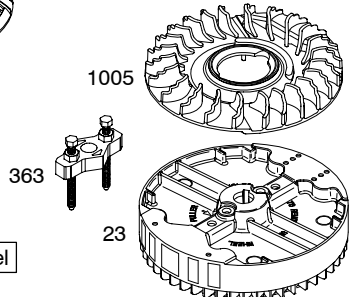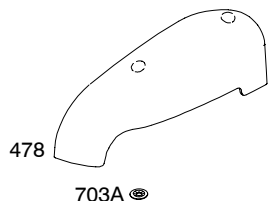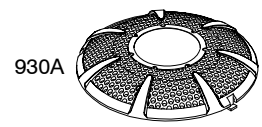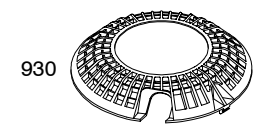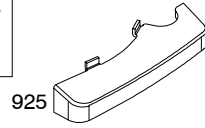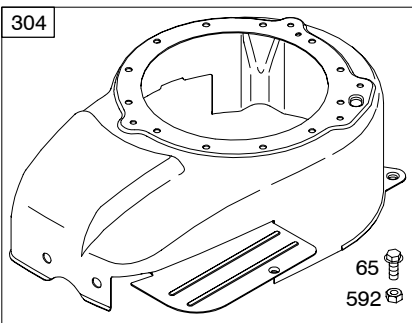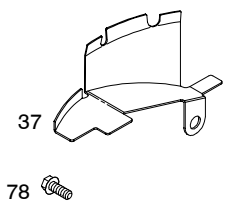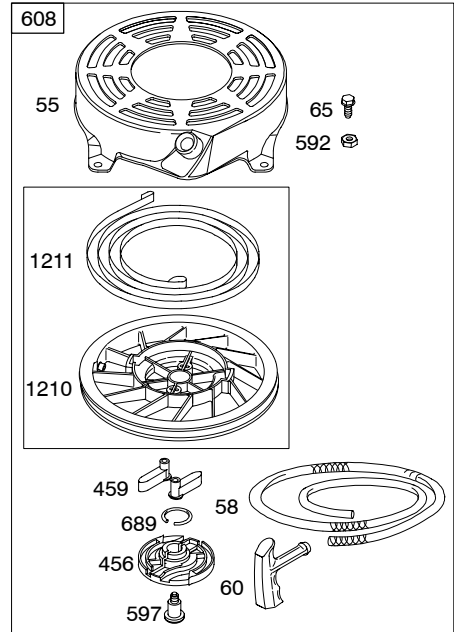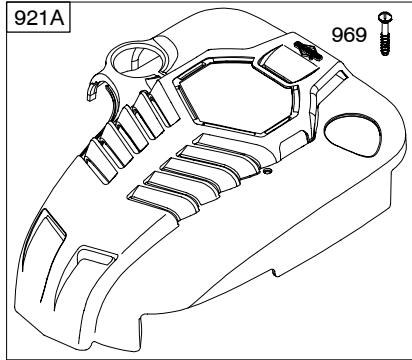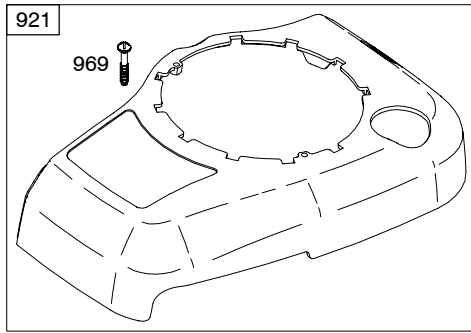

1036 Emission Label

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5116-7 Assemblies include all parts shown in frames. 10/12/2005

128600

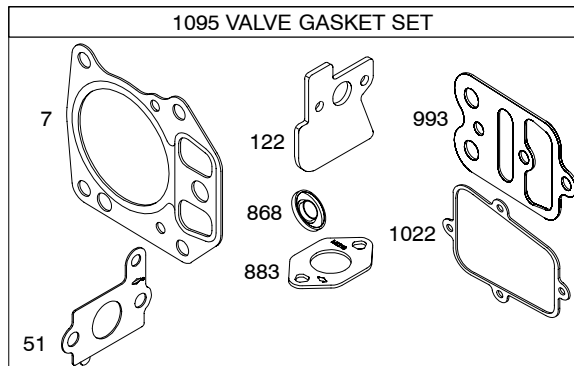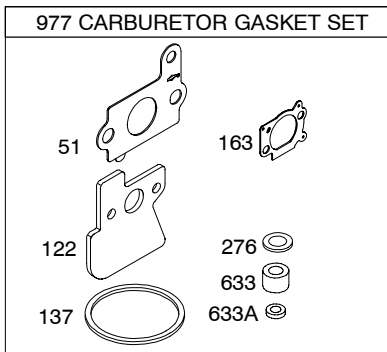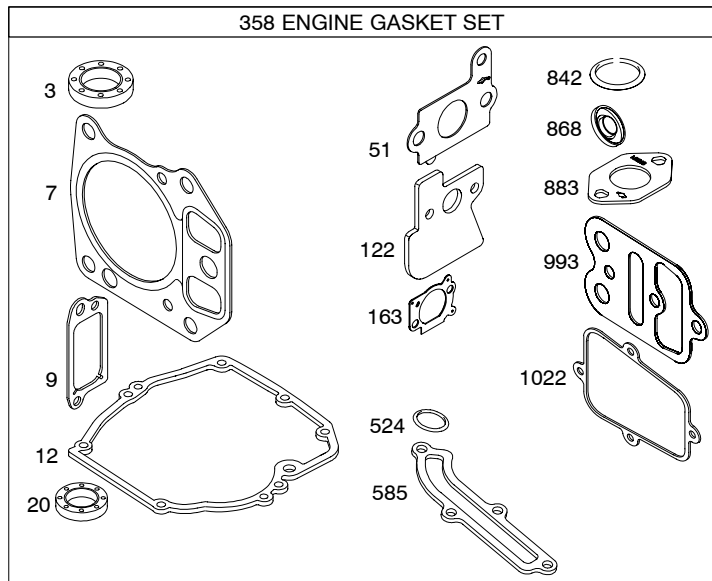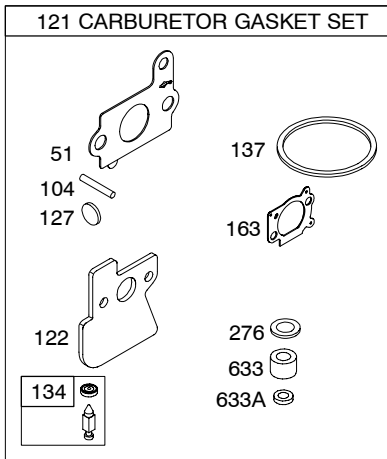

5116-8 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames.

10/12/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly	25	791968	Piston Assembly (Standard) (Used After Code Date 04040400).	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)				28	499423	Pin-Piston
3	*299819	Seal-Oil (Magneto Side)				29	499424	Rod-Connecting
4	493279	Sump-Engine				32	691664	Screw (Connecting Rod)
		----- Note ----- 498983 Sump-Engine Used on Type No(s). 0111.				32A	695759	Screw (Connecting Rod)
5	695276	Head-Cylinder				33	499642	Valve-Exhaust
7	*Δ695166	Gasket-Cylinder Head				34	499641	Valve-Intake
8	495786	Breather Assembly				35	691304	Spring-Valve (Intake)
9	*272481	Gasket-Breather				36	691304	Spring-Valve (Exhaust)
10	691125	Screw (Breather Assembly)				37	694086	Guard-Flywheel
11A	499675	Tube-Breather				40	692194	Retainer-Valve
12	*692232	Gasket-Crankcase				43	691997	Slinger-Governor/Oil
13	691137	Screw (Cylinder Head)				45	690977	Tappet-Valve
15	691680	Plug-Oil Drain (Square Socket)				46	694039	Camshaft
16	691457	Crankshaft				51*♦♦Δ692668	692668	Gasket-Intake
		----- Note ----- 691456 Crankshaft Used on Type No(s). 0112, 0113, 0149, 0150, 0259, 0304, 0339, 0445, 0514, 0551, 0552.				55	691421	Housing-Rewind Starter
20	*399781	Seal-Oil (PTO Side)				58	697316	Rope-Starter (Cut To Required Length)
22	691092	Screw (Crankcase Cover/Sump)				60	281434	Grip-Starter Rope
23	697610	Flywheel	26	791969	Ring Set (Standard) (Used After Code Date 04040400).	65	690837	Screw (Rewind Starter)
		----- Note ----- 697586 Flywheel Used on Type No(s). 0111.				78	691108	Screw (Flywheel Guard)
24	222698	Key-Flywheel				95	691636	Screw (Throttle Valve)
						97	499682	Shaft-Throttle (Metal)
								----- Note ----- 790121 Shaft-Throttle (Plastic)
						104	♦691242	Pin-Float Hinge
						108	691182	Valve-Choke
						109C	499681	Shaft-Choke

* Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

128600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498981	Jet-Main (Standard) (Used After Code Date 03110600). ----- Note ----- 498978 Jet-Main (Standard) (Used Before Code Date 03110700). 694250 Jet-Main (Standard) (Used After Code Date 02050500). Used on Type No(s). 0111. 498978 Jet-Main (Standard) (Used Before Code Date 02050600). Used on Type No(s). 0111.	125	790120	Carburetor (Primer System)	209	691851	Spring-Governor ----- Note -----
			125D	698055	Carburetor (Choke System) (Used After Code Date 02050500). Used on Type No(s). 0111. ----- Note ----- 694203 Carburetor (Choke System) (Used Before Code Date 02050600). Used on Type No(s). 0111.			691292 Spring-Governor Used on Type No(s). 0221, 0278, 0339. 691291 Spring-Governor Used on Type No(s). 0112, 0113, 0115, 0149, 0150. 691290 Spring-Governor Used on Type No(s). 0111. 791156 Spring-Governor Used on Type No(s). 0339, 0514. 690319 Spring-Governor Used on Type No(s). 0552.
118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet-Main (High Altitude) (Used Before Code Date 03110700). 497466 Jet-Main (High Altitude) (Used After Code Date 02050500). Used on Type No(s). 0111. 498975 Jet-Main (High Altitude) (Used Before Code Date 02050600). Used on Type No(s). 0111.	127	694468	Plug-Welch	222F	692617	Bracket-Control
			130	691203	Valve-Throttle ----- Note ----- 696564 Valve-Throttle (Used With Plastic Throttle Shaft)	222H	692618	Bracket-Control Used on Type No(s). 0111.
			133	398187	Float-Carburetor	222J	697614	Bracket-Control Used on Type No(s). 0224, 0304, 0339, 0445, 0514, 0551, 0552.
			134	398188	Kit-Needle/Seat	227	691467	Lever-Governor Control
			137	693981	Gasket-Float Bowl	238	691300	Cap-Valve
			146	690979	Key-Timing	259	691189	Bracket-Casing Clamp
			163	691894	Gasket-Air Cleaner	265	690798	Clamp-Casing
			187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	267	691044	Screw (Casing Clamp)
			188	691147	Screw (Control Bracket)	268	691025	Casing-Control Wire (Cut To Required Length)
			190	690940	Screw (Fuel Tank)	269	691026	Wire-Control (Cut To Required Length)
121	692703	Kit-Carburetor Overhaul	192	694543	Adjuster-Rocker Arm			
122	692799	Spacer-Carburetor	202	691303	Link-Mechanical Governor			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
270	691027	Nut (Control Wire Casing)	365	691136	Screw (Carburetor)	608	497680	Starter-Rewind
271	691028	Lever-Control	383	19374	Wrench-Spark Plug	613	691108	Screw (Muffler)
276	◆271716	Washer-Sealing	404	690272	Washer (Governor Crank)	613A	691140	Screw (Muffler)
287	690940	Screw (Dipstick Tube)	425A	690244	Screw (Air Cleaner Cover)	615	690340	Retainer-Governor Shaft
300	697590	Muffler-Exhaust	443B	690255	Screw (Air Cleaner Primer Base)	616	698801	Crank-Governor
300B	699769	Muffler-Exhaust	445A	697029	Filter-Air Cleaner Cartridge	619	691108	Screw (Cylinder Head Plate)
304	695976	Housing-Blower ----- Note ----- 499677 Housing- Blower Used on Type No(s). 0113, 0115. 499676 Housing- Blower Used on Type No(s). 0111.	455	695161	Cup-Flywheel	621	692310	Switch-Stop
305	691108	Screw (Blower Housing)	456	692299	Plate-Pawl Friction	633	◆693867	Seal-Choke/Throttle Shaft (Choke Shaft)
306	691232	Shield-Cylinder	459	281505	Ratchet-Pawl	633A	◆691321	Seal-Choke/Throttle Shaft (Throttle Shaft)
307	690345	Screw (Cylinder Shield)	474	691991	Alternator	635	66538	Boot-Spark Plug
309	695550	Motor-Starter	478	697623	Panel	651	691660	Screw (Starter Gear Cover)
310	692327	Bolt (Starter Motor)	505	691251	Nut (Governor Control Lever)	676A	393756	Deflector-Muffler
332	690662	Nut (Flywheel)	510	494147	Drive-Starter	677	690661	Screw (Muffler Deflector)
333	802574	Armature-Magneto	513	692358	Clutch-Drive	670	692294	Spacer-Fuel Tank
300	697590	Muffler-Exhaust	523	499621	Dipstick	684	690345	Screw (Breather Passage Cover)
300D	693982	Muffler-Exhaust	524	★692296	Seal-Dipstick Tube	689	691855	Spring-Friction
334	691061	Screw (Magneto Armature)	525	495265	Tube-Dipstick	697	691127	Screw (Drive Cap)
337	692051	Plug-Spark (Resistor) ----- Note ----- 692720 Plug-Spark (EMS)	529	692937	Grommet	703A	697625	Clip
356	692390	Wire-Stop	544	690786	Armature-Starter	718	690959	Pin-Locating
358	694090	Gasket Set-Engine	545	492919	Washer Set (Starter Motor)	741	790345	Gear-Timing (Use Without Woodruff Key)
363	19069	Puller-Flywheel	562	691119	Bolt (Governor-Control Lever)	----- Note ----- 691830 Gear-Timing (Uses Woodruff Key)		
			584	697734	Cover-Breather Passage	742	93941	Retainer-E-Ring
			585	★691879	Gasket-Breather Passage	745	691648	Screw (Brake)
			592	690800	Nut (Rewind Starter)			
			597	691696	Screw (Pawl Friction Plate)			
			601	95162	Clamp-Hose			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

128600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
783	691918	Gear-Pinion	922	692135	Spring-Brake	977	692704	Gasket Set-Carburetor
783A	691269	Gear-Pinion			----- Note -----	993	★△694088	Gasket-Cylinder Head Plate
784	692341	Cover-Starter Gear		691831	Spring-Brake	1005	691346	Fan-Flywheel
785	692352	Gasket-Starter Cover			Used on Type No(s). 0113, 0115.	1019	697624	Kit-Label
789	696547	Harness-Wiring	923	695891	Brake	1022	★△691890	Gasket-Rocker Cover
801	690782	Cap-Drive			----- Note -----	1023	499624	Cover-Rocker Arm
802	695267	Cap-End		691994	Brake	1026	692045	Rod-Push
803	695266	Housing-Starter			Used on Type No(s). 0113, 0115.	1029	691230	Arm-Rocker
830	694544	Stud-Rocker Arm	925	690595	Cover-Linkage	1034	691343	Guide-Push Rod
832	691466	Guard-Muffler	930	692691	Guard-Rewind	1036		Label-Emission
832C	695593	Guard-Muffler	930A	692675	Guard-Rewind			(Available From An Authorized Briggs & Stratton Service Dealer)
836	691147	Screw (Muffler Guard)	935	499421	Switch-Interlock	1058	276348	Manual-Owner's
836A	697551	Screw (Muffler Guard)	937	691325	Spline-Starter	1059	692311	Kit-Screw/Washer
842	★691031	Seal-O Ring (Dipstick Tube)	946	396526	Guide-Rope	1095	694091	Gasket Set-Valve
843	691884	Sleeve-Lever	957	692046	Cap-Fuel Tank (Plastic)	1102	691255	Pilot-Guide
847	692047	Dipstick/Tube Assembly	957B	699985	Cap-Fuel Tank (Plastic)	1119	692979	Screw (Alternator)
851	493880	Terminal-Spark Plug	966B	690243	Base-Air Cleaner Primer	1160	691627	Screw (Interlock Switch)
853	695268	Adaptor-Wire	967A	273356	Filter-Pre Cleaner	1210	498144	Pulley/Spring Assembly (Pulley)
868	★△692044	Seal-Valve	968A	691342	Cover-Air Cleaner	1211	498144	Pulley/Spring Assembly (Spring)
883	★△691893	Gasket-Exhaust	968C	692692	Cover-Air Cleaner	1330	272147	Manual-Repair
886	696268	Gasket Set-Cylinder Head/Plate	969	691138	Screw (Blower Housing Cover)			
910	691094	Stud (Alternator)	972	699374	Tank-Fuel (Plastic)			
914	691108	Screw (Rocker Cover)	975	493640	Bowl-Float			
921	692699	Cover-Blower Housing	976	694395	Primer-Carburetor			
921A	699633	Cover-Blower Housing						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.