



128H00

Illustrated Parts List

Model Series

128H00

TYPE NUMBERS
0110 through 0515..

TABLE OF CONTENTS


Air Cleaner	4
Alternator	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	5
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

128H00





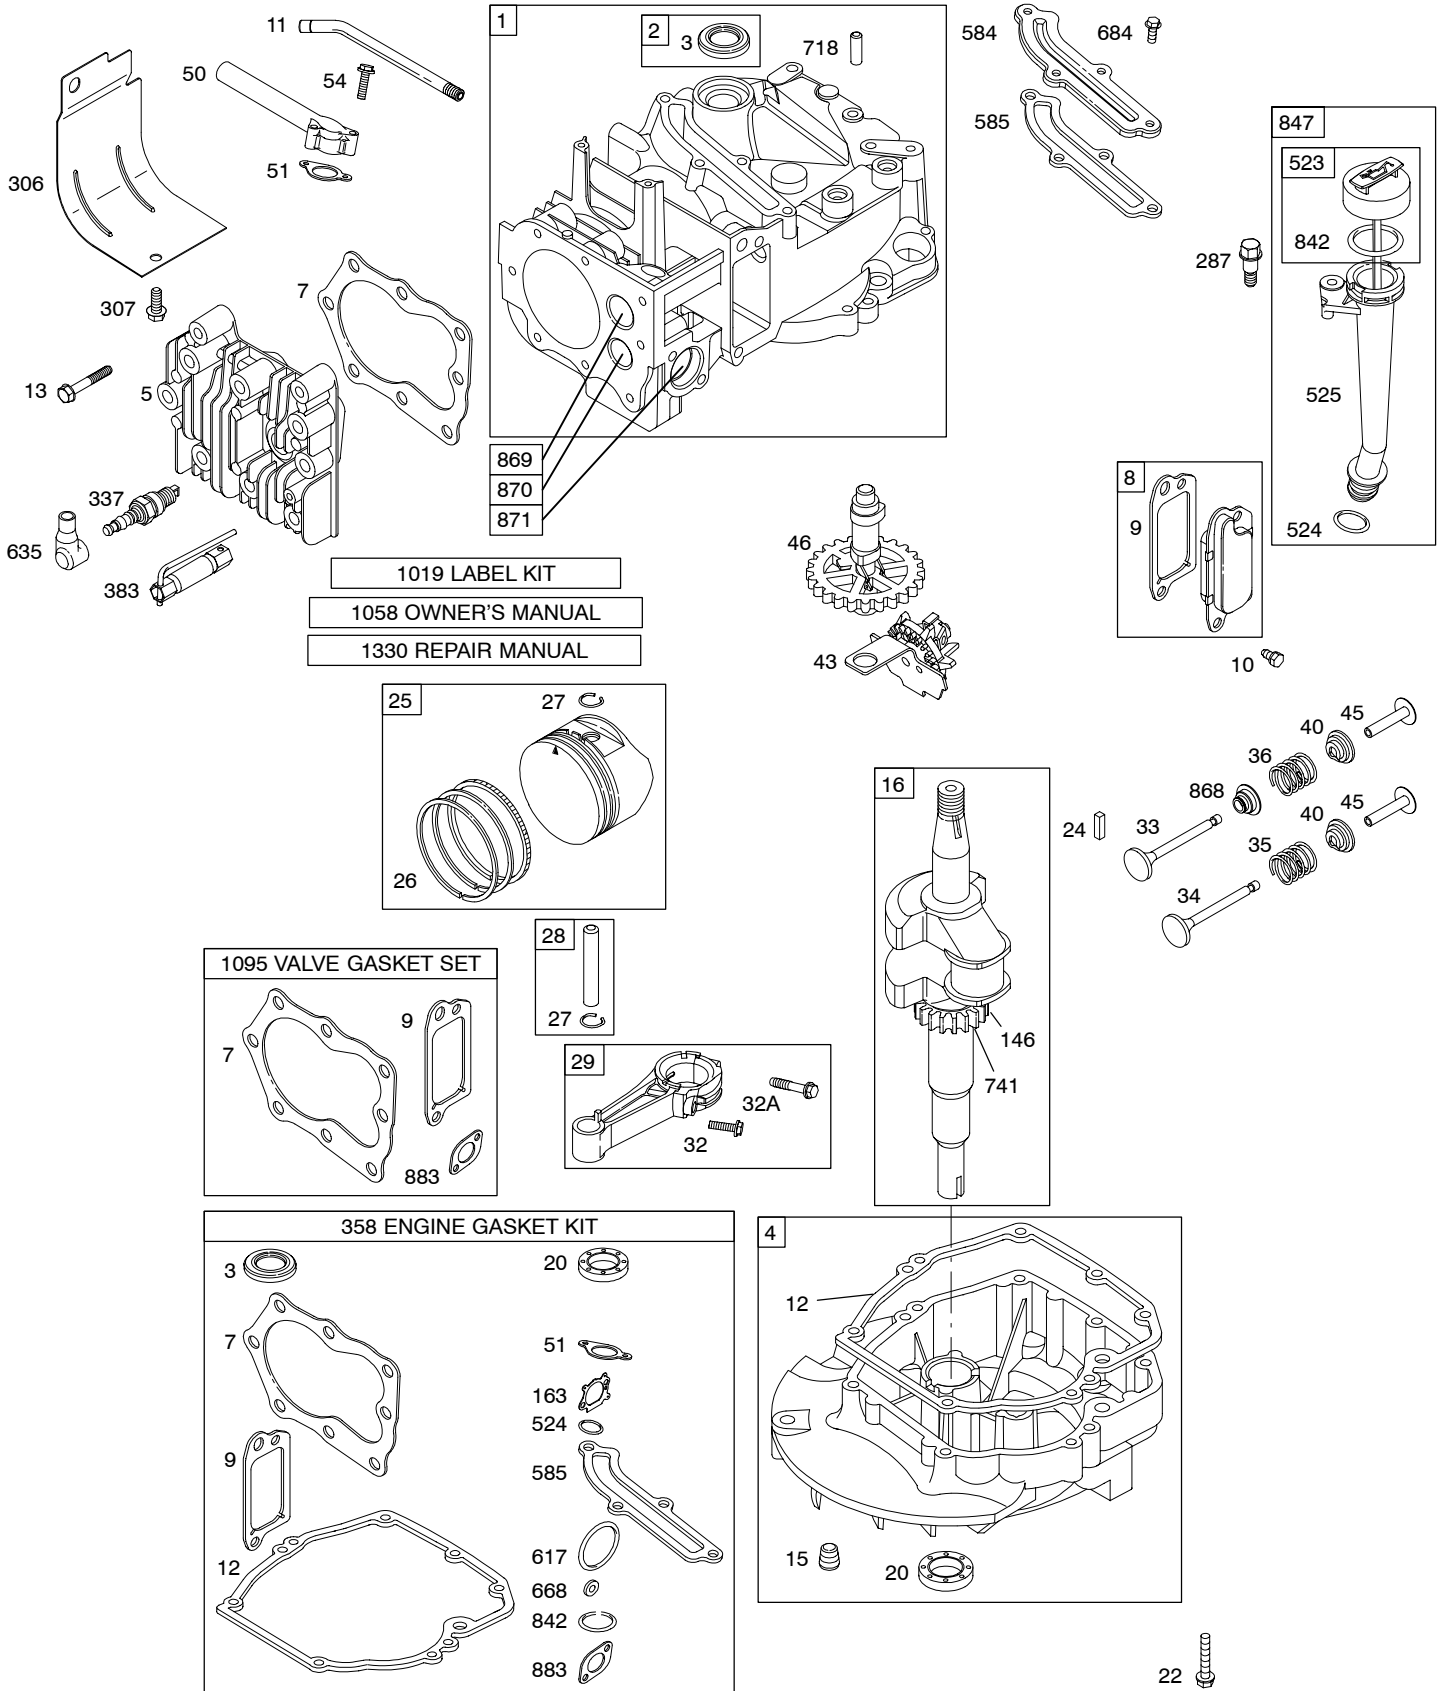


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3242-2


Assemblies include all parts shown in frames.

10/05/2005

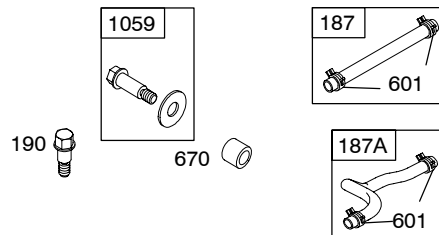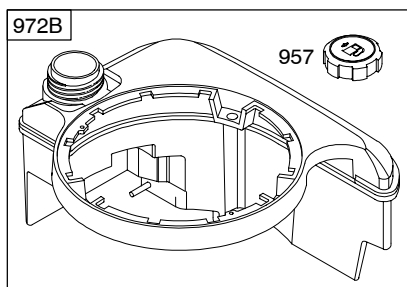
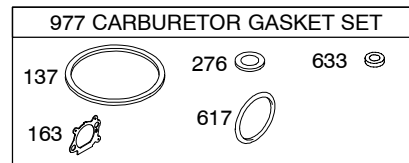
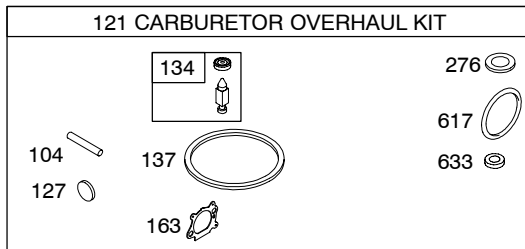
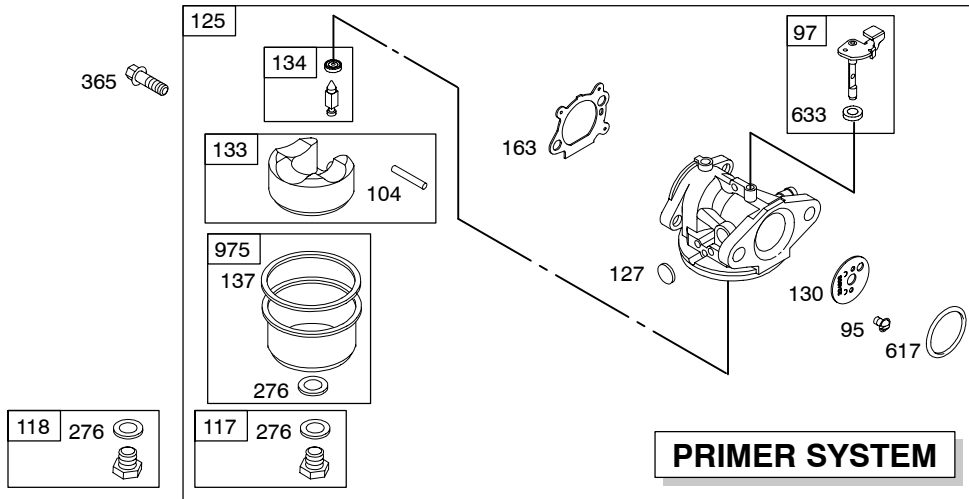


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3242-3 Assemblies include all parts shown in frames. 10/05/2005

128H00

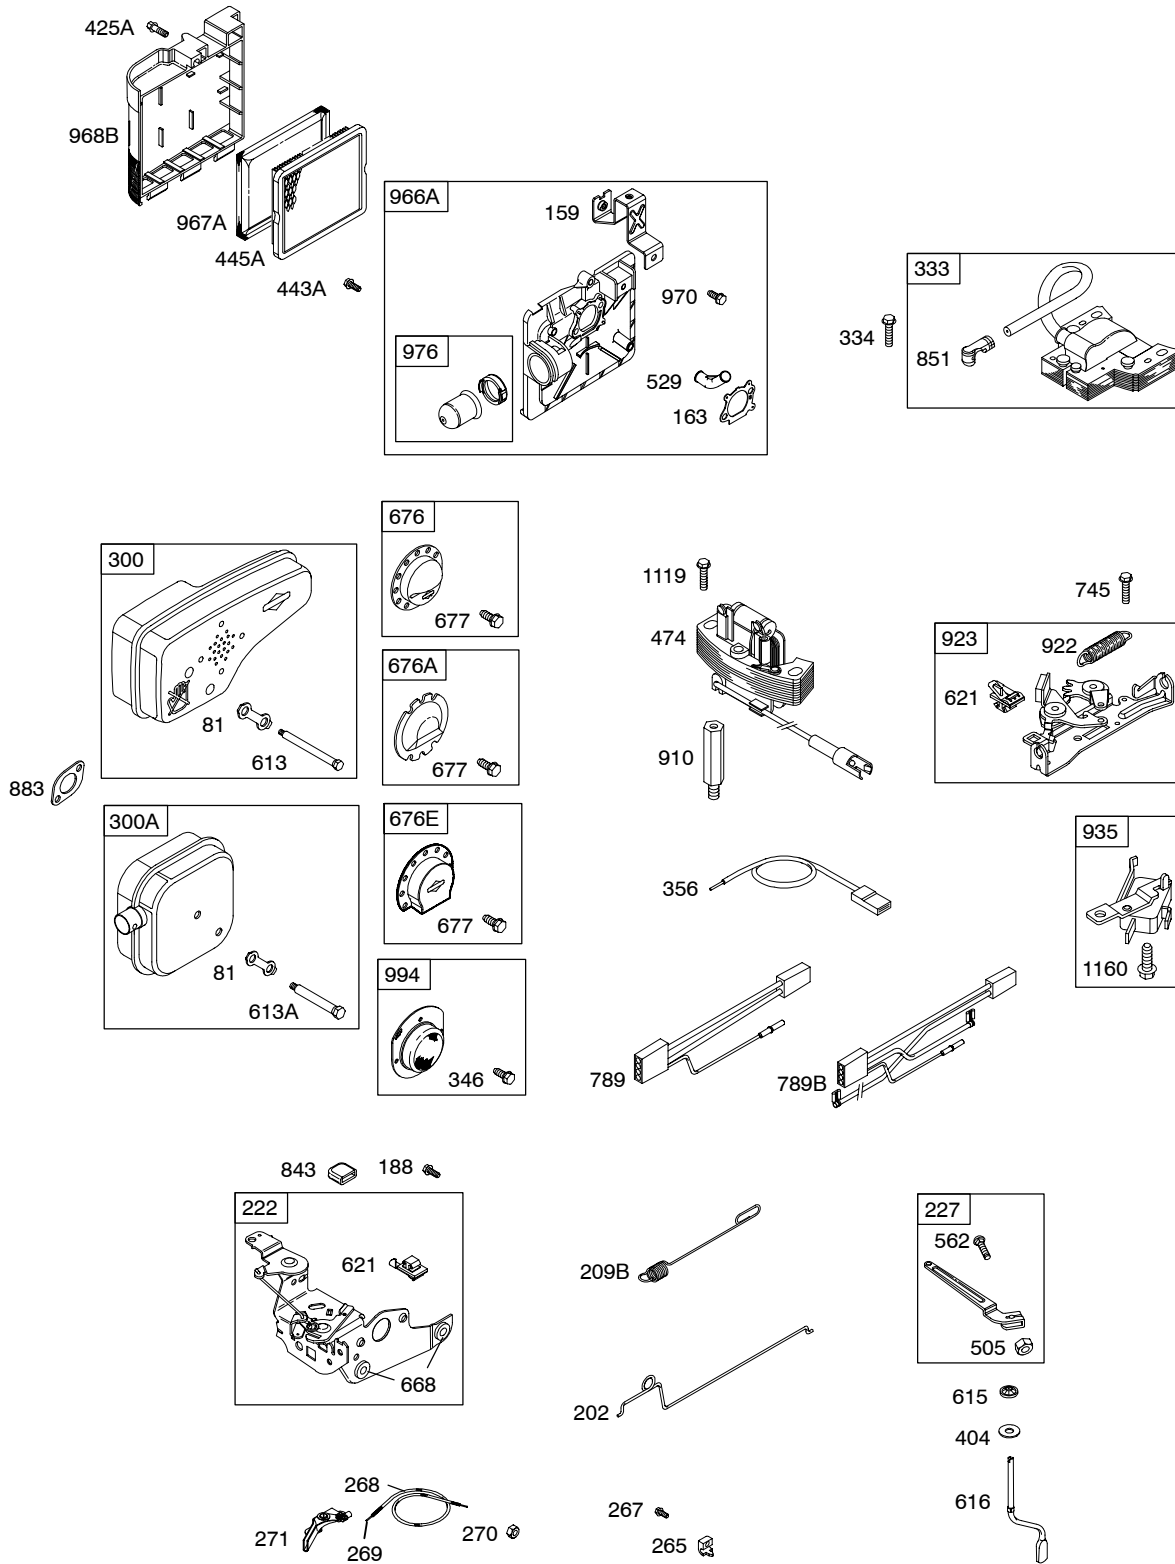

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3242-4 Assemblies include all parts shown in frames. 10/05/2005

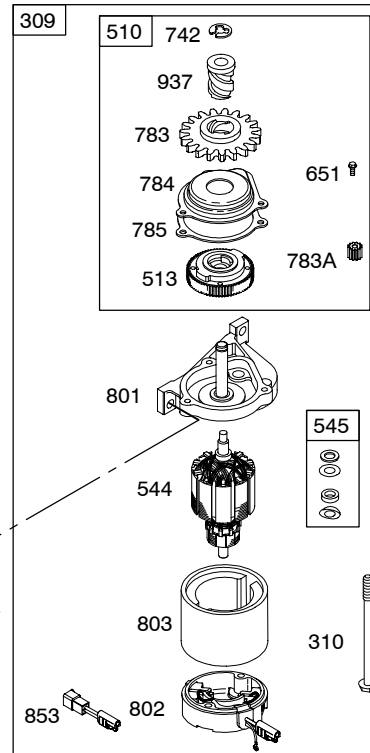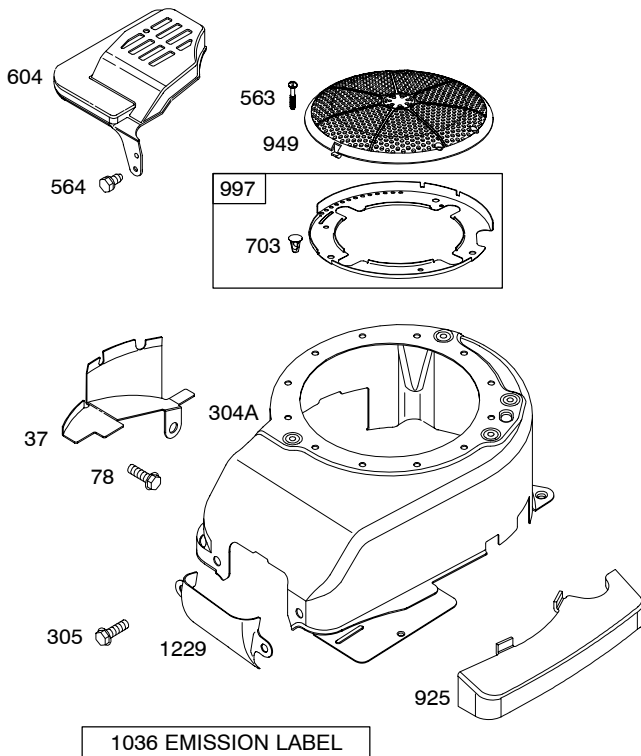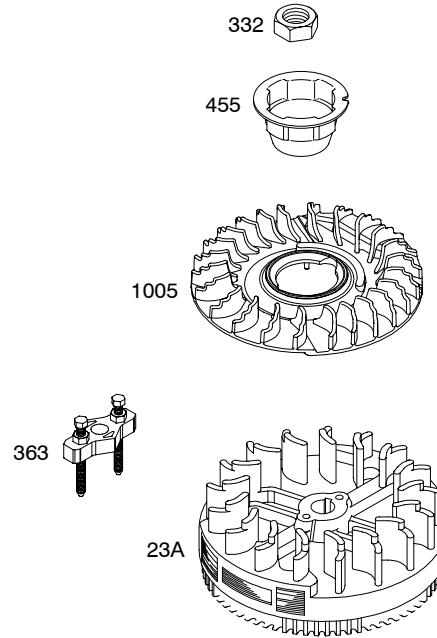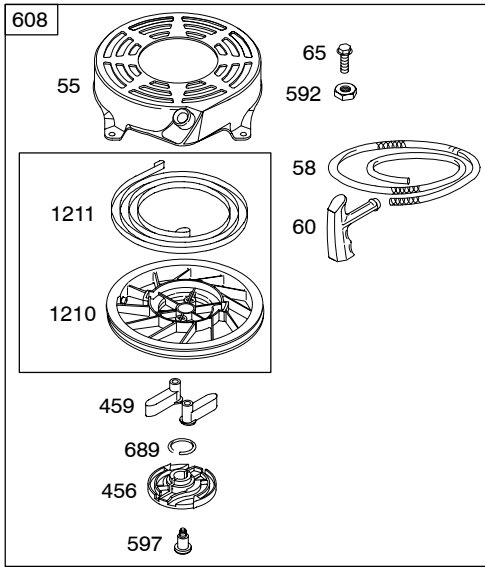

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3242-5 Assemblies include all parts shown in frames. 10/05/2005

128H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	24	222698	Key-Flywheel	40	692194	Retainer-Valve
2	399269	Kit-Bushing/Seal (Magneto Side)	25	790359	Piston Assembly (Standard)	43	691997	Slinger-Governor/Oil
3	★299819	Seal-Oil (Magneto Side)			----- Note -----	45	690548	Tappet-Valve
4	493279	Sump-Engine			791326 Piston Assembly (.020" Oversize)	46	691449	Camshaft
5	691160	Head-Cylinder			(Used After Code Date 04102100).	50	497465	Manifold-Intake
7	★∅692249	Gasket-Cylinder Head			697341 Piston Assembly (.020" Oversize)	51	★272199	Gasket-Intake
8	695250	Breather Assembly			(Used Before Code Date 04102200).	54	691650	Screw (Intake Manifold)
9	★∅696125	Gasket-Breather			697341 Piston Assembly (.020" Oversize)	55	691421	Housing-Rewind Starter
10	691125	Screw (Breather Assembly)			(Used Before Code Date 04102200).	58	697316	Rope-Starter (Cut To Required Length)
11	691781	Tube-Breather	26	790360	Ring Set (Standard)	60	281434	Grip-Starter Rope
12	★692232	Gasket-Crankcase			----- Note -----	65	690837	Screw (Rewind Starter)
13	690912	Screw (Cylinder Head)			791324 Ring Set (.020" Oversize)	78	691108	Screw (Flywheel Guard)
15	691680	Plug-Oil Drain (Square Socket)			(Used After Code Date 04102100).	81	691740	Lock-Muffler Screw
16	691451	Crankshaft Used on Type No(s). 0113, 0114, 0115, 0281, 0375.			499427 Ring Set (.020" Oversize)	95	691636	Screw (Throttle Valve)
		----- Note -----			(Used Before Code Date 04102200).	97	696565	Shaft-Throttle
		691452 Crankshaft Used on Type No(s). 0110, 0111.	27	691866	Lock-Piston Pin	104	●691242	Pin-Float Hinge
20	★399781	Seal-Oil (PTO Side)	28	499423	Pin-Piston (Standard)	117	498978	Jet-Main (Standard)
22	691092	Screw (Crankcase Cover/ Sump)	29	499424	Rod-Connecting (Standard)	118	497466	Jet-Main (High Altitude)
23A	691992	Flywheel Used on Type No(s). 0112, 0113, 0114, 0115, 0281.	32	691664	Screw (Connecting Rod)	121	498260	Kit-Carburetor Overhaul
		----- Note -----	32A	695759	Screw (Connecting Rod)	125	498170	Carburetor (Primer System)
		692315 Flywheel Used on Type No(s). 0110, 0375.	33	262651	Valve-Exhaust	127	●694468	Plug-Welch
		691987 Flywheel Used on Type No(s). 0111.	34	262652	Valve-Intake	130	696564	Valve-Throttle
			35	691270	Spring-Valve (Intake)	133	398187	Float-Carburetor
			36	691270	Spring-Valve (Exhaust)	134	●398188	Kit-Needle/Seat
			37	694086	Guard-Flywheel	137	◆693981	Gasket-Float Bowl
						146	690979	Key-Timing
						159	691753	Bracket-Air Cleaner Primer
						163	★◆272653	Gasket-Air Cleaner

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	306	690450	Shield-Cylinder
			227	690783	Lever-Governor Control	307	690345	Screw (Cylinder Shield)
			265	690798	Clamp-Casing	309	695550	Motor-Starter
			267	691044	Screw (Casing Clamp)	310	692327	Bolt (Starter Motor)
			268	691072	Casing-Control Wire (Cut to Required Length)	332	690662	Nut (Flywheel)
187A	791873	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line-Fuel (Molded) (Used Before Code Date 05070100).	269	691026	Wire-Control (Cut to Required Length)	333	802574	Armature-Magneto
			270	691027	Nut (Control Wire Casing)	334	691061	Screw (Magneto Armature)
			271	691028	Lever-Control	337	802592	Plug-Spark
			276 ♦ 271716	271716	Washer-Sealing (Main Jet)	346	690661	Screw (Spark Arrestor)
188	693399	Screw (Control Bracket)	287	690940	Screw (Dipstick Tube)	356	692390	Wire-Stop
190	690940	Screw (Fuel Tank)	300	692038	Muffler	358	497316	Gasket Set-Engine
202	691829	Link-Mechanical Governor	300A	494343	Muffler	363	19069	Flywheel Puller
209B	691291	Spring-Governor Used on Type No(s). 0113, 0114, 0115, 0281. ----- Note ----- 691292 Spring-Governor Used on Type No(s). 0110, 0111. 691851 Spring-Governor Used on Type No(s). 0375.	304A	493294	Housing-Blower Used on Type No(s). 0113, 0114, 0115, 0281, 0375. ----- Note ----- 695892 Housing-Blower Used on Type No(s). 0110. 493293 Housing-Blower Used on Type No(s). 0111.	365	691688	Screw (Carburetor)
			305	691108	Screw (Blower Housing)	383	89838	Wrench-Spark Plug
						404	690272	Washer (Governor Crank)
						425A	690670	Screw (Air Cleaner Cover)
						443A	692523	Screw (Air Cleaner Primer Base)
						445A	491588	Filter-Air Cleaner Cartridge
						455	695161	Cup-Flywheel
						456	692299	Plate-Pawl Friction
						459	281505	Plate-Ratchet
						474	691991	Alternator
						505	691251	Nut (Governor Control Lever)
						510	494147	Drive-Starter
						513	692358	Clutch-Drive
						523	495264	Dipstick

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

128H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
524	★692296	Seal-Dipstick Tube	689	691855	Spring-Friction	871	262001	Bushing-Valve Guide (Exhaust)
525	495265	Tube-Dipstick	697	691127	Screw (Drive Cap)			----- Note -----
529	691923	Grommet	703	696309	Clip			63709 Bushing-Valve Guide (Intake)
544	690786	Armature-Starter	718	690959	Pin-Locating			
545	492919	Washer Set (Starter Motor)	741	790345	Gear-Timing (Use Without Woodruff Key)			
562	92613	Bolt (Governor Control Lever)			----- Note -----	883	★∅691881	Gasket-Exhaust Stud (Alternator)
608	497680	Starter-Rewind			691830 Gear-Timing (Uses Woodruff Key)	910	691094	Stud (Alternator)
		----- Note -----	742	93941	Retainer-E Ring	922	692135	Spring-Brake Used on Type No(s). 0110.
		697671 Starter-Rewind Used on Type No(s). 0515.	745	691648	Screw (Brake)			----- Note -----
613	691340	Screw (Muffler)	783	691918	Gear-Pinion			691831 Spring-Brake Used on Type No(s). 0111.
613A	691653	Screw (Muffler)	783A	691269	Gear-Pinion	923	695891	Brake Used on Type No(s). 0110.
615	690340	Retainer-Governor Shaft	784	692341	Cover-Starter Gear			
616	698801	Crank-Governor	785	692352	Gasket-Starter Cover			
617★◆	270344	Seal-O Ring (Intake Manifold)	789	696546	Harness-Wiring			
621	692310	Switch-Stop	789B	696547	Harness-Wiring			----- Note -----
633	◆691321	Seal-Choke/Throttle Shaft (Throttle)	801	690782	Cap-Drive			691994 Spring-Brake Used on Type No(s). 0111.
635	66538	Boot-Spark Plug	802	695267	Cap-End			
651	691660	Screw (Starter Gear Cover)	803	695266	Housing-Starter			
668	★493823	Spacer	842	★691031	Seal-O Ring (Dipstick Tube)	925	690595	Cover-Linkage
670	692294	Spacer-Fuel Tank	843	691884	Sleeve-Lever	935	499421	Switch-Interlock
676	396548	Deflector-Muffler	847	692047	Dipstick/Tube Assembly	937	691325	Spline-Starter
676A	393756	Deflector-Muffler	851	493880	Terminal-Spark Plug	949	696306	Guard-Debris Screen
676E	393760	Deflector-Muffler	853	695268	Adapter-Wire	957	397974	Cap-Fuel Tank (Plastic)
677	690661	Screw (Muffler Deflector)			----- Note -----	966A	496116	Base-Air Cleaner Primer
684	690345	Screw (Breather Passage Cover)			696842 Adapter-Wire Used on Type No(s). 0112.	967A	493537	Filter-Pre Cleaner
			868	697338	Seal-Valve	968B	692298	Cover-Air Cleaner
			869	691155	Seat-Valve (Intake)	970	691669	Screw (Air Cleaner Primer Bracket)
			870	690380	Seat-Valve (Exhaust)	972B	699374	Tank-Fuel (Plastic)
						975	493640	Bowl-Float
						976	694395	Primer-Carburetor

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

128H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
977	498261	Gasket Set-Carburetor	1059	692311	Kit-Screw/Washer	1211	498144	Pulley/Spring Assembly
994	398067	Arrestor-Spark	1095	498528	Gasket Set-Valve			(Spring)
997	696310	Shield-Debris	1119	691648	Screw (Alternator)	1229	696308	Extension-Blower Housing
1005	691346	Fan-Flywheel	1160	691627	Screw (Interlock Switch)	1330	270962	Manual-Repair
1019	696438	Kit-Label	1210	498144	Pulley/Spring Assembly (Pulley)			
1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)						
1058	276171	Manual-Owner's						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3242-9

Assemblies include all parts shown in frames.

10/05/2005