



12C600

Illustrated Parts List

Model Series

12C600

TYPE NUMBERS
0100 through 0118.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.






12C600

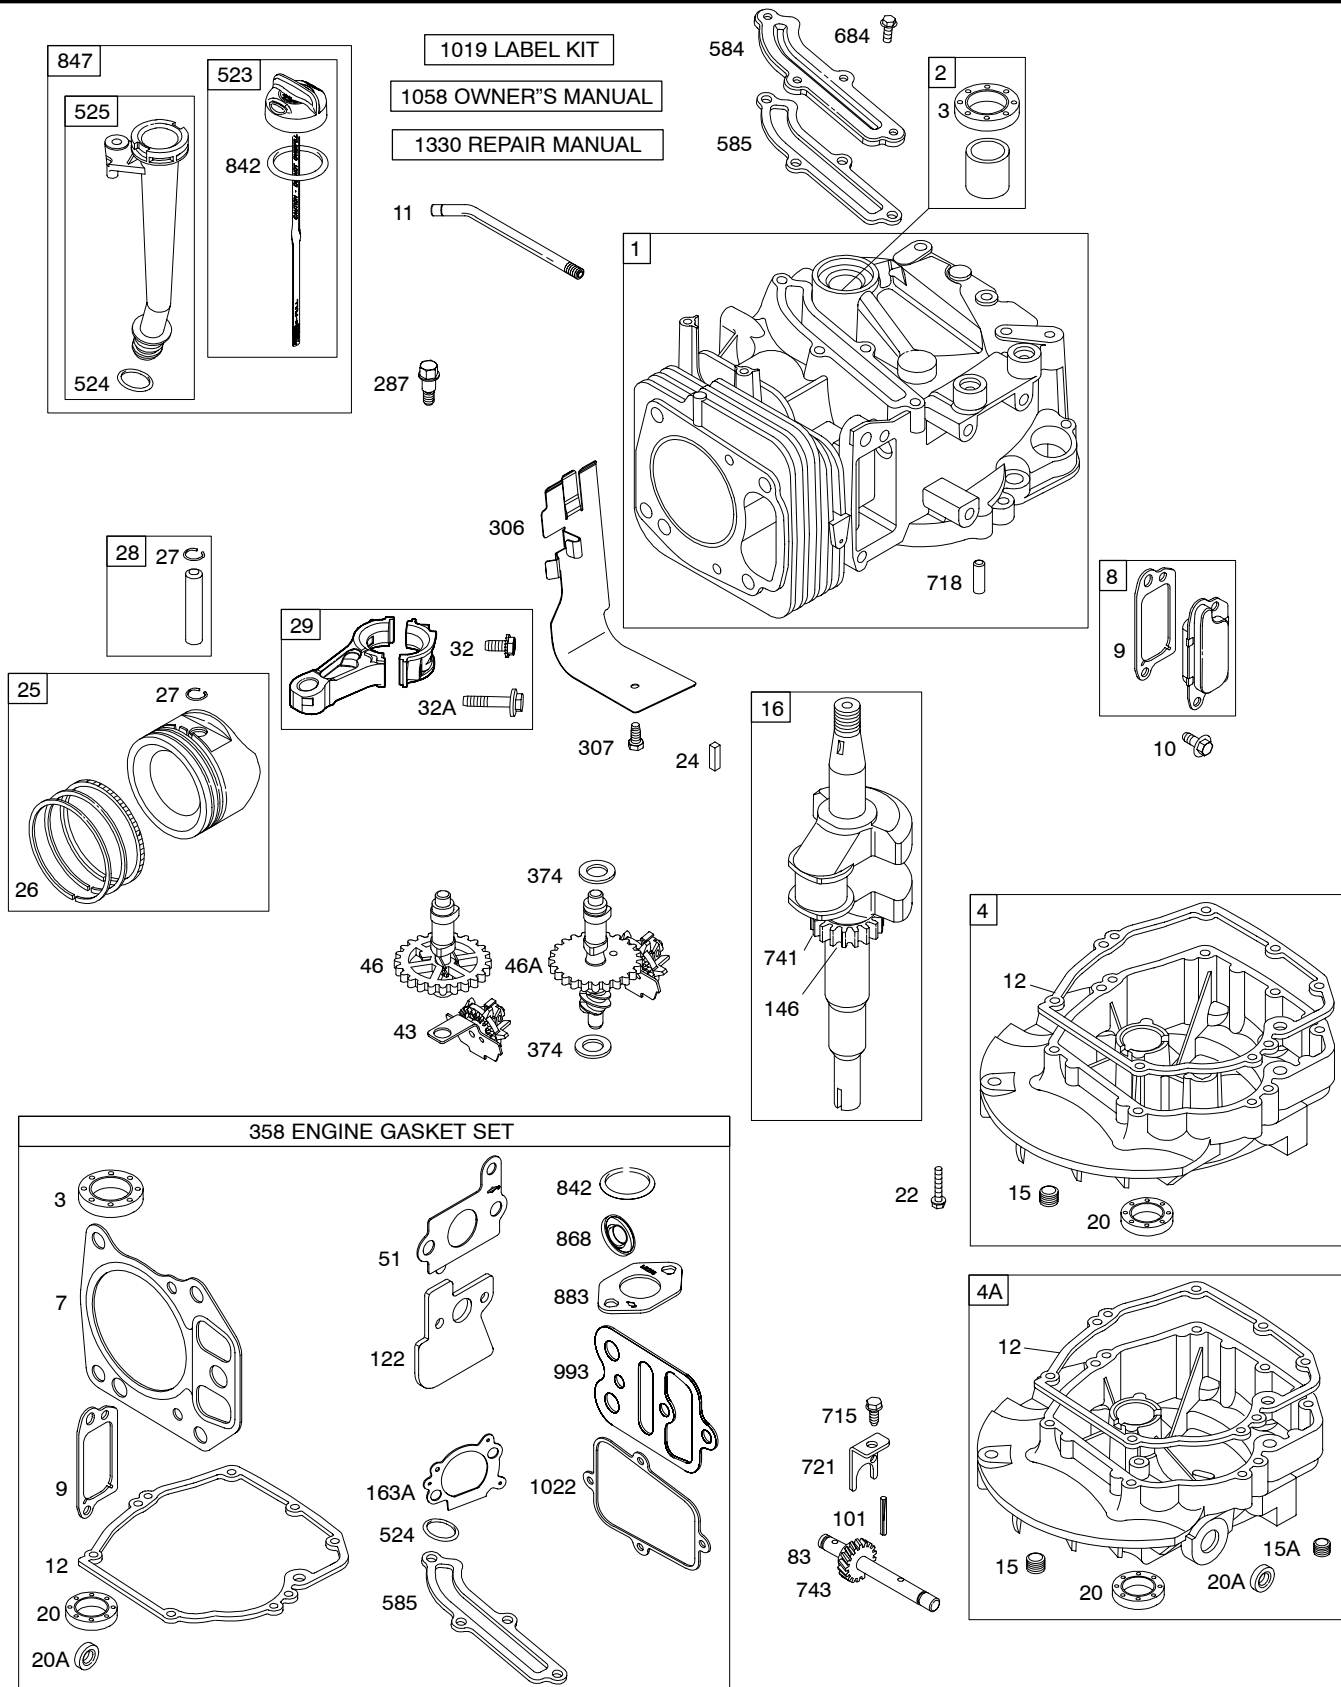


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6741-2 Assemblies include all parts shown in frames. 10/12/2005

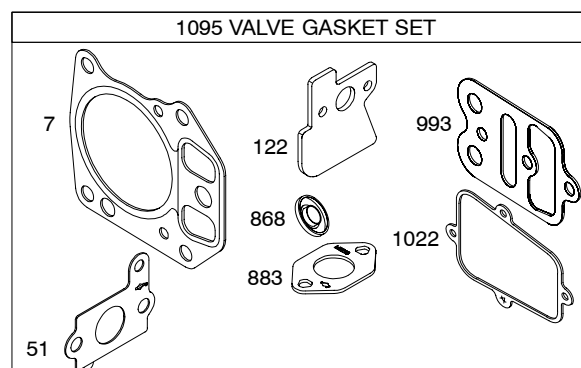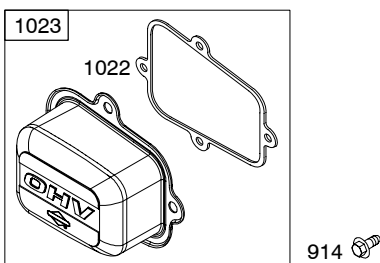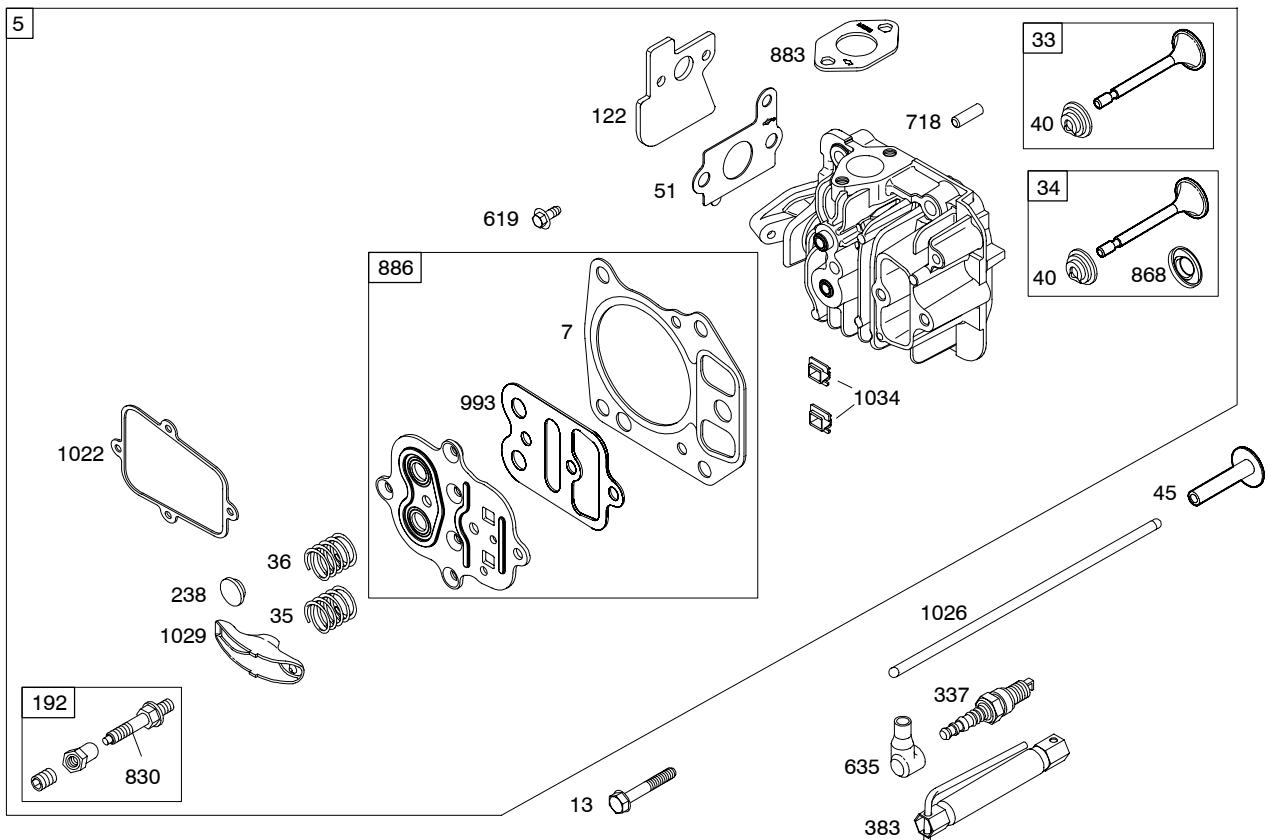







12C600

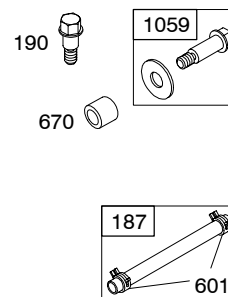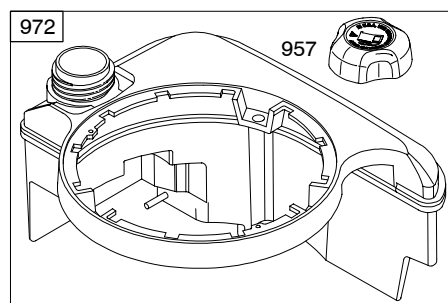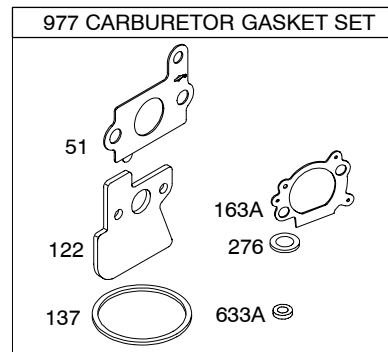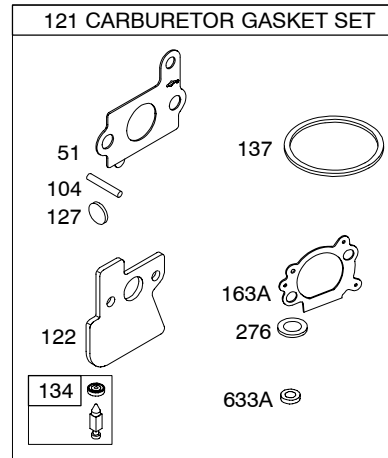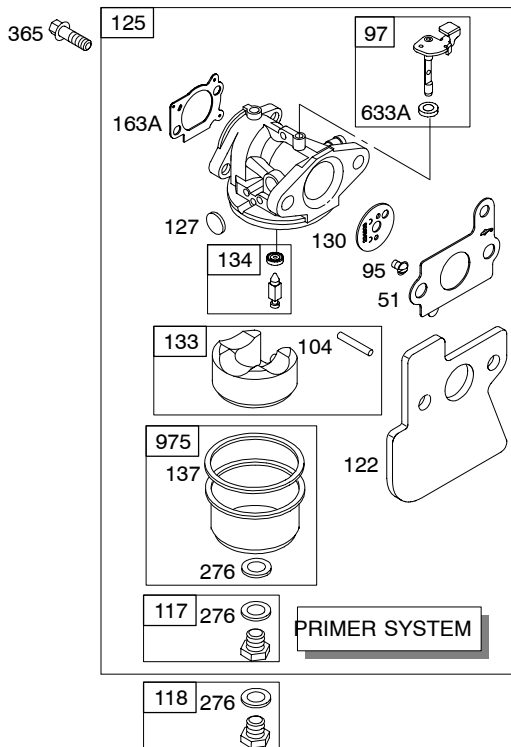


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6741-4 Assemblies include all parts shown in frames. 10/12/2005

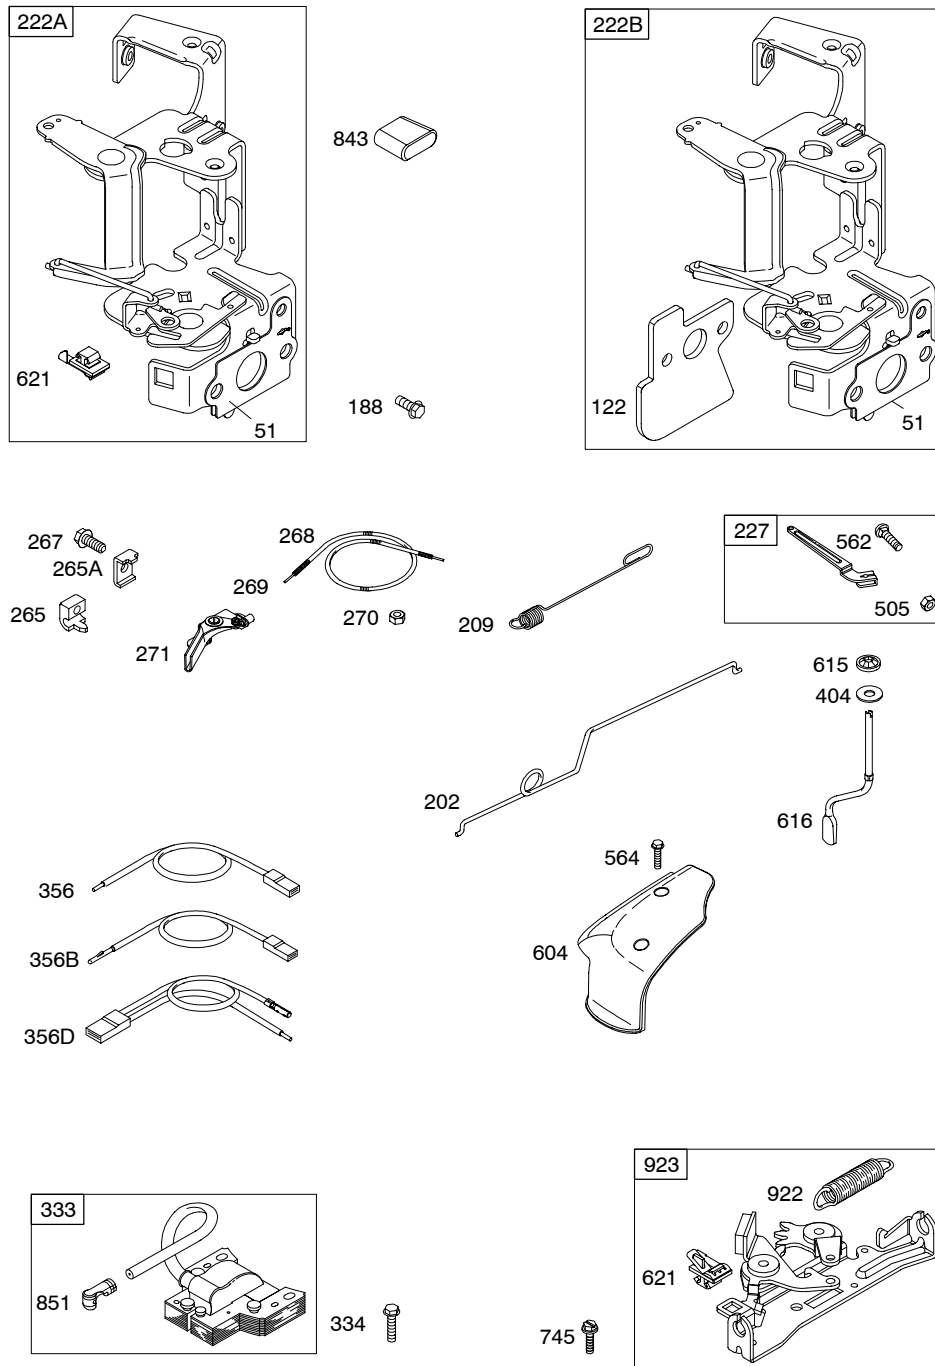

12C600

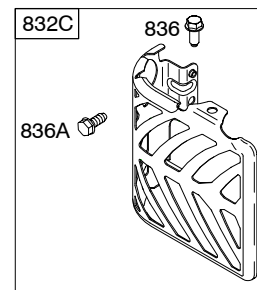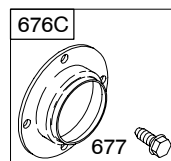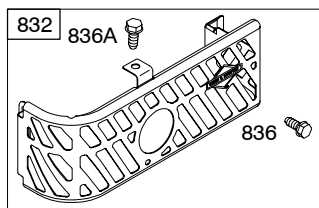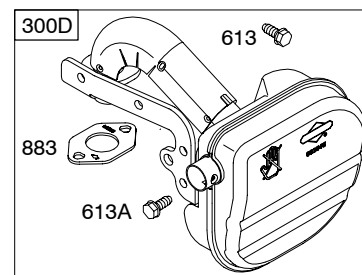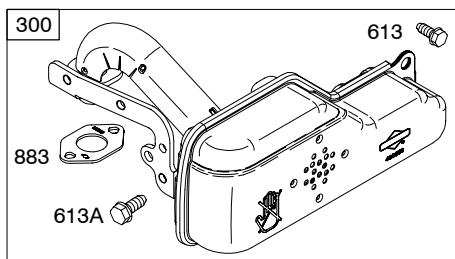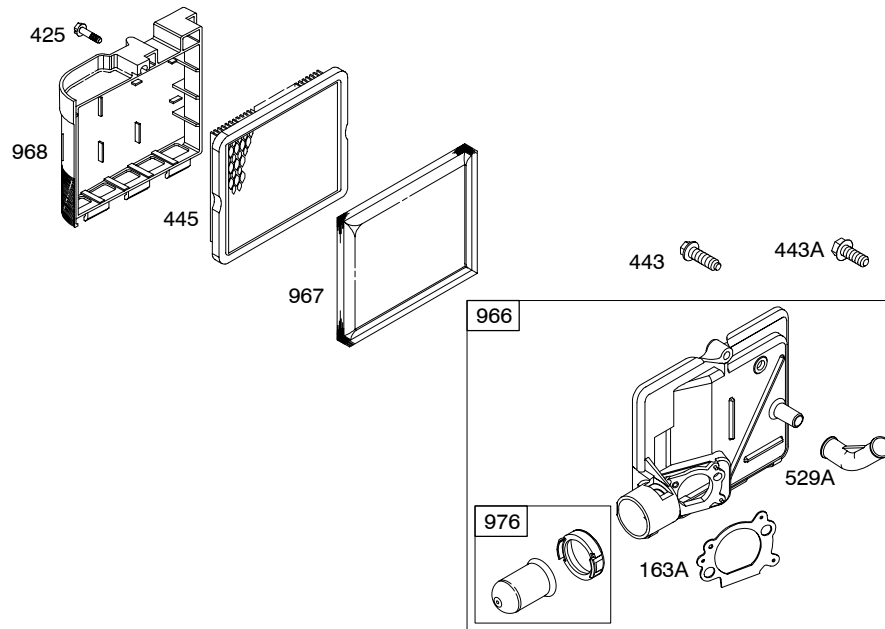

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6741-6 Assemblies include all parts shown in frames. 10/12/2005

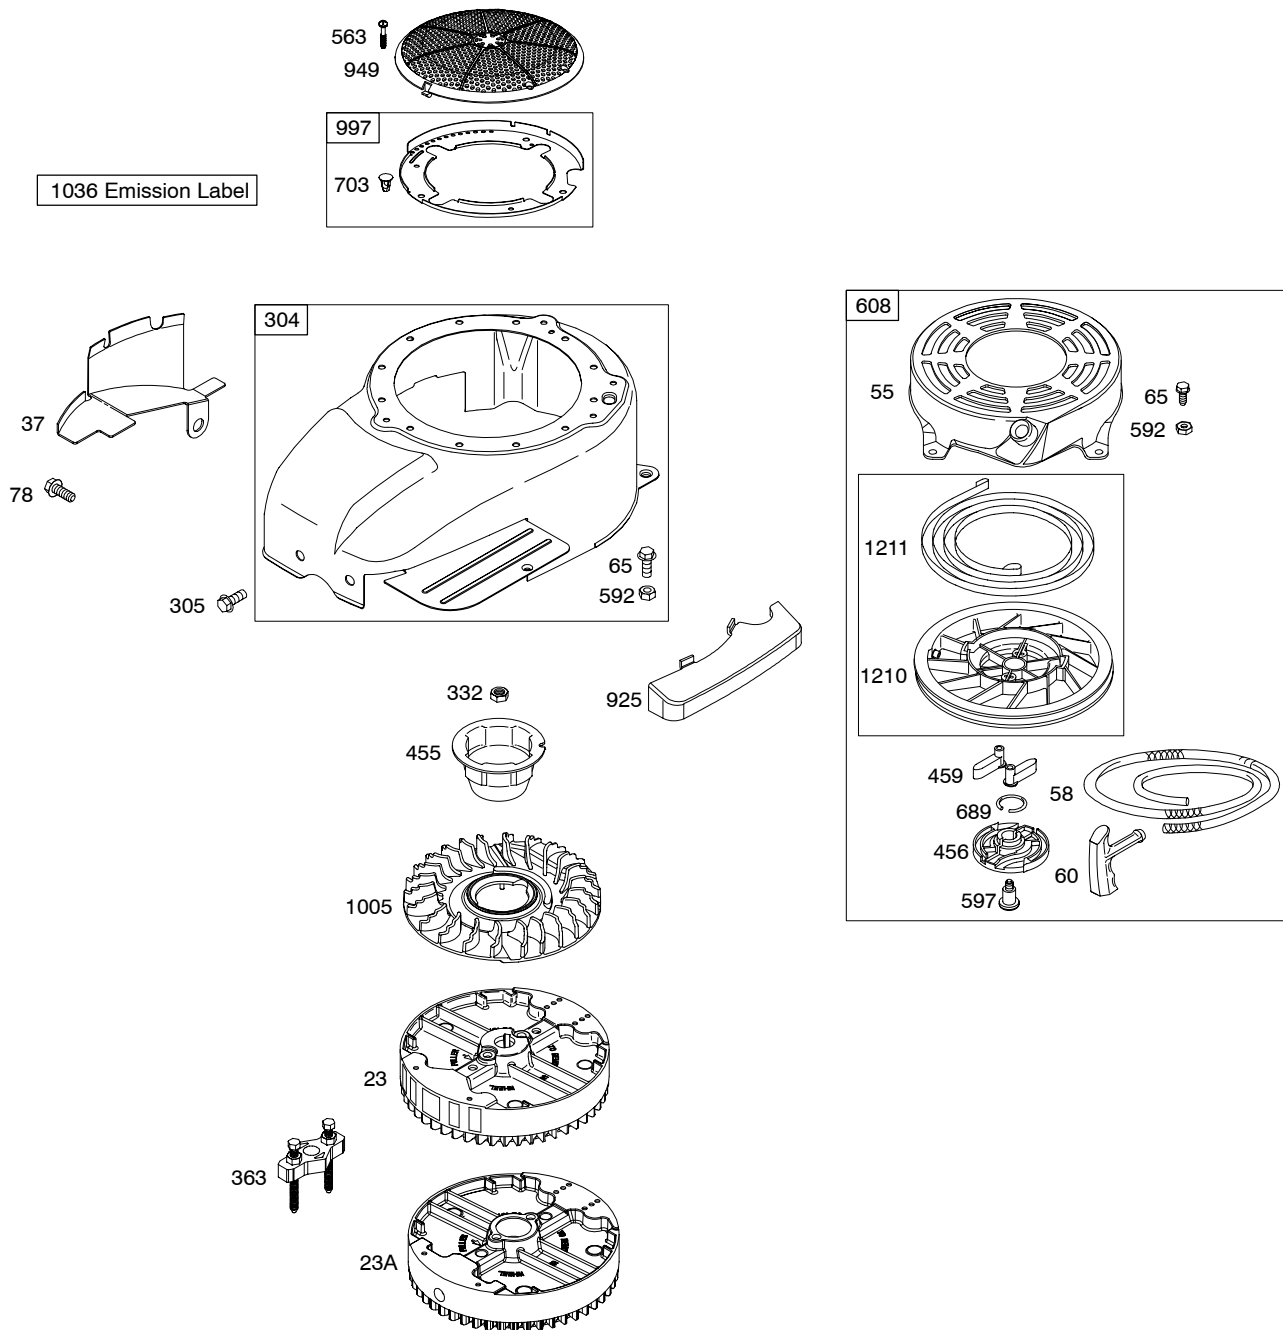

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6741-7 Assemblies include all parts shown in frames. **10/12/2005**

12C600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500).	24	222698	Key-Flywheel	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magnet Side)	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030800).	28	499423	Pin-Piston
3	★299819	Seal-Oil (Magnet Side)				29	499424	Rod-Connecting
4	493279	Sump-Engine				32	691664	Screw (Connecting Rod)
4A	493365	Sump-Engine (Auxiliary PTO) Used on Type No(s). 0110, 0111, 0114, 0118.				32A	695759	Screw (Connecting Rod)
5	695276	Head-Cylinder				33	499642	Valve-Exhaust
7	★△695166	Gasket-Cylinder Head				34	499641	Valve-Intake
8	495786	Breather Assembly				35	691304	Spring-Valve (Intake)
9	★272481	Gasket-Breather				36	691304	Spring-Valve (Exhaust)
10	691125	Screw (Breather Assembly)				37	694086	Guard-Flywheel
11	499675	Tube-Breather				40	692194	Retainer-Valve
12	★692232	Gasket-Crankcase				43	691997	Slinger-Governor/Oil
13	691137	Screw (Cylinder Head)				45	690977	Tappet-Valve
15	691680	Plug-Oil Drain (Square Socket)				46	694039	Camshaft
15A	691093	Plug-Oil Drain (Hex Socket)				46A	694037	Camshaft Used on Type No(s). 0110, 0111, 0114, 0118.
16	691457	Crankshaft ----- Note ----- 693291 Crankshaft Used on Type No(s). 0117.	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030800).	51★♦♦△692668	692668	Gasket-Intake
20	★399781	Seal-Oil (PTO Side)				55	691421	Housing-Rewind Starter
20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)				58	697316	Rope-Starter (Cut To Required Length)
22	691092	Screw (Crankcase Cover/Sump)				60	281434	Grip-Starter Rope
23	692693	Flywheel				65	690837	Screw (Rewind Starter)
23A	696569	Flywheel Used on Type No(s). 0110, 0111, 0112, 0114, 0117, 0118.				78	691108	Screw (Flywheel Guard)
						83	690522	Shaft-Auxiliary Drive
						95	691636	Screw (Throttle Valve)
						97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)
						101	691623	Pin-Shaft
						104	♦691242	Pin-Float Hinge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6741-8

Assemblies include all parts shown in frames.

10/12/2005

12C600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498981	Jet–Main (Standard) (Used After Code Date 03110600). ----- Note ----- 498978 Jet–Main (Standard) (Used Before Code Date 03110700).	190	690940	Screw (Fuel Tank)	304	696527	Housing–Blower ----- Note ----- 697383 Housing–Blower Used on Type No(s). 0110, 0111, 0112, 0114, 0117, 0118.
118	497466	Jet–Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet–Main (High Altitude) (Used Before Code Date 03110700).	192	694543	Adjuster–Rocker Arm	305	691108	Screw (Blower Housing) ----- Note ----- 691138 Screw (Blower Housing)
121	692703	Kit–Carburetor Overhaul	202	691303	Link–Mechanical Governor	306	691232	Shield–Cylinder
122	692799	Spacer–Carburetor	209	690319	Spring–Governor ----- Note ----- 691290 Spring–Governor Used on Type No(s). 0100. 691291 Spring–Governor Used on Type No(s). 0114, 0116.	307	690345	Screw (Cylinder Shield)
125	790120	Carburetor	222A	693378	Bracket–Control	332	690662	Nut (Flywheel)
127	694468	Plug–Welch	222B	692672	Bracket–Control Used on Type No(s). 0110, 0111, 0112, 0114, 0116, 0117, 0118.	333	802574	Armature–Magneto
130	691203	Valve–Throttle ----- Note ----- 696564 Valve–Throttle (Used With Plastic Throttle Shaft)	227	691467	Lever–Governor Control	334	691061	Screw (Magneto Armature)
133	398187	Float–Carburetor	238	691300	Cap–Valve	337	692051	Plug–Spark (Resistor) ----- Note ----- 692720 Plug–Spark (EMS)
134	398188	Kit–Needle/Seat	265	690798	Clamp–Casing	356	692390	Wire–Stop
137	693981	Gasket–Float Bowl	265A	691024	Clamp–Casing	356B	692151	Wire–Stop
146	690979	Key–Timing	267	691044	Screw (Casing Clamp)	356D	691418	Wire–Stop
163A	692667	Gasket–Air Cleaner	268	691025	Casing–Control Wire (Cut To Required Length)	358	694090	Gasket Set–Engine
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).	269	691026	Wire–Control (Cut To Required Length)	363	19069	Puller–Flywheel
188	691147	Screw (Control Bracket)	270	691027	Nut (Control Wire Casing)	365	691136	Screw (Carburetor)
			271	691028	Lever–Control	374	691074	Washer (Camshaft)
			276	271716	Washer–Sealing	383	19374	Wrench–Spark Plug
			287	690940	Screw (Dipstick Tube)	404	690272	Washer (Governor Crank)
			300	697382	Muffler–Exhaust Used on Type No(s). 0110, 0114.	425	690670	Screw (Air Cleaner Cover)
			300D	699769	Muffler–Exhaust	443	691637	Screw (Air Cleaner Primer Base)
						443A	692523	Screw (Air Cleaner Primer Base)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6741–9

Assemblies include all parts shown in frames.

10/12/2005

12C600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	491588	Filter-Air Cleaner Cartridge	635	66538	Boot-Spark Plug	922	692135	Spring-Brake
455	695161	Cup-Flywheel	670	692294	Spacer-Fuel Tank	923	695891	Brake
456	692299	Plate-Pawl Friction	676C	497682	Deflector-Muffler	925	690595	Cover-Linkage
459	281505	Ratchet-Pawl	677	690661	Screw (Muffler Deflector)	949	696306	Guard-Debris Screen
505	691251	Nut (Governor Control Lever).	684	690345	Screw (Breather Passage Cover)	957	692046	Cap-Fuel Tank (Plastic)
523	499621	Dipstick	689	691855	Spring-Friction	966	692673	Base-Air Cleaner Primer
524	★692296	Seal-Dipstick Tube	703	696309	Clip	967	493537	Filter-Pre Cleaner
525	495265	Tube-Dipstick	715	691147	Screw (Stop Shaft)	968	692298	Cover-Air Cleaner
529A	691923	Grommet	718	690959	Pin-Locating	972	699374	Tank-Fuel (Plastic)
562	691119	Bolt (Governor-Control Lever)	721	690449	Shaft-Stop	975	493640	Bowl-Float
563	691138	Screw (Debris Guard Screen)	741	790345	Gear-Timing (Use Without Woodruff Key)	976	694395	Primer-Carburetor
564	693808	Screw (Control Cover)	----- Note -----			977	692704	Gasket Set-Carburetor
584	697734	Cover-Breather Passage	691830	Gear-Timing (Uses Woodruff Key)		993	★△694088	Gasket-Cylinder Head Plate
585	★691879	Gasket-Breather Passage	743	691772	Gear-Drive	997	696310	Shield-Debris
592	690800	Nut (Rewind Starter)	745	691648	Screw (Brake)	1005	691346	Fan-Flywheel
597	691696	Screw (Pawl Friction Plate)	830	694544	Stud-Rocker Arm	1019	696438	Kit-Label
601	95162	Clamp-Hose	832	691466	Guard-Muffler	1022	★△691890	Gasket-Rocker Cover
604	692669	Cover-Control	832C	695593	Guard-Muffler	1023	499624	Cover-Rocker Arm
608	497680	Starter-Rewind	836	691147	Screw (Muffler Guard)	1026	692045	Rod-Push
613	691108	Screw (Muffler)	836A	697551	Screw (Muffler Guard)	1029	691230	Arm-Rocker
613A	691140	Screw (Muffler)	842	★691031	Seal-O Ring (Dipstick Tube)	1034	691343	Guide-Push Rod
615	690340	Retainer-Governor Shaft	843	691884	Sleeve-Lever	1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)
616	691308	Crank-Governor	847	692047	Dipstick/Tube Assembly	1058	276348	Manual-Owner's
619	698801	Screw (Cylinder Head Plate)	851	493880	Terminal-Spark Plug	1059	692311	Kit-Screw/Washer
621	692310	Switch-Stop	868	★△692044	Seal-Valve	1095	694091	Gasket Set-Valve
633A◆●691321		Seal-Choke/Throttle Shaft (Throttle Shaft)	883	★△691893	Gasket-Exhaust	1210	498144	Pulley/Spring Assembly (Pulley)
			886	696268	Gasket Set-Cylinder Head/Plate	1211	498144	Pulley/Spring Assembly (Spring)
			914	691108	Screw (Rocker Cover)	1330	272147	Manual-Repair

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6741-10

Assemblies include all parts shown in frames.

10/12/2005