



12D300

Illustrated Parts List

Model Series

12D300

TYPE NUMBERS
0007 through 0019.

TABLE OF CONTENTS

Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valves	3
Lubrication	2
Piston Group	2
Rewind Starter	5

BRIGGS & STRATTON



PRINTED IN U.S.A.










COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12D300

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

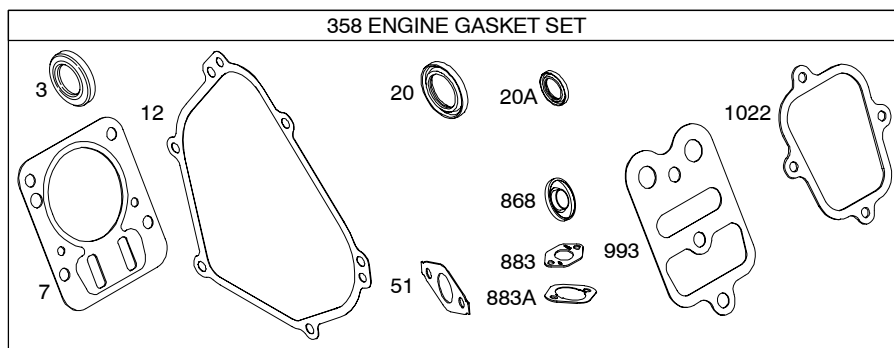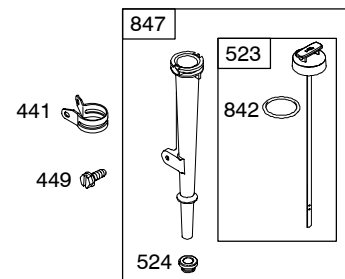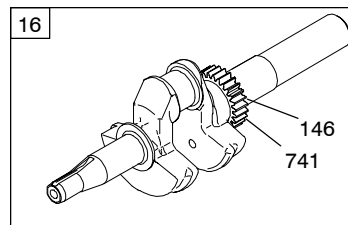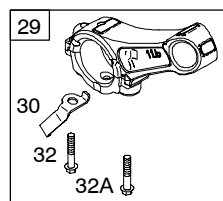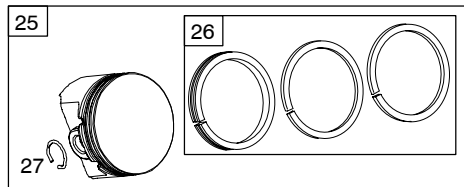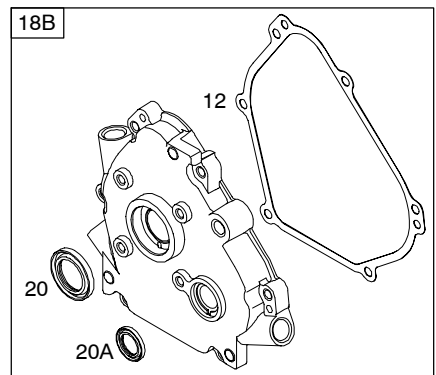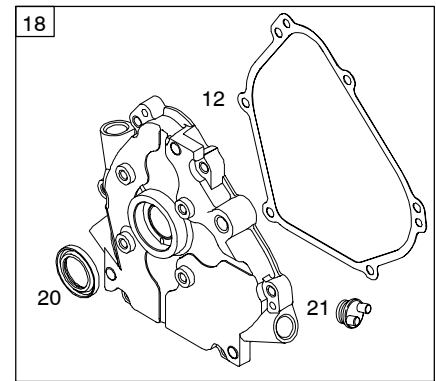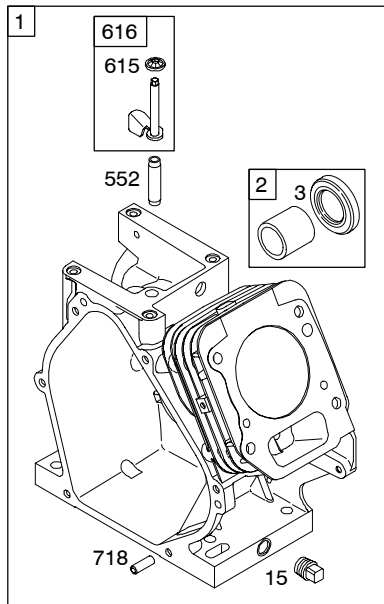


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-2









Assemblies include all parts shown in frames.

11/11/2005

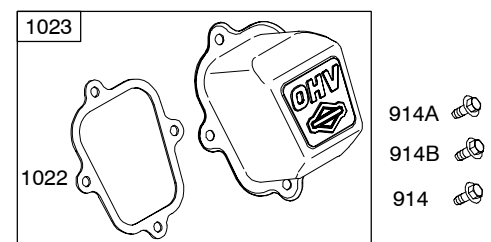

www.mymowerparts.com

12D300

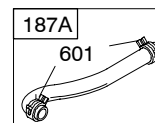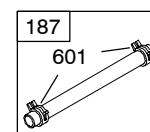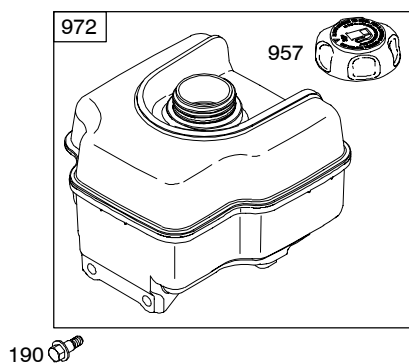


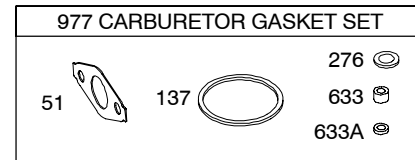
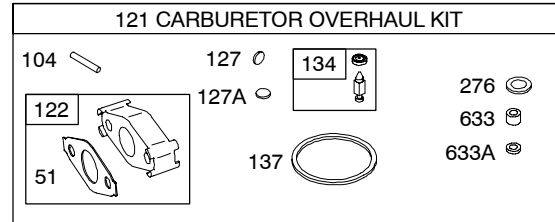
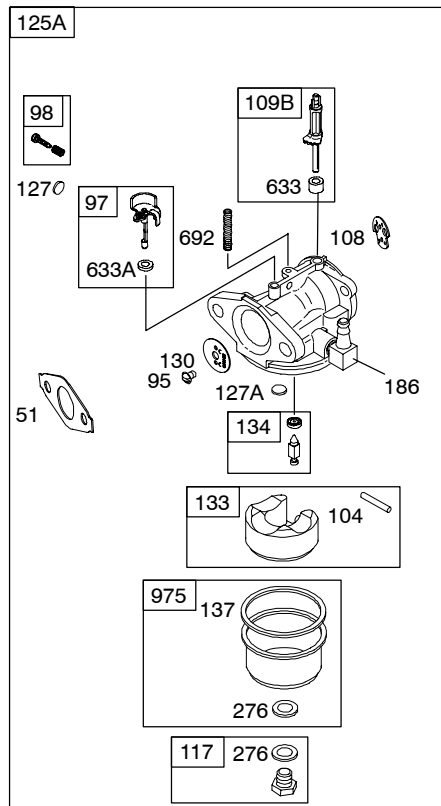


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-4

Assemblies include all parts shown in frames.

11/11/2005

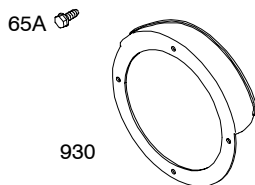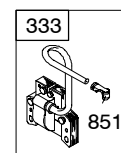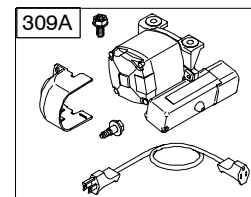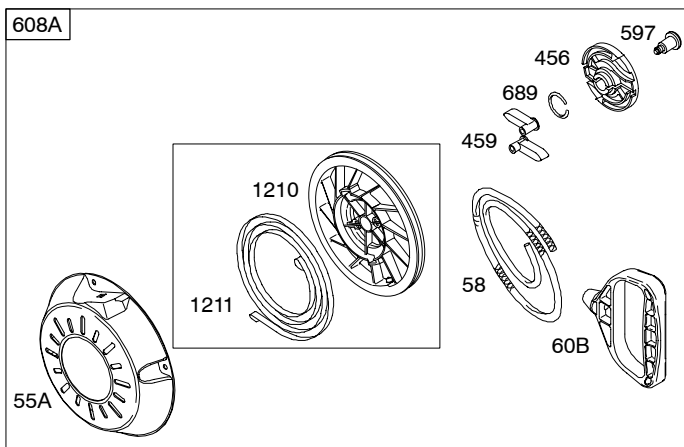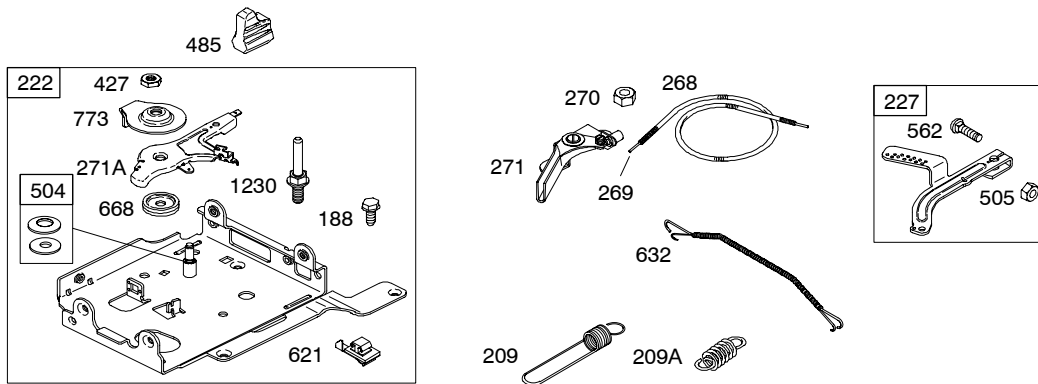


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-5




Assemblies include all parts shown in frames.

11/11/2005

12D300

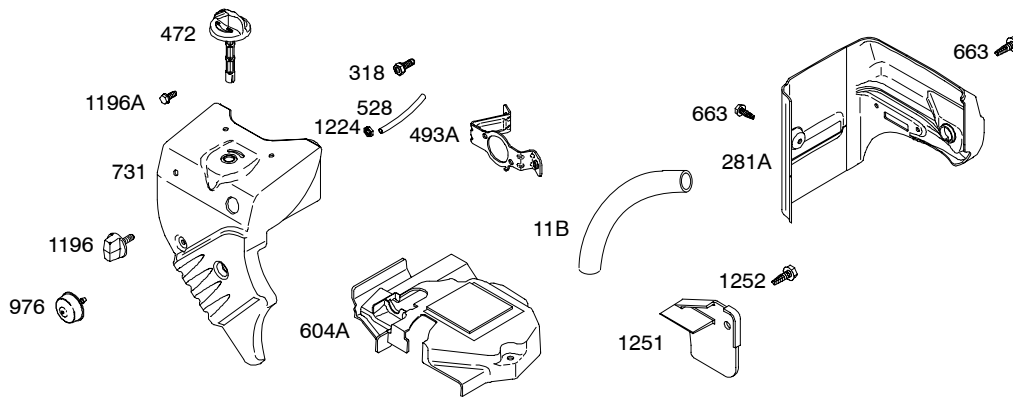

1036 EMISSION LABEL

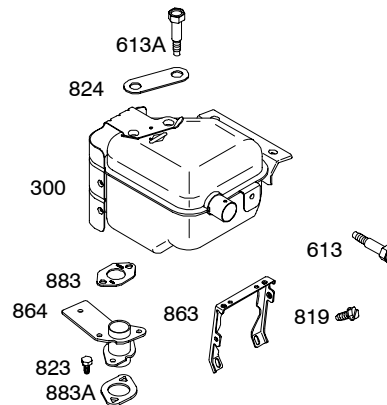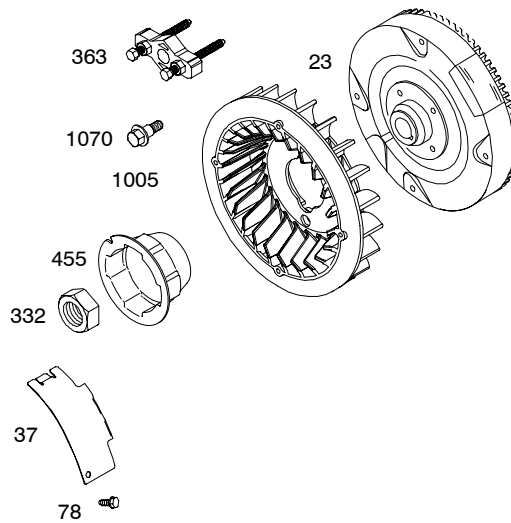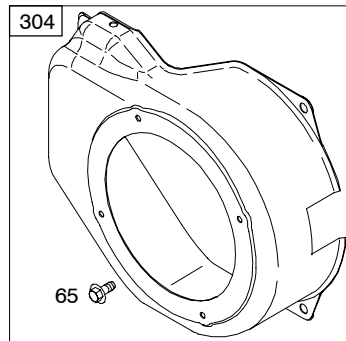

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-6

Assemblies include all parts shown in frames.

11/11/2005

12D300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	26	791969	Ring Set (Standard) (Used After Code Date 05030800).	78	699205	Screw (Flywheel Guard)
2	399269	Kit-Bushing/Seal (Magneto Side)				95	691636	Screw (Throttle Valve)
3	★299819S	Seal-Oil (Magneto Side)			----- Note -----	97	690024	Shaft-Throttle
5	699486	Head-Cylinder			499631 Ring Set (Standard) (Used Before Code Date 05030900).	98	398185	Kit-Idle Speed
7	★Ø698210	Gasket-Cylinder Head			791324 Ring Set (.020" Oversize) (Used After Code Date 05030800).	104	●691242	Pin-Float Hinge
11B	695745	Tube-Breather			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).	108	695807	Valve-Choke
12	★699485	Gasket-Crankcase				109B	695729	Shaft-Choke
13	699482	Screw (Cylinder Head)				117	690048	Jet-Main (Standard)
15	691686	Plug-Oil Drain				118	498977	Jet-Main (High Altitude)
16	699445	Crankshaft Used on Type No(s). 0007, 0017, 0018. ----- Note ----- 699451 Crankshaft Used on Type No(s). 0009, 0019.	27	691866	Lock-Piston Pin	121	696998	Kit-Carburetor Overhaul
18	699804	Cover-Crankcase	28	499423	Pin-Piston	122	●693749	Spacer-Carburetor
18B	699677	Cover-Crankcase	29	690124	Rod-Connecting	125A	791292	Carburetor
20	★692550	Seal-Oil (PTO Side)	30	692562	Dipper-Connecting Rod	127	●694468	Plug-Welch
20A	★691952	Seal-Oil (PTO Side)	32	691664	Screw (Connecting Rod)	127A	●691739	Plug-Welch
21	281658S	Cap-Oil Fill	32A	695759	Screw (Connecting Rod)	130	691181	Valve-Throttle
22	699478	Screw (Crankcase Cover/ Sump)	33	499642	Valve-Exhaust	133	398187	Float-Carburetor
23	699516	Flywheel	34	499641	Valve-Intake	134	●398188	Kit-Needle/Seat
24	222698S	Key-Flywheel	35	691304	Spring-Valve (Intake)	137	●●693981	Gasket-Float Bowl
25	792004	Piston Assembly (Standard) (Used After Code Date 05030800). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	36	691304	Spring-Valve (Exhaust)	146	690979	Key-Timing
			37	699661	Guard-Flywheel	155	698214	Plate-Cylinder Head
			40	692194	Retainer-Valve	186	692317	Connector-Hose
			45	690977	Tappet-Valve	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).
			46	693404	Camshaft			
			46A	694831	Camshaft	187A	791867	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 692601 Line-Fuel (Molded) (Used Before Code Date 05070100).
			51	★●●Ø692555	Gasket-Intake			
			55A	696710	Housing-Rewind Starter			
			58	693389	Rope-Starter (Cut To Required Length)			
			60B	699334	Grip-Starter Rope			
			65	699228	Screw (Rewind Starter)			
			65A	699851	Screw (Rewind Starter)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-7

Assemblies include all parts shown in frames.

11/11/2005

12D300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	699479	Screw (Control Bracket)	365	699484	Screw (Carburetor)	633A	♦♦691321	Seal-Choke/Throttle Shaft (Throttle)
190	699220	Screw (Fuel Tank)	383	19374S	Wrench-Spark Plug	635A	692927	Boot-Sparkplug
192	694543	Ball-Rocker Arm	427	694255	Nut (Control Bracket)	663	699854	Screw (Control Panel)
209	692571	Spring-Governor	441	694262	Bracket-Oil Fill	668	694257	Spacer
209A	691278	Spring-Governor	449	699629	Screw (Oil Fill Bracket)	689	691855	Spring-Friction
219	693578	Gear-Governor	455	692591	Cup-Flywheel	692	690572	Spring-Detent (Choke)
220	691724	Washer (Governor Gear)	456	692299	Plate-Pawl Friction	718	690959	Pin-Locating
222	699592	Bracket-Control	459	281505S	Pawl-Ratchet	731	790528	Hood-Snow
227	692573	Lever-Governor Control	472	696691	Knob-Choke Shaft	741	695087	Gear-Timing
238	691300	Cap-Valve	485	695755	Knob-Control	742	692564	Retainer-E Ring
268	691072	Control Wire Casing (Cut to Required Length)	493A	695744	Bracket-Mounting	746	692566	Gear-Idler
269	691026	Control Wire (Cut to Required Length)	504	694254	Washer Set-Friction	773	694258	Retainer
270	691027	Nut (Control Wire Casing)	505	691251	Nut (Governor Control Lever)	819	699233	Screw (Muffler Bracket)
271	691028	Lever-Control	523	693618	Dipstick	823	699209	Screw (Muffler Adapter)
271A	698038	Lever-Control	524	281370S	Seal-Dipstick Tube	824	696017	Gasket-Heat Shield
276	♦♦271716	Washer-Sealing	528	695746	Hose-Primer	830	694544	Stud (Rocker Arm)
281A	696684	Panel-Control	552	692346	Bushing-Governor Crank	842	691031	Seal-O Ring (Dipstick Tube)
300	699511	Muffler	562	691119	Bolt (Governor Control Lever)	847	693617	Dipstick/Tube Assembly
304	699598	Housing-Blower	597	691696	Screw (Pawl Friction Plate)	851	493880S	Terminal-Spark Plug
305	699480	Screw (Blower Housing)	598	220624	Shim-End Play	863	699849	Bracket-Muffler
306A	695710	Shield-Cylinder	601	95162S	Clamp-Hose	864	699232	Adapter-Muffler
307	699483	Screw (Cylinder Shield)	604A	695749	Cover-Control	868	★Ø692044	Seal-Valve
307A	699234	Screw (Cylinder Shield)	608A	699335	Starter-Rewind	883	★692237	Gasket-Exhaust
309A	696818	Motor-Starter	613	697812	Screw (Muffler)	883A	★691893	Gasket-Exhaust
318	690370	Screw (Mounting Bracket)	613A	699230	Screw (Muffler)	892	695747	Switch-Key
332	699359	Nut (Flywheel)	615	692576	Retainer-Governor Shaft	914	699481	Screw (Rocker Cover) (Bottom)
333	695711	Armature-Magneto	616	692547	Crank-Governor	914A	692557	Screw (Rocker Cover) (Top)
334	699477	Screw (Magneto Armature)	619	699230	Screw (Cylinder Head Plate)	914B	697551	Screw (Rocker Cover) (Center)
337	491055S	Spark-Plug	621	692310	Switch-Stop	930	696709	Guard-Rewind
356K	695731	Wire-Stop	632	692653	Spring/Link-Mechanical Governor	957	694261	Cap-Fuel Tank
358	699638	Set-Engine Gasket	633	♦♦693867	Seal-Choke/Throttle Shaft (Choke)	958	698180	Valve-Fuel Shut Off
363	19069	Puller-Flywheel				972	694260	Tank-Fuel
						975	493640	Bowl-Float

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5723-8

Assemblies include all parts shown in frames.

11/11/2005

12D300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
976	790221	Primer-Carburetor (Snap Fit) ----- Note ----- 695750 Primer-Carburetor	1034	691343	Guide-Push Rod Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)	1210	498144	Pulley/Spring Assembly (Pulley)
977	697001	Gasket Set-Carburetor	1058	275697	Owner's Manual	1211	498144	Pulley/Spring Assembly (Spring)
990	695756	Key-Set	1070	699201	Screw (Flywheel Fan)	1224	696824	Nut (Carburetor Primer)
993 ★ Ø694088		Gasket-Cylinder Head Plate	1095	698215	Gasket Set-Valve	1230	699847	Screw (Control Bracket)
1005	692592	Fan-Flywheel	1196	696692	Screw (Snow Hood)	1251	696699	Shield-Snow
1019	695751	Kit-Label			(Carburetor)	1252	699234	Screw (Snow Shield)
1022 ★ Ø691890		Gasket-Rocker Cover	1196A	696685	Screw (Snow Hood)	1330	272147	Repair Manual
1023	499924	Cover-Rocker Arm			(Muffler)			
1026	790287	Rod-Push						
1029	691230	Arm-Rocker						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5723-9**

Assemblies include all parts shown in frames.

11/11/2005