

# 12D400

## Illustrated Parts List

### Model Series

# 12D400

TYPE NUMBERS  
0007 through 0110.

### TABLE OF CONTENTS

Blower Housing/Shrouds .....	7
Cams .....	4
Carburetor .....	5
Controls .....	6
Crankcase Cover/Sump .....	2
Crankshaft .....	4
Cylinder .....	2
Electric Starter .....	8
Flywheel .....	7
Fuel Tank .....	5
Governor Spring .....	6
Head .....	3
Ignition .....	6
Kits/Gaskets – Carburetor .....	5
Kits/Gaskets – Engine .....	2
Muffler .....	8
Oil Group .....	2
Piston Group .....	4
Rewind Starter .....	8
Valves .....	3



PRINTED IN U.S.A.








COPYRIGHT by BRIGGS & STRATTON CORPORATION  
 All rights reserved. No part of this material may be reproduced or transmitted,  
 in any form or by any means, electronic or mechanical, including photocopying,  
 recording or by any information storage and retrieval system, without permission  
 in writing from Briggs & Stratton Corporation.

# 12D400



1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

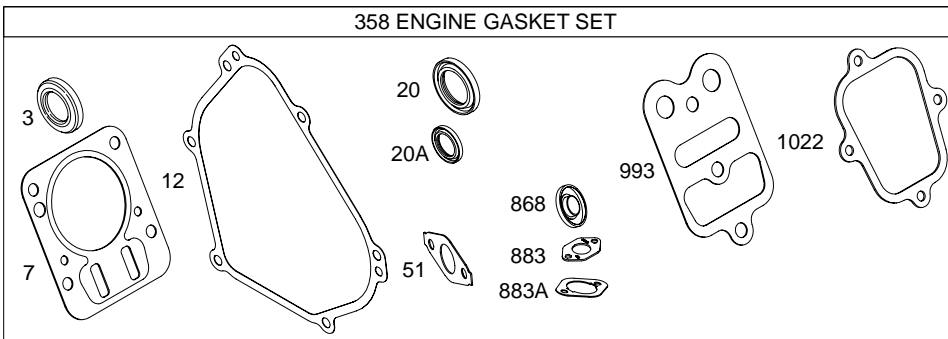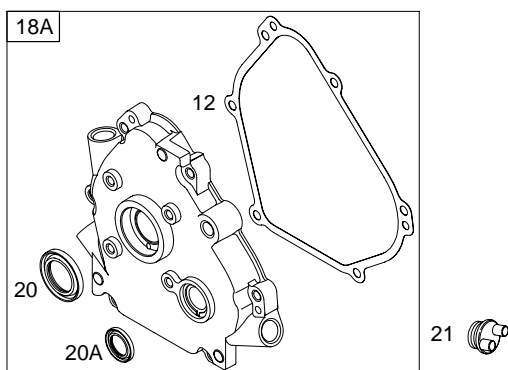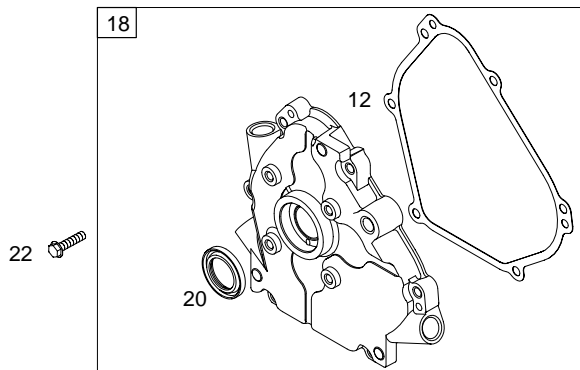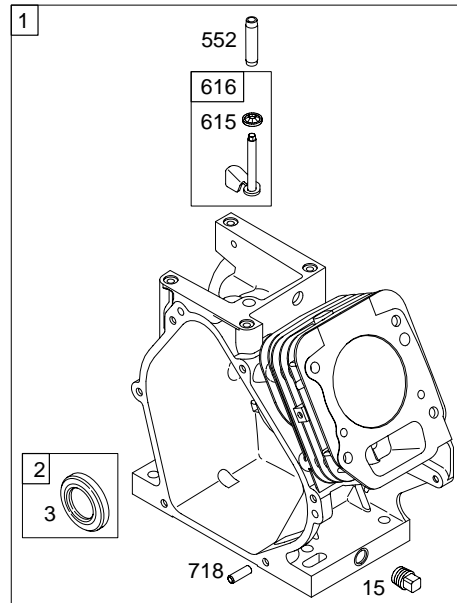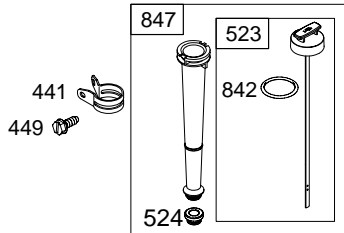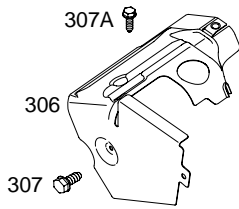


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 6505-2 Assemblies include all parts shown in frames. 11/24/2003

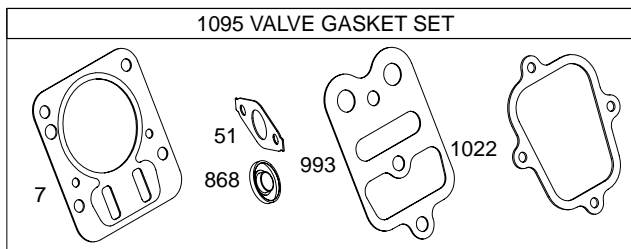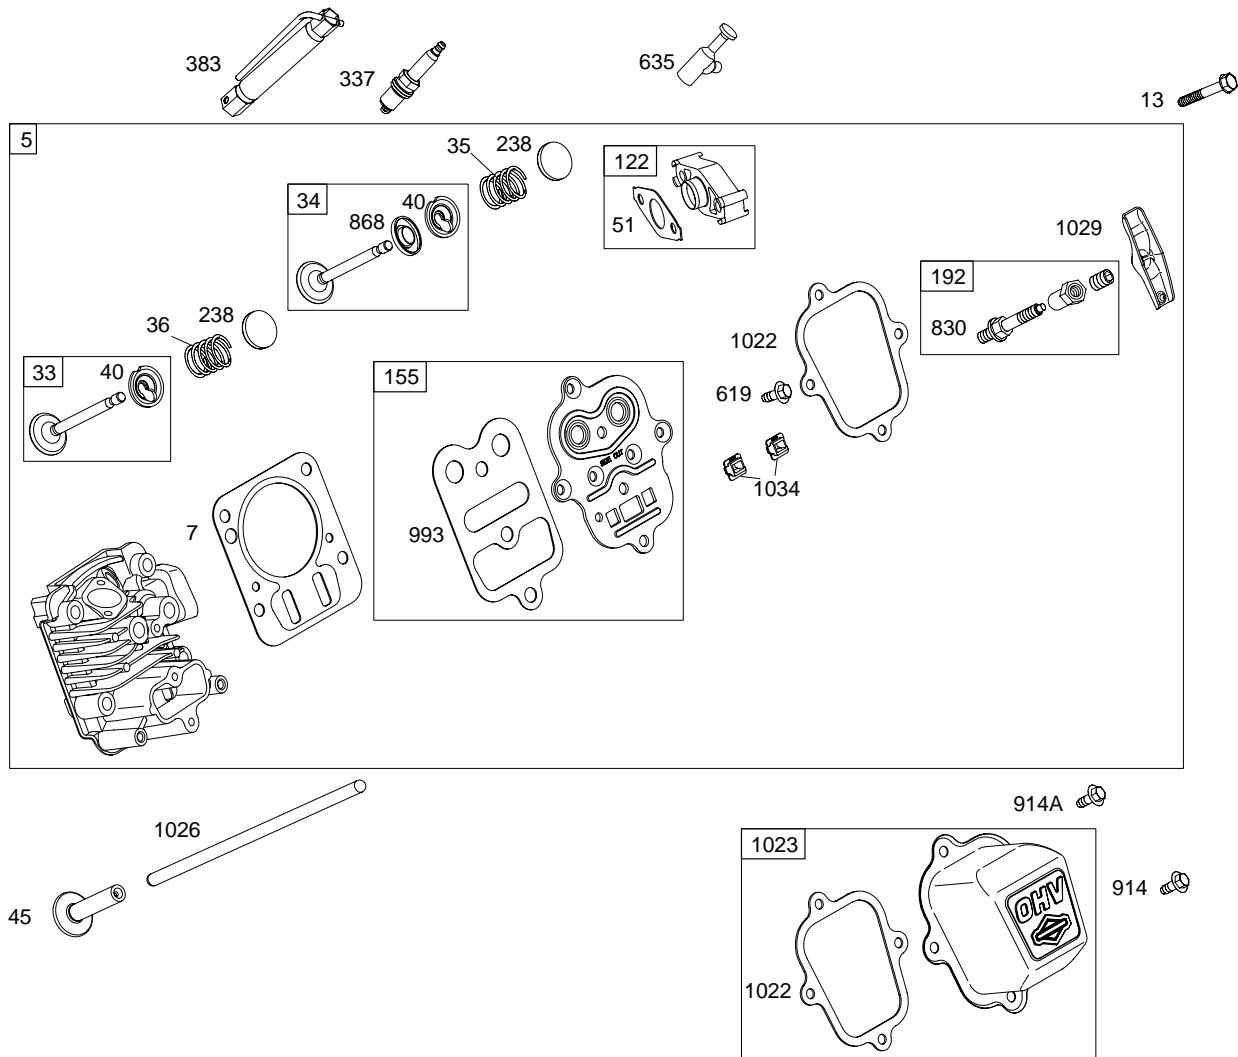



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 6505-3 Assemblies include all parts shown in frames. 11/24/2003

# 12D400


---

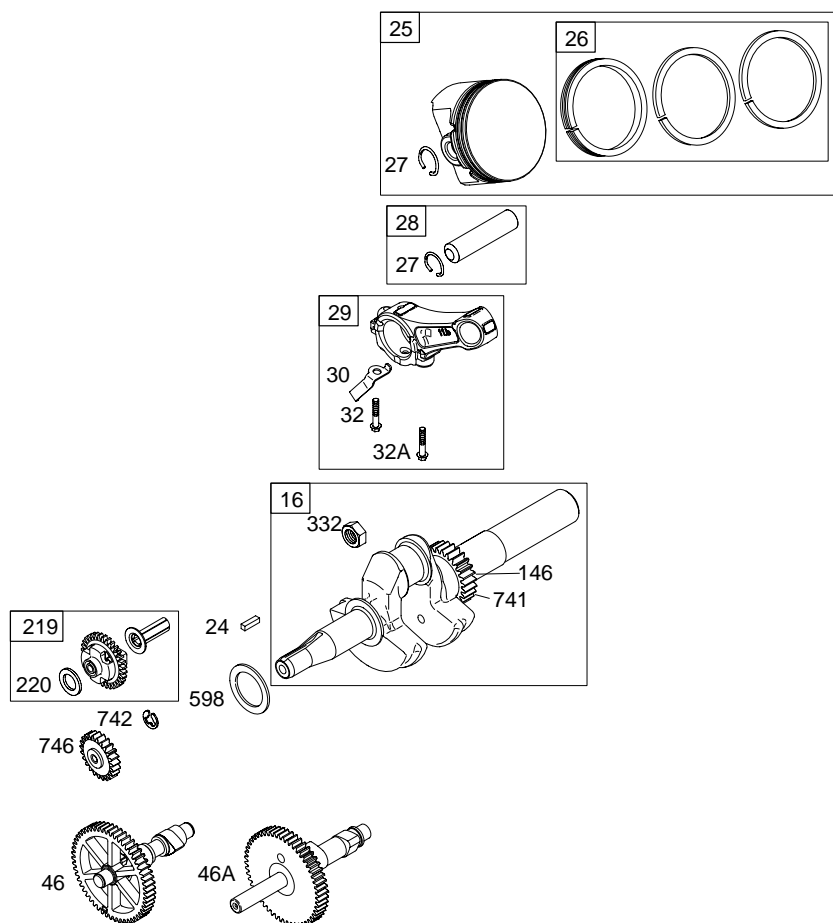


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6505-4 Assemblies include all parts shown in frames. 11/24/2003

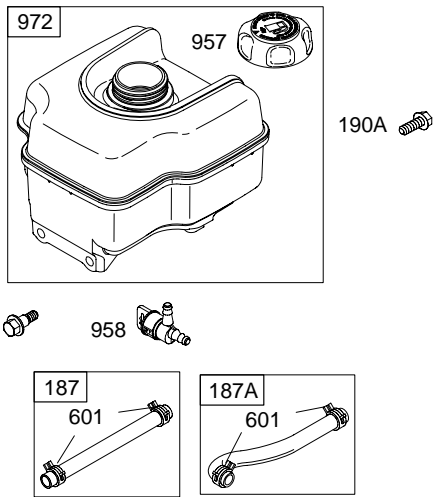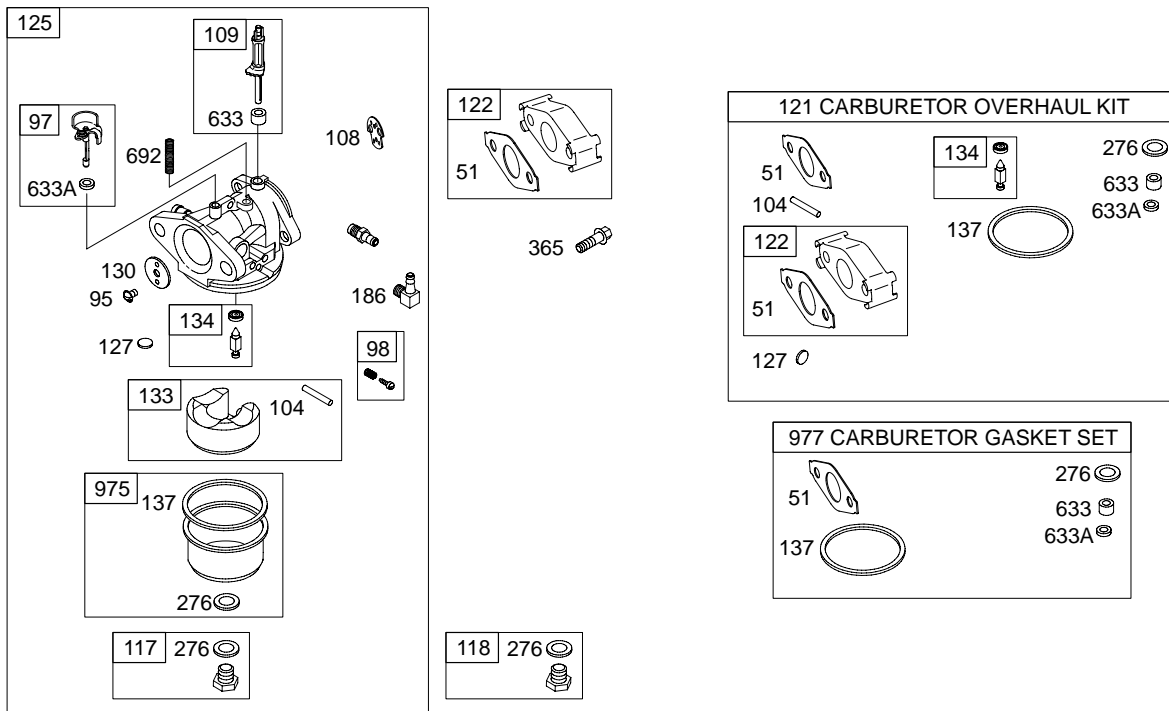

# 12D400



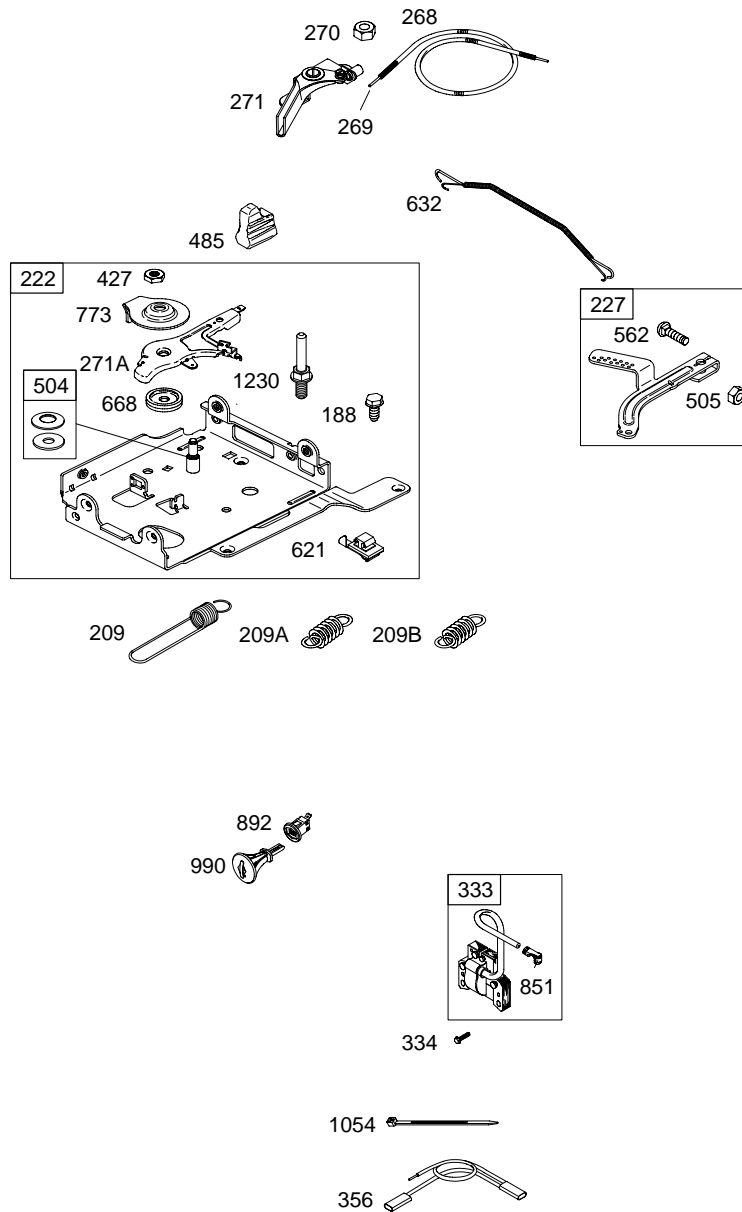


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6505-6 Assemblies include all parts shown in frames. 11/24/2003

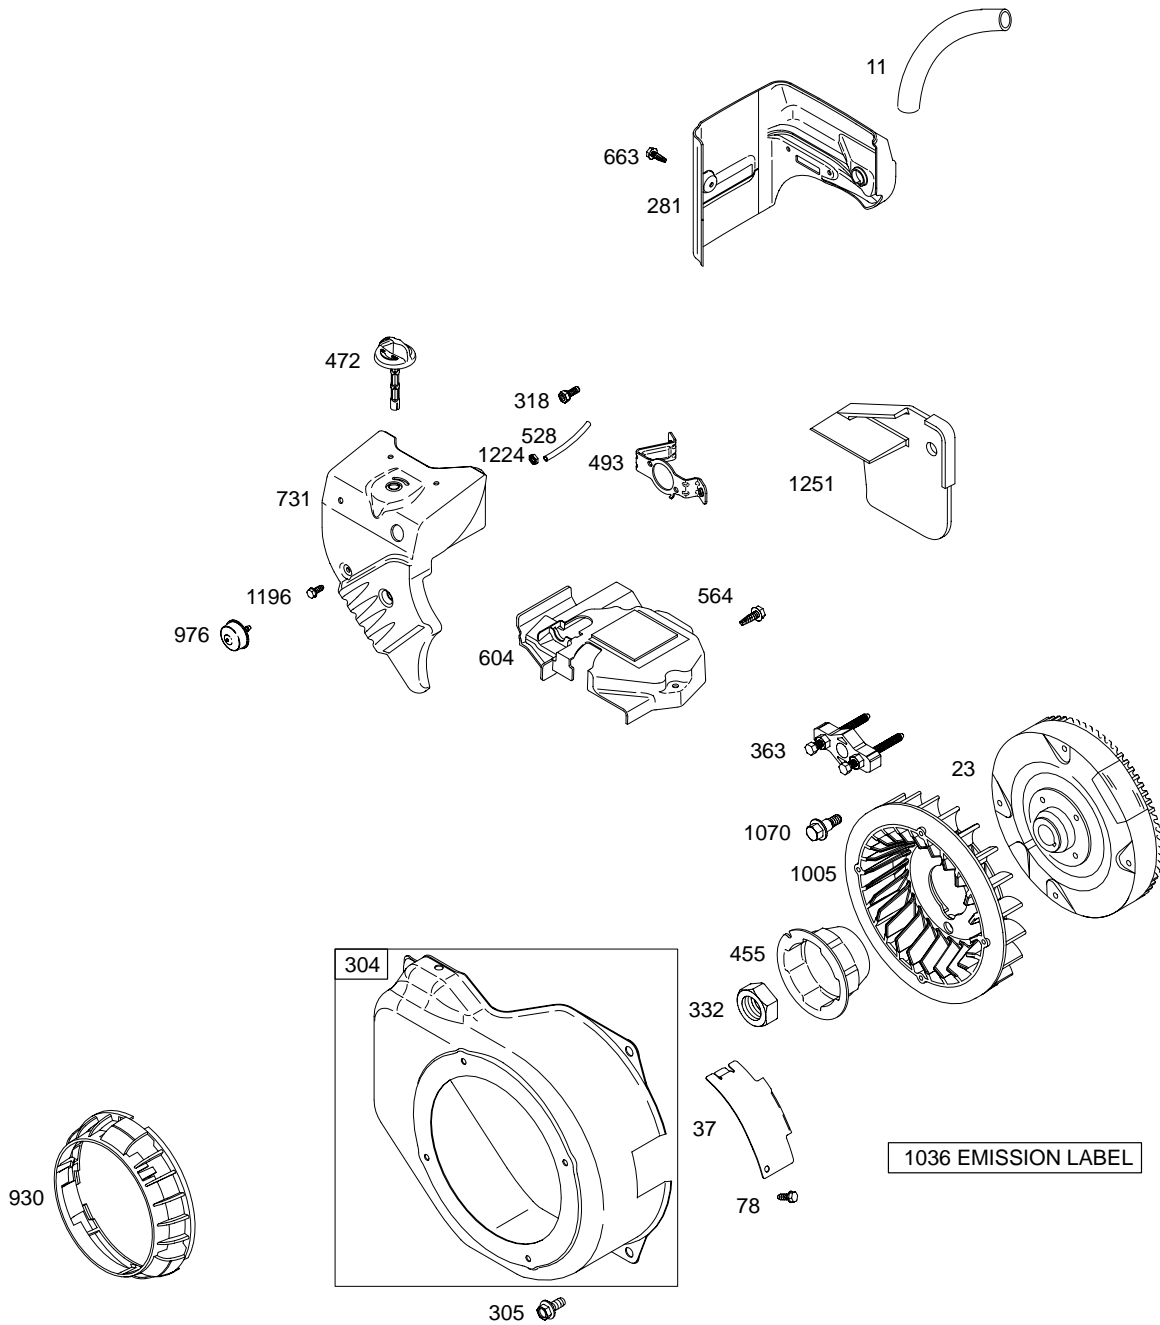

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6505-7 Assemblies include all parts shown in frames. 11/24/2003

# 12D400

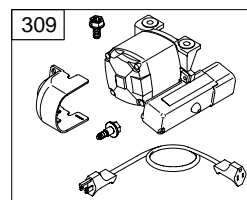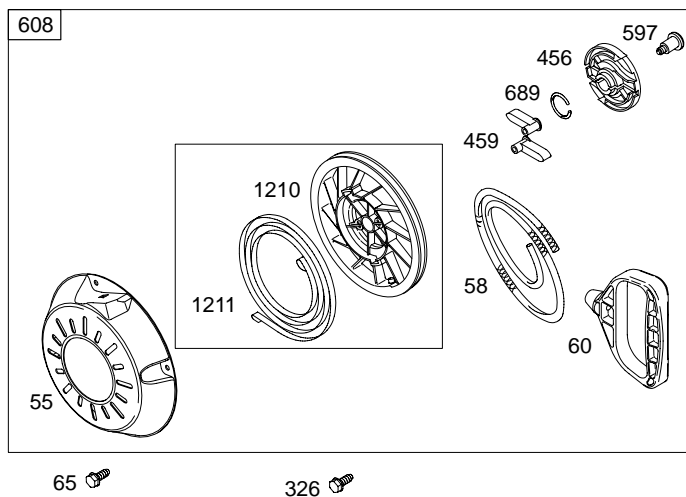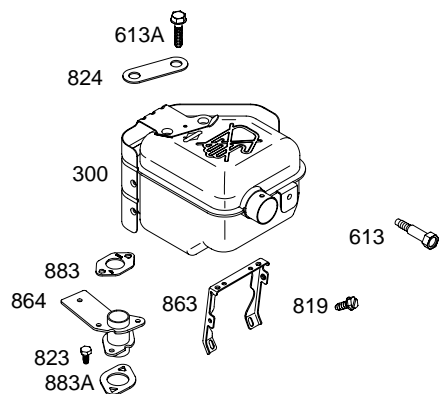

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6505-8 Assemblies include all parts shown in frames. 11/24/2003



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	695771	Cylinder Assembly			<b>Note</b>			Used on Type No(s). 0018.		
2	399269	Kit-Bushing/Seal (Magneto Side)			695769 Flywheel					
3	★299819	Seal-Oil (Magneto Side)			Used on Type No(s). 0100.	51	◆692555	Gasket-Intake (2 Required)		
5	699486	Head-Cylinder	24	222698	Key-Flywheel	55	696710	Housing-Rewind Starter		
7	★∅698210	Gasket-Cylinder Head	25	499627	Piston Assembly (Standard)			(Used After Code Date 01062500).		
11	695745	Tube-Breather			<b>Note</b>			<b>Note</b>		
12	★692549	Gasket-Crankcase			692788 Piston Assembly (.010" O.S.)			695739 Housing-Rewind Starter		
13	691137	Screw (Cylinder Head)			692789 Piston Assembly (.020" O.S.)			(Used Before Code Date 01062600).		
15	691686	Plug-Oil Drain			692790 Piston Assembly (.030" O.S.)	58	693389	Rope-Starter (Cut To Required Length)		
16	699445	Crankshaft (Used After Code Date 03061200).			26	499631	Ring Set (Standard)	60	699334	Grip-Starter Rope (Used After Code Date 03051100).
		<b>Note</b>			692785 Ring Set (.010" O.S.)			<b>Note</b>		
		693887 Crankshaft (Used Before Code Date 03061300).			692786 Ring Set (.020" O.S.)			695740 Grip-Starter Rope		
		699451 Crankshaft (Used on Type No(s). 0009, 0019.			692787 Ring Set (.030" O.S.)			(Used Before Code Date 03051200).		
18	699360	Cover-Crankcase (Used After Code Date 02041700).	27	691866	Lock-Piston Pin	65	697725	Screw (Rewind Starter)		
		<b>Note</b>	28	499423	Pin-Piston			(Used After Code Date 02050700).		
		699596 Cover-Crankcase (Used Before Code Date 02041800).	29	690124	Rod-Connecting			<b>Note</b>		
18A	790000	Cover-Crankcase (Used After Code Date 02041700). Used on Type No(s). 0018.	30	692562	Dipper-Connecting Rod			695453 Screw (Rewind Starter)		
		<b>Note</b>	32	691664	Screw (Connecting Rod)			(Used Before Code Date 02050800 and After Code Date 01061000).		
		694833 Cover-Crankcase (Used Before Code Date 02041800). Used on Type No(s). 0018.	32A	695759	Screw (Connecting Rod)			692608 Screw (Rewind Starter)		
			33	499642	Valve-Exhaust			(Used Before Code Date 01061100).		
			34	499641	Valve-Intake	78	695724	Screw (Flywheel Guard)		
			35	691304	Spring-Valve (Intake)	95	691636	Screw (Throttle Valve)		
			36	691304	Spring-Valve (Exhaust)	97	690024	Shaft-Throttle		
			37	699661	Guard-Flywheel (Used After Code Date 01061000).	98	398185	Kit-Idle Speed		
					<b>Note</b>	104	◆691242	Pin-Float Hinge		
					695725 Guard-Flywheel (Used Before Code Date 01061100).	108	695807	Valve-Choke		
20	★692550	Seal-Oil (PTO Side)	40	692194	Retainer-Valve	109	695729	Shaft-Choke		
20A	★691952	Seal-Oil (PTO Side) (Used on Type No(s). 0018.	45	690977	Tappet-Valve	117	690048	Jet-Main (Standard)		
21	281658	Cap-Oil Fill	46	693404	Camshaft	118	498977	Jet-Main (High Altitude)		
22	692551	Screw (Crankcase Cover/Sump)	46A	694831	Camshaft					
23	695741	Flywheel								

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Carburetor Overhaul Kit-Ref. No. 121.

■ Included in Carburetor Gasket Set-Ref. No. 977.

◆ Included in Valve Gasket Set-Ref. No. 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

# 12D400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	695157	Kit-Carburetor Overhaul	271	691028	Control Lever			Used on Type No(s). 0110.
122	●693749	Spacer-Carburetor	271A	698038	Lever-Control (Used After Code Date 02041400).	356	695731	Wire-Stop
125	695727	Carburetor				358	698216	Gasket Set-Engine
127	●694468	Plug-Welch			————— <b>Note</b> —————	363	19069	Puller-Flywheel
130	691181	Valve-Throttle			695743 Lever-Control (Used Before Code Date 02041500).	365	692568	Screw (Carburetor)
133	398187	Float-Carburetor				383	19374	Wrench-Spark Plug
134	●398188	Kit-Needle/Seat	276	◆271716	Washer-Sealing	427	694255	Nut (Control Bracket)
137	◆693981	Gasket-Float Bowl	281	697550	Panel-Control (Used After Code Date 01061000).	441	694262	Bracket-Oil Fill
146	690979	Key-Timing			————— <b>Note</b> —————	449	691693	Screw (Oil Fill Bracket)
155	698214	Plate-Cylinder Head			695732 Panel-Control (Used Before Code Date 01061100).	455	692591	Cup-Flywheel
186	692317	Connector-Hose	300	698002	Muffler	456	692299	Plate-Pawl Friction
187	691050	Line-Fuel (Cut to Required Length)	304	696653	Housing-Blower	459	281505	Pawl-Ratchet
187A	692601	Line-Fuel (Molded)	305	691108	Screw (Blower Housing)	472	695752	Knob-Choke Shaft
188	690877	Screw (Control Bracket)	306	695710	Shield-Cylinder	485	695755	Knob-Control
190	692127	Screw (Fuel Tank)	307	690345	Screw (Cylinder Shield)	493	695744	Bracket-Mounting
192	694543	Adjuster-Rocker Arm	307A	691003	Screw	504	694254	Washer Set-Friction
209	692571	Spring-Governor	309	696818	Motor-Starter (Used After Code Date 01061000).	505	691251	Nut (Governor Control Lever)
209A	691278	Spring-Governor			————— <b>Note</b> —————	523	693618	Dipstick
219	693578	Gear-Governor			695660 Motor-Starter (Used Before Code Date 01061100).	524	281370	Seal-Dipstick Tube
220	691724	Washer (Governor Gear)	318	690370	Screw (Mounting Bracket)	528	695746	Hose-Primer
222	698326	Bracket-Control (Used After Code Date 03051500).	326	695453	Screw (Rewind Guard)	552	692346	Bushing-Governor Crank
		————— <b>Note</b> —————	332	699359	Nut (Flywheel) (Used After Code Date 03060800).	562	691119	Bolt (Governor Control Lever)
		698033 Bracket-Control (Used Before Code Date 03051600 and After Code Date 02041400).			————— <b>Note</b> —————	564	696685	Screw (Control Cover)
		695742 Bracket-Control (Used Before Code Date 02041500).	333	695711	Armature-Magneto	597	691696	Screw (Pawl Friction Plate)
227	692573	Lever-Governor Control	334	691061	Screw (Magneto Armature)	598	220624	Shim-End Play
238	691300	Cap-Valve	337	491055	Plug-Spark	601	95162	Clamp-Hose
268	691072	Control Wire Casing (Cut to Length)			————— <b>Note</b> —————	604	695749	Cover-Control
269	691589	Control Wire (Cut to Length)			691043 Plug-Spark	608	699335	Starter-Rewind (Used After Code Date 03051100).
270	691027	Nut (Control Wire Casing)						————— <b>Note</b> —————
								696711 Starter-Rewind (Used Before Code Date 03051200 and After Code Date 0106250000).
								695738 Starter-Rewind (Used Before Code Date 01062600).

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Carburetor Overhaul Kit-Ref. No. 121.

■ Included in Carburetor Gasket Set-Ref. No. 977.

◆ Included in Valve Gasket Set-Ref. No. 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	697812	Screw (Muffler) (Used After Code Date 03030200).	773	694258	Retainer	977	695156	Gasket Set-Carburetor
		<b>Note</b> _____	819	691685	Screw (Muffler Bracket)	990	695756	Key Set
		694460 Screw (Muffler) (Used Before Code Date 03030300).	823	691665	Screw (Muffler Adapter)	993	★∅694088	Gasket-Cylinder Head Plate
613A	691108	Screw (Muffler)	824	696017	Gasket-Heat Shield	1005	692592	Fan-Flywheel
615	692576	Retainer-Governor Shaft	830	694544	Stud (Rocker Arm)	1019	695751	Kit-Label
616	692547	Crank-Governor	842	691031	Seal- O Ring (Dipstick/Tube)	1022	★∅691890	Gasket-Rocker Cover
619	691108	Screw (Cylinder Head Plate)	847	693617	Dipstick/Tube Assembly	1023	499924	Cover-Rocker Arm
621	692310	Switch-Stop	851	493880	Terminal-Spark Plug	1026	693517	Rod-Push
632	692653	Spring/Link-Mechanical Governor	863	697280	Bracket-Muffler (Used After Code Date 01061000).	1029	691230	Arm-Rocker
633	◆693867	Seal-Choke/Throttle Shaft (Choke)			<b>Note</b> _____	1034	691343	Guide-Push Rod
633A	◆691321	Seal-Choke/Throttle Shaft (Throttle)	864	697814	Adapter-Muffler (Used After Code Date 03030200).	1036	697004	Label-Emission (Used After Code Date 01100700).
635	692927	Boot-Spark Plug			695734 Bracket-Muffler (Used Before Code Date 01061100).			<b>Note</b> _____
663	696685	Screw (Control Panel) (Used After Code Date 01061000).			694430 Adapter-Muffler (Used Before Code Date 03030300).	1054	280275	Tie-Cable
		<b>Note</b> _____	868	★∅692044	Seal-Valve	1058	275697	Owner's Manual
		695733 Screw (Control Panel) (Used Before Code Date 01061100).	883	★691893	Gasket-Exhaust	1070	692590	Screw (Flywheel Fan)
668	694257	Spacer	883A	★692237	Gasket-Exhaust	1095	698215	Gasket Set-Valve
689	691855	Spring-Friction	892	695747	Switch-Key	1196	696692	Screw (Snow Hood) (Used After Code Date 01060900).
692	690572	Spring-Detent (Choke)	914	697551	Screw (Rocker Cover) (Used After Code Date 02031900).			<b>Note</b> _____
718	690959	Pin-Locating			<b>Note</b> _____			695733 Screw (Snow Hood) (Used Before Code Date 01061000).
731	696690	Hood-Snow (Used After Code Date 01060700).	914A	692557	Screw (Rocker Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
		<b>Note</b> _____	930	696709	Guard-Rewind	1211	498144	Pulley/Spring Assembly
		695748 Hood-Snow (Used Before Code Date 01060800).	957	695737	Cap-Fuel Tank	1224	696824	Nut (Carburetor Primer)
741	695087	Gear-Timing	958	692586	Valve-Fuel Shut Off	1230	695709	Stud (Control Bracket)
742	692564	Retainer-E Ring	972	695728	Tank-Fuel	1251	696699	Shield-Snow
746	692566	Gear-Idler	975	493640	Bowl-Float	1330	272147	Repair Manual
			976	695750	Primer-Carburetor			

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Carburetor Overhaul Kit-Ref. No. 121.

■ Included in Carburetor Gasket Set-Ref. No. 977.

◆ Included in Valve Gasket Set-Ref. No. 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*