



12K600

Illustrated Parts List

Model Series

12K600

TYPE NUMBERS
0100 through 0563.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12K600

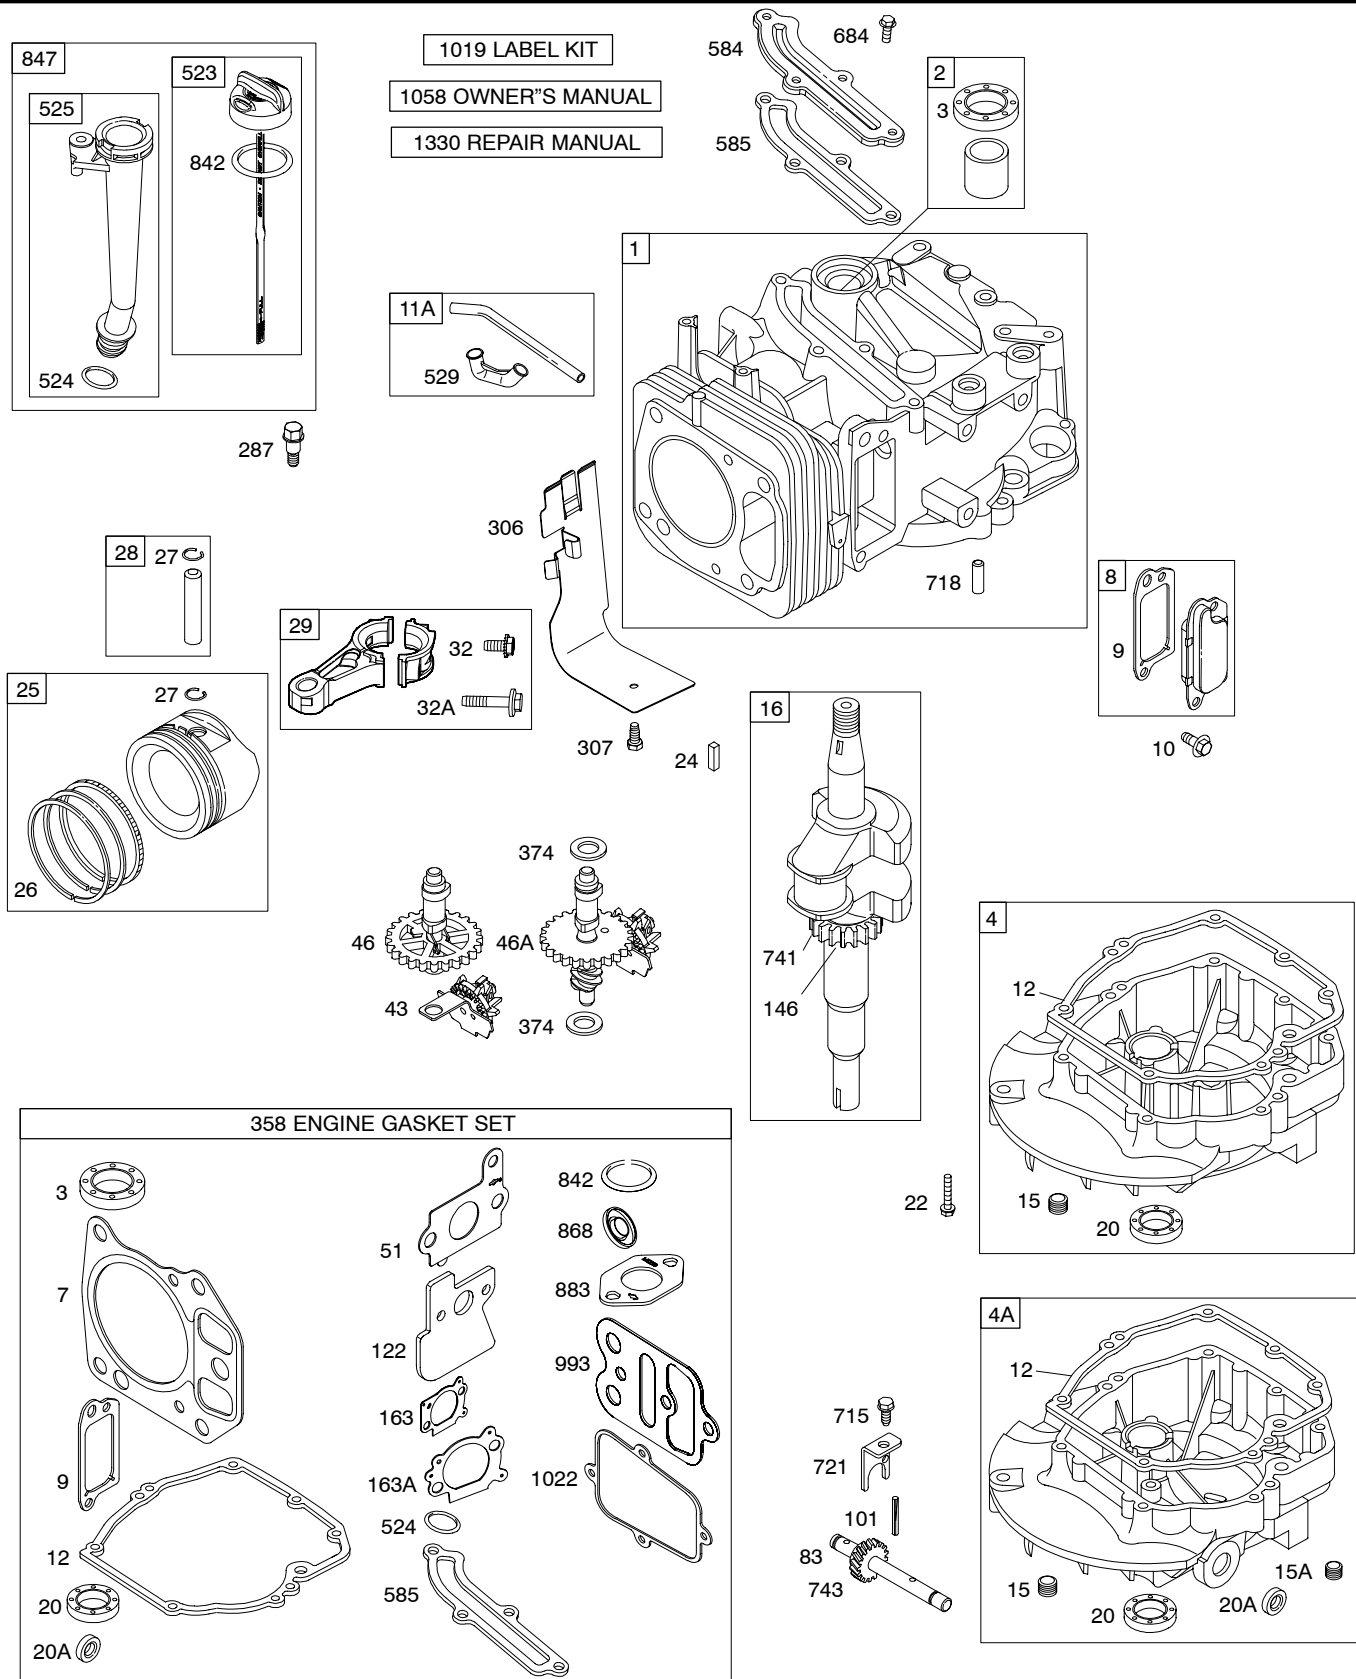


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.







5836-2

Assemblies include all parts shown in frames.

10/13/2005

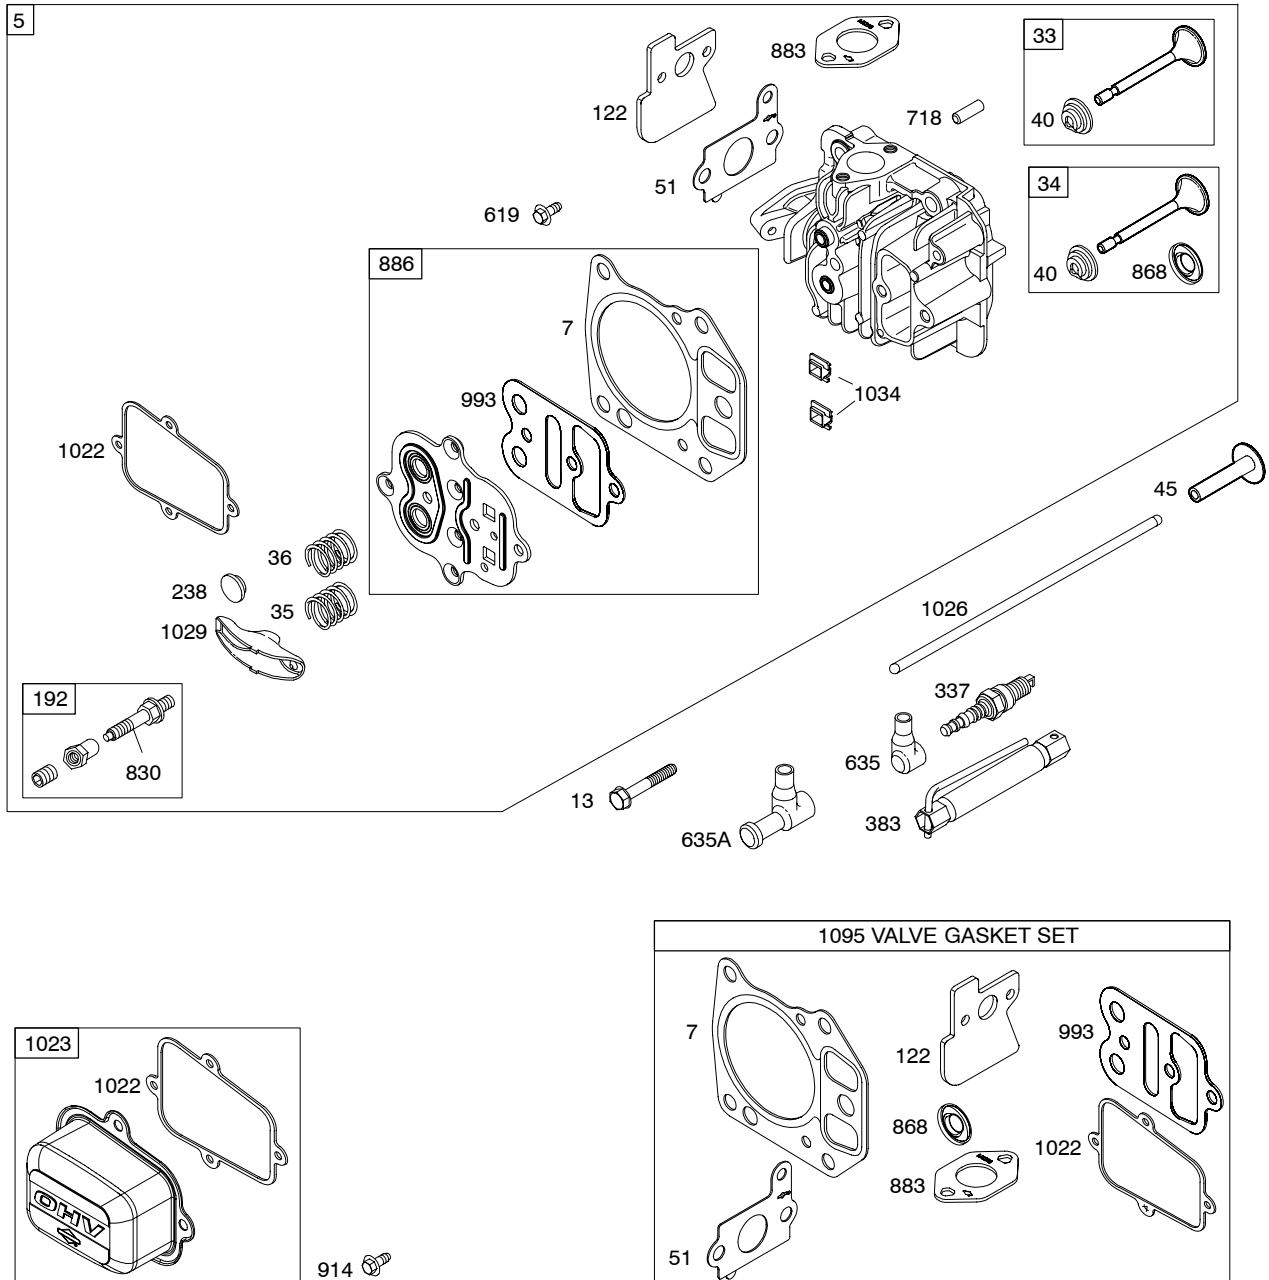

12K600

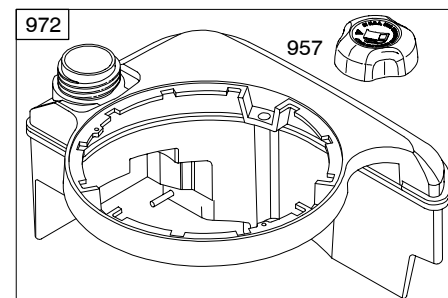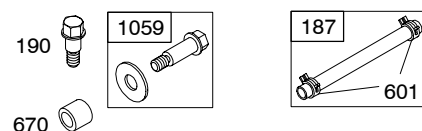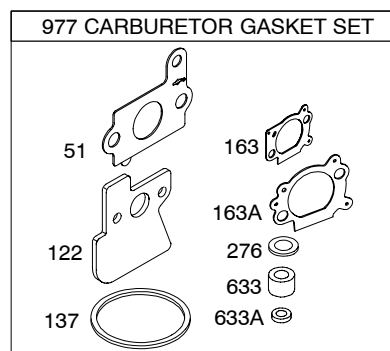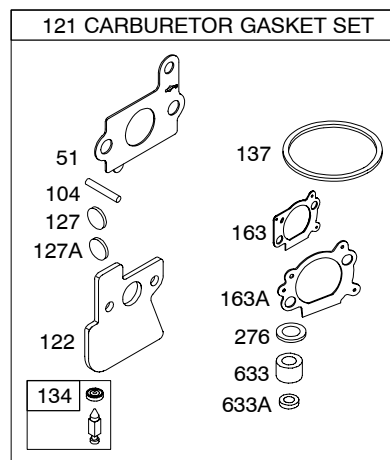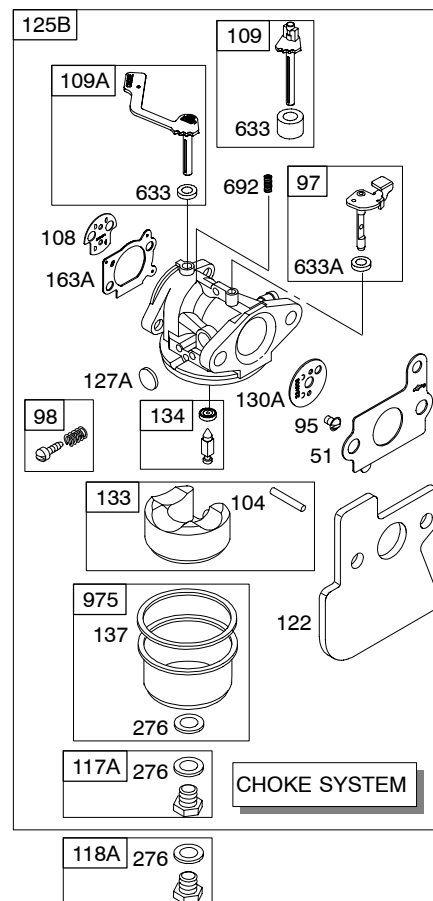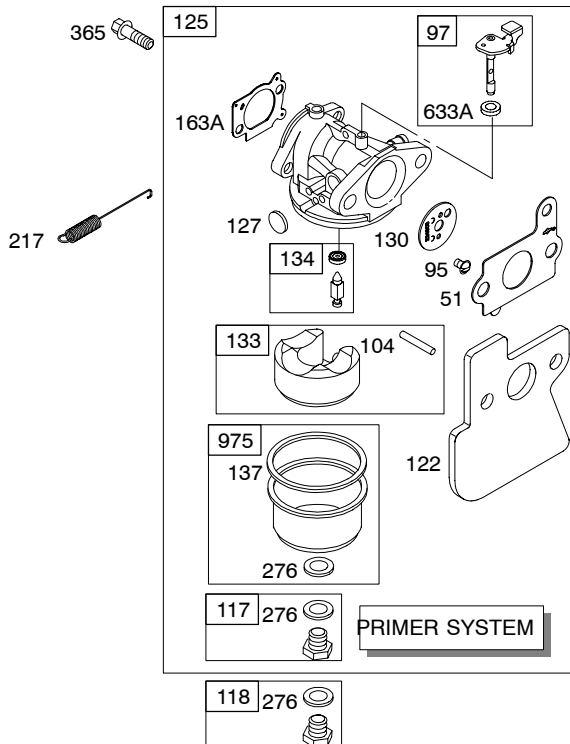


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.








5836-4

Assemblies include all parts shown in frames.


10/13/2005

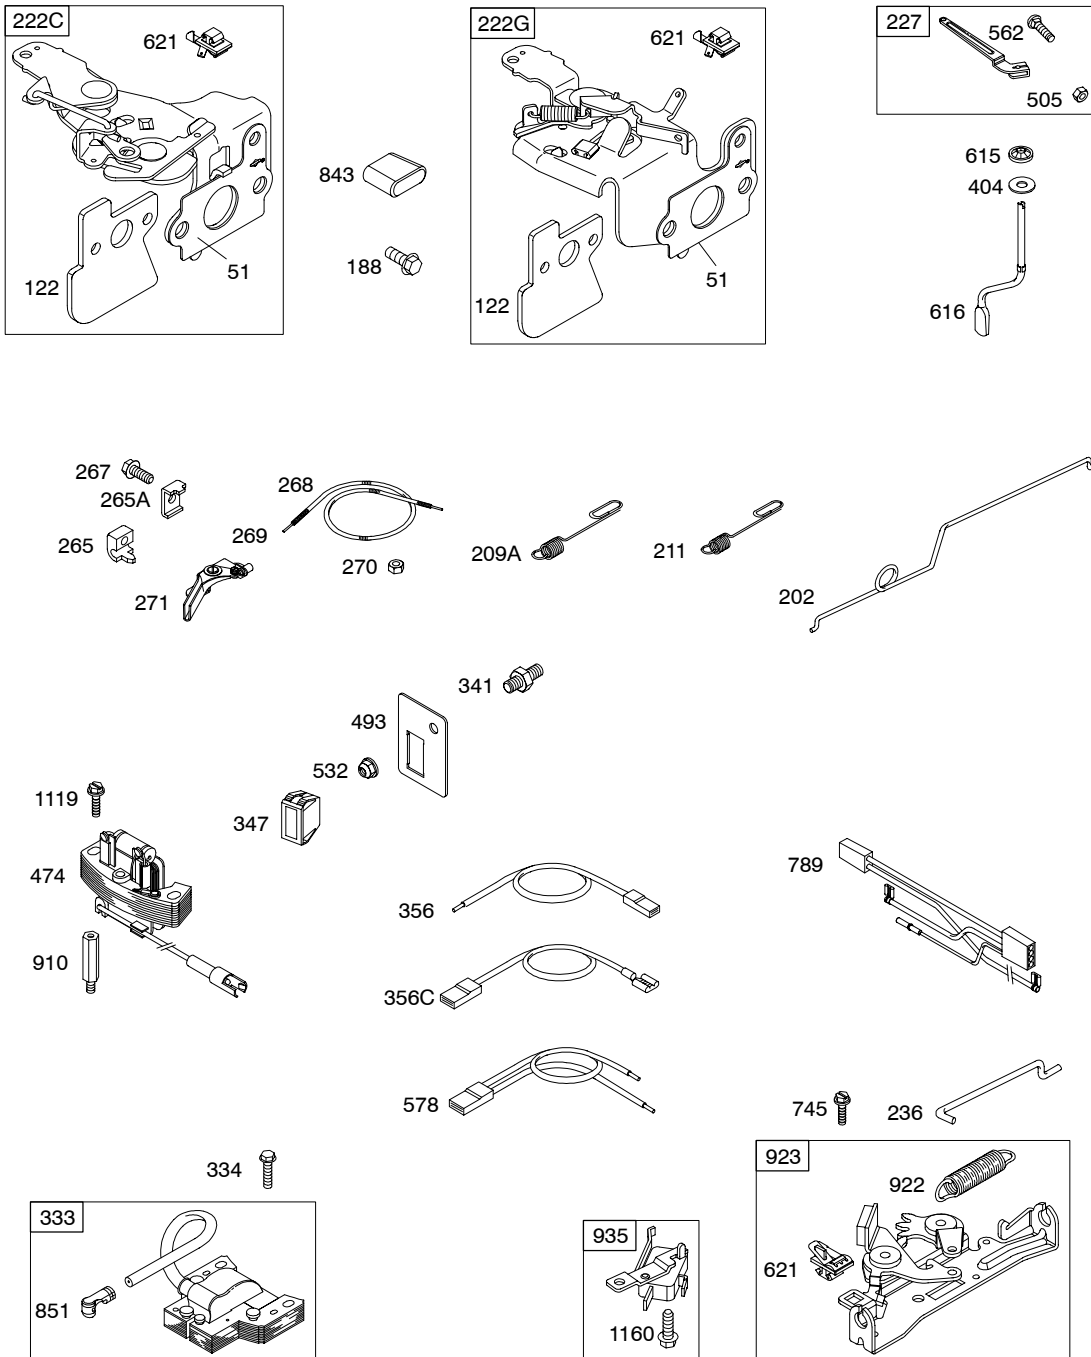




12K600

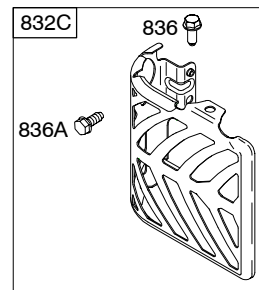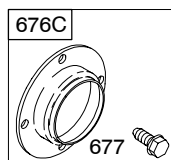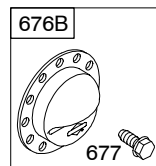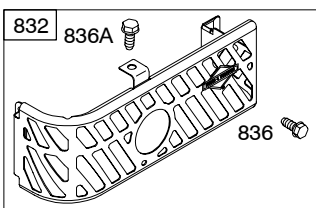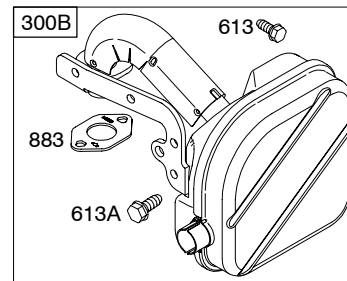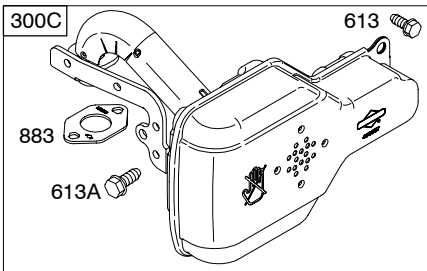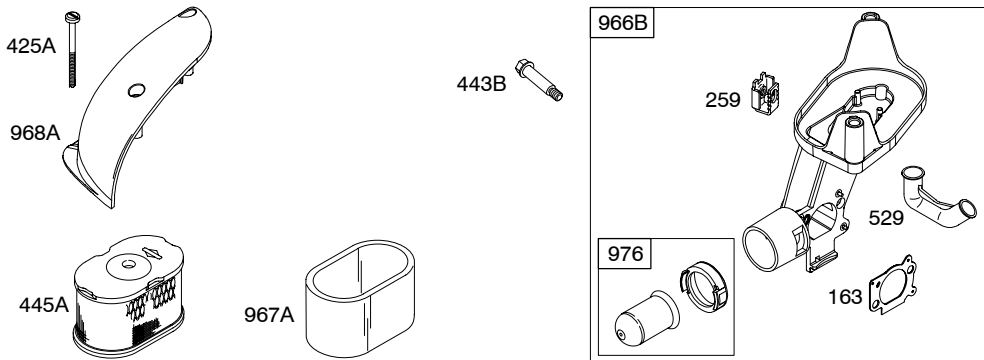

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5836-6 Assemblies include all parts shown in frames. **10/13/2005**

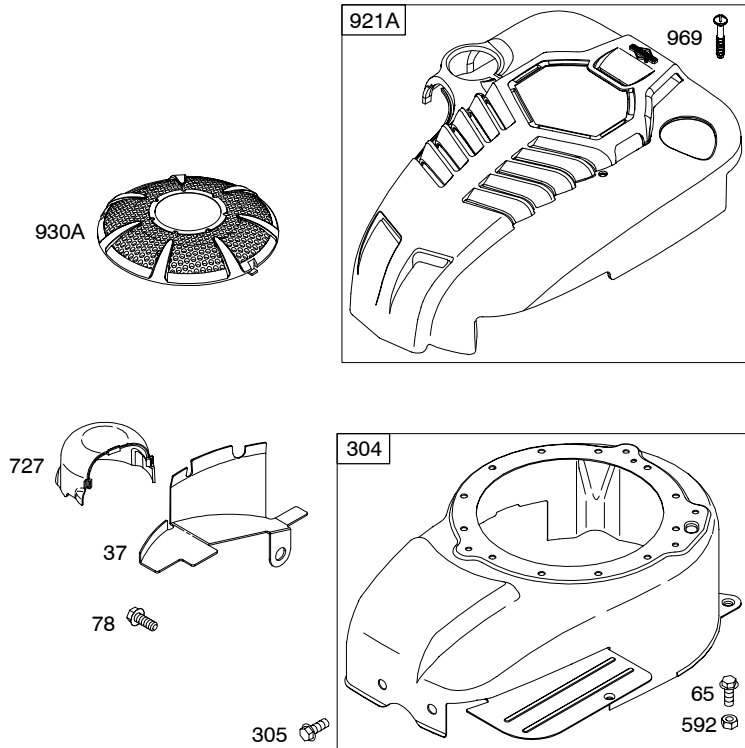

1036 Emission Label

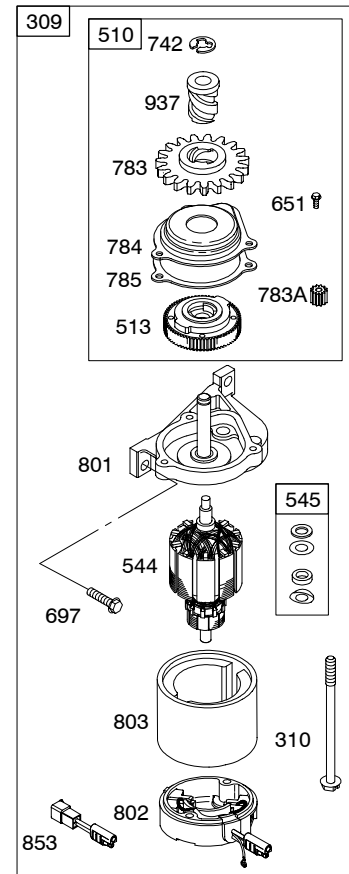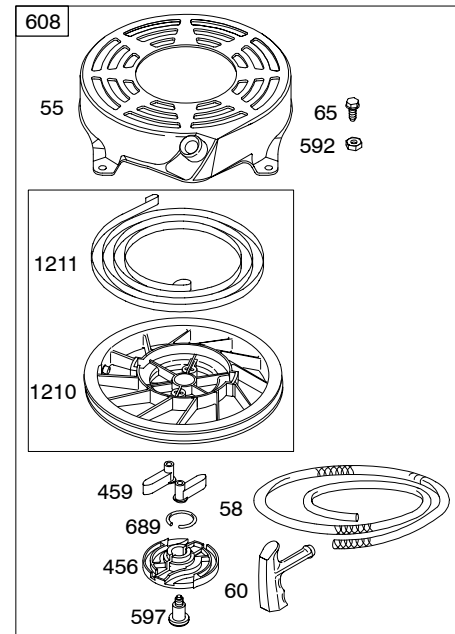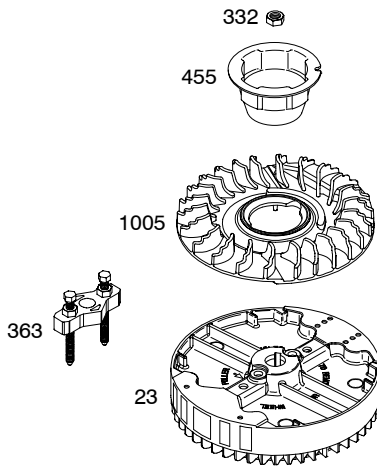

12K600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500).	20	★399781	Seal-Oil (PTO Side)	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note -----
2	399269	Kit-Bushing/Seal (Magneto Side)	20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)			499631 Ring Set (Standard) (Used Before Code Date 05030800).
3	★299819	Seal-Oil (Magneto Side)	22	691092	Screw (Crankcase Cover/Sump)			692785 Ring Set (.010" Oversize)
4	493279	Sump-Engine	23	696569	Flywheel ----- Note ----- 699488 Flywheel Used on Type No(s). 0112, 0115, 0120, 0123.			791324 Ring Set (.020" Oversize) (Used After Code Date 05030700).
4A	493365	Sump-Engine (Auxiliary PTO)	24	222698	Key-Flywheel			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030800).
5	695276	Head-Cylinder	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note -----			692787 Ring Set (.030" Oversize)
7	★Δ695166	Gasket-Cylinder Head			499627 Piston Assembly (Standard) (Used Before Code Date 05030800).	27	691866	Lock-Piston Pin
8	495786	Breather Assembly			692788 Piston Assembly (.010" Oversize)	28	499423	Pin-Piston
9	★272481	Gasket-Breather			791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030700).	29	499424	Rod-Connecting
10	691125	Screw (Breather Assembly)			692790 Piston Assembly (.030" Oversize)	32	691664	Screw (Connecting Rod)
11A	499675	Tube-Breather				32A	695759	Screw (Connecting Rod)
12	★692232	Gasket-Crankcase				33	499642	Valve-Exhaust
13	691137	Screw (Cylinder Head)				34	499641	Valve-Intake
15	691680	Plug-Oil Drain (Square Socket)				35	691304	Spring-Valve (Intake)
15A	691093	Plug-Oil Drain (Hex Socket)				36	691304	Spring-Valve (Exhaust)
16	691457	Crankshaft ----- Note ----- 790156 Crankshaft Used on Type No(s). 0114, 0115, 0116, 0118, 0119, 0120. 693291 Crankshaft Used on Type No(s). 0110, 0123.				37	694086	Guard-Flywheel
						40	692194	Retainer-Valve
						43	691997	Slinger-Governor/Oil
						45	690977	Tappet-Valve
						46	694039	Camshaft
						46A	694037	Camshaft (Counterclockwise)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5836-8

Assemblies include all parts shown in frames.

10/13/2005

12K600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 ★♦♦	692668	Gasket-Intake	121	692703	Kit-Carburetor Overhaul	209A	692906	Spring-Governor Used on Type No(s). 0111, 0112, 0113, 0114, 0115, 0116, 0118, 0119, 0120. ----- Note -----
55	691421	Housing-Rewind Starter	122 ★♦♦	692799	Spacer-Carburetor			
58	697316	Rope-Starter (Cut To Required Length)	125	790120	Carburetor (Primer System)			
60	281434	Grip-Starter Rope	125B	698056	Carburetor (Choke System)			
65	690837	Screw (Rewind Starter)			----- Note -----			690319 Spring-Governor Used on Type No(s). 0105, 0110.
78	691108	Screw (Flywheel Guard)			697914 Carburetor (Choke System) Used on Type No(s). 0123.			691851 Spring-Governor Used on Type No(s). 0100, 0563.
83	691778	Shaft-Auxiliary Drive	127	♦♦♦	694468 Plug-Welch			693031 Spring-Governor Used on Type No(s). 0123.
95	691636	Screw (Throttle Valve)	127A	♦♦♦	691739 Plug-Welch			
97	499682	Shaft-Throttle (Metal)	130	691203	Valve-Throttle			
		----- Note -----			----- Note -----			
		790121 Shaft-Throttle (Plastic)			696564 Valve-Throttle (Used With Plastic Throttle Shaft)	211	692434	Spring-Governed Idle
98	398185	Kit-Idle Speed	130A	691181	Valve-Throttle	217	690354	Spring-Choke Return
101	691623	Pin-Shaft	133	398187	Float-Carburetor	222C	692617	Bracket-Control Used on Type No(s). 0100, 0105, 0110. ----- Note -----
104	♦♦♦	691242 Pin-Float Hinge	134	♦♦♦	398188 Kit-Needle/Seat			
108	691182	Valve-Choke	137	♦♦♦	693981 Gasket-Float Bowl			
109	499779	Shaft-Choke	146	690979	Key-Timing			
109A	499681	Shaft-Choke	163 ♦♦♦	691894	Gasket-Air Cleaner			692618 Bracket-Control Used on Type No(s). 0563.
117	498981	Jet-Main (Standard) (Used After Code Date 03110600).	163A ★♦♦	692667	Gasket-Air Cleaner	222G	692722	Bracket-Control Used on Type No(s). 0111, 0113, 0114, 0116, 0118, 0119. ----- Note -----
		----- Note -----	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000).			
		498978 Jet-Main (Standard) (Used Before Code Date 03110700).			----- Note -----			692615 Bracket-Control Used on Type No(s). 0112, 0115, 0120.
117A	694250	Jet-Main (Standard)	188	693168	Screw (Control Bracket)			692616 Bracket-Control Used on Type No(s). 0123.
118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600).	190	690940	Screw (Fuel Tank)			
		----- Note -----	192	694543	Adjuster-Rocker Arm			
		498975 Jet-Main (High Altitude) (Used Before Code Date 03110700).	202	691303	Link-Mechanical Governor			
118A	497466	Jet-Main (High Altitude)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5836-9

Assemblies include all parts shown in frames.

10/13/2005

12K600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
227	691467	Lever-Governor Control	332	690662	Nut (Flywheel)	524	★692296	Seal-Dipstick Tube
236	691826	Link-Lockout	333	802574	Armature-Magneto	525	495265	Tube-Dipstick
238	691300	Cap-Valve	334	691061	Screw (Magneto Armature)	529	692937	Grommet
259	691189	Bracket-Casing Clamp	337	692051	Plug-Spark (Resistor)	532	692851	Nut (Mounting Bracket)
265	690798	Clamp-Casing			----- Note -----	544	690786	Armature-Starter
265A	691024	Clamp-Casing			692720 Plug-Spark (EMS)	545	492919	Washer Set (Starter Motor)
267	691044	Screw (Casing Clamp)	341	690368	Stud (Mounting Bracket)	562	691119	Bolt (Governor Control Lever)
268	691072	Casing-Control Wire (Cut To Required Length)	347	691396	Switch-Rocker	578	398153	Wire Assembly
269	691026	Wire-Control (Cut To Required Length)	356	692390	Wire-Stop	584	697734	Cover-Breather Passage
270	691027	Nut (Control Wire Casing)	356C	693010	Wire-Stop	585	★691879	Gasket-Breather Passage
271	691028	Lever-Control	358	694090	Gasket Set-Engine	592	690800	Nut (Rewind Starter)
276	◆271716	Washer-Sealing	363	19069	Puller-Flywheel	597	691696	Screw (Pawl Friction Plate)
287	690940	Screw (Dipstick Tube)	365	691136	Screw (Carburetor)	601	95162	Clamp-Hose
300B	699769	Muffler	374	691074	Washer (Camshaft)	608	497680	Starter-Rewind
300C	694248	Muffler	383	19374	Wrench-Spark Plug	613	691108	Screw (Muffler)
304	499677	Housing-Blower	404	690272	Washer (Governor Crank)	613A	691140	Screw (Muffler)
		----- Note -----	425A	690244	Screw (Air Cleaner Cover)	615	690340	Retainer-Governor Shaft
		499676 Housing- Blower	443B	690255	Screw (Air Cleaner Primer Base)	616	698801	Crank-Governor
		Used on Type No(s). 0112, 0115, 0120, 0123.	445A	697029	Filter-Air Cleaner Cartridge	619	691108	Screw (Cylinder Head Plate)
		695976 Housing- Blower	455	695161	Cup-Flywheel	621	692310	Switch-Stop
		Used on Type No(s). 0100.	456	692299	Plate-Pawl Friction	633	◆693867	Seal-Choke/Throttle Shaft
305	691108	Screw (Blower Housing)	459	281505	Ratchet-Pawl	633A	◆691321	Seal-Choke/Throttle Shaft
306	691232	Shield-Cylinder	474	691991	Alternator	635	66538	Boot-Spark Plug
307	690345	Screw (Cylinder Shield)	493	692877	Bracket-Mounting	635A	692927	Boot-Spark Plug
309	695550	Motor-Starter	505	691251	Nut (Governor Control Lever)	651	691660	Screw (Starter Gear Cover)
310	692327	Bolt (Starter Motor)	510	494147	Drive-Starter	670	692294	Spacer-Fuel Tank
			513	692358	Clutch-Drive			
			523	499621	Dipstick			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5836-10

Assemblies include all parts shown in frames.

10/13/2005

12K600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
676B	396548	Deflector-Muffler	832	691466	Guard-Muffler (Super Lo Tone)	966B	690243	Base-Air Cleaner Primer
676C	497682	Deflector-Muffler	832C	695593	Guard Muffler (Square Lo Tone)	967A	273356	Filter-Pre Cleaner
677	690661	Screw (Muffler Deflector)	836	691147	Screw (Muffler Guard)	968A	691342	Cover-Air Cleaner
684	690345	Screw (Breather Passage Cover)	836A	697551	Screw (Muffler Guard)	969	691138	Screw (Blower Housing Cover)
689	691855	Spring-Friction	842	★691031	Seal-O Ring (Dipstick Tube)	972	699374	Tank-Fuel (Plastic)
692	690572	Spring-Friction	843	691884	Sleeve-Lever	975	493640	Bowl-Float
697	691127	Screw (Drive Cap)	847	692047	Dipstick/Tube Assembly	976	694395	Primer-Carburetor
715	691147	Screw (Shaft Stop)	851	493880	Terminal-Spark Plug	977	692704	Gasket Set-Carburetor
718	690959	Pin-Locating	853	695268	Adaptor-Wire	993	★Δ694088	Gasket-Cylinder Head Plate
721	690449	Stop-Shaft	868	★Δ692044	Seal-Valve	1005	691346	Fan-Flywheel
727	692934	Cover-Starter Drive	883	★Δ691893	Gasket-Exhaust	1019	499691	Kit-Label
741	790345	Gear-Timing (Use Without Woodruff Key)	886	696268	Gasket Kit-Cylinder Head/Plate	1022	★Δ691890	Gasket-Rocker Cover
		----- Note -----	910	691094	Stud (Alternator)	1023	499624	Cover-Rocker
		691830 Gear-Timing (Uses Woodruff Key)	914	691108	Screw (Rocker Cover)	1026	692045	Rod-Push
742	93941	Retainer-E-Ring	921A	699633	Cover-Blower Housing	1029	691230	Arm-Rocker
743	691772	Gear-Drive (Counterclockwise)	922	691831	Spring-Brake	1034	691343	Guide-Push Rod
745	691648	Screw (Brake)			----- Note -----	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
783	691918	Gear-Pinion (19 Teeth) (Starter Drive)	923	691994	Brake	1058	276348	Owner's Manual
783A	691269	Gear-Pinion (12 Teeth)			----- Note -----	1059	692311	Kit-Screw/Washer
784	692341	Cover-Starter Gear			695891 Brake Used on Type No(s). 0100.	1095	694091	Gasket Set-Valve
785	692352	Gasket-Starter Cover	930A	692675	Guard-Rewind	1119	692979	Screw (Alternator)
789	696547	Harness-Wiring	935	499421	Switch-Interlock	1160	691627	Screw (Interlock Switch)
801	690782	Cap-Drive	937	691325	Spline-Starter	1210	498144	Pulley/Spring Assembly (Pulley)
802	695267	Cap-End	957	692046	Cap-Fuel Tank (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
803	695266	Housing-Starter				1330	272147	Manual-Repair
830	694544	Stud-Rocker Arm						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5836-11

Assemblies include all parts shown in frames.

10/13/2005