



12Z800

Illustrated Parts List

Model Series

12Z800

TYPE NUMBERS
0100.

TABLE OF CONTENTS


Air Cleaner	4
Blower Housing/Shrouds	5
Cams	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder Group	2
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2








PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

12Z800






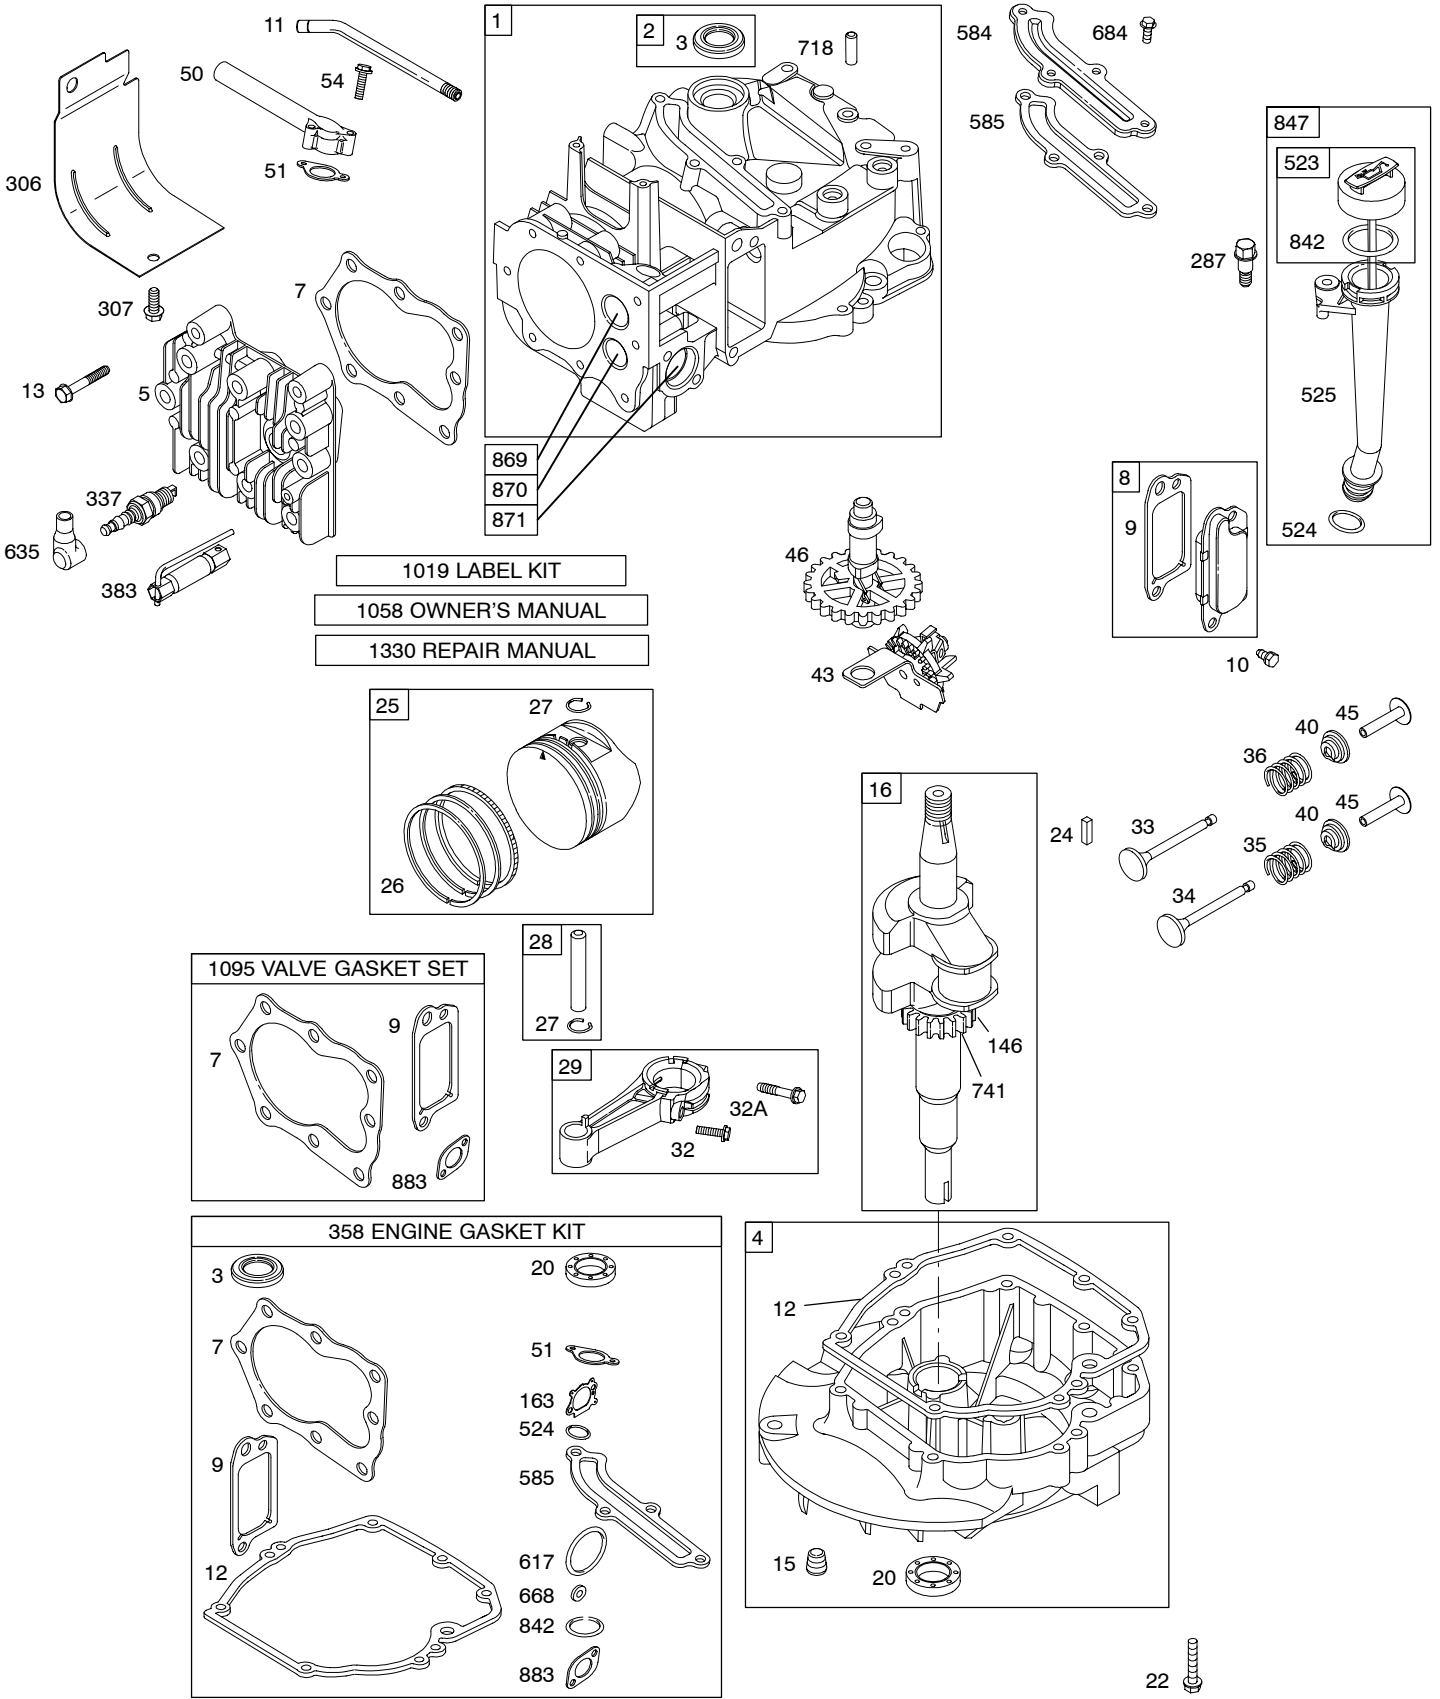


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6745-2 Assemblies include all parts shown in frames. 10/05/2005

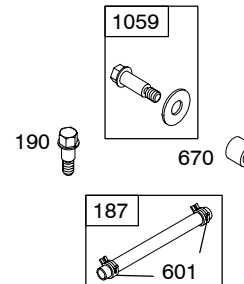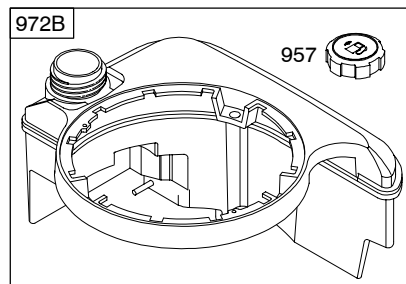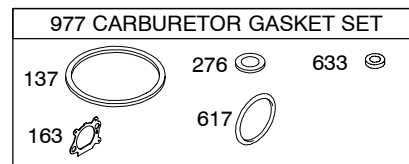
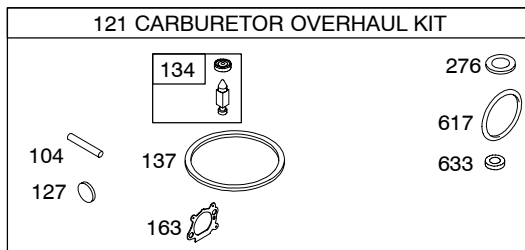
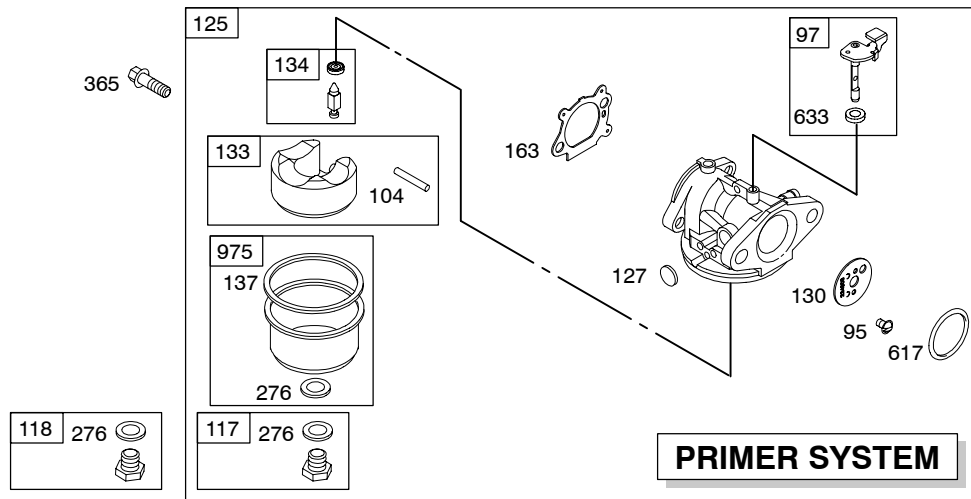


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6745-3 Assemblies include all parts shown in frames. 10/05/2005

12Z800

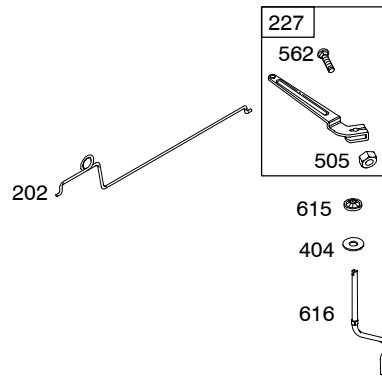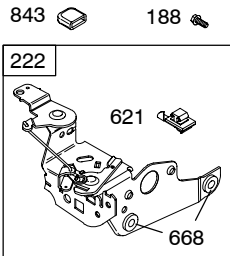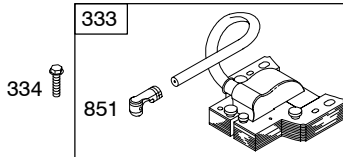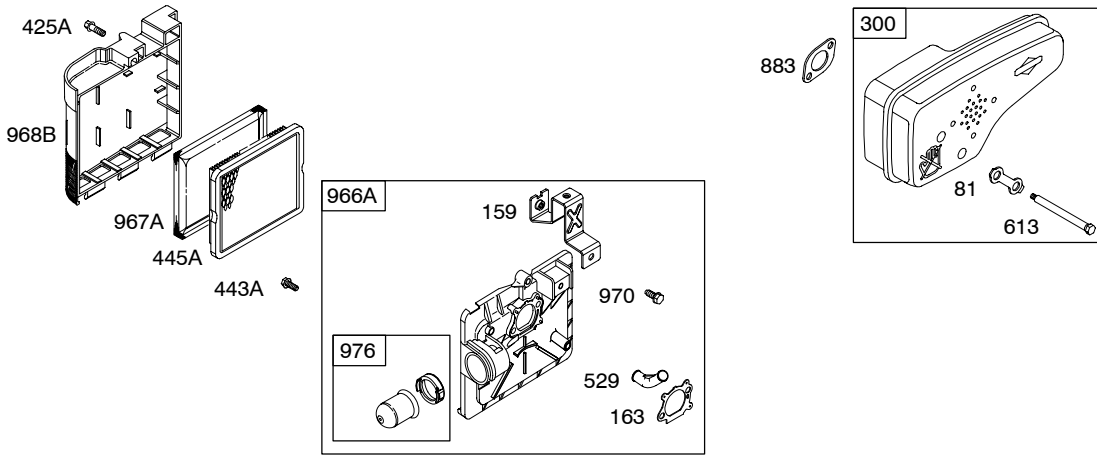

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6745-4 Assemblies include all parts shown in frames. **10/05/2005**

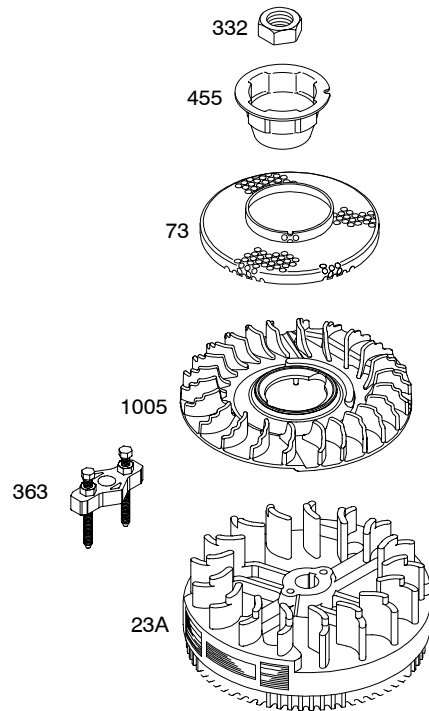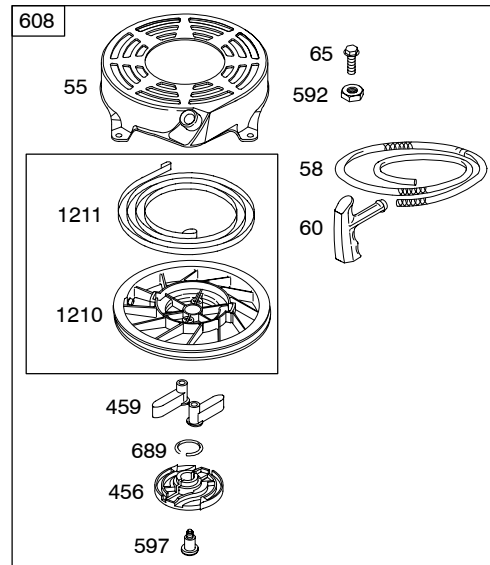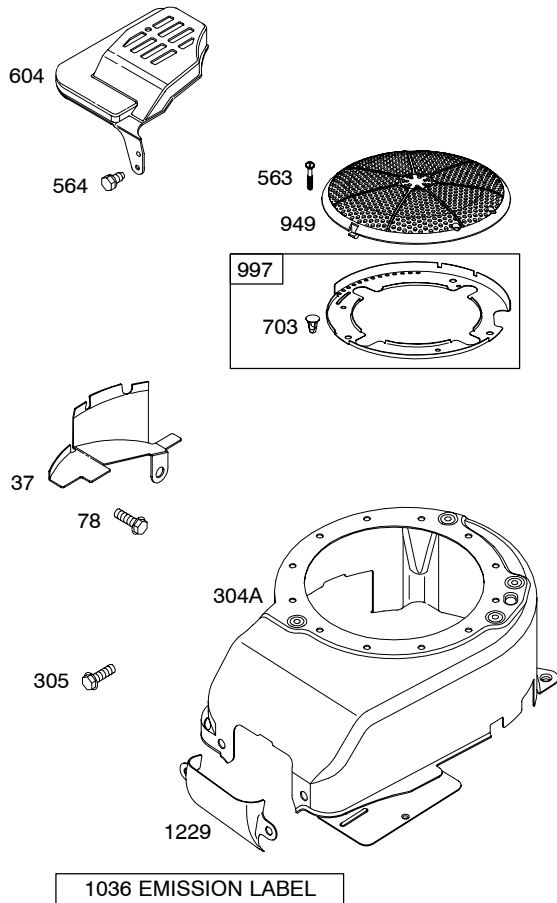

6745-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 10/05/2005

12Z800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	26	790360	Ring Set (Standard) (Used After Code Date 04031400).	73	691222	Screen-Rotating
2	399269	Kit-Bushing/Seal (Magneto Side)				78	691108	Screw (Flywheel Guard)
3	*299819	Seal-Oil (Magneto Side)				81	691740	Lock-Muffler Screw
4	493279	Sump-Engine				95	691636	Screw (Throttle Valve)
5	691160	Head-Cylinder				97	696565	Shaft-Throttle
7	*Ø692249	Gasket-Cylinder Head				104	●691242	Pin-Float Hinge
8	695250	Breather Assembly				117	498978	Jet-Main (Standard)
9	*Ø272481	Gasket-Breather				118	497466	Jet-Main (High Altitude)
10	691125	Screw (Breather Assembly)				121	498260	Kit-Carburetor Overhaul
11	691781	Tube-Breather				125	498170	Carburetor
12	*692232	Gasket-Crankcase				127	●694468	Plug-Welch (3/8" Diameter)
13	690912	Screw (Cylinder Head)				130	696564	Valve-Throttle
15	691680	Plug-Oil Drain (Square Socket)				133	398187	Float-Carburetor
16	691451	Crankshaft				134	●398188	Kit-Needle/Seat
20	*399781	Seal-Oil (PTO Side)				137	●●693981	Gasket-Float Bowl
22	691092	Screw (Crankcase Cover/Sump)	27	691866	Lock-Piston Pin	146	690979	Key-Timing
23A	691992	Flywheel	28	499423	Pin-Piston (Standard)	159	691753	Bracket-Air Cleaner Primer
24	222698	Key-Flywheel	29	499424	Rod-Connecting (Standard)	163	●●272653	Gasket-Air Cleaner
25	790359	Piston Assembly (Standard) (Used After Code Date 04031400).	32	691664	Screw (Connecting Rod)	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000).
		----- Note -----	32A	695759	Screw (Connecting Rod)			----- Note -----
		499429 Piston Assembly (Standard) (Used Before Code Date 04031500).	33	262651	Valve-Exhaust			691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).
		499430 Piston Assembly (.010" Oversize)	34	262652	Valve-Intake	188	690877	Screw (Control Bracket)
		791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100).	35	691270	Spring-Valve (Intake)	190	690940	Screw (Fuel Tank)
		697341 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200).	36	691270	Spring-Valve (Exhaust)	202	691829	Link-Mechanical Governor
		499432 Piston Assembly (.030" Oversize)	37	694086	Guard-Flywheel	209B	691291	Spring-Governor (Red)
			40	692194	Retainer-Valve	222	790143	Bracket-Control (Remote/Manual Friction) (Primer)
			43	691997	Slinger-Governor/Oil	227	690783	Lever-Governor Control
			45	690548	Tappet-Valve	265	690798	Clamp-Casing
			46	691449	Camshaft	267	691044	Screw (Casing Clamp)
			50	497465	Manifold-Intake			
			51	*272199	Gasket-Intake			
			54	691650	Screw (Intake Manifold)			
			55	691421	Housing-Rewind Starter			
			58	697316	Rope-Starter (Cut To Required Length)			
			60	281434	Grip-Starter Rope			
			65	690837	Screw (Rewind Starter)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
268	691025	Casing-Control Wire (Cut to Required Length)	529	691923	Grommet	847	692017	Dipstick/Tube Assembly
269	691026	Wire-Control (Cut to Required Length)	562	92613	Bolt (Governor Control Lever)	851	493880	Terminal-Spark Plug
270	691027	Nut (Control Wire Casing)	563	691138	Screw (Debris Guard Screen)	869	691155	Seat-Valve (Intake)
271	691028	Lever-Control	564	690664	Screw (Control Cover)	870	690380	Seat-Valve (Exhaust)
276	271716	Washer-Sealing	584	697734	Cover-Breather Passage	871	262001	Bushing-Valve Guide (Exhaust)
287	690940	Screw (Dipstick Tube)	585	691879	Gasket-Breather Passage	----- Note -----		
300	692038	Muffler (Tuned)	592	690800	Nut (Rewind Starter)	63709		Bushing-Valve- Guide (Intake)
304A	493294	Housing-Blower	597	691696	Screw (Pawl Friction Plate)	883	691881	Gasket-Exhaust
305	691108	Screw (Blower Housing)	601	95162	Clamp-Hose (Green)	949	696306	Guard-Debris Screen
306	690450	Shield-Cylinder	604	691757	Cover-Control	957	397974	Cap-Fuel Tank (Plastic)
307	690345	Screw (Cylinder Shield)	608	497680	Starter-Rewind	966A	496116	Base-Air Cleaner Primer
332	690662	Nut (Flywheel)	613	691340	Screw (Muffler)	967A	493537	Filter-Pre Cleaner
333	802574	Armature-Magneto	615	690340	Retainer-Governor Shaft	968B	692298	Cover-Air Cleaner
334	691061	Screw (Magneto Armature)	616	698801	Crank-Governor	970	691681	Screw (Air Cleaner Primer Bracket)
337	802592	Plug-Spark	617	270344	Seal-O Ring (Intake Manifold)	972B	699374	Tank-Fuel (Plastic)
356	692390	Wire-Stop	621	692310	Switch-Stop	975	493640	Bowl-Float
358	497316	Gasket Set-Engine	633	691321	Seal-Choke/Throttle Shaft	976	694395	Primer-Carburetor
363	19069	Puller-Flywheel	635	66538	Boot-Spark Plug	977	498261	Gasket Set-Carburetor
365	691688	Screw (Carburetor)	668	493823	Spacer (Includes 2)	997	696310	Shield-Debris
383	89838	Wrench-Spark Plug	670	692294	Spacer-Fuel Tank	1005	691346	Fan-Flywheel
404	690272	Washer (Governor Crank)	684	690345	Screw (Breather Passage Cover)	1019	696438	Kit-Label
425A	690670	Screw (Air Cleaner Cover)	689	691855	Spring-Friction	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
443A	692523	Screw (Air Cleaner Primer Base)	703	696309	Clip	1058	276171	Manual-Owner's
445A	491588	Filter-Air Cleaner Cartridge	718	690959	Pin-Locating	1059	692311	Kit-Screw/Washer
455	695161	Cup-Flywheel	741	790345	Gear-Timing (Use Without Woodruff Key)	1095	498528	Gasket Set-Valve
456	692299	Plate-Pawl Friction	----- Note -----		1210	498144	Pulley/Spring Assembly (Pulley)	
459	281505	Plate-Ratchet	691830		1211	498144	Pulley/Spring Assembly (Spring)	
505	691251	Nut (Governor Control Lever)	842	691031	Seal-O Ring (Dipstick Tube)	1229	696308	Extension-Blower Housing
523	495264	Dipstick	843	691884	Sleeve-Lever (Control Bracket)	1330	270962	Manual-Repair
524	692296	Seal-Dipstick Tube						
525	495265	Tube-Dipstick						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.