



15B100

Illustrated Parts List

Model Series

15B100

TYPE NUMBERS
0018 through 0367.

TABLE OF CONTENTS

Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valves	3
Lubrication	2
Piston Group	2
Rewind Starter	5


BRIGGS & STRATTON






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.











15B100

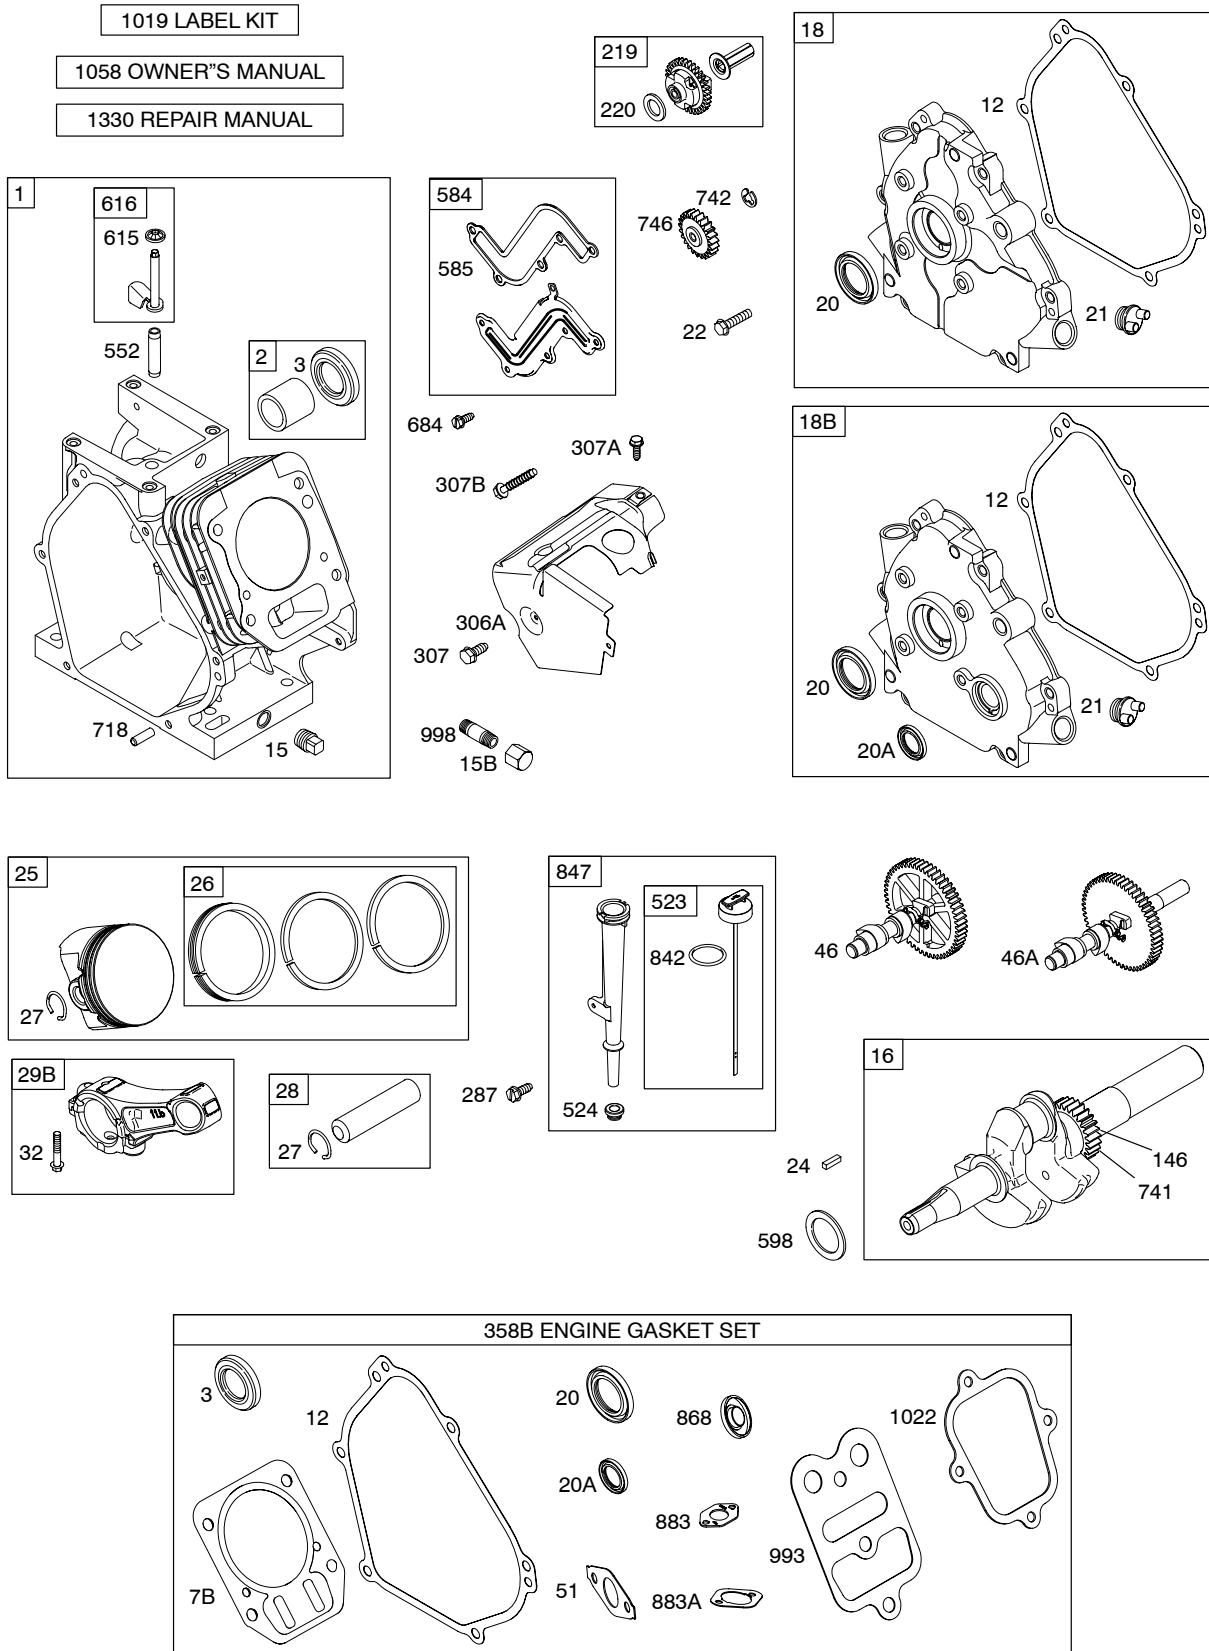


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3454-2 Assemblies include all parts shown in frames. 11/16/2005

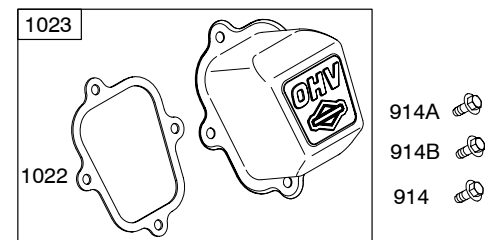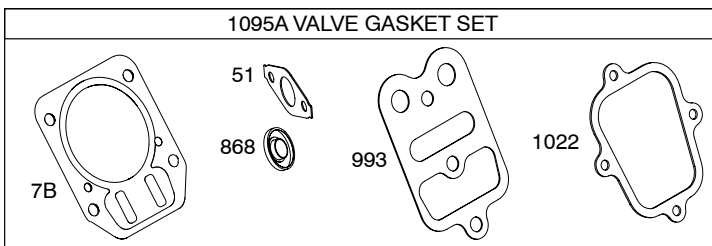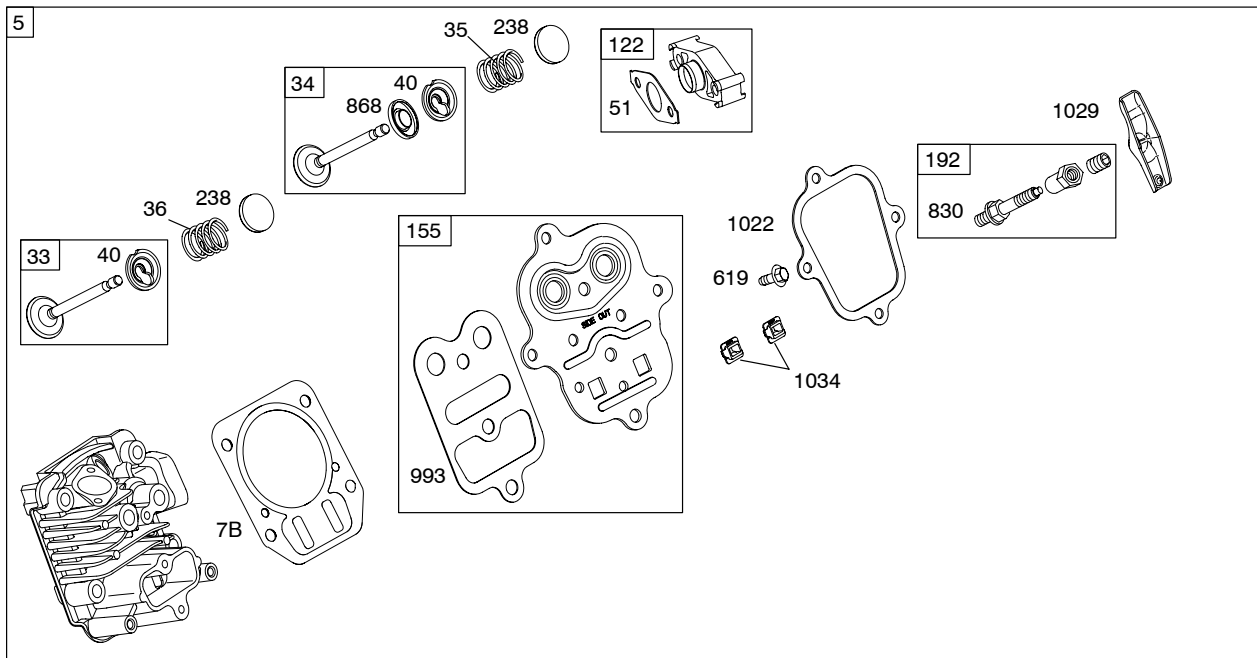


15B100

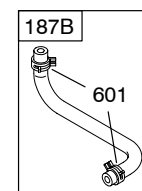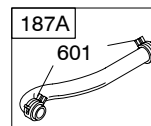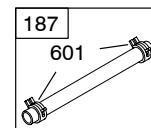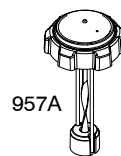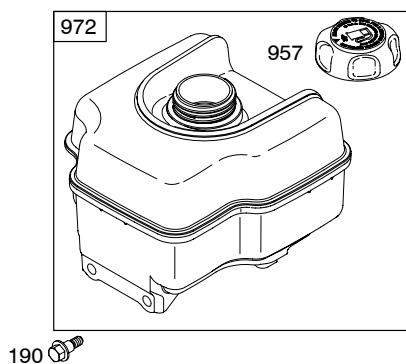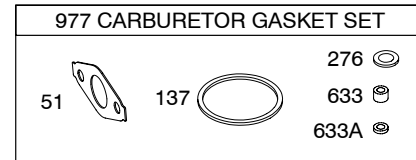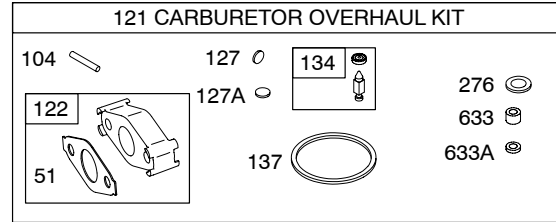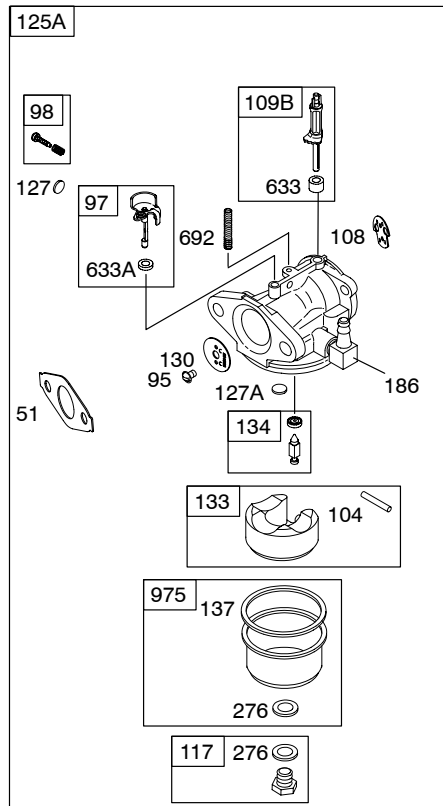



15B100

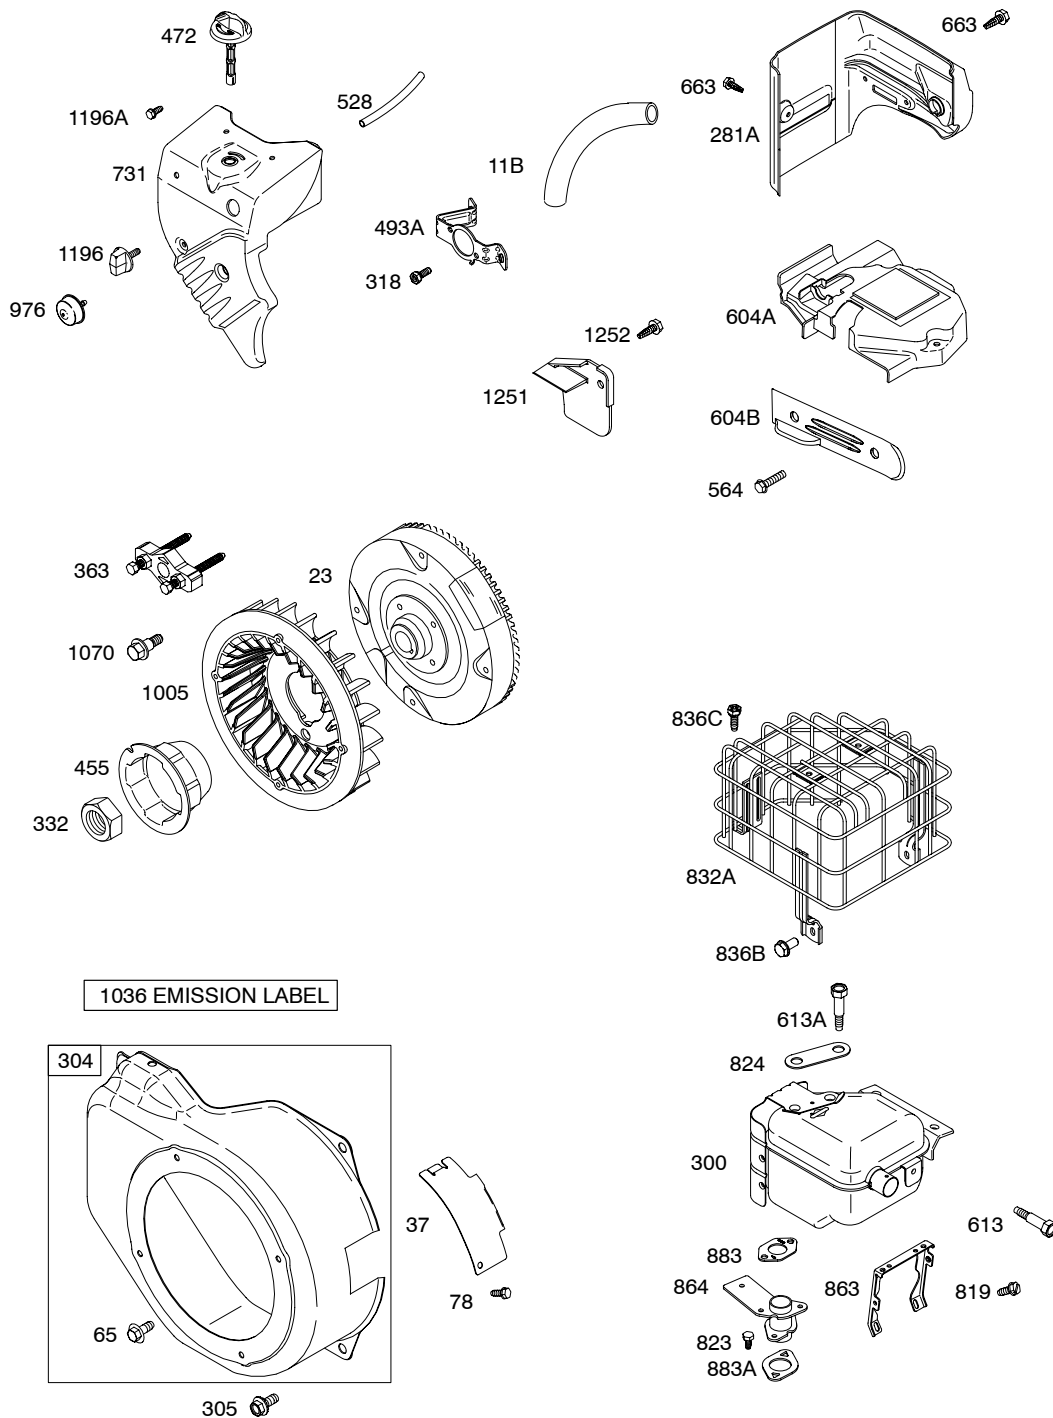

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3454-6 Assemblies include all parts shown in frames. **11/16/2005**

15B100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	791762	Cylinder Assembly	29B	791783	Rod-Connecting	130	691181	Valve-Throttle
2	399269	Kit-Bushing/Seal (Magneto Side)	32	791784	Screw (Connecting Rod)	133	398187	Float-Carburetor
3	★299819S	Seal-Oil (Magneto Side)	33	499642	Valve-Exhaust	134	●398188	Kit-Needle/Seat
5	791720	Head-Cylinder	34	499641	Valve-Intake	137	●493981	Gasket-Float Bowl
7B	★Ø791716	Gasket-Cylinder Head	35	691304	Spring-Valve (Intake)	146	690979	Key-Timing
11B	695745	Tube-Breather	36	691304	Spring-Valve (Exhaust)	155	698214	Plate-Cylinder Head
12	★699485	Gasket-Crankcase	37	699661	Guard-Flywheel	186	692317	Connector-Hose
13	699482	Screw (Cylinder Head)	40	692194	Retainer-Valve	187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000).
15	691686	Plug-Oil Drain	45	690977	Tappet-Valve	----- Note -----		
15B	695757	Plug-Oil Drain	46	693404	Camshaft	691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).		
16	791721	Crankshaft	46A	695285	Camshaft	----- Note -----		
----- Note -----			51	★♦♦Ø791718	Gasket-Intake	692601 Line-Fuel (Molded) (Used Before Code Date 05070100).		
792208 Crankshaft Used on Type No(s). 0018, 0110, 0111.			55A	696710	Housing-Rewind Starter	----- Note -----		
18	699804	Cover-Crankcase	58	693389	Rope-Starter (Cut To Required Length)	187A	791867	Line-Fuel (Molded) (Used After Code Date 05063000).
18B	699677	Cover-Crankcase	60B	699334	Grip-Starter Rope	----- Note -----		
20	★692550	Seal-Oil (PTO Side)	65	699228	Screw (Rewind Starter)	692601 Line-Fuel (Molded) (Used Before Code Date 05070100).		
20A	★691952	Seal-Oil (PTO Side) (Auxiliary Drive)	65A	699851	Screw (Rewind Starter)	----- Note -----		
21	281658S	Cap-Oil Fill	78	699205	Screw (Flywheel Guard)	692601 Line-Fuel (Molded) (Used Before Code Date 05070100).		
22	699478	Screw (Crankcase Cover/ Sump)	95	691636	Screw (Throttle Valve)	187B	791874	Line-Fuel (Molded)
23	699516	Flywheel	97	690024	Shaft-Throttle	188	699479	Screw (Control Bracket)
24	222698S	Key-Flywheel	98	398185	Kit-Idle Speed	190	699220	Screw (Fuel Tank)
25	791786	Piston Assembly (Standard)	104	●691242	Pin-Float Hinge	192	694543	Ball-Rocker Arm
----- Note -----			108	695807	Valve-Choke	209	692571	Spring-Governor
791791 Piston Assembly (.020" Oversize)			109B	695729	Shaft-Choke	----- Note -----		
----- Note -----			117	694176	Jet-Main (Standard)	691278 Spring- Governor Used on Type No(s). 0018, 0110, 0111.		
791792 Ring Set (.020" Oversize)			118	695042	Jet-Main (High Altitude)	219	693578	Gear-Governor
26	791787	Ring Set (Standard)	121	792006	Kit-Carburetor Overhaul	220	691724	Washer (Governor Gear)
----- Note -----			122	●791717	Spacer-Carburetor	222	699592	Bracket-Control
791792 Ring Set (.020" Oversize)			125A	791955	Carburetor	222D	790549	Bracket-Control
27	690975	Lock-Piston Pin	127	●694468	Plug-Welch			
28	690229	Pin-Piston	127A	●691739	Plug-Welch			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3454-7

Assemblies include all parts shown in frames.

11/16/2005

15B100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
227	692573	Lever-Governor Control	332	699359	Nut (Flywheel)	552	692346	Bushing-Governor Crank
238	691300	Cap-Valve	333	695711	Armature-Magneto	562	691119	Bolt (Governor Control Lever)
268	691072	Control Wire Casing (Cut to Required Length)	334	699477	Screw (Magneto Armature)	564	699854	Screw (Control Cover)
269	691026	Control Wire (Cut to Required Length)	337	491055S	Plug-Spark (Resistor)	578A	790481	Wire Assembly
270	691027	Nut (Control Wire Casing)			----- Note -----	584	791759	Cover-Breather Passage
271	691028	Lever-Control			691043 Plug-Spark (EMS)	585	791760	Gasket-Breather Passage
271A	698038	Lever-Control	347	698338	Switch-Rocker	597	691696	Screw (Pawl Friction Plate)
276 ♦	271716	Washer-Sealing	356C	695630	Wire-Stop	598	220624	Shim-End Play
281A	699639	Panel-Control Used on Type No(s). 0347, 0367.	356K	695731	Wire-Stop	601	95162S	Clamp-Hose
		----- Note -----	356L	790552	Wire-Stop	604A	695749	Cover-Control
		697550 Panel-Control Used on Type No(s). 0018, 0110, 0111.	358B	791797	Set-Engine Gasket	604B	790473	Cover-Control
287	699629	Screw (Dipstick Tube)	363	19069	Puller-Flywheel	608A	699335	Starter-Rewind
300	699512	Muffler	365	699484	Screw (Carburetor)	613	697812	Screw (Muffler)
304	699598	Housing-Blower	383	19374S	Wrench-Spark Plug	613A	699230	Screw (Muffler)
305	699480	Screw (Blower Housing)	427	694255	Nut (Control Bracket)	615	692576	Retainer-Governor Shaft
306A	695710	Shield-Cylinder	455	692591	Cup-Flywheel	616	692547	Crank-Governor
307	699483	Screw (Cylinder Shield)	456	692299	Plate-Pawl Friction	619	699230	Screw (Cylinder Head Plate)
307A	699234	Screw (Cylinder Shield)	459	281505S	Pawl-Ratchet	621	692310	Switch-Stop
307B	790557	Screw (Cylinder Shield)	472	696691	Knob-Choke Shaft	632	692653	Spring/Link-Mechanical Governor
309A	696818	Motor-Starter Used on Type No(s). 0018, 0110, 0111.	474	698314	Alternator	633 ♦	693867	Seal-Choke/Throttle Shaft
		----- Note -----	474A	791743	Alternator	633A ♦	691321	Seal-Choke/Throttle Shaft
		699786 Motor-Starter Used on Type No(s). 0347, 0367.	485	695755	Knob-Control	635A	692927	Boot-Sparkplug
318	690370	Screw (Mounting Bracket)	493A	695744	Bracket-Mounting	663	699854	Screw (Control Panel)
318A	790537	Screw (Mounting Bracket)	493B	691177	Bracket-Mounting	668	694257	Spacer
			493C	699048	Bracket-Mounting	684	791761	Screw (Breather Passage Cover)
			501	698315	Regulator	689	691855	Spring-Friction
			504	694254	Washer Set-Friction	692	690572	Spring-Detent
			505	691251	Nut (Governor Control Lever)	718	690959	Pin-Locating
			523	790546	Dipstick	731	790528	Hood-Snow
					----- Note -----			
					693618 Dipstick Used on Type No(s). 0018, 0110, 0111.			
			524	281370S	Seal-Dipstick Tube			
			526	690297	Screw (Regulator)			
			528	695746	Hose-Primer			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3454-8

Assemblies include all parts shown in frames.

11/16/2005

15B100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
741	695087	Gear-Timing	892	695747	Switch-Key	1029	691230	Arm-Rocker
742	692564	Retainer-E Ring	914	699481	Screw	1034	691343	Guide-Push Rod
746	692566	Gear-Idler			(Rocker Cover)	1036		Label-Emission
773	694258	Retainer			(Bottom)			(Available From An
819	699233	Screw	914A	692557	Screw			Authorized Briggs &
		(Muffler Bracket)			(Rocker Cover)			Statton Sevice Dealer)
823	699209	Screw			(Top)	1054	280275	Tie-Cable
		(Muffler Adapter)	914B	697551	Screw	1058	275964	Owner's Manual
824	696017	Gasket-Heat Shield			(Rocker Cover)	1070	699201	Screw
830	694544	Stud			(Center)			(Flywheel Fan)
		(Rocker Arm)	930	696709	Guard-Rewind	1095A	791798	Gasket Set-Valve
832A	699313	Guard-Muffler	957	694261	Cap-Fuel Tank	1119	699772	Screw
836B	699209	Screw			(Plastic)			(Alternator)
		(Muffler Guard)	957A	698109	Cap-Fuel Tank	1196	696692	Screw
836C	699234	Screw			(Plastic)			(Snow Hood)
		(Muffler Guard)	958	698180	Valve-Fuel Shut Off	1196A	699854	Screw
842	691031	Seal-O Ring			(Plastic)			(Snow Hood)
		(Dipstick Tube)	972	694260	Tank-Fuel	1210	498144	Pulley/Spring
847	790545	Dipstick/Tube			(Plastic)			Assembly
		Assembly	975	493640	Bowl-Float			(Pulley)
		----- Note -----	976	790221	Primer-Carburetor	1211	498144	Pulley/Spring
		693617 Dipstick/Tube	977	792007	Gasket Set-Carburetor			Assembly
		Assembly	990	695756	Key-Set			(Spring)
		Used on Type No(s).	993 ★Ø694088	Gasket-Cylinder Head	1230	699847	Screw	
		0018, 0110, 0111.		Plate			(Control Bracket)	
851	493880S	Terminal-Spark Plug	998	696683	Pipe-Oil	1251	696699	Shield-Snow
863	699849	Bracket-Muffler	1005	692592	Fan-Flywheel	1252	699234	Screw
864	699232	Adapter-Muffler	1019	792211	Kit-Label			(Snow Shield)
868 ★Ø692044		Seal-Valve	1022 ★Ø691890	Gasket-Rocker Cover	1330	272147	Repair Manual	
883	★692237	Gasket-Exhaust	1023	499924	Cover-Rocker Arm	1403	699480	Screw
883A	★691893	Gasket-Exhaust	1026	790287	Rod-Push			(Wire Assembly)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**3454-9**

Assemblies include all parts shown in frames.

11/16/2005