

212700

Illustrated Parts List

Model Series

212700

TYPE NUMBERS
0015 through 0124.

TABLE OF CONTENTS

Air Cleaner/Blower Housing 6

Alternator 9

Camshaft 3

Carburetor 5

Controls 8

Crankcase Sump 2

Crankshaft 3

Cylinder 2

Cylinder Head 4

Electric Starter 7

Exhaust System 6

Flywheel 7

Fuel System 7

Ignition 8

Kit/Gasket Sets - Carburetor 5

Kit/Gasket Sets - Engine 4

Kit/Gasket Sets - Valve 4

Lubrication 3

Piston 3


Rewind Starter 7



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted,
 in any form or by any means, electronic or mechanical, including photocopying,
 recording or by any information storage and retrieval system, without permission
 in writing from Briggs & Stratton Corporation.


212700

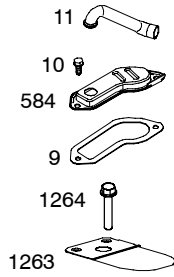

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL






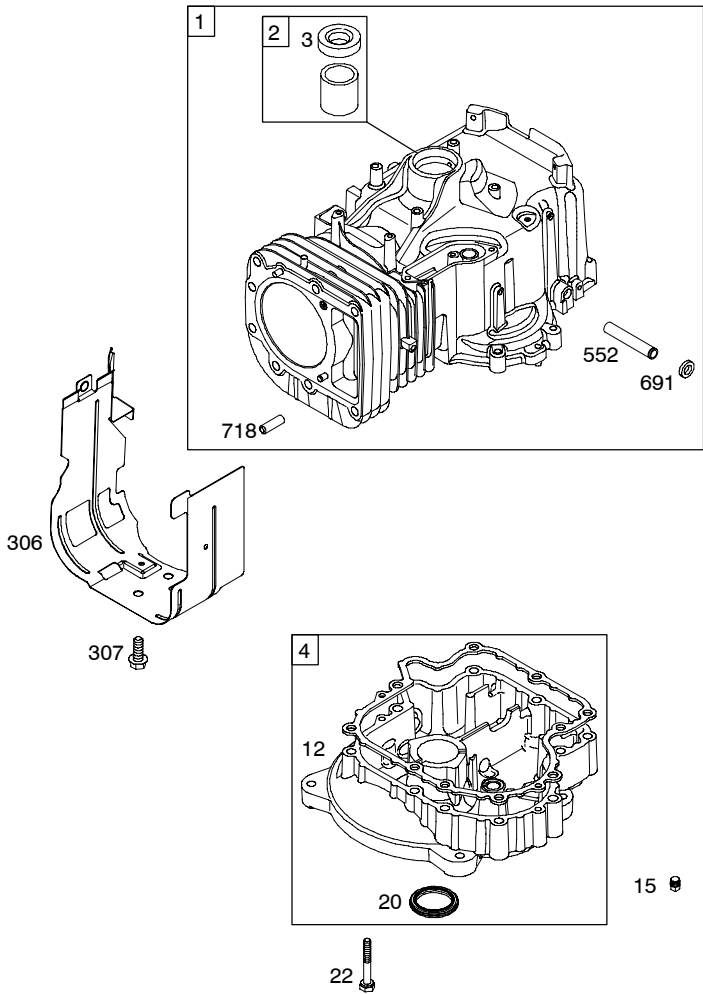


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5492-2




Assemblies include all parts shown in frames.

09/22/2004

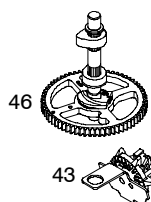
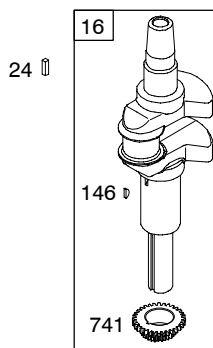
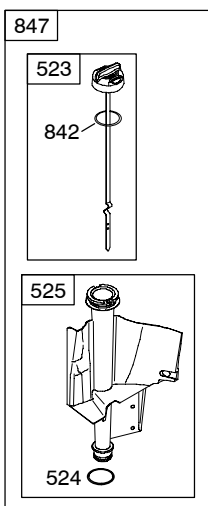
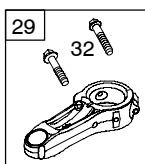

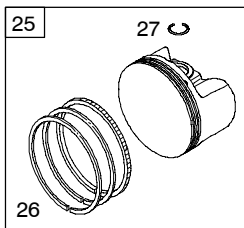


5492-3 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 09/22/2004

212700

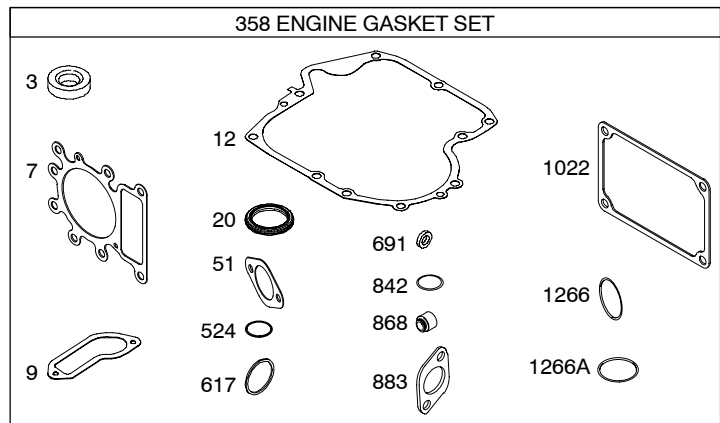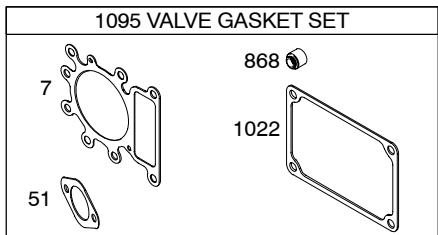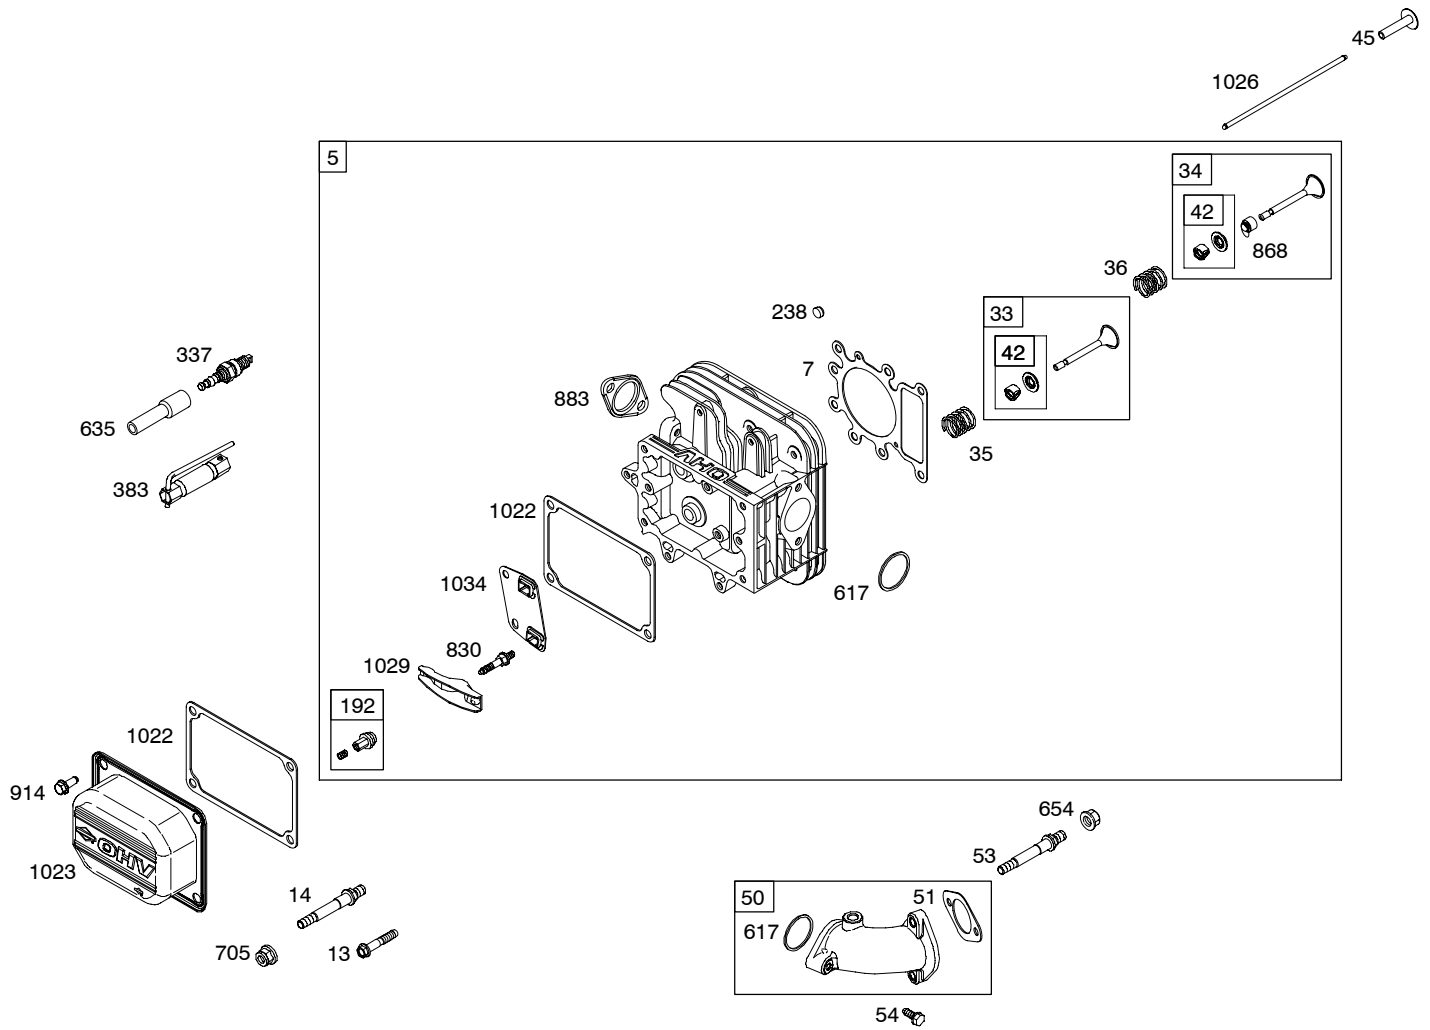



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

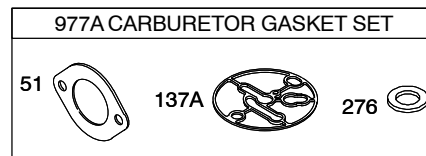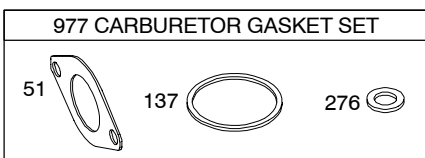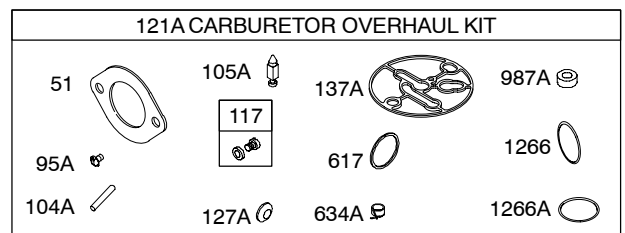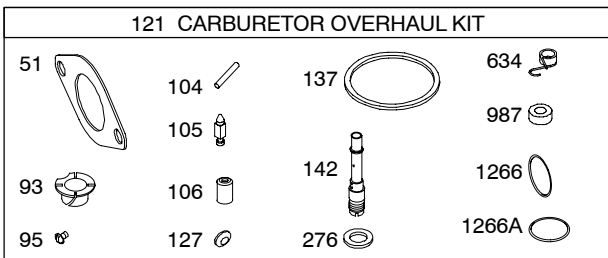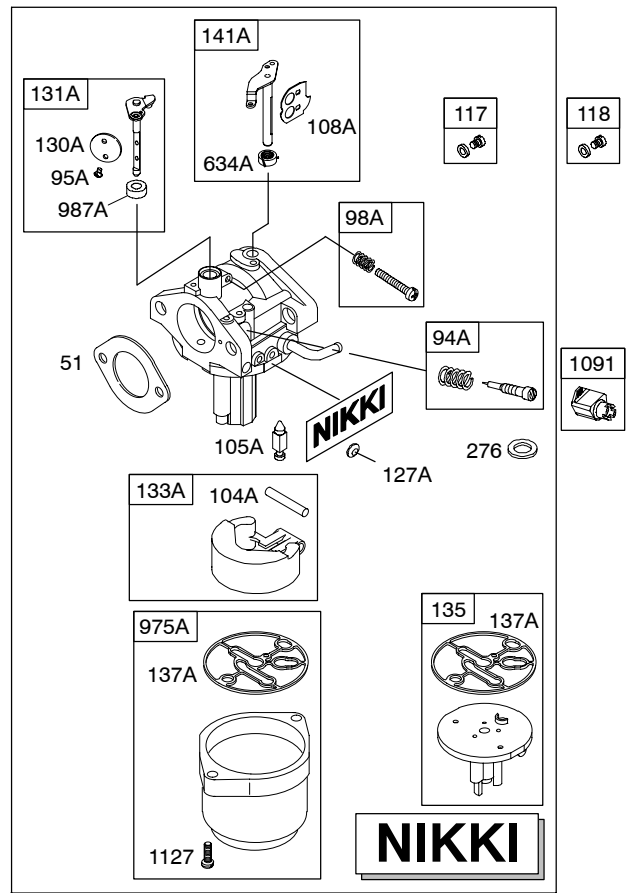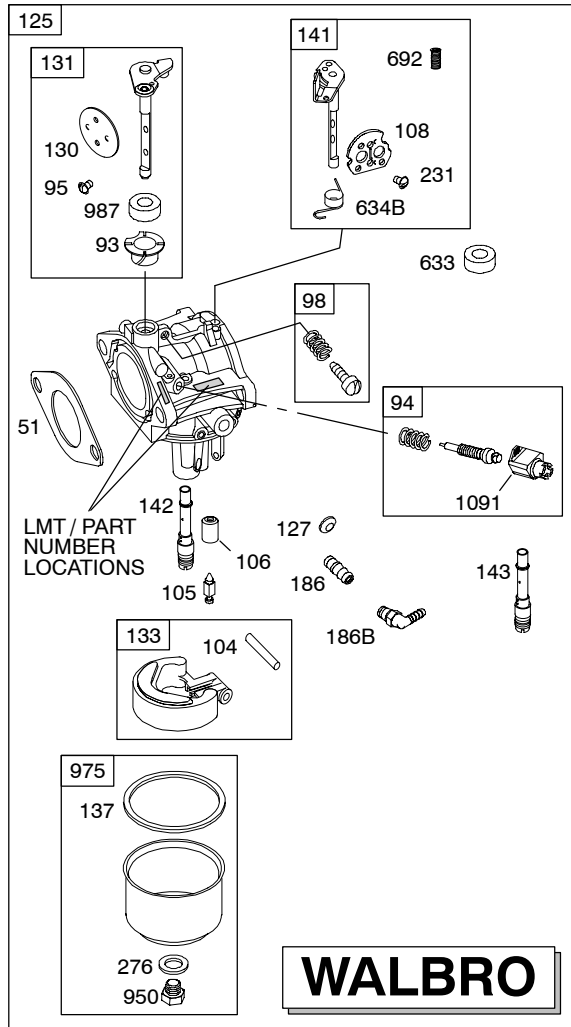



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700



1036 EMISSION LABEL

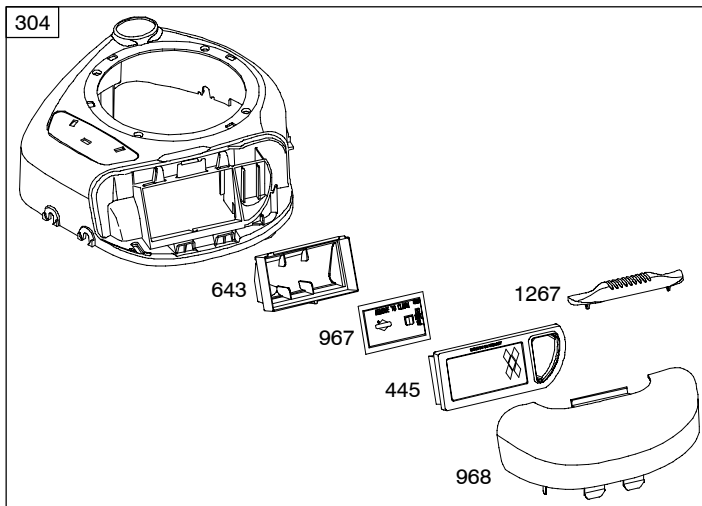






- 305A
- 305

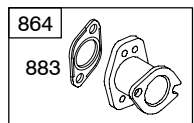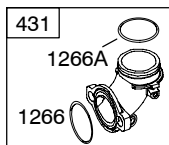

823

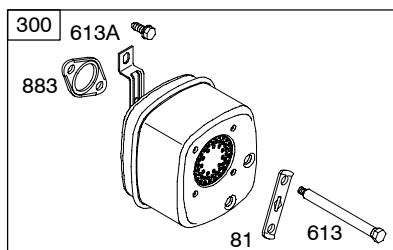


5492-6 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 09/22/2004

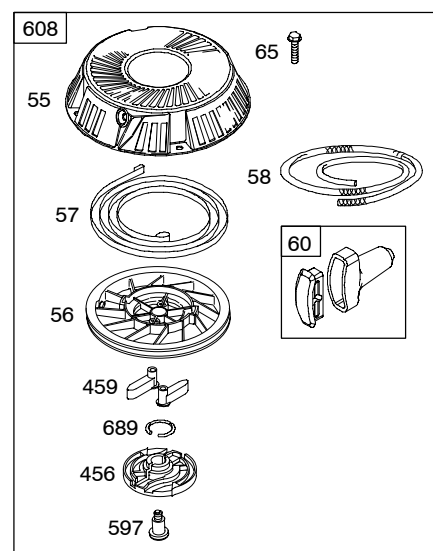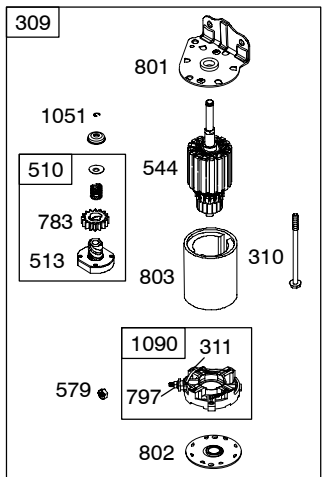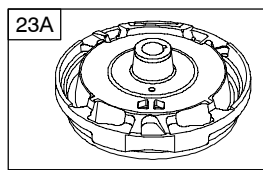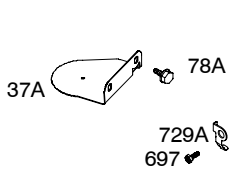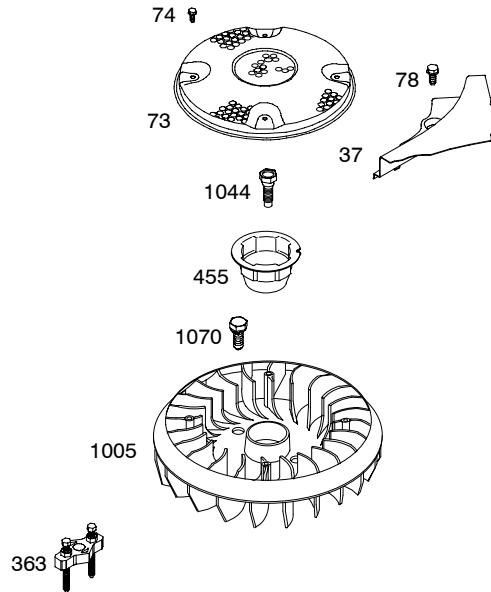

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5492-7 Assemblies include all parts shown in frames. 09/22/2004

212700

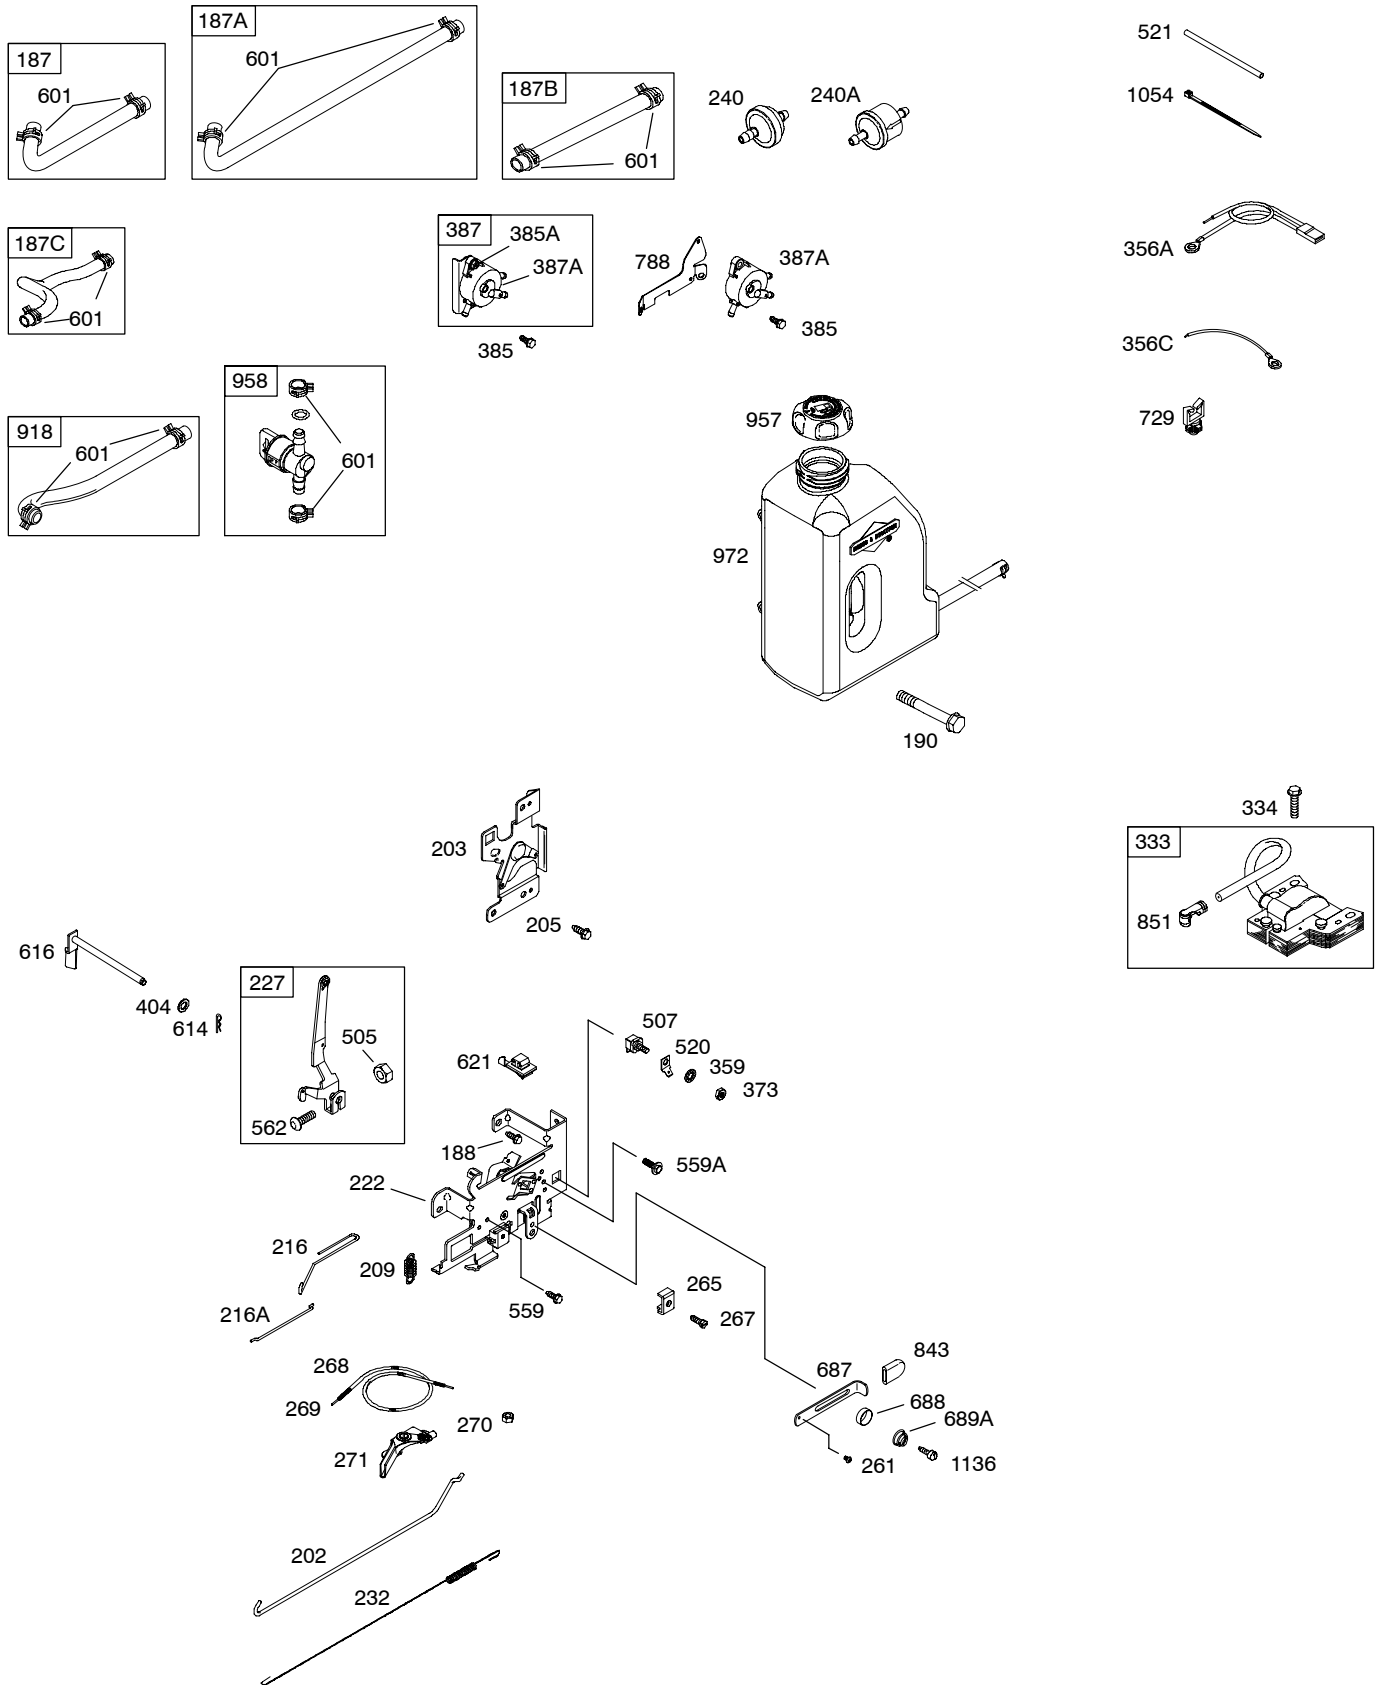



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5492-8

Assemblies include all parts shown in frames.

09/22/2004

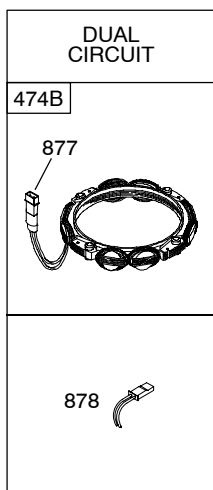

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699045	Cylinder Assembly	26	698375	Ring Set (Standard)	54	691148	Screw (Intake Manifold)
2	399265	Kit-Bushing/Seal (Magneto Side)			----- Note -----	55	695130	Housing-Rewind Starter
3	★391086	Seal-Oil (Magneto Side)			698376 Ring Set (.010" Oversize)	56	695129	Pulley-Starter
4	697106	Sump-Engine			698377 Ring Set (.020" Oversize)	57	695131	Spring-Rewind Starter
5	697396	Head-Cylinder			698378 Ring Set (.030" Oversize)	58	695132	Rope-Starter
7	★△273280	Gasket-Cylinder Head				60	494212	Grip-Starter Rope
9	★697109	Gasket-Breather				65	697725	Screw (Rewind Starter)
10	697157	Screw (Breather Assembly)	27	698469	Lock-Piston Pin (Pink)	73	697133	Screen-Rotating (Used After Code Date 03031600)
11	697113	Tube-Breather	28	697099	Pin-Piston			----- Note -----
12	★697110	Gasket-Crankcase (.015" Thick) (Standard)	29	697364	Rod-Connecting (Standard)			697384 Screen-Rotating (Used Before Code Date 03031700)
13	690360	Screw (Cylinder Head)			----- Note -----			
14	790560	Stud (Cylinder Head)			697262 Rod-Connecting (.020" Undersize)	74	697897	Screw (Rotating Screen)
15	690946	Plug-Oil Drain (3/8" Standard)	32	692852	Screw (Connecting Rod)	78	691003	Screw (Flywheel Guard)
16	698382	Crankshaft	33	695760	Valve-Exhaust	78A	690364	Screw (Flywheel Guard) (Electric Start) Used on Type No(s). 0015, 0111, 0114, 0116, 0117, 0119, 0124.
20	690947	Seal-Oil (PTO Side)	34	695761	Valve-Intake			
22	692125	Screw (Crankcase Cover/Sump)	35	691279	Spring-Valve (Intake)			
23A	698283	Flywheel (Rewind Starter) Used on Type No(s). 0015, 0111, 0114, 0116, 0117, 0119, 0124.	36	691279	Spring-Valve (Exhaust)			
			37	697352	Guard-Flywheel	81	691178	Lock-Muffler Screw
			37A	697626	Guard-Flywheel (Electric Start) Used on Type No(s). 0015, 0111, 0114, 0116, 0117, 0119, 0124.	93	●690602	Bushing-Throttle Shaft
24	222698	Key-Flywheel	42	499586	Keeper-Valve	94	498030	Kit-Idle Mixture (Walbro)
25	698767	Piston Assembly (Standard)	43	691968	Slinger-Governor/Oil	94A	695425	Kit-Idle Mixture (Nikki)
		----- Note -----	45	690564	Tappet-Valve	95	●691636	Screw (Walbro) (Throttle Valve)
		698768 Piston Assembly (.010" Oversize)	46	790392	Camshaft (Pressure Lube)	95A	●690718	Screw (Throttle Valve)(Nikki)
		698769 Piston Assembly (.020" Oversize)	50	697361	Manifold-Intake	98	495800	Kit-Idle Speed (Walbro)
		698770 Piston Assembly (.030" Oversize)	51★*△692137	Gasket-Intake				
			53	690227	Stud (Carburetor)	98A	695408	Kit-Idle Speed (Nikki)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
104	●690525	Pin-Float Hinge (Walbro)	125	790019	Carburetor (Walbro) (Gravity Feed)	137	●●281165	Gasket-Float Bowl (Walbro)
104A	●694918	Pin-Float Hinge (Nikki)			Used on Type No(s). 0015, 0111, 0124.	137A	●●698781	Gasket-Float Bowl (Nikki)
105	●231855	Valve-Float Needle (Walbro)			----- Note -----	141	699027	Kit-Choke Shaft (Walbro)
105A	●696136	Valve-Float Needle (Nikki)			790020 Carburetor (Walbro) (Pump Feed)			Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0117, 0124.
106	●691780	Seat-Inlet (Pump Feed)			Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0117, 0119, 0120.			----- Note -----
		Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0117, 0119, 0120.			790022 Carburetor (Walbro) (Gravity Feed)			790905 Kit-Choke Shaft (Walbro)
		----- Note -----			Used on Type No(s). 0114.			Used on Type No(s). 0114, 0116.
		690577 Seat-Inlet (Gravity Feed)	127	●694524	Plug-Welch (Walbro)			790905 Kit-Choke Shaft (Walbro)
		Used on Type No(s). 0015, 0111, 0114, 0124.	127A	690727	Plug-Welch (Nikki)			(Used Before Code Date 04092600).
108	691227	Valve-Choke	130	790024	Valve-Throttle			Used on Type No(s). 0114.
		Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0117, 0124.			Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.			699316 Kit-Choke Shaft (Walbro)
108	693924	Valve-Choke	130A	698774	Valve-Throttle (Nikki)			(Used After Code Date 04092500).
		Used on Type No(s). 0114, 0116.	131	697542	Kit-Throttle Shaft (Walbro)			Used on Type No(s). 0114.
108A	698773	Valve-Choke (Nikki)	131A	698776	Kit-Throttle Shaft (Nikki)	141A	698778	Kit-Choke Shaft (Nikki)
117	699897	Jet-Main (Standard)	133	494381	Float-Carburetor (Walbro)	142	●790025	Nozzle-Carburetor (Standard) (Walbro)
118	699898	Jet-Main (High Altitude)	133A	694914	Float-Carburetor (Nikki)			Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
121	790031	Kit-Carburetor Overhaul (Walbro)	135	790030	Tube-Fuel Transfer (Nikki)	143	790028	Nozzle-Carburetor (High Altitude) (Walbro)
121A	698787	Kit-Carburetor Overhaul (Nikki)			Used on Type No(s). 0025, 0050, 0113, 0117, 0119, 0120.			Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
					----- Note -----			146 691639 Key-Timing
					698780 Tube-Fuel Transfer (Nikki)			186 698174 Connector-Hose (Straight)
					Used on Type No(s). 0015, 0111, 0124.			186B 692317 Connector-Hose (90 Degree)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	699331	Line-Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	209	691798	Spring-Governor Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0119, 0120, 0124. ----- Note ----- 691278 Spring-Governor Used on Type No(s). 0117.	265	691024	Clamp-Casing
187A	699332	Line-Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0025, 0026, 0119, 0120.	216	691840	Link-Choke	267	690804	Screw (Casing Clamp)
187B	691050	Line-Fuel (Cut To Required Length) Used on Type No(s). 0050, 0116, 0117.	216A	691281	Link-Choke Used on Type No(s). 0025, 0026, 0113, 0119, 0120.	268	691025	Casing-Control Wire (Cut To Required Length)
187C	697907	Line-Fuel (Formed)(8 Inches Long) Used on Type No(s). 0050, 0116, 0117.	222	694042	Bracket-Control	269	691026	Wire-Control (Cut To Required Length)
188	691693	Screw (Control Bracket)	227	691374	Lever-Governor Control	270	691027	Nut (Control Wire Casing)
190	790931	Screw (Fuel Tank)	231	691636	Screw (Choke Valve)	271	691028	Lever-Control
192	691986	Adjuster-Rocker Arm	232	691842	Spring-Governor Link	276	692255	Washer-Sealing
202	691841	Link-Mechanical Governor	238	691843	Cap-Valve	300	697048	Muffler (Lo Tone) Used on Type No(s). 0015, 0025, 0026, 0050, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
203	691381	Crank-Bell Used on Type No(s). 0025, 0026, 0113, 0119, 0120.	240	394358	Filter-Fuel (White, 75 Microns) Used on Type No(s). 0015, 0025, 0026, 0111, 0113, 0114, 0124.	304	698473	Housing-Blower (Black) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
205	691693	Screw (Bell Crank)	240A	691035	Filter-Fuel (Clear, 40 Microns) Used on Type No(s). 0050, 0116, 0117, 0119, 0120.	305	697102	Screw (Blower Housing)
			261	697176	Screw (Control Slide) Used on Type No(s). 0114, 0116.	305A	697103	Screw (Blower Housing)
						306	697359	Shield-Cylinder
						307	691003	Screw (Cylinder Shield)
						309	693551	Motor-Starter Used on Type No(s). 0025, 0026, 0050, 0113, 0120.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310	690323	Screw (Starter Motor)	385	694476	Screw (Fuel Pump)	505	691251	Nut (Governor Control Lever)
311	497608	Brush Set			Used on Type No(s). 0050, 0113, 0116, 0117.	507	691972	Insulator Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
333	492341	Armature-Magneto	385A	690297	Screw (Fuel Pump)			
334	691061	Screw (Magneto Armature)			Used on Type No(s). 0025, 0026, 0119, 0120.	510	693699	Drive-Starter
337	491055	Plug-Spark	387	697090	Pump-Fuel (Includes Mounting Bracket)	513	692024	Clutch-Drive
356A	398808	Wire-Stop (2 Wires, 15" And 15-11/16" Long)(Snap Connect Insulated Female Blade Terminal, Ring Terminal, And Bare Wire End) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.			Used on Type No(s). 0050, 0113, 0116, 0117.	520	691084	Terminal-Ground Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
356C	399222	Wire-Stop (1 Wire, 16-45/64" Long)(Ring Terminal, And Bare Wire End) Used on Type No(s). 0114, 0116.	387A	808656	Pump-Fuel Used on Type No(s). 0025, 0026, 0119, 0120.	521	690581	Shield-Cable Used on Type No(s). 0015, 0111.
358	697151	Gasket Set-Engine	404	691691	Washer (Governor Crank)	523	699908	Dipstick
359	691077	Washer (Ground Terminal) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	431	697122	Elbow-Intake	524	★691032	Seal-Dipstick Tube
363	19203	Puller-Flywheel	445	698413	Filter-Air Cleaner Cartridge (Non Washable)	525	697184	Tube-Dipstick ----- Note ----- 697085 Tube-Dipstick (Used On Engines With Fuel Pump) Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0119, 0120.
373	691612	Nut (Ground Terminal) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	455	695113	Cup-Flywheel Used on Type No(s). 0015, 0025, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	544	692034	Armature-Starter
383	89838	Wrench-Spark Plug	456	695128	Plate-Pawl Friction	552	697144	Bushing-Governor Crank
			459	281505	Pawl-Ratchet			
			474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0025, 0026, 0050, 0113, 0120.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
559	697561	Screw (Remote Choke Stop)(Assemble Remote/Manual Choke Stop Screw in "R" Hole) Used on Type No(s). 0114, 0116.	614	691620	Pin-Cotter	692	691301	Spring-Detent Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0117, 0119, 0120.
559A	693675	Screw (Remote Choke Stop)(Assemble Speed Limiter Screw in Number "2" Hole) Used on Type No(s). 0116.	616	692012	Crank-Governor	697	690372	Screw (Drive Cap)
562	691119	Bolt (Governor Control Lever)	617	★692138	Seal-O Ring (Intake Manifold)	705	790561	Nut (Fuel Tank)
579	691029	Nut (Starter Cable)	621	692310	Switch-Stop Used on Type No(s). 0025, 0026, 0050, 0113, 0114, 0116, 0119, 0120, 0124.	718	690959	Pin-Locating
584	697112	Cover-Breather Passage	633	691326	Seal-Choke/Throttle Shaft Used on Type No(s). 0114.	729	691335	Clip-Wire
597	691696	Screw (Pawl Friction Plate)	634	●690802	Spring/Seal Assembly	729A	691224	Clip-Wire
601	95162	Clamp-Hose (Zinc Plate)(Spring Wire) ----- Note ----- 691038 Clamp-Hose (Black)(Spring Steel) Used on Type No(s). 0050, 0116, 0117, 0119, 0120.	634A	●698779	Spring/Seal Assembly	741	697128	Gear-Timing
608	695058	Starter-Rewind Used on Type No(s). 0015, 0025, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	634B	690801	Spring/Seal Assembly Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0117, 0119, 0120.	783	693713	Gear-Pinion
613	691416	Screw (Muffler)	635	691909	Boot-Spark Plug	788	699347	Bracket-Fuel Pump Used on Type No(s). 0025, 0026, 0119, 0120.
613A	691678	Screw (Muffler)	643	697155	Retainer-Air Filter	797	693167	Nut (Brush Retainer)
			654	690958	Nut (Carburetor)	801	691283	Cap-Drive
			676	393761	Deflector-Muffler (Side Out) Used on Type No(s). 0025, 0026, 0050, 0113, 0116, 0117, 0119, 0120.	802	691286	Cap-End
			677	690661	Screw (Muffler Deflector)	803	693757	Housing-Starter
			687	697175	Slide-Control Used on Type No(s). 0114, 0116.	823	698941	Screw (Muffler Adapter)
			688	690395	Cap-Friction Used on Type No(s). 0114, 0116.	830	691095	Stud-Rocker Arm
			689	691855	Spring-Friction	842	★691031	Seal-O Ring (Dipstick Tube)
			689A	690529	Spring-Friction Used on Type No(s). 0114, 0116.	843	697158	Sleeve-Lever Used on Type No(s). 0114, 0116.
			691	★692407	Seal-Governor Shaft	847	790442	Dipstick/Tube Assembly ----- Note ----- 790443 Dipstick/Tube Assembly (Used On Engines With Fuel Pump)
						851	692424	Terminal-Spark Plug
						864	697346	Adapter-Muffler Used on Type No(s). 0015, 0025, 0026, 0050, 0113, 0114, 0116, 0117, 0119, 0120, 0124.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

212700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
868	★Δ690968	Seal-Valve	975	495933	Bowl-Float (Platinum)	1029	691751	Arm-Rocker
877	393456	Wire/Connector- Alternator (Dual Circuit) Used on Type No(s). 0025, 0026, 0050, 0113, 0120.	975A	698783	Bowl-Float (Nikki)	1034	690822	Guide-Push Rod
878	691237	Harness-Alternator (2 Wires, 48-1/2", And 48-1/2" Long)(Snap Connect Female Pin Terminal,And 2 Bare Wire Ends) Used on Type No(s). 0025, 0026, 0050, 0113, 0120.	977	690192	Gasket Set-Carburetor (Walbro)	1036	790465	Label-Emissions (Used After Code Date 04063000) ----- Note ----- 790186 Label-Emissions (Used After Code Date 03123100 and Before Code Date 04070100). 697221 Label-Emissions (Used Before Code Date 04010100)
883	★692236	Gasket-Exhaust	977A	790032	Gasket Set-Carburetor (Nikki)	1040	698368	Plate-Trim (Exhaust) Used on Type No(s). 0026.
914	691108	Screw (Rocker Cover)	987	●691326	Seal-Throttle Shaft Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0117, 0124. ----- Note ----- 690801 Seal-Throttle Shaft (Used Before Code Date 04092500)	1044	698139	Screw (Flywheel)
918	697091	Hose-Vacuum (Molded) Used on Type No(s). 0050, 0116, 0117.	987A	●698777	Seal-Throttle Shaft (Nikki)	1051	691265	Ring-Retaining
950	691657	Screw-Float Bowl (Bottom Of Bowl)	1005	699044	Fan-Flywheel (Used After Code Date 03031600) ----- Note ----- 697360 Fan-Flywheel (Used Before Code Date 03031700)	1054	280275	Tie-Cable
957	694261	Cap-Fuel Tank (Plastic) Used on Type No(s). 0050, 0116, 0117, 0119, 0120.	1019	697764	Kit-Label ----- Note ----- 695442 Kit-Label	1058	275935	Operator's Manual
958	698183	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0050, 0116, 0117, 0119, 0120.	1022	★Δ272475	Gasket-Rocker Cover	1070	690372	Screw (Flywheel Fan)
967	697292	Filter-Pre Cleaner	1023	692492	Cover-Rocker	1090	691293	Retainer-Brush
968	697420	Cover-Air Cleaner (Black) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.	1026	697395	Rod-Push (Exhaust) ----- Note ----- 697394 Rod-Push (Intake)	1091	691333	Cap-Limiter
972	699710	Tank-Fuel (Plastic) Used on Type No(s). 0050, 0116, 0117, 0119, 0120.	1026	697395	Rod-Push (Exhaust) ----- Note ----- 697394 Rod-Push (Intake)	1095	691581	Gasket Set-Valve
						1119	691183	Screw (Alternator)
						1127	695407	Screw (Float Bowl)
						1136	690278	Screw (Control Bracket)(High Speed Control) Used on Type No(s). 0114, 0116.
						1263	697124	Reed-Breather
						1264	697104	Screw (Breather Reed)
						1266	●691917	Seal-O Ring (Intake Elbow)
						1266A	●697123	Seal-O Ring (Intake Elbow)
						1267	697419	Latch-Blower Housing (Black) Used on Type No(s). 0015, 0025, 0026, 0050, 0111, 0113, 0114, 0116, 0117, 0119, 0120, 0124.
						1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5492-15

Assemblies include all parts shown in frames.

09/22/2004