

283700

Illustrated Parts List

Model Series

283700

TYPE NUMBERS
0101 through 4516.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	8
Blower Housing/Shrouds	7
Cams	2
Carburetor	3
Controls	5
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	9
Flywheel	6
Fuel Tank	5
Governor Spring	5
Head	2
Ignition	8
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Engine	2
Kits/Gaskets-Valve	2
Muffler	4
Oil	2
Piston Group	2
Rewind	6
Valves	2


BRIGGS & STRATTON



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

283700

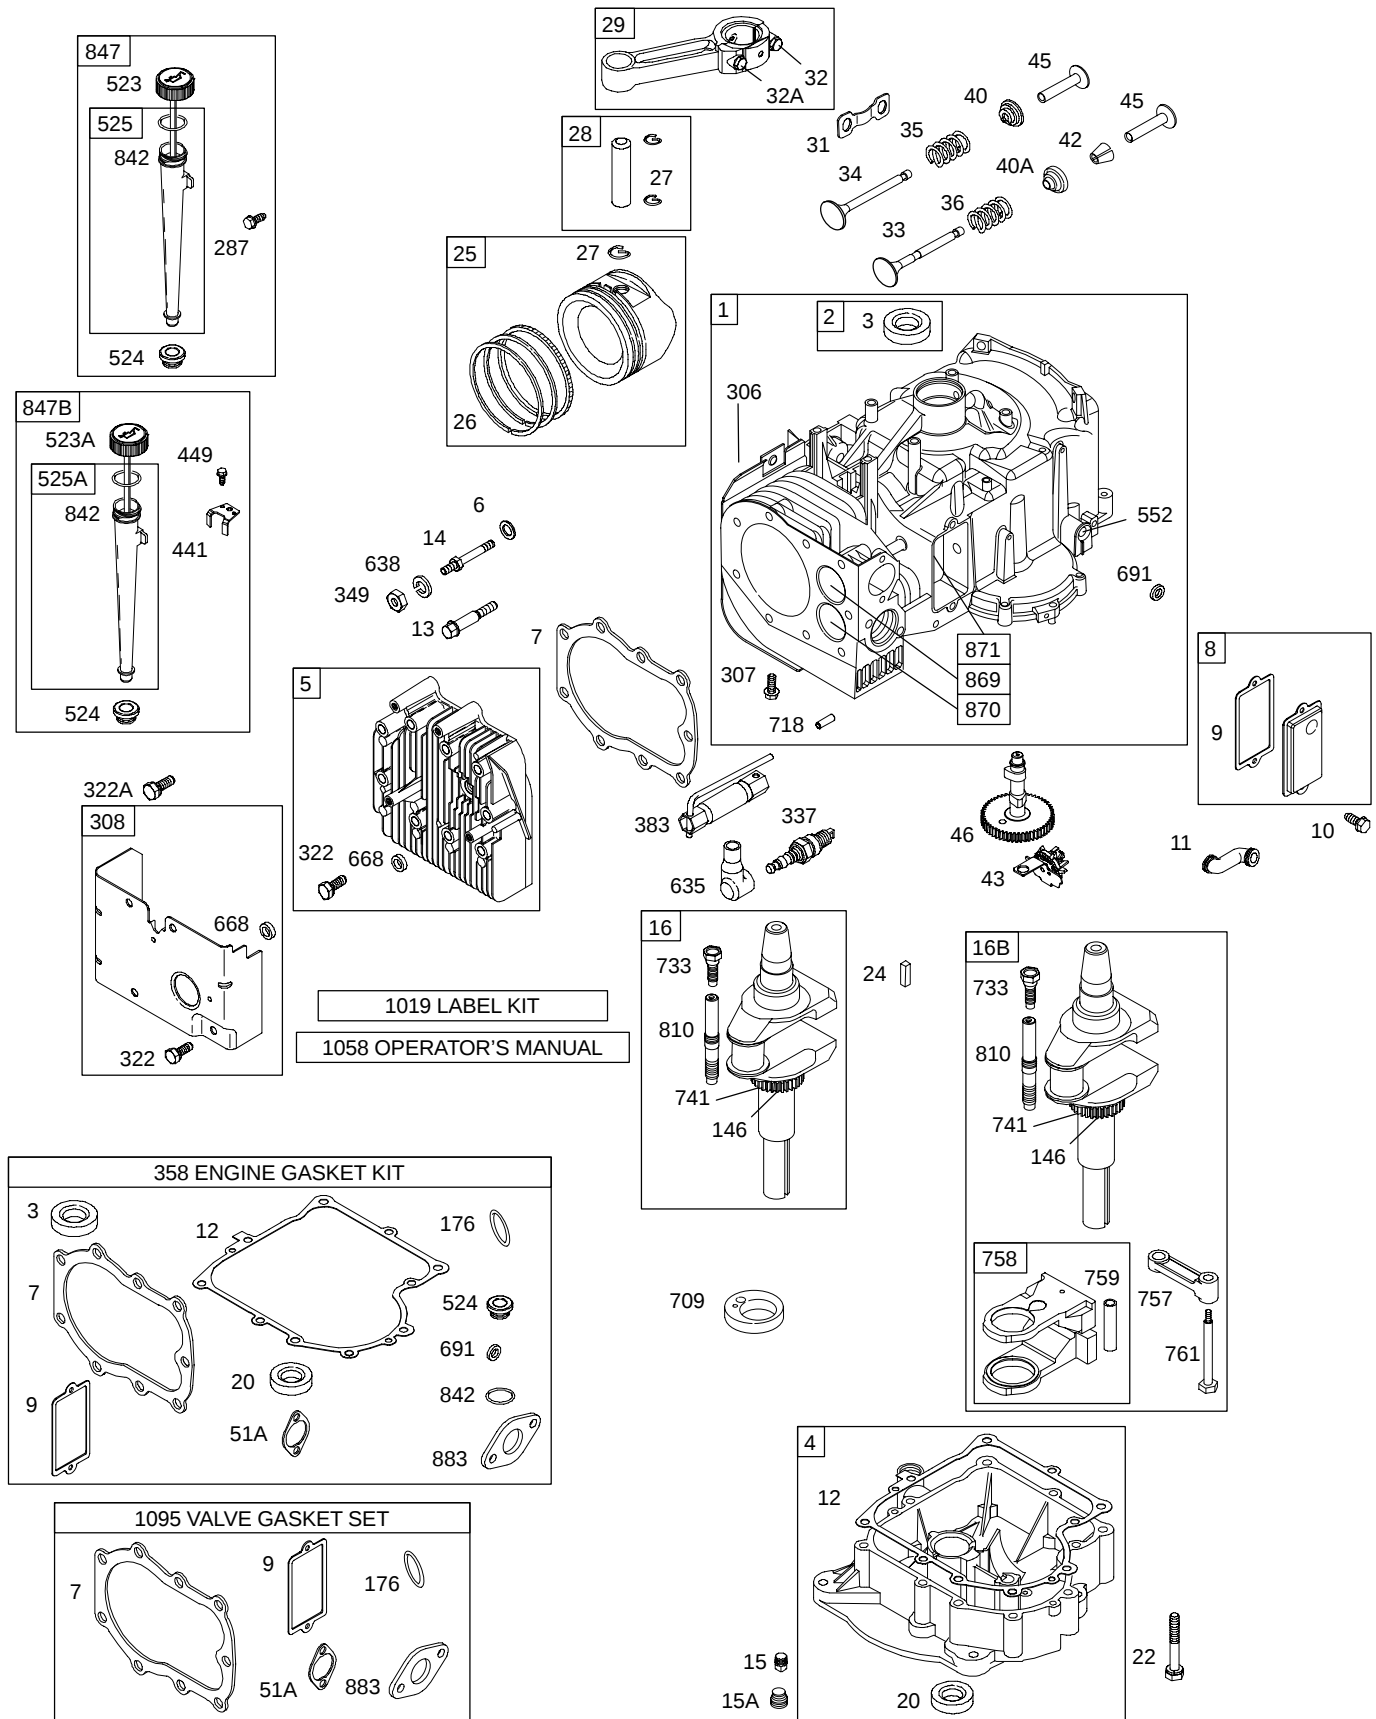


283700


NIKKI

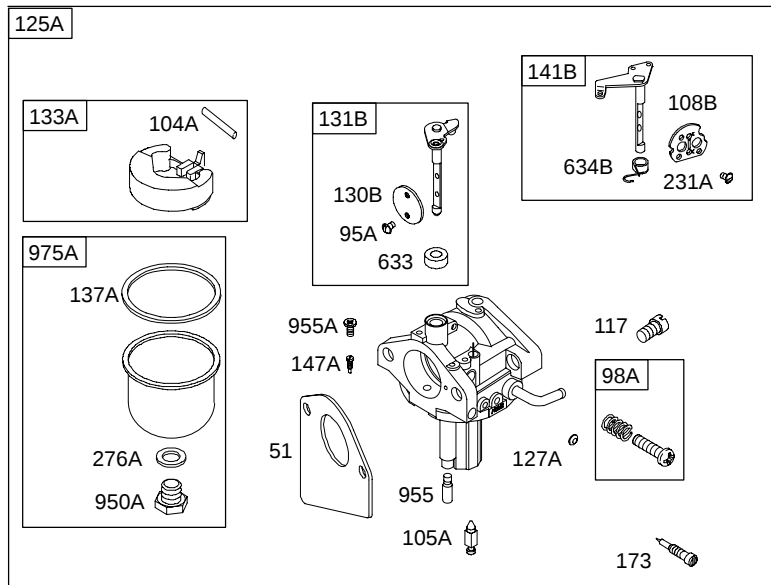

WALBRO

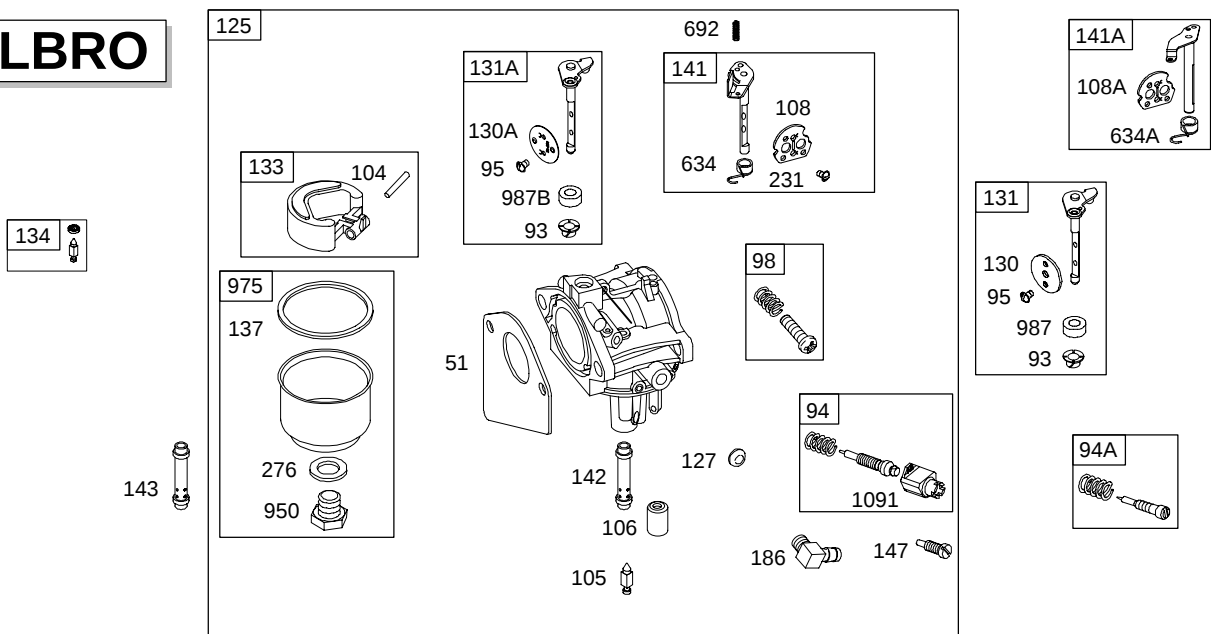


121 CARBURETOR OVERHAUL KIT

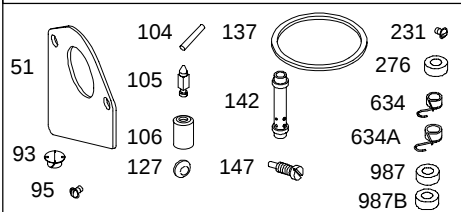


NIKKI

121A CARBURETOR OVERHAUL KIT

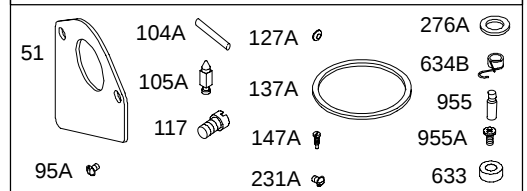


WALBRO


977 CARBURETOR GASKET SET

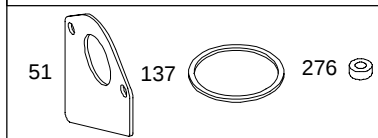


977A CARBURETOR GASKET SET







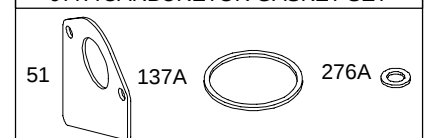



283700

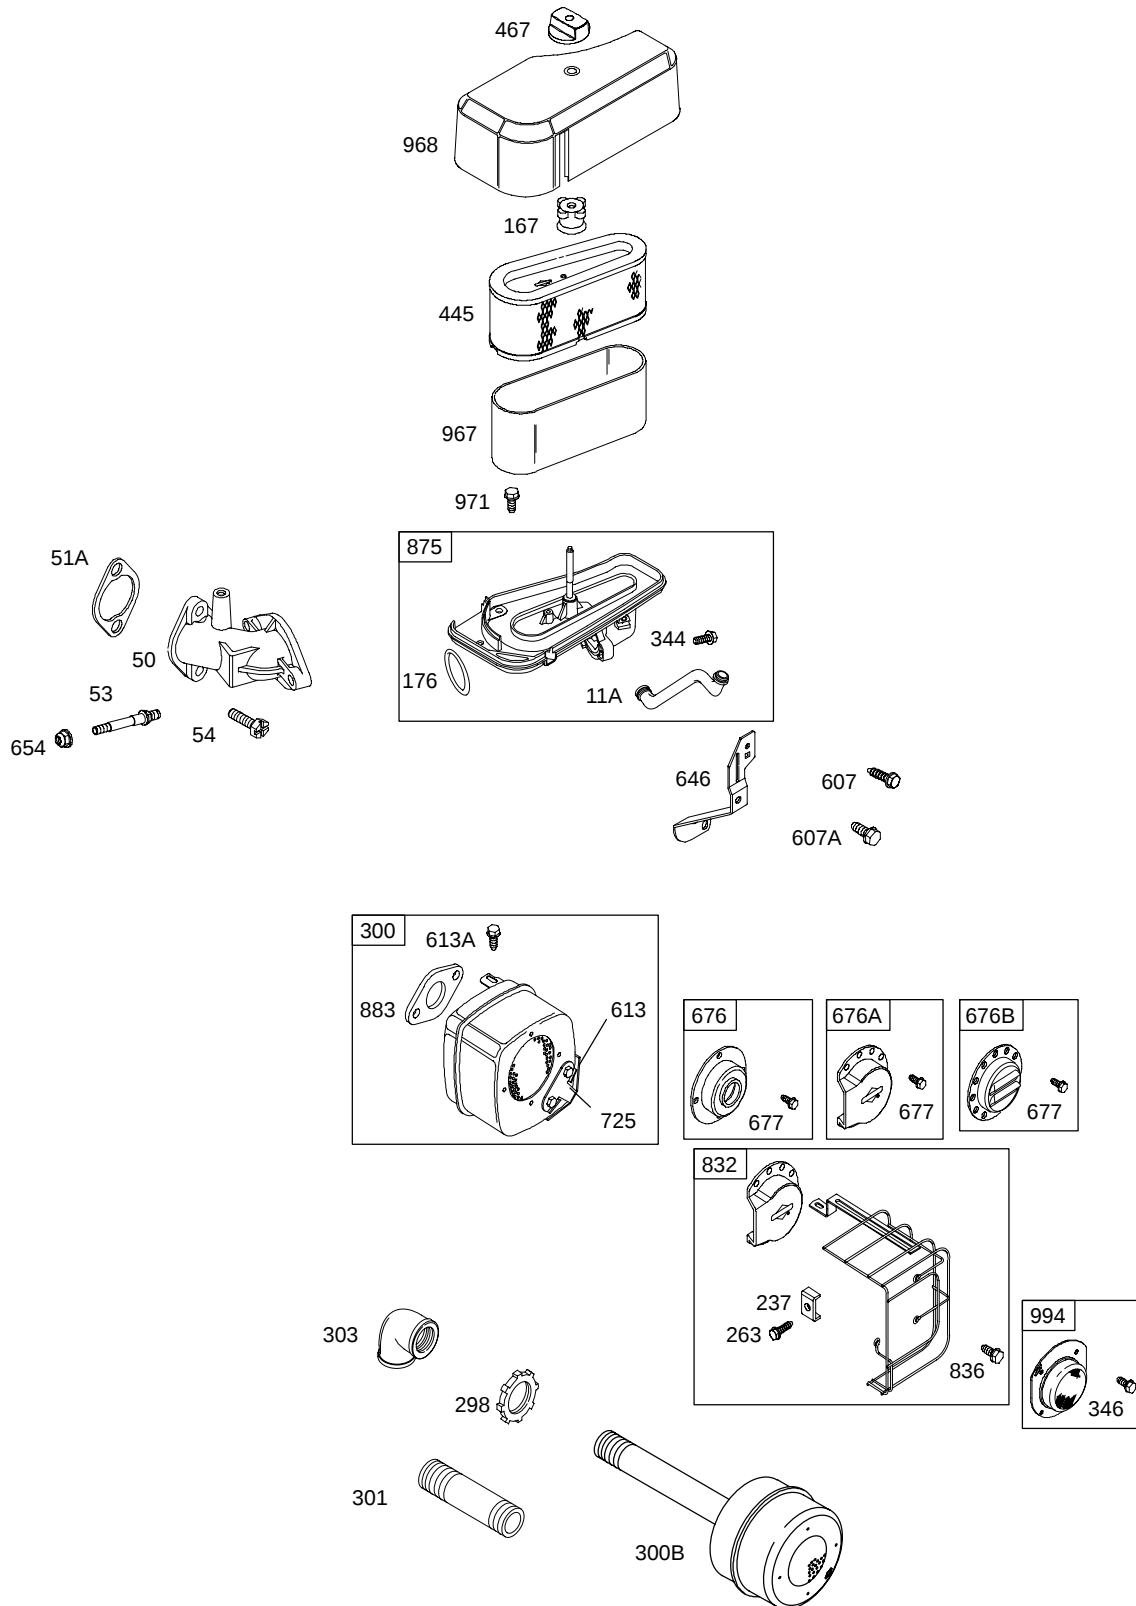




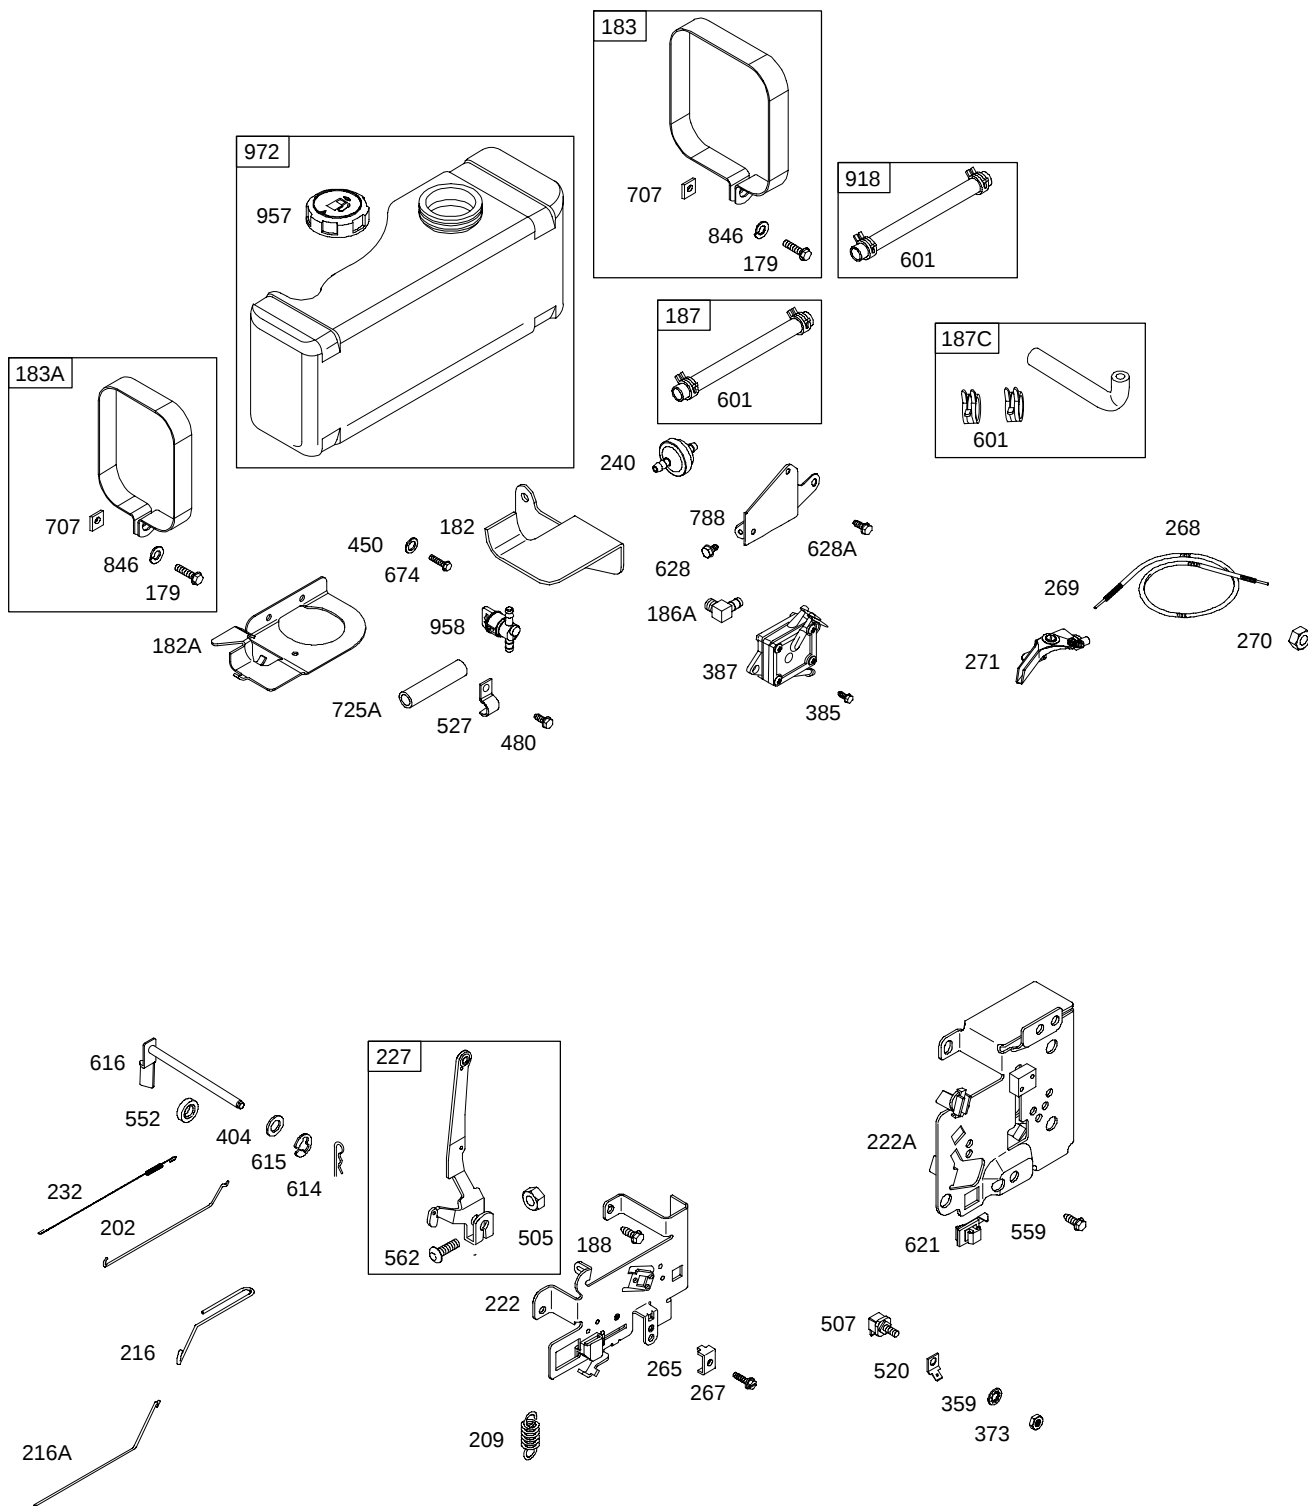


283700

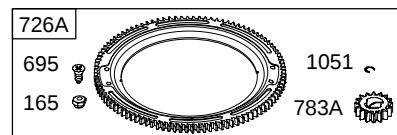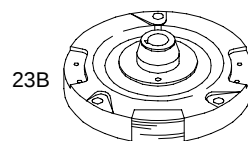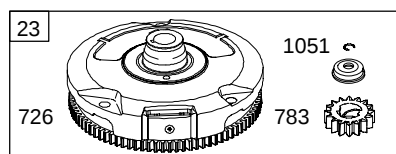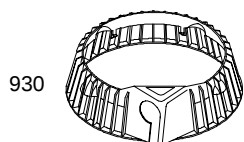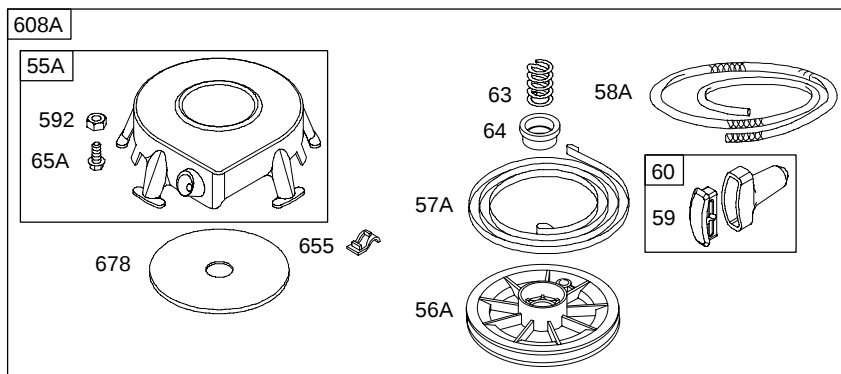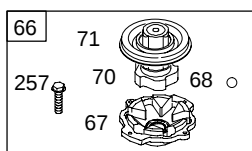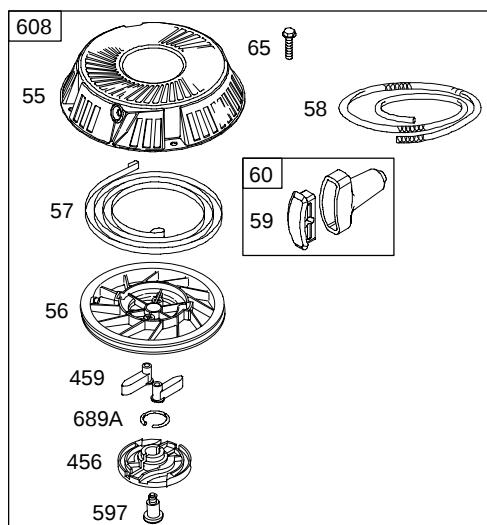



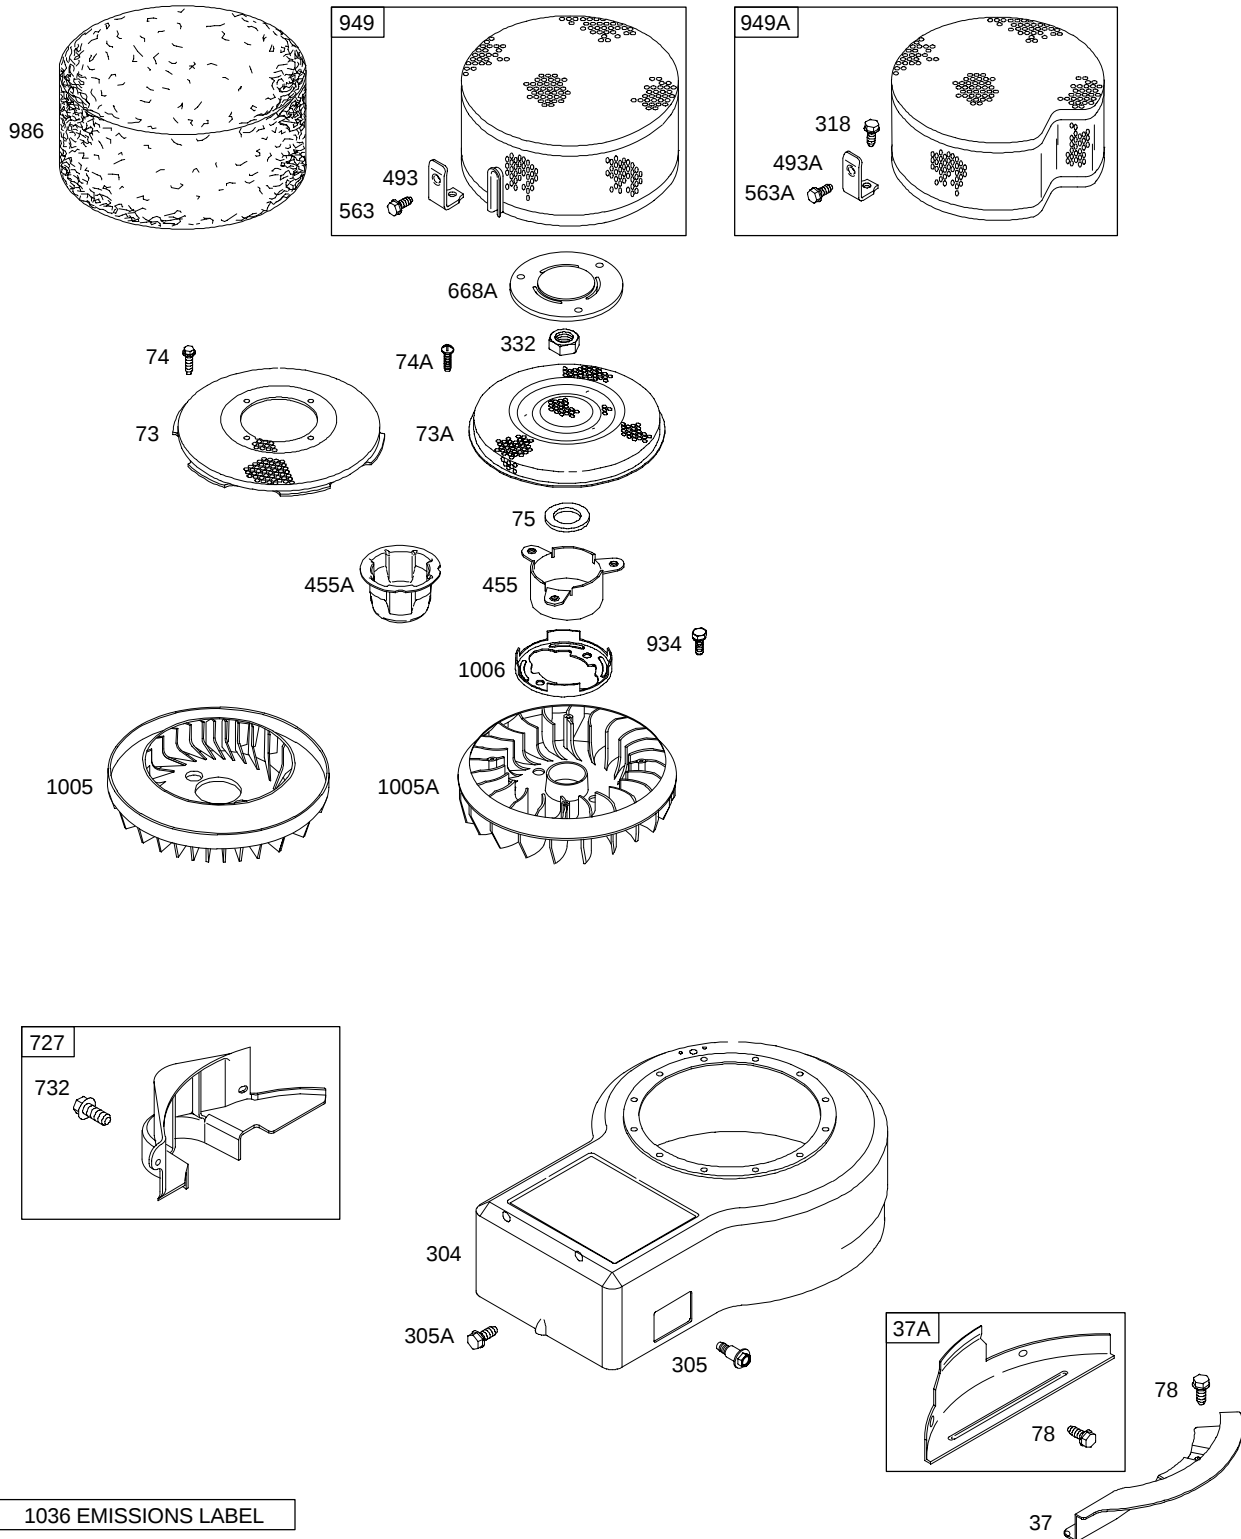


283700

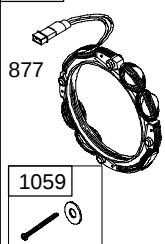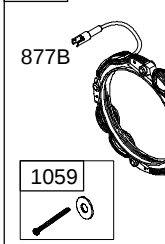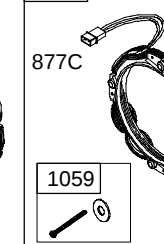DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474 877A 1059 	474A 877 1059 	474B 877B 1059 	474C 877C 1059 
578 	878 	878A 	578 

NOTE: ALL STATORS USE REFERENCE 119 MOUNTING SCREW

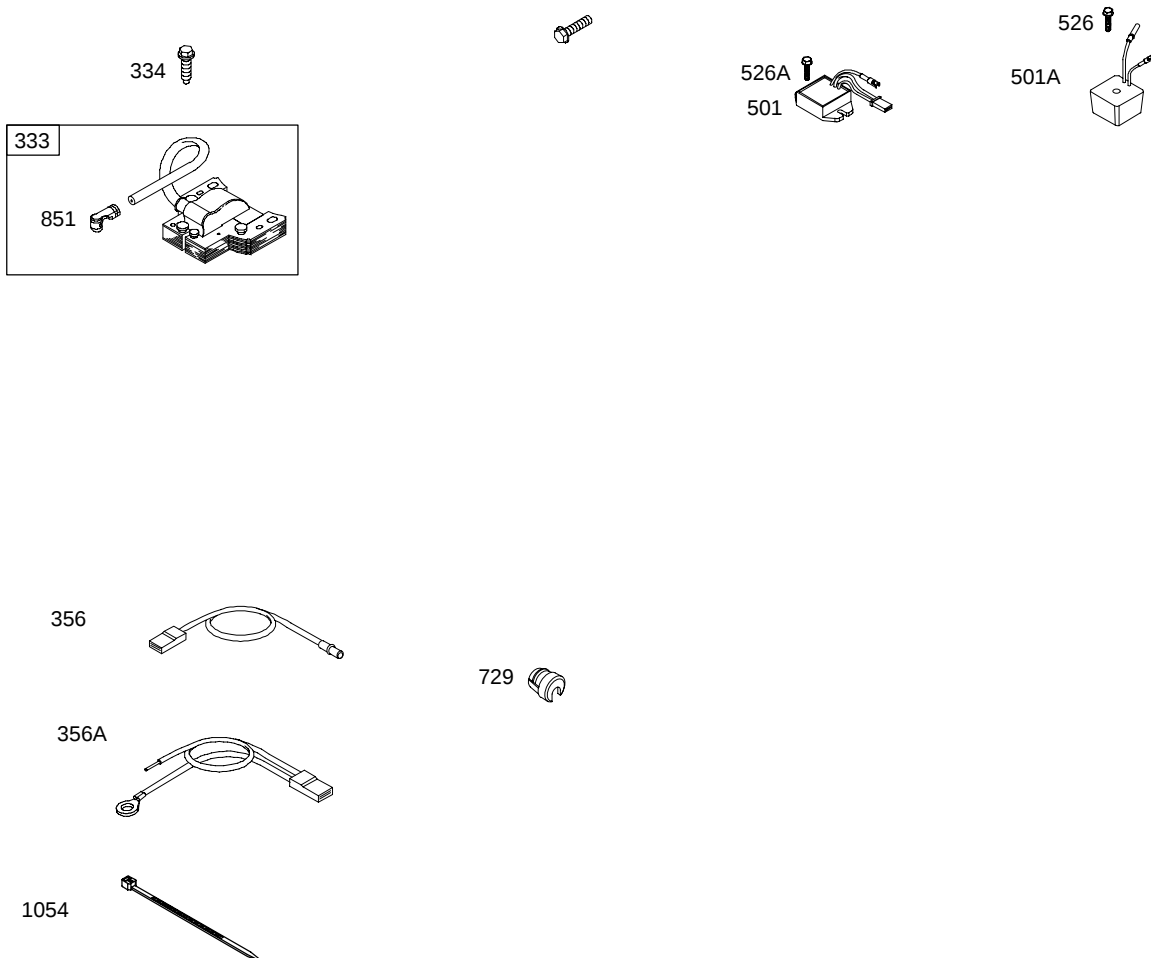

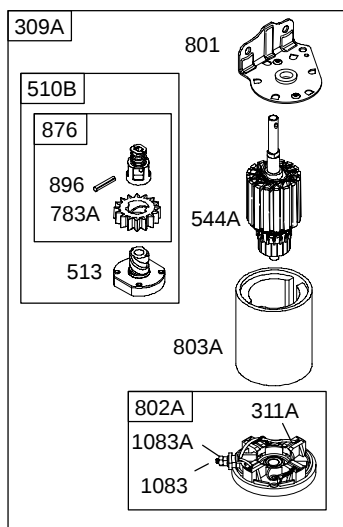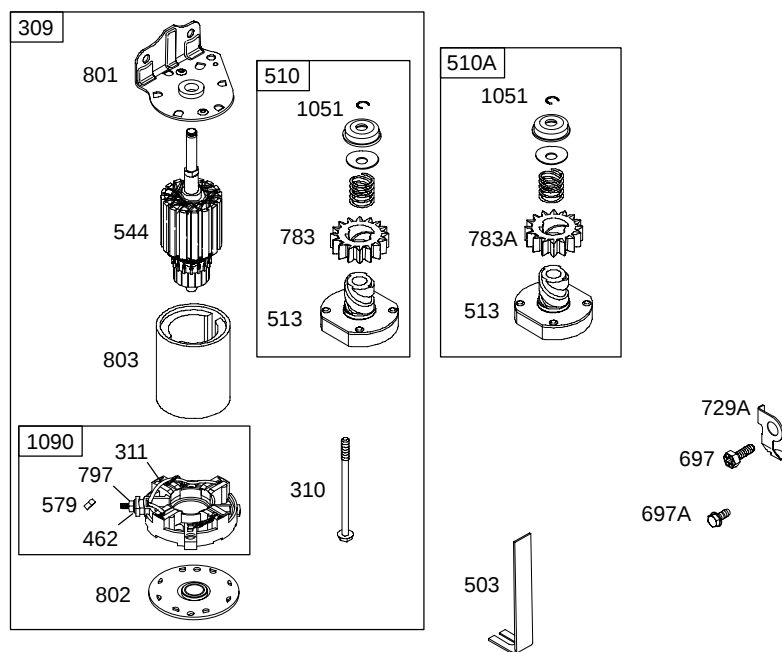

NOTE: For Replacement Starter Motor, See Reference 309.

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	496413	Cylinder Assembly	16	693944	Crankshaft (Used After Code Date 95073100).	26	696403	Ring Set (Standard) (Used After Code Date 01060600).
2	399265	Kit-Bushing/Seal (Magnetos Side)	16B	693653	Crankshaft (Used Before Code Date 95080100).			696404 Ring Set (.010" Oversize) (Used After Code Date 01060600).
3	★391086	Seal-Oil (Magnetos Side)	20	★291675	Seal-Oil (PTO Side)			696405 Ring Set (.020" Oversize) (Used After Code Date 01060600).
4	494238	Sump-Engine	22	692125	Screw (Crankcase Cover/Sump)			696406 Ring Set (.030" Oversize) (Used After Code Date 01060600).
5	494240	Head-Cylinder	23	693557	Flywheel (Steel Ring Gear)			499996 Ring Set (Standard) (Used Before Code Date 01060700).
6	691261	Washer (Cylinder Head)			----- Note ----- 693556 Flywheel (Steel Ring Gear) Used on Type No(s). 0117, 0128, 0129, 0152, 4003, 4029.			392331 Ring Set (Standard) (Chrome) (Used Before Code Date 01060700).
7	★Ø271866	Gasket-Cylinder Head	23B	693555	Flywheel (Rewind Start)			498998 Ring Set (.020" Oversize) (Used Before Code Date 01060700).
8	495735	Breather Assembly ----- Note ----- 495734 Breather Assembly Used on Type No(s). 0115, 0126, 0128.	24	222698	Key-Flywheel	27	691299	Lock-Piston Pin (Used After Code Date 95101500).
9	★Ø27803	Gasket-Breather	25	696397	Piston Assembly (Standard) (Used After Code Date 01060600).			----- Note ----- 691792 Lock-Piston Pin (Used Before Code Date 95101600).
10	691666	Screw (Breather Assembly)			696399 Piston Assembly (.020" Oversize) (Used After Code Date 01060600).			
11	692253	Tube-Breather			696400 Piston Assembly (.030" Oversize) (Used After Code Date 01060600).			
11A	691328	Tube-Breather			----- Note ----- 499284 Piston Assembly (Standard) (Used Before Code Date 01060700).			
12	★692226	Gasket-Crankcase (.015" Thick) (Standard) ----- Note ----- ★692406 Gasket-Crankcase (.005" Thick) ★692405 Gasket-Crankcase (.009" Thick)			499292 Piston Assembly (.020" Oversize) (Used Before Code Date 01060700).			
13	690904	Screw (Cylinder Head)						
14	691109	Stud (Cylinder Head)						
15	690946	Plug-Oil Drain						
15A	691680	Plug-Oil Drain Used on Type No(s). 0147, 0148, 0152, 0217, 1217.						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Ø Valve Gasket Set-Reference 1095

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
28	498319	Pin-Piston (Standard) (Used After Code Date 95101500). ----- Note ----- 299691 Pin-Piston (Standard) (Used Before Code Date 95101600).	42	494553	Keeper-Valve	65	695453	Screw (Rewind Starter) (Used After Code Date 99102400).
			43	691968	Slinger-Governor/Oil			
			45	691811	Tappet-Valve			
			46	697668	Camshaft	65A	690837	Screw (Rewind Starter) (Used Before Code Date 99102500).
			50	691711	Manifold-Intake			
			51	692284	Gasket-Intake			
			51A	272554	Gasket-Intake	66	399671	Clutch-Starter (Used Before Code Date 99102500).
			53	690227	Stud (Carburetor)	67	394897	Clutch-Housing (Used Before Code Date 99102500).
			54	690953	Screw (Intake Manifold)	68	691604	Ball-Clutch (Used Before Code Date 99102500).
			55	695130	Housing-Rewind Starter (Used After Code Date 99102400).	70	691945	Ratchet-Clutch (Used Before Code Date 99102500).
			55A	393576	Housing-Rewind Starter (Used Before Code Date 99102500).	71	691359	Cover-Ratchet (Used Before Code Date 99102500).
29	494504	Rod-Connecting (Standard) ----- Note ----- 495490 Rod-Connecting (.020" Undersize)	56	695129	Pulley-Starter (Used After Code Date 99102400).	73	691191	Screen-Rotating
			56A	295871	Pulley-Starter (Used Before Code Date 99102500).	73A	691748	Screen-Rotating
31	222299	Lock-Rod Screw (Used Before Code Date 92090700).	57	695131	Spring-Rewind Starter (Used After Code Date 99102400).	74	691627	Screw (Rotating Screen)
32	691133	Screw (Connecting Rod) (1 7/8" Long)	57A	490179	Spring-Rewind Starter (Used Before Code Date 99102500).	74A	691655	Screw (Rotating Screen)
32A	690348	Screw (Connecting Rod) (1 5/8" Long)	58	695132	Rope-Starter (Used After Code Date 99102400).	75	690582	Washer (Flywheel)
33	262246	Valve-Exhaust	58A	692188	Rope-Starter (Used Before Code Date 99102500).	78	690661	Screw (Flywheel Guard)
34	262247	Valve-Intake	59	490653	Insert-Grip	93	690602	Bushing-Throttle Shaft
35	691605	Spring-Valve (Intake)	60	490652	Grip-Starter Rope	94	498030	Kit-Idle Mixture
36	691597	Spring-Valve (Exhaust)	63	690547	Spring-Ratchet (Used Before Code Date 99102500).	94A	494383	Kit-Idle Mixture
37	690456	Guard-Flywheel	64	691920	Adapter-Ratchet Spring (Used Before Code Date 99102500).	95	691636	Screw (Throttle Valve)
37A	490429	Guard-Flywheel Used on Type No(s). 0102, 0515, 1015, 1041, 1107, 4015, 4016.				95A	690718	Screw (Throttle Valve)
40	690656	Retainer-Valve (Intake)				98	495800	Kit-Idle Speed
40A	691939	Retainer-Valve (Exhaust) ----- Note ----- 690274 Retainer-Valve (Exhaust) Used on Type No(s). 4030.				98A	694907	Kit-Idle Speed

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊗ Valve Gasket Set-Reference 1095

2432-11

Assemblies include all parts shown in frames.

10/05/2004

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
104	●690525	Pin-Float Hinge	130	690468	Valve-Throttle (LMT 111, 169)	143	499040	Nozzle-Carburetor (High Altitude)
104A	●694918	Pin-Float Hinge	130A	691750	Valve-Throttle			(LMT 162, 165, 166, 168, 169)
105	●231855	Valve-Float Needle	130B	694917	Valve-Throttle			----- Note -----
105A	●694922	Valve-Float Needle	131	494885	Kit-Throttle Shaft (LMT 111, 169)			498258 Nozzle-
106	●690577	Seat-Inlet						Carburetor
108	690464	Valve-Choke (Manual Choke)	131A	494379	Kit-Throttle Shaft			(High Altitude)
108A	692344	Valve-Choke (Choke A Matic)	131B	694909	Kit-Throttle Shaft (Nikki Carburetor)			(LMT 63, 65, 66, 108, 111, 133, 135, 136)
108B	694923	Valve-Choke	133	494381	Float-Carburetor			497737 Nozzle-
117	●690880	Jet-Main	133A	694914	Float-Carburetor			Carburetor
121	697884	Kit-Carburetor Overhaul (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	134	494788	Kit-Needle/Seat (LMT 5, 6)			(High Altitude)
		----- Note -----	137	●♦281165	Gasket-Float Bowl	146	691639	Key-Timing
		497481 Kit-Carburetor Overhaul (LMT 63, 65, 66)	137A	●♦694920	Gasket-Float Bowl	147	●497472	Jet-Pilot
		497535 Kit-Carburetor Overhaul (LMT 5, 37, 77)	141	495097	Kit-Choke Shaft (Manual Choke)			(LMT 1, 2, 4, 5, 7, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)
		499220 Kit-Carburetor Overhaul (LMT 92, 93, 96, 108, 111, 162, 165, 169)	141A	495931	Kit-Choke Shaft (Choke A Matic)	147A	●694927	Jet-Pilot
		499231 Kit-Carburetor Overhaul (LMT 97, 99, 133, 135, 136, 157, 159, 166, 168)	141B	694913	Kit-Choke Shaft	165	693148	Nut (Ring Gear)
121A	694930	Kit-Carburetor Overhaul (Nikki Carburetor)	142	●697592	Nozzle-Carburetor (Standard) (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	167	692297	Seal-Air Cleaner Nut
125	698171	Carburetor (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)			----- Note -----	173	694926	Valve-Idle Mixture
		----- Note -----			●497860 Nozzle-	176	★Ø691917	Seal-O Ring (Air Cleaner Base)
		498027 Carburetor (Gravity Feed)			Carburetor (Standard) (LMT 63, 65, 66 97, 99, 100, 133, 134, 135, 136)	179	692331	Screw (Fuel Tank Strap)
		499158 Carburetor (Pump Feed)			●498545 Nozzle-	182	690443	Bracket-Fuel Tank (Front)
125A	694941	Carburetor (Nikki)			Carburetor (Standard) (LMT 108, 111)	182A	692535	Bracket-Fuel Tank
127	●695005	Plug-Welch			●499037 Nozzle-	183	698459	Strap-Fuel Tank (Right Hand)
		----- Note -----			Carburetor (Standard) (LMT 162, 165, 169)	183A	692030	Strap-Fuel Tank (Left Hand)
		●694524 Plug-Welch (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)			●499039 Nozzle-	186	692317	Connector-Hose
127A	●694916	Plug-Welch			Carburetor (Standard) (LMT 166, 167, 168)	186A	691609	Connector-Hose
					●691434 Nozzle-	187	296004	Line-Fuel (Cut to Required Length)
					Carburetor (Standard) (LMT 92, 93, 94, 96)	187C	697907	Line-Fuel (Formed) (Cut to Required Length)
						188	691693	Screw (Control Bracket)

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Ø Valve Gasket Set-Reference 1095

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
202	691841	Link-Mechanical Governor	216	691840	Link-Choke	300	691874	Muffler
209	691278	Spring-Governor (Platinum)	216A	690574	Link-Choke	300B	391569	Muffler
		----- Note -----	222	694042	Bracket-Control	301	93768	Pipe-Muffler
		692208 Spring-Governor (Green)	222A	692002	Bracket-Control	303	690281	Elbow-Exhaust
		Used on Type No(s). 0134, 0138, 0515, 0634, 1015, 4015, 4030.	227	691374	Lever-Governor Control	304	695065	Housing-Blower (Black)
		690480 Spring-Governor (Red)	231	691636	Screw (Choke Valve)			(Used After Code Date 99102400).
		Used on Type No(s). 0101, 0102, 0119, 0120, 0126, 0128, 0140, 0147, 0148, 0149, 0152, 0153, 0156, 0160, 0167, 0217, 0517, 0604, 0667, 1101, 1107, 1156, 1167, 1217.	231A	690718	Screw (Choke Valve)			----- Note -----
		691795 Spring-Governor (Yellow)	232	691842	Spring -Governor Link			494268 Housing-Blower (Red)
		Used on Type No(s). 0159, 0161, 0166, 1137, 1166.	237	690409	Retainer-Muffler Guard			(Used Before Code Date 93071900).
		691798 Spring-Governor (Brown)	240	298090	Filter-Fuel (Red)			Used on Type No(s). 1041, 1068.
		Used on Type No(s). 0109, 0110, 0111, 0116, 0117, 0118, 0123, 0129, 0136, 0137, 0139, 0165, 0639, 1136, 1139.			----- Note -----			695065 Housing-Blower (Black)
		690576 Spring-Governor (Gold)			394358 Filter-Fuel (White)			(Used After Code Date 00022000).
		Used on Type No(s). 0124, 0131.	257	691660	Screw (Starter Clutch)			Used on Type No(s). 1041, 1068.
			263	691083	Screw (Muffler Guard Retainer)			690846 Housing-Blower (Black)
			265	691024	Clamp-Casing			(Used Before Code Date 99102500 and After Code Date 93071800).
			267	690804	Screw (Casing Clamp)			Used on Type No(s). 1041, 1068.
			268	691025	Casing-Control Wire (Cut to Required Length)	305	692198	Screw (Blower Housing)
			269	691026	Wire-Control (Cut to Required Length)	305A	692127	Screw (Blower Housing)
			270	691027	Nut (Control Wire Casing)	306	698477	Shield-Cylinder
			271	691028	Lever-Control	307	691003	Screw (Cylinder Shield)
			276	692255	Washer-Sealing	308	491490	Cover-Cylinder Head
			276A	690997	Washer-Sealing			
			287	691002	Screw (Dipstick Tube)			
			298	691808	Locknut-Muffler/Elbow			

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 Ø Valve Gasket Set-Reference 1095

2432-13

Assemblies include all parts shown in frames.

10/05/2004

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	693551	Motor–Starter (3 5/8" Housing Length) (Steel Ring Gear Only) ----- Note ----- 693552 Motor–Starter (4 3/8" Housing Length) (Steel Ring Gear Only)	322	691681	Screw (Cylinder Head Cover)	462	691261	Washer (Starter Cable)
			322A	692198	Screw (Cylinder Head Cover)	467	691668	Knob–Air Cleaner
			332	690662	Nut (Flywheel)	474	696578	Alternator (DC Only)
			333	492341	Armature–Magneto	474A	696459	Alternator (Dual Circuit)
			334	691061	Screw (Magneto Armature)	474B	696457	Alternator (Tri Circuit)
			337	802592	Plug–Spark	474C	696458	Alternator (10/16 Amp)
			344	693675	Screw (Cable Clamp)	480	690664	Screw (Tube Clamp)
			346	691661	Screw (Spark Arrestor)	493	695450	Bracket–Mounting (Debris Screen Guard) (Used After Code Date 99102400).
			349	691105	Nut (Cylinder Head Cover)	493A	692825	Bracket–Mounting (Debris Screen Guard) (Used Before Code Date 99102500).
			356	690799	Wire–Stop	501	691185	Regulator
			356A	398808	Wire–Stop	501A	691188	Regulator
			358	494241	Gasket Set–Engine	503	691532	Strap–Starter
			359	691077	Washer (Ground Terminal)	505	691251	Nut (Governor Control Lever)
			363	19203	Flywheel Puller	507	691972	Insulator
			373	691612	Nut (Ground Terminal)	510	693699	Drive–Starter (Used With Steel Ring Gear)
			383	89838	Wrench–Spark Plug	510A	696541	Drive–Starter (Used With Aluminum And Plastic Ring Gears)
			385	692198	Screw (Fuel Pump)	510B	696540	Drive–Starter
			387	808656	Pump–Fuel	513	692024	Clutch–Drive
			404	691691	Washer (Governor Crank)	520	691084	Terminal–Ground
			441	224390	Bracket–Oil Fill	523	692014	Dipstick
			445	496894	Filter–Air Cleaner Cartridge	523A	692013	Dipstick Used on Type No(s). 0139, 0165, 0639, 1139.
			449	691678	Screw (Oil Fill Bracket)			
			450	691261	Washer (Fuel Tank Bracket) (Used on Rewind Start Engines)			
					----- Note ----- 690259 Washer (Fuel Tank Bracket) (Used on Electric Start Engines)			
			455	691173	Cup–Flywheel			
			455A	695113	Cup–Flywheel			
			456	695128	Plate–Pawl Friction (Used After Code Date 99102400).			
			459	281505	Pawl–Ratchet (Used After Code Date 99102400).			
309A		Motor–Starter (For Replacement Starter Motor, See Reference 309)						
310	690323	Bolt (Starter Motor) (3 5/8" Housing Length) ----- Note ----- 691263 Bolt (Starter Motor) (4 3/8" Housing Length)						
311	497608	Brush Set						
311A	395538	Brush Set (3 5/8 Housing Length)						
318	691617	Screw (Mounting Bracket)						

★ Engine Gasket Set–Reference 358
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977
⊗ Valve Gasket Set–Reference 1095

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
524	★281370	Seal–Dipstick Tube	608	695058	Starter–Rewind	678	490817	Spacer–Rewind
525	691398	Tube–Dipstick			(Used After Code Date 99102400).			(Used Before Code Date 99102500).
		----- Note -----	608A	390391	Starter–Rewind	689A	691855	Spring–Friction
		690841 Tube–Dipstick			(Used Before Code Date 99102500).			(Used After Code Date 99102400).
		Used on Type No(s). 0139, 0165, 0639, 1139.	613	691416	Screw	691	★692407	Seal–Governor Shaft
525A	495768	Tube–Dipstick			(Muffler)	692	690572	Spring–Detent
526	690326	Screw	613A	691108	Screw	695	693109	Screw
		(Regulator)			(Muffler)			(Ring Gear)
526A	692198	Screw	614	691620	Pin–Cotter	697	690372	Screw
		(Regulator)	615	93307	Retainer–Governor Shaft			(Drive Cap)
527	690394	Clamp–Tube						(11/16" Long)
544	692034	Armature–Starter	616	692012	Crank–Governor	697A	691058	Screw
		(3 5/8" Housing Length)	621	692310	Switch–Stop			(Drive Cap)
544A	390837	Armature–Starter	628	690661	Screw			(3/4 Inches Long)
		(3 5/8" Housing Length)			(Fuel Pump Bracket)	707	690279	Nut
		----- Note -----	628A	692198	Screw			(Fuel Tank Strap)
		490309 Armature–Starter			(Fuel Pump Bracket)	709	262243	Eccentric
		(4 3/8" Housing Length)	633	690998	Seal–Choke/Throttle Shaft	718	690959	Pin–Locating
552	491986	Bushing–Governor Crank	634	●690801	Spring/Seal Assembly	725	690420	Shield–Heat
					(Manual Choke)	725A	690403	Shield–Heat
559	690661	Screw	634A	●690802	Spring/Seal Assembly	726		Gear–Ring
		(Remote Choke Stop)			(Choke A Matic)			(Steel)
562	691119	Bolt	634B	●694912	Spring/Seal Assembly			(See Reference 23 for Service)
		(Governor Control Lever)	635	66538	Boot–Spark Plug	726A	696537	Gear–Ring
			638	691075	Washer			(Aluminum)
563	695449	Screw			(Cylinder Head Cover)			(Services Plastic Ring Gear Only)
		(Debris Screen Guard)	646	690460	Brace–Air Cleaner	727	490324	Cover–Starter Drive
		(Used After Code Date 99102400).	654	690958	Nut	729	690596	Clip–Wire
563A	690859	Screw			(Air Cleaner Base)	729A	691224	Clip–Wire
		(Debris Screen Guard)	655	691734	Anchor–Rewind Spring	732	691002	Screw
		(Used Before Code Date 99102500).			(Used Before Code Date 99102500).			(Starter Drive Cover)
578	691306	Wire Assembly	668	690510	Spacer			----- Note -----
579	691029	Nut	668A	691323	Spacer			690661 Screw
		(Starter Cable)			(Rotating Screen)			(Starter Drive Cover)
592	690800	Nut	674	691058	Screw			Used on Type No(s). 0102.
		(Rewind Starter)			(Fuel Tank Bracket)	733	691658	Screw
		(Used Before Code Date 99102500).			(Used on Rewind Start Only Engines)			(Crankshaft Extension)
597	691696	Screw			----- Note -----	741	691284	Gear–Timing
		(Pawl Friction Plate)			690341 Screw	757	691714	Link–Counterweight
		(Used After Code Date 99102400).			(Fuel Tank Bracket)	758	692423	Counterweight
601	95162	Clamp–Hose			(Used on Electric Start Engines)	759	691239	Pin–Counterweight
607	691693	Screw	676	396903	Deflector–Muffler	761	691096	Screw
		(Air Cleaner Brace)	676A	393761	Deflector–Muffler			(Counterweight)
607A	690703	Screw	676B	397630	Deflector–Muffler	783	693713	Gear–Pinion
		(Air Cleaner Brace)	677	690661	Screw			(Steel Ring Gear Only)
					(Muffler Deflector)	783A	695708	Gear–Pinion
						788	690458	Bracket–Fuel Pump
						797	693167	Nut
								(Brush Retainer)

★ Engine Gasket Set–Reference 358
 ● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977
 ⚡ Valve Gasket Set–Reference 1095

2432–15

Assemblies include all parts shown in frames.

10/05/2004

283700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
801	691283	Cap-Drive	877	393456	Wire/Connector-Alternator	994	392390	Arrestor-Spark
802	691286	Cap-End				1005	695056	Fan-Flywheel (Used After Code Date 99102400).
802A	395537	Cap-End (3 5/8" Housing Length)	877A	393814	Wire/Connector-Alternator			
803	693757	Housing-Starter (3 5/8" Housing Length)	877B	393537	Wire/Connector-Alternator	1005A	691905	Fan-Flywheel (Used Before Code Date 99102500).
		----- Note ----- (4 3/8" Housing Length) (Serviced by Reference 309)	877C	399916	Wire/Connector-Alternator	1006	690452	Retainer-Fan
803A	398159	Housing-Starter (3 5/8" Housing Length)	878	691237	Harness-Alternator	1019	491255	Kit-Label
		----- Note ----- 494205 Housing-Starter (4 3/8" Housing Length)	878A	691955	Harness-Alternator	1036	696770	Label-Emissions (Used After Code Date 01093000).
810	691779	Extension-Crankshaft	883	692236	Gasket-Exhaust			----- Note ----- 695699 Label-Emissions (Used After Code Date 00070200 and Before Code Date 01100100).
832	692361	Guard-Muffler	896	691641	Pin-Drive Retainer			695036 Label-Emissions (Used After Code Date 99093000 and Before Code Date 00070300).
836	690367	Screw (Muffler Guard)	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)			694325 Label-Emissions (Used After Code Date 99010300 and Before Code Date 99100100).
842	691870	Seal-O Ring (Dipstick/Tube Assembly)	930	691904	Guard-Rewind (Used Before Code Date 99102500).			499362 Label-Emissions (Used After Code Date 97063000 and Before Code Date 99010400).
846	690371	Washer (Fuel Tank Strap)	934	691058	Screw (Fan Retainer)			499361 Label-Emissions (Used Before Code Date 97070100).
847	496415	Dipstick/Tube Assembly	949	695448	Guard-Debris Screen (Used After Code Date 99102400).	1051	691265	Ring-Retaining
847B	496367	Dipstick/Tube Assembly Used on Type No(s). 0139, 0165, 0639, 1139.	949A	397530	Guard-Debris Screen (Used Before Code Date 99102500).	1054	280275	Tie-Cable
851	493880	Terminal-Spark Plug	950	691657	Screw-Float Bowl	1058	274787	Operator's Manual
869	691802	Seat-Valve (Intake)	950A	694919	Screw-Float Bowl	1059	698516	Kit-Screw/Washer (Alternator)
870	691844	Seat-Valve (Exhaust)	955	694924	Plug-Carburetor (Idle Chamber)	1083	691626	Nut (End Cap)
871	261961	Bushing-Valve Guide ----- Note ----- 231218 Bushing-Valve Guide (Brass)	955A	694921	Plug-Carburetor (Pilot Jet)	1083A	690958	Nut (End Cap) (Serrated)
875	696129	Base-Air Cleaner	957	493988	Cap-Fuel Tank	1090	497605	Retainer-Brush
876	696539	Kit-Pinion Spring	958	698183	Valve-Fuel Shut Off	1091	691333	Cap-Limiter
			967	272403	Filter-Pre Cleaner	1095	498539	Gasket Set-Valve
			968	691916	Cover-Air Cleaner	1119	691183	Screw (Alternator)
			971	691108	Screw (Air Cleaner Base)			
			972	390225	Tank-Fuel			
			975	495933	Bowl-Float			
			975A	694908	Bowl-Float			
			977	690192	Gasket Set-Carburetor			
			977A	694931	Gasket Set-Carburetor			
			986	271735	Filter-Debris			
			987	691326	Seal-Throttle Shaft			
			987B	692001	Seal-Throttle Shaft			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
Ø Valve Gasket Set-Reference 1095