



284H00

Illustrated Parts List

Model Series

284H00

TYPE NUMBERS
0110 Through 0135.

TABLE OF CONTENTS


Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	5
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	7
Ignition	7
Intake Manifold	3
Kit - Carburetor Overhaul	4
Lubrication	3
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

284H00











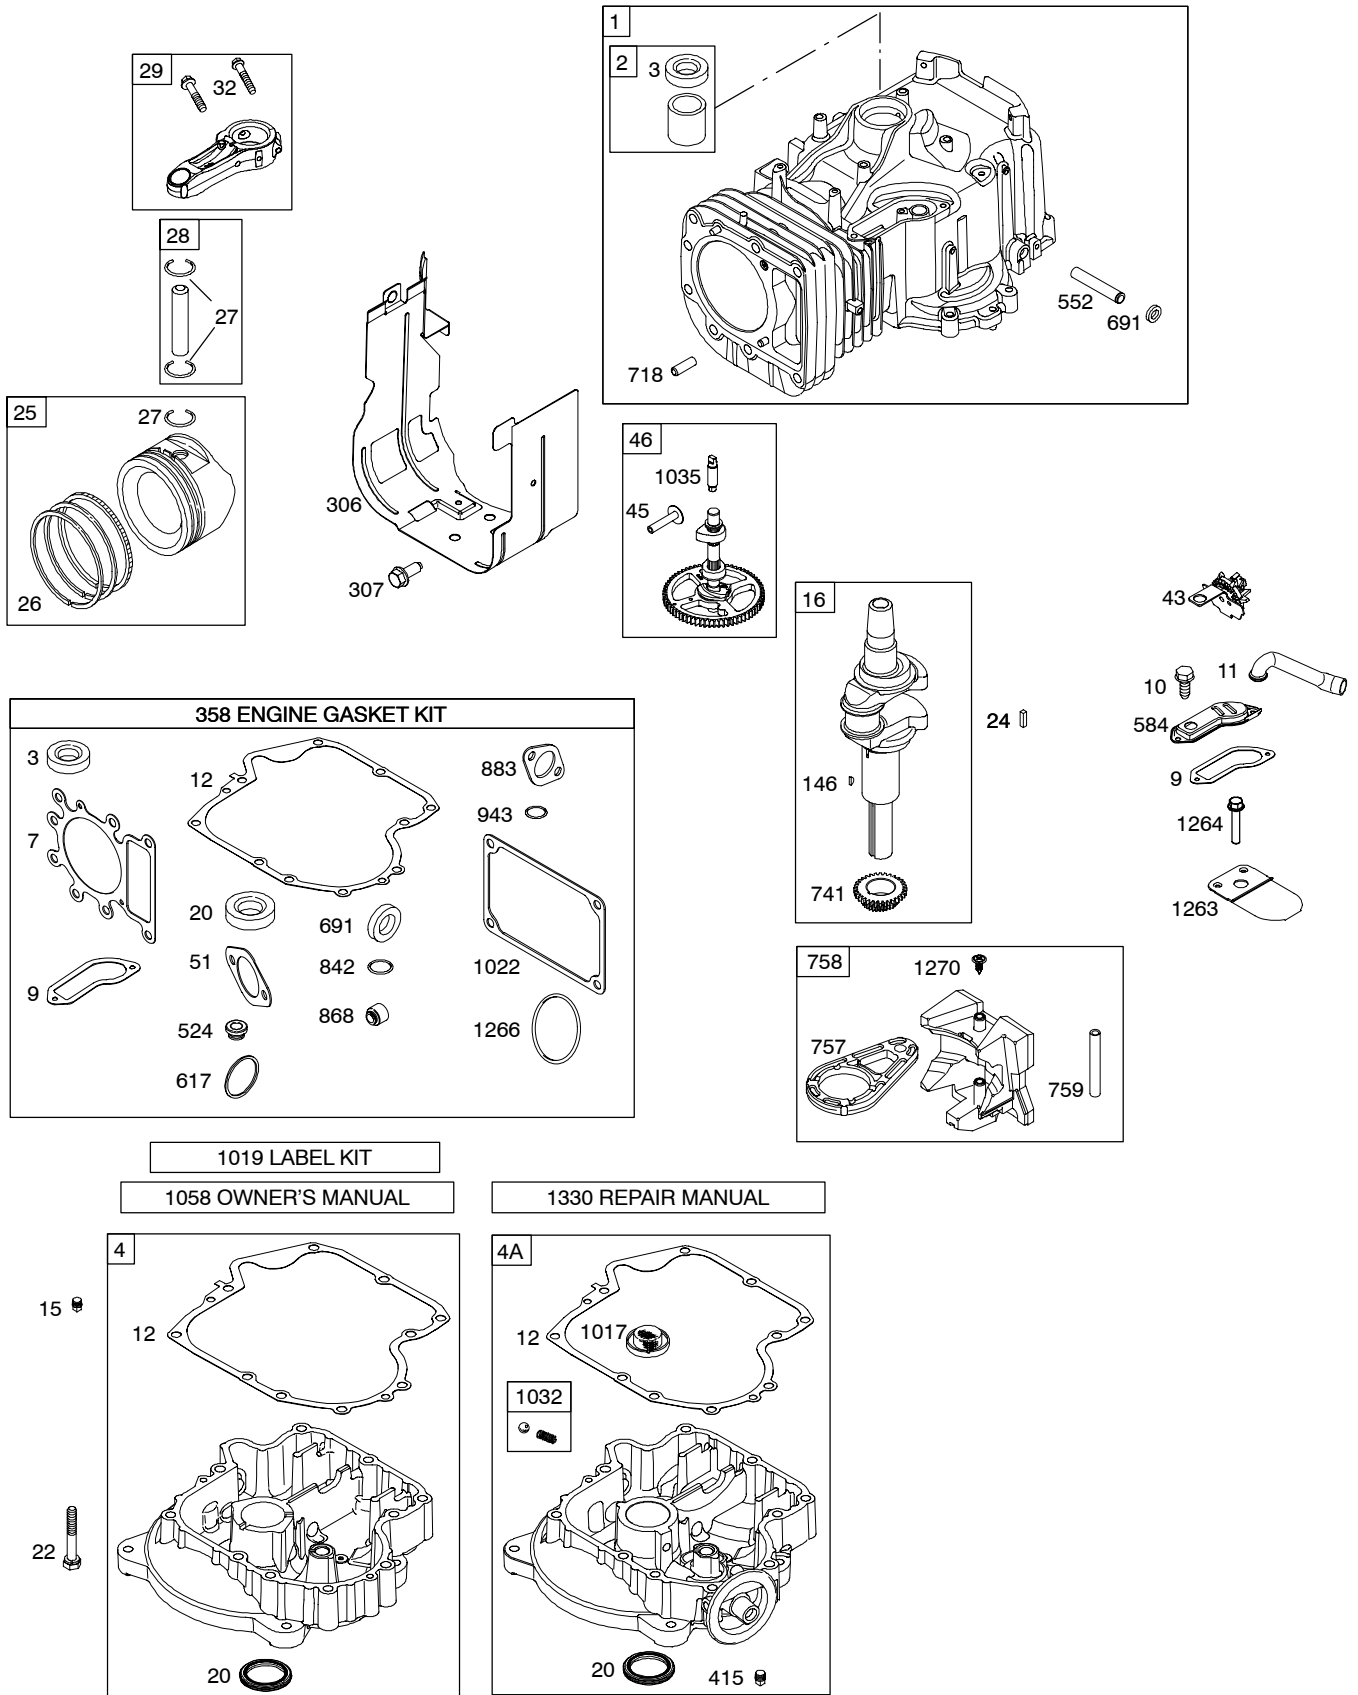


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.





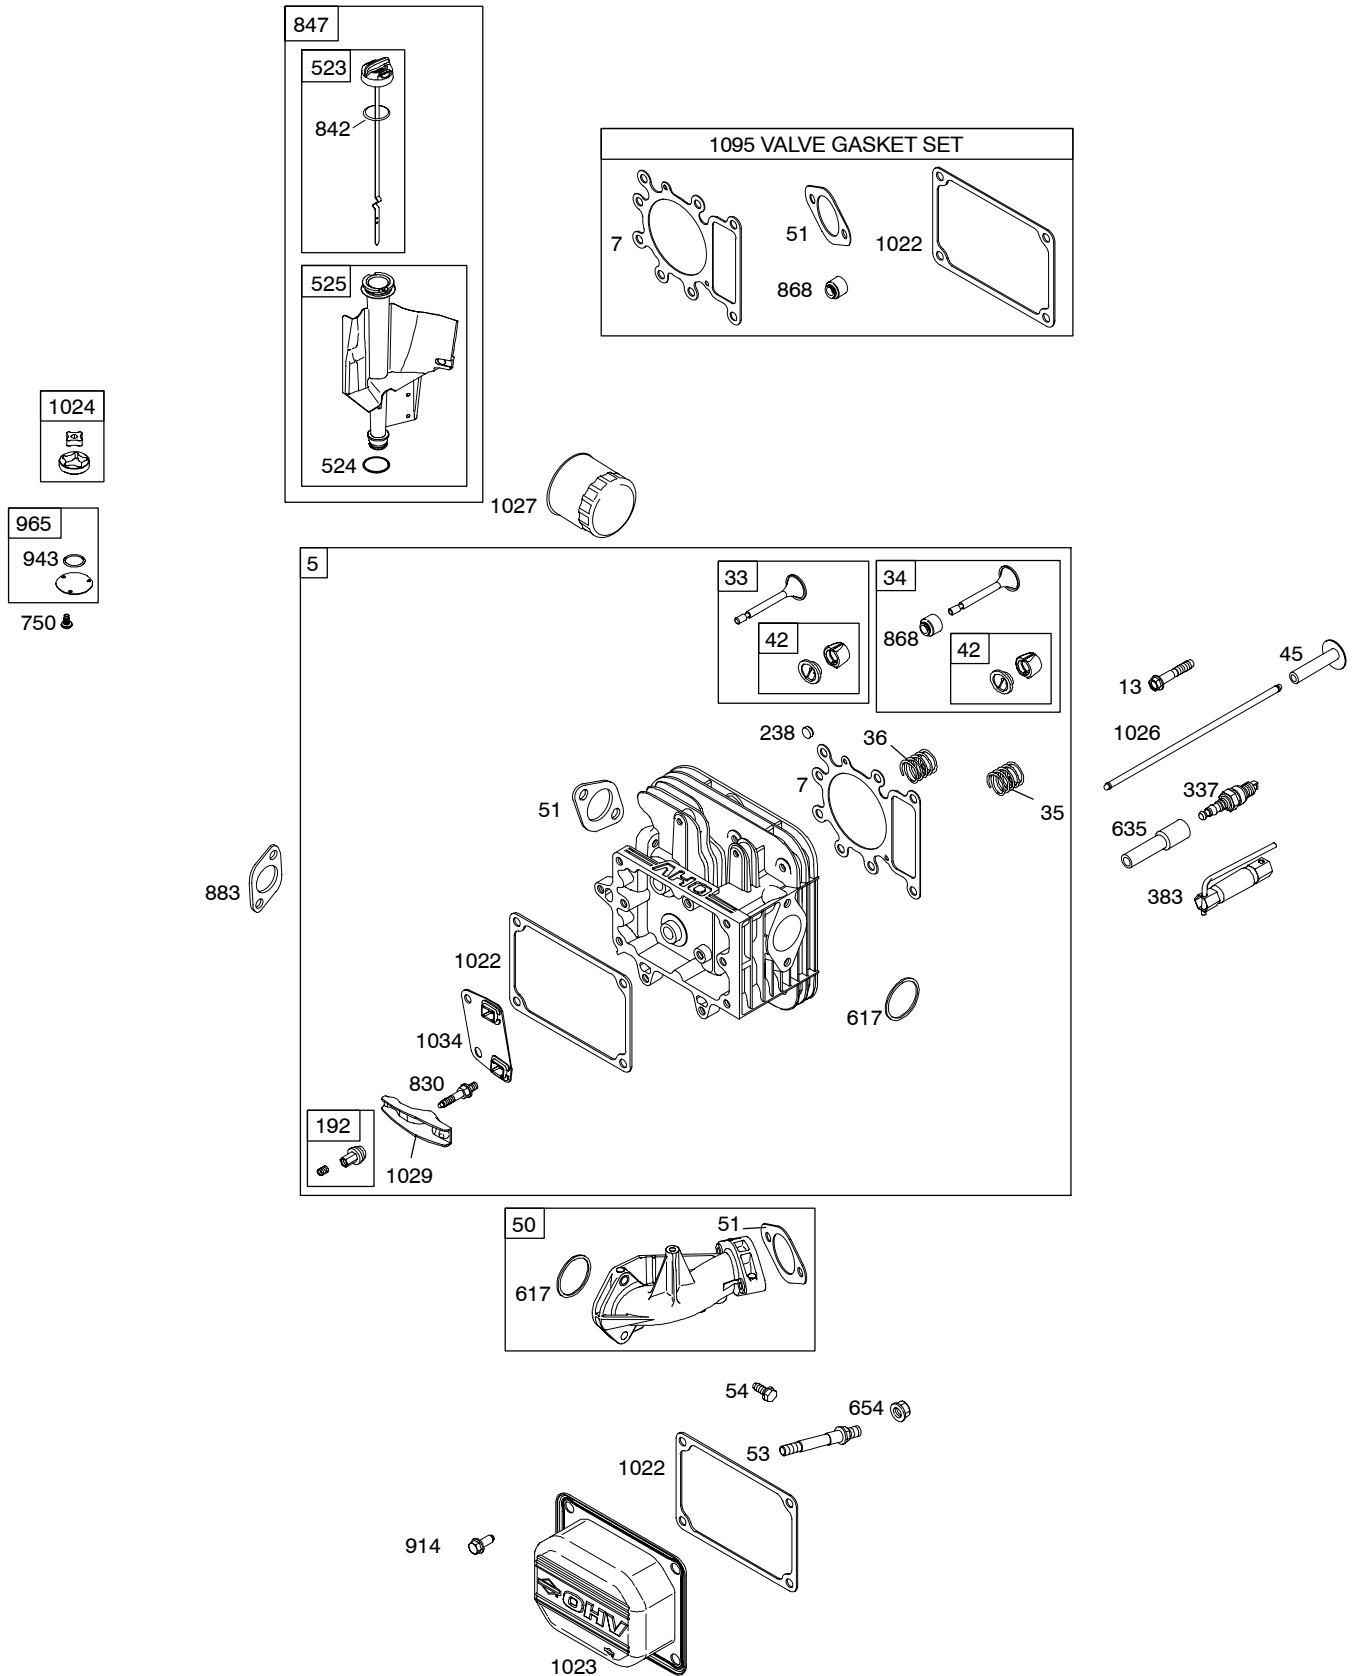


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.








284H00

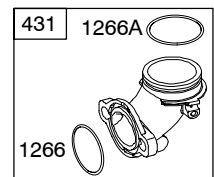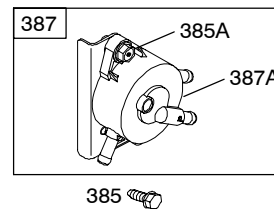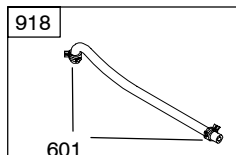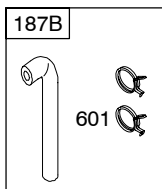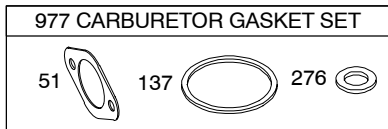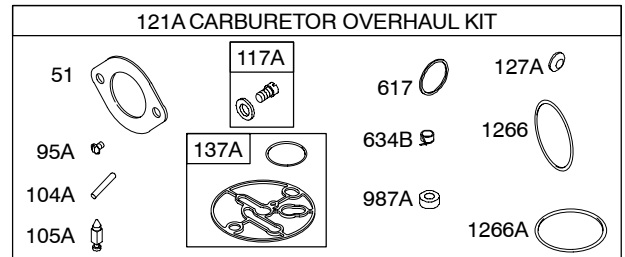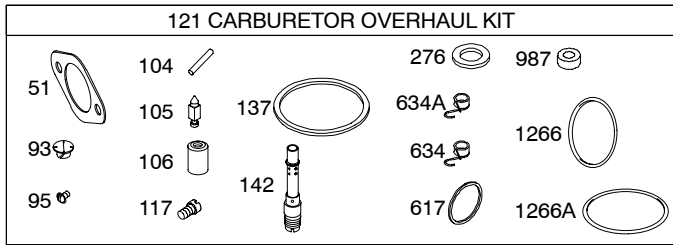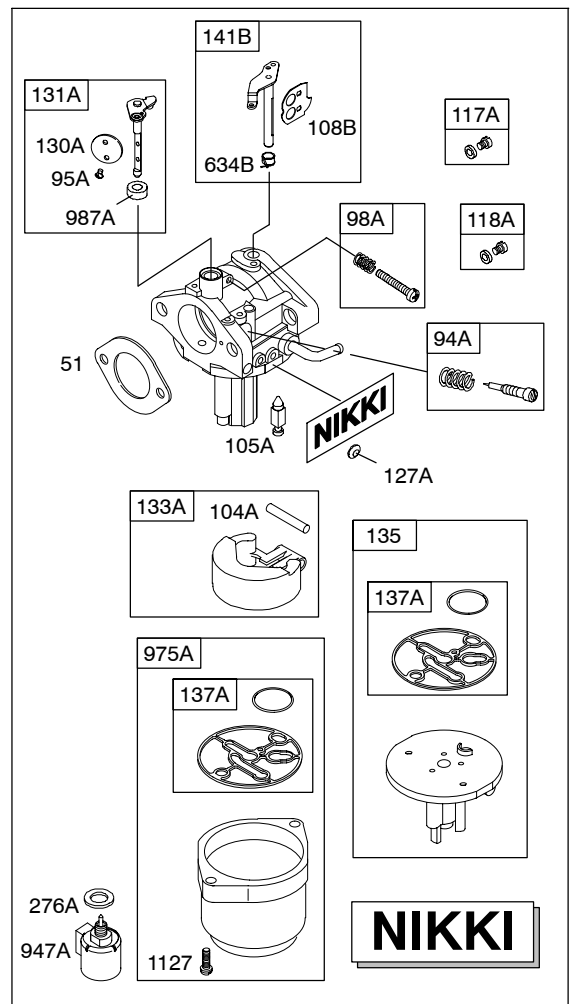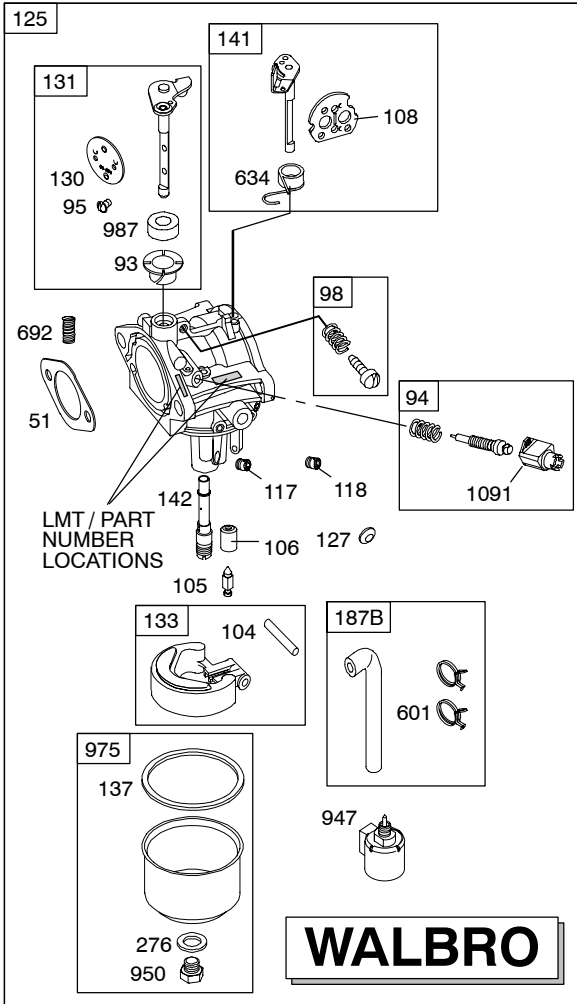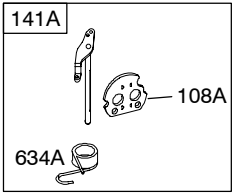

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

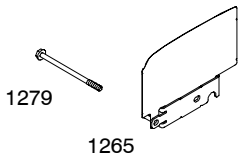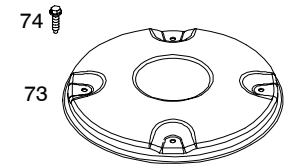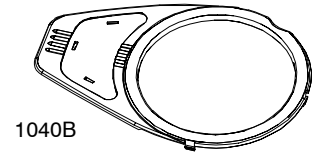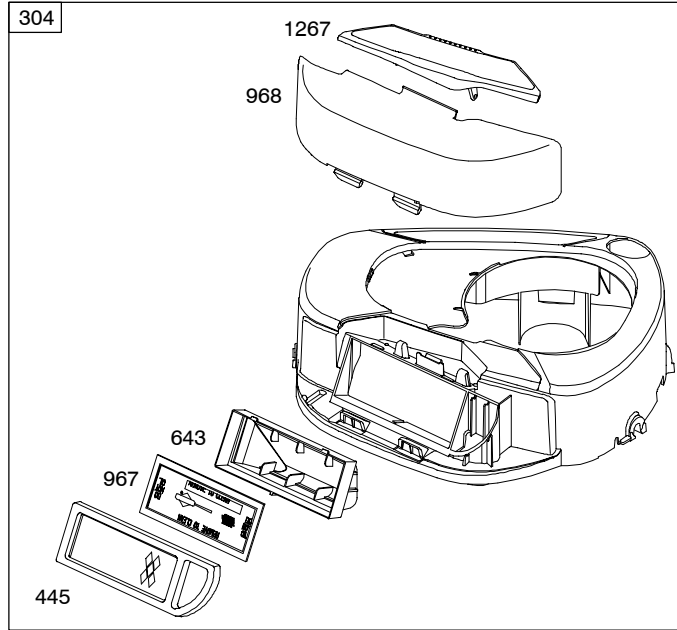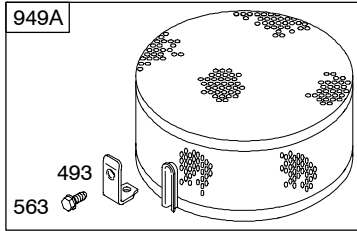


1036 EMISSION LABEL

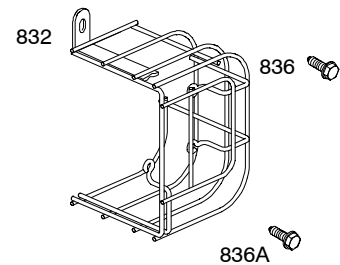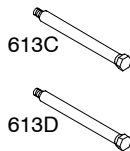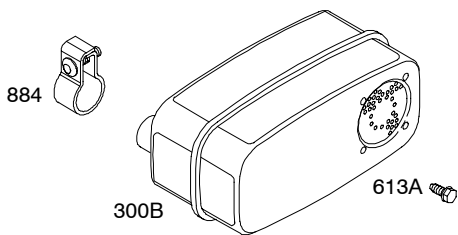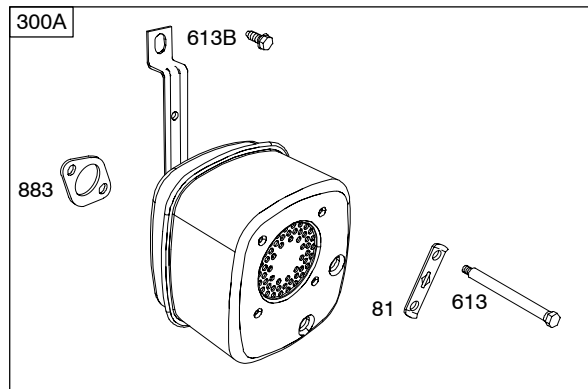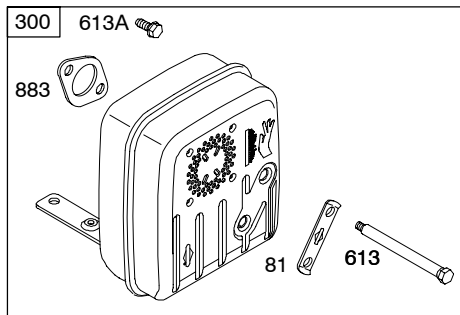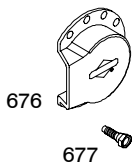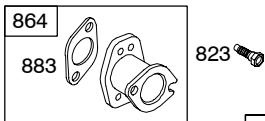












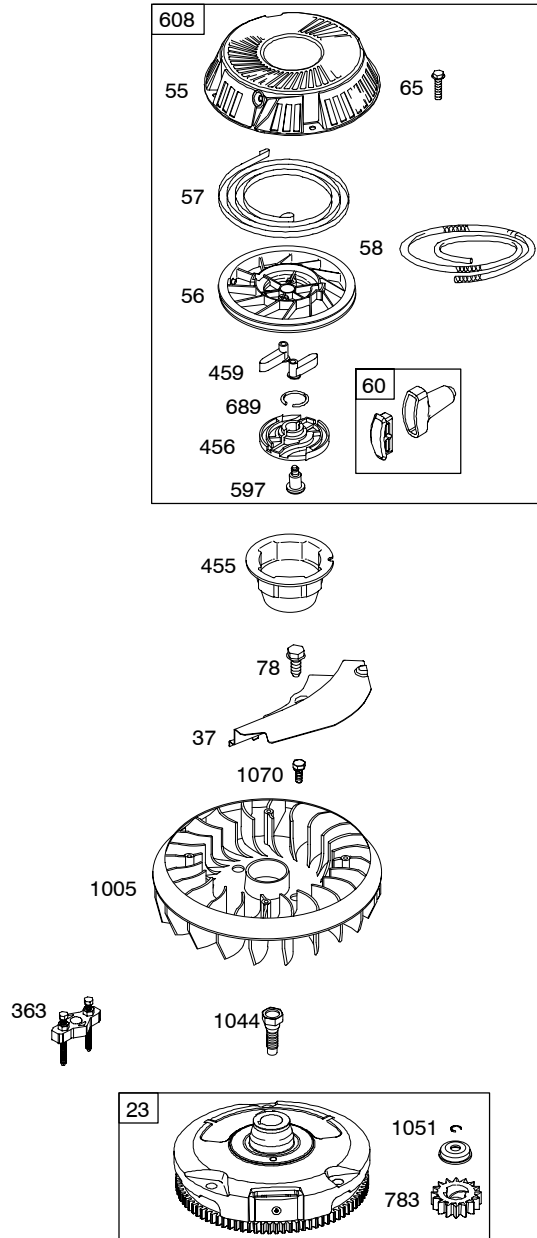Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10 AMP
474	474A  1059	474B  1059	474C  1059
877A 	877 	877B 	877C 
578 	878 	878A 	578 





334 



NOTE: All stators use a No. 1119 mounting screw. 
NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

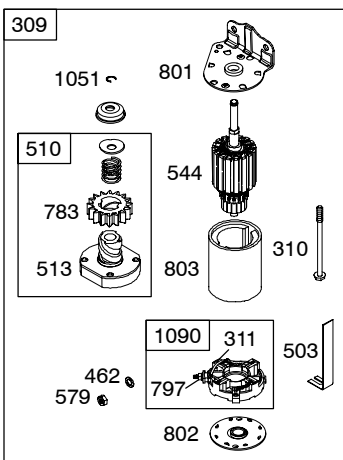

729A 
697 

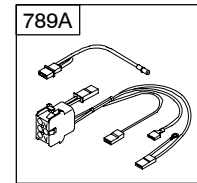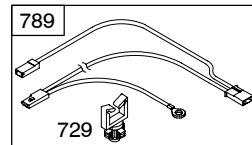



521 

356 

1054 

616 

404 
614 

216 


202 

232 

268 

269 

271 

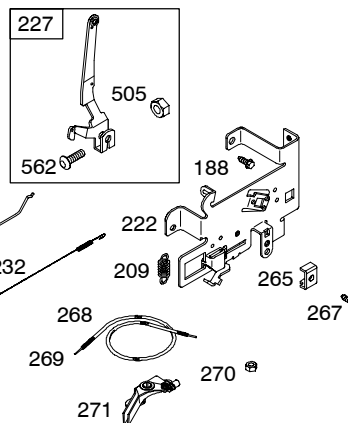

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	24	222698	Key-Flywheel	42	499586	Keeper-Valve
2	399265	Kit-Bushing/Seal (Magneto Side)	25	698371	Piston Assembly (Standard)	43	691968	Slinger-Governor/Oil
3	★391086	Seal-Oil (Magneto Side)			----- Note -----	45	690564	Tappet-Valve
4	697106	Sump-Engine Used on Type No(s). 0110, 0111, 0115, 0131, 0132.			698393 Piston Assembly (.010" Oversize)	46	790400	Camshaft
4A	697188	Sump-Engine Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130.			698394 Piston Assembly (.020" Oversize)	50	690193	Manifold-Intake
5	698148	Head-Cylinder			698395 Piston Assembly (.030" Oversize)	51★△●692137		Gasket-Intake
7	★△273280	Gasket-Cylinder Head			698396 Ring Set (.010" Oversize)	53	690227	Stud (Carburetor)
9	★697109	Gasket-Breather			698397 Ring Set (.020" Oversize)	54	691148	Screw (Intake Manifold)
10	697157	Screw (Breather Assembly)			698398 Ring Set (.030" Oversize)	55	695130	Housing-Rewind Starter
11	697113	Tube-Breather	26	698375	Ring Set (Standard)	56	695129	Pulley-Starter
12	★697110	Gasket-Crankcase (.015" Thick)(Standard)			----- Note -----	57	695131	Spring-Rewind Starter
13	690360	Screw (Cylinder Head)			698396 Ring Set (.010" Oversize)	58	695132	Rope-Starter
15	690946	Plug-Oil Drain (Square Head)	27	698469	Lock-Piston Pin	60	494212	Grip-Starter Rope
16	697127	Crankshaft	28	697099	Pin-Piston (Standard)	65	695453	Screw (Rewind Starter)
20	★690947	Seal-Oil (PTO Side)			697263 Rod-Connecting (.020" Undersize)			----- Note -----
22	692125	Screw (Crankcase Cover/Sump)	29	697126	Rod-Connecting (Standard)			697725 Screw (Rewind Starter) Used on Type No(s). 0116.
23	693556	Flywheel Used on Type No(s). 0101, 0105, 0110, 0111, 0114, 0116, 0118, 0119, 0121, 0125, 0126, 0129, 0130, 0131, 0132. ----- Note -----			----- Note -----	73	697133	Screen-Rotating
		790835 Flywheel (Used After Code Date 04072800) Used on Type No(s). 0113.			697263 Rod-Connecting (.020" Undersize)	74	697897	Screw (Rotating Screen)
		693556 Flywheel (Used Before Code Date 04072900) Used on Type No(s). 0113.	32	692852	Screw (Connecting Rod)	78	691003	Screw (Flywheel Guard)
		693557 Flywheel Used on Type No(s). 0115, 0117.	33	695760	Valve-Exhaust	81	691178	Lock-Muffler Screw
			34	695761	Valve-Intake	93	●690602	Bushing-Throttle Shaft
			35	691279	Spring-Valve (Intake)	94	498030	Kit-Idle Mixture
			36	691279	Spring-Valve (Exhaust)	94A	695425	Kit-Idle Mixture
			37	697108	Guard-Flywheel Used on Type No(s). 0105, 0110, 0111, 0113, 0114, 0117, 0118, 0119, 0125, 0126, 0129. ----- Note -----	95	●691636	Screw (Throttle Valve)
					697352 Guard-Flywheel Used on Type No(s). 0115, 0116, 0130, 0131.	95A	690718	Screw (Throttle Valve)
						98	495800	Kit-Idle Speed
						98A	695408	Kit-Idle Speed
						104	●690525	Pin-Float Hinge
						104A	●694918	Pin-Float Hinge
						105	●231855	Valve-Float Needle
						105A	●696136	Valve-Float Needle
						106	●690577	Seat-Inlet (Gravity Feed)
								----- Note -----
								691780 Seat-Inlet (Pump Feed)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
108	690464	Valve-Choke (Walbro Carburetor Part No. 697204)	137	●281165	Gasket-Float Bowl	240	298090	Filter-Fuel (Red, 150 Microns) Used on Type No(s). 0114.
108A	692344	Valve-Choke (696179, 696181, 697202, 697203, 697206)	137A	●698781	Gasket-Float Bowl			----- Note -----
108B	695419	Valve-Choke	141	495097	Kit-Choke Shaft (Walbro Carburetor Part No. 697204)			394358 Filter-Fuel (White, 75 Microns) Used on Type No(s). 0101, 0105, 0113, 0115, 0116, 0117, 0121, 0125, 0126, 0130.
117	●694352	Jet-Main (Standard)	141A	495931	Kit-Choke Shaft (696179, 696181, 697202, 697203, 697206)	240B	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating) Used on Type No(s). 0110, 0111, 0118, 0119, 0129, 0131, 0132, 0135.
117A	●699457	Jet-Main (Standard)	141B	698778	Kit-Choke Shaft			
118	697228	Jet-Main (High Altitude)	142	●697140	Nozzle-Carburetor (Standard)			
118A	699458	Jet-Main (High Altitude)	146	691639	Key-Timing			
121	697241	Kit-Carburetor Overhaul	187	791766	Line-Fuel (Cut To Required Length)			
121A	699521	Kit-Carburetor Overhaul (Nikki Carburetor)	187B	791805	Line-Fuel (Formed)(10-1/4 Inches Long)(Cut to Required Length)			
125	791888	Carburetor (Gravity Feed)(Use to replace pump and gravity feed Walbro carburetors) (Used After Code Date 05063000)	188	691693	Screw (Control Bracket)	265	691024	Clamp-Casing
		----- Note -----	192	691986	Adjuster-Rocker Arm	267	690804	Screw (Casing Clamp)
		698445 Carburetor (Gravity Feed)(Use to replace pump and gravity feed Walbro carburetors) (Used Before Code Date 05070100)	202	691841	Link-Mechanical Governor	268	691025	Casing-Control Wire (Cut To Required Length)
			209	692208	Spring-Governor Used on Type No(s). 0101, 0110, 0114, 0116, 0117, 0118, 0119, 0125, 0126, 0130, 0132, 0135.	269	691026	Wire-Control (Cut To Required Length)
					----- Note -----	270	691027	Nut (Control Wire Casing)
					690576	271	691028	Lever-Control
					Spring-Governor Used on Type No(s). 0111.	276	●692255	Washer-Sealing
					690480	276A	695410	Washer-Sealing
					Spring-Governor Used on Type No(s). 0105, 0129, 0131.	300	697349	Muffler Used on Type No(s). 0116, 0119, 0121, 0135.
					691795	300A	698356	Muffler Used on Type No(s). 0114, 0117, 0118, 0126, 0129, 0130, 0132.
					Spring-Governor Used on Type No(s). 0105, 0129, 0131.	300B	498984	Muffler Used on Type No(s). 0113.
			216	691840	Link-Choke			
			222	694042	Bracket-Control			
			227	691374	Lever-Governor Control (Standard)			
			232	691842	Spring-Governor Link			
			238	691843	Cap-Valve			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	698804	Housing-Blower (Black) (Used After Code Date 02081100) Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129, 0135. ----- Note ----- 697784 Housing-Blower (Black) (Used Before Code Date 02081200) Used on Type No(s). 0110, 0114, 0117. 698599 Housing-Blower (Black) Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132. 790929 Housing-Blower (Red) Used on Type No(s). 0101, 0105, 0113, 0131.	356	697089	Wire-Stop	474C	696458	Alternator (10 Amp Circuit) Used on Type No(s). 0121.
			358	697151	Gasket Set-Engine			
			363	19203	Puller-Flywheel	493	695450	Bracket-Mounting Used on Type No(s). 0116.
			383	89838	Wrench-Spark Plug	501	691188	Regulator ----- Note ----- 691185 Regulator Used on Type No(s). 0121.
			385	694476	Screw (Fuel Pump)			
			385A	690297	Screw (Fuel Pump)			
			387	697090	Pump-Fuel (Includes Mounting Bracket) Used on Type No(s). 0110, 0111, 0113, 0116, 0118, 0119, 0125, 0129, 0131, 0132, 0135.	503	691532	Strap-Starter
			387A	808656	Pump-Fuel	505	691251	Nut (Governor Control Lever)
			404	691691	Washer (Governor Crank)	510	693699	Drive-Starter
			415	690283	Plug (Sump) Used on Type No(s). 0115.	513	692024	Clutch-Drive
			431	697122	Elbow-Intake	521	690581	Shield-Cable
			445	698083	Filter-Air Cleaner Cartridge (Non Washable)	523	699908	Dipstick
			455	695113	Cup-Flywheel	524	★691032	Seal-Dipstick Tube
			456	695128	Plate-Pawl Friction	525	697184	Tube-Dipstick Used on Type No(s). 0101, 0105, 0114, 0115, 0117, 0121, 0126, 0130. ----- Note ----- 697085 Tube-Dipstick Used on Type No(s). 0110, 0111, 0113, 0116, 0118, 0119, 0125, 0129, 0131, 0132, 0135.
			459	281505	Pawl-Ratchet			
305	697102	Screw (Blower Housing)	462	691261	Washer (Starter Cable)	526	697088	Screw (Regulator) ----- Note ----- 697348 Screw (Regulator) Used on Type No(s). 0121.
305A	697103	Screw (Blower Housing)	474	696578	Alternator (DC Only) Used on Type No(s). 0117.			
306	697107	Shield-Cylinder	474A	696459	Alternator (Dual Circuit) Used on Type No(s). 0115.	544	692034	Armature-Starter
307	691003	Screw (Cylinder Shield)	474B	696457	Alternator (Tri Circuit) Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0116, 0118, 0119, 0125, 0126, 0129, 0130, 0131, 0132, 0135.	552	697144	Bushing-Governor Crank
309	693551	Motor-Starter				562	691119	Bolt (Governor Control Lever)
310	690323	Screw (Starter Motor)						
311	497608	Brush Set						
333	492341	Armature-Magneto						
334	691061	Screw (Magneto Armature)						
337	491055	Plug-Spark (Standard) Used on Type No(s). 0101, 0110, 0114, 0115, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130, 0132, 0135. ----- Note ----- 691043 Plug-Spark (Standard) Used on Type No(s). 0105, 0111, 0113, 0131.						

★ Included in Engine Gasket Set-Ref. No.358.
● Included in Carburetor Overhaul Kit-Ref. No. 121or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.
△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
563	695449	Screw (Debris Screen Guard) Used on Type No(s). 0116.	689	691855	Spring-Friction Used on Type No(s). 0116.	847	790442	Dipstick/Tube Assembly Used on Type No(s). 0101, 0105, 0114, 0115, 0117, 0121, 0126, 0130.
578	692306	Wire Assembly (Alternator to Regulator) Used on Type No(s). 0115, 0121.	691	★692407	Seal-Governor Shaft			----- Note -----
579	691029	Nut (Starter Cable)	692	690572	Spring-Detent			790443 Dipstick/Tube Assembly Used on Type No(s). 0110, 0111, 0113, 0116, 0118, 0119, 0125, 0129, 0131, 0132, 0135.
584	697112	Cover-Breather Passage	697	690372	Screw (Drive Cap)	851	692424	Terminal-Spark Plug
597	691696	Screw (Pawl Friction Plate)	718	690959	Pin-Locating	864	697346	Adapter-Muffler Used on Type No(s). 0114, 0116, 0117, 0118, 0119, 0121, 0126, 0129, 0130, 0132, 0135.
601	95162	Clamp-Hose	729	691335	Clip-Wire (Wire Saddle)			
608	695058	Starter-Rewind Used on Type No(s). 0115, 0116.	741	697128	Gear-Timing			
613	691416	Screw (Muffler)	750	790832	Screw (Oil Pump Cover)			
613A	690297	Screw (Muffler)	757	697607	Link-Counterweight			
613B	691678	Screw (Muffler)	758	697134	Counterweight			
613C	698941	Screw (Muffler) Used on Type No(s). 0125.	759	697392	Pin-Counterweight			
613D	691416	Screw (Muffler)	783	693713	Gear-Pinion (DC)(10-16 AMP)			
614	691620	Pin-Cotter	789	692037	Harness-Wiring Used on Type No(s). 0101, 0113, 0114, 0115, 0116, 0117, 0119, 0121, 0125, 0135.			
616	692012	Crank-Governor	789A	698329	Harness-Wiring Used on Type No(s). 0105, 0110, 0111, 0118, 0126, 0129, 0130, 0131, 0132.			
617	★692138	Seal-O Ring (Intake Manifold)	797	693167	Nut (Brush Retainer)			
634	690801	Spring/Seal Assembly (Walbro Carburetor Part No. 697204)	801	691283	Cap-Drive			
634A	690802	Spring/Seal Assembly (696179, 696181, 697202, 697203, 697206)	802	691286	Cap-End			
634B	698779	Spring/Seal Assembly	803		Housing-Starter (Not Serviced Separately, Order Starter Motor 693551)			
635	691909	Boot-Spark Plug	823	698941	Screw (Muffler Adapter)			
643	698401	Retainer-Air Filter	830	691095	Stud-Rocker Arm			
654	690958	Nut (Carburetor)	832	790244	Guard-Muffler Used on Type No(s). 0130.			
676	393761	Deflector-Muffler Used on Type No(s). 0113, 0116, 0119, 0126, 0129, 0130, 0135.	836	691676	Screw (Muffler Guard) Used on Type No(s). 0130.			
677	690661	Screw (Muffler Deflector)	836A	690367	Screw (Muffler Guard) Used on Type No(s). 0130.			
			842	★691031	Seal-O Ring (Dipstick Tube)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
878	691237	Harness-Alternator (Alternator to Regulator) Used on Type No(s). 0115.	968	697084	Cover-Air Cleaner (Black) Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129, 0135.	1024	499054	Pump-Oil Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0121, 0125, 0126, 0129, 0130, 0135.
878A	691955	Harness-Alternator (Alternator to Regulator) Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0116, 0118, 0119, 0125, 0126, 0129, 0130, 0131, 0132, 0135.			----- Note ----- 697446 Cover-Air Cleaner (Red) Used on Type No(s). 0101, 0105, 0113.	1026	692003	Rod-Push (Intake) ----- Note ----- 692011 Rod-Push (Exhaust)
883	★692236	Gasket-Exhaust			698403 Cover-Air Cleaner (Black) Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132.	1027	492932	Filter-Oil
884	691956	Clamp-Muffler	975	495933	Bowl-Float	1029	691751	Arm-Rocker
914	691108	Screw (Rocker Cover)	975A	699502	Bowl-Float	1032	491710	Ball-Oil Pump
918	791851	Hose-Vacuum (Used After Code Date 05063000) ----- Note ----- 697091 Hose-Vacuum (Used Before Code Date 05070100)	977	690192	Gasket Set-Carburetor	1034	690822	Guide-Push Rod
			987	●691326	Seal-Throttle Shaft	1035	693784	Shaft-Pump (Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer))
943	★690589	Seal-O Ring (Oil Pump Cover)	987A	●698777	Seal-Throttle Shaft	1036		
947	694393	Solenoid-Fuel	1005	697111	Fan-Flywheel Used on Type No(s). 0101, 0105, 0110, 0111, 0113, 0114, 0117, 0118, 0119, 0125, 0126, 0129, 0135.	1036A	698979	Label-Emissions
947A	699915	Solenoid-Fuel			----- Note ----- 699043 Fan-Flywheel Used on Type No(s). 0115, 0116, 0130, 0131, 0132.	1040B	699852	Plate-Trim Used on Type No(s). 0101, 0121, 0130, 0131, 0132.
949A	695448	Guard-Debris Screen Used on Type No(s). 0116.	1017	690770	Screen-Oil Pump	1044	698139	Screw (Flywheel)
950	691657	Screw-Float Bowl	1019	699196	Kit-Label	1051	691265	Ring-Retaining
965	499613	Cover-Oil Pump Used on Type No(s). 0101, 0105, 0113, 0114, 0116, 0117, 0118, 0119, 0125, 0126, 0129, 0135.	1022	★△272475	Gasket-Rocker Cover	1054	280275	Tie-Cable
967	697015	Filter-Pre Cleaner	1023	791079	Cover-Rocker (Used After Code Date 05013100) ----- Note ----- 692492 Cover-Rocker (Used Before Code Date 05020100) Used on Type No(s). 0131.	1058	276344	Operator's Manual
						1059	698516	Kit-Screw/Washer
						1070	690372	Screw (Flywheel Fan)
						1090	691293	Retainer-Brush
						1091	691333	Cap-Limiter
						1095	691581	Gasket Set-Valve
						1119	691183	Screw (Alternator)
						1127	695407	Screw (Float Bowl)
						1263	697124	Reed-Breather
						1264	697104	Screw (Breather Reed)
						1265	697125	Support-Blower Housing

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

284H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1266	★●691917	Seal-O Ring (Intake Elbow)	1267	697135	Latch-Blower Housing (Black) Used on Type No(s). 0110, 0111, 0114, 0117, 0118, 0119, 0125, 0126, 0129, 0135.	1270	697156	Plug-AVS Counterweight
1266A	●697123	Seal-O Ring (Intake Elbow)			----- Note ----- 697419 Latch-Blower Housing (Black) Used on Type No(s). 0115, 0116, 0121, 0130, 0131, 0132. 697424 Latch-Blower Housing (Red) Used on Type No(s). 0101, 0105, 0113.	1279	691108	Screw (Blower Housing Support)
						1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.