

28D700

Illustrated Parts List

Model Series

28D700

TYPE NUMBERS
0025 through 1148.

TABLE OF CONTENTS










Air Cleaner	4
Alternator	8
Blower Housing/Shrouds	7
Cams	2
Carburetor	3
Controls	5
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	9
Flywheel	6
Fuel Tank	5
Governor Spring	5
Head	2
Ignition	8
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Valve	2
Muffler	4
Oil	2
Piston Group	2
Rewind	6
Valves	2



PRINTED IN U.S.A.








COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

28D700

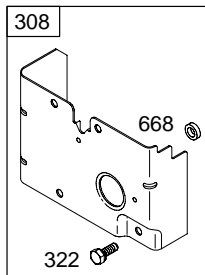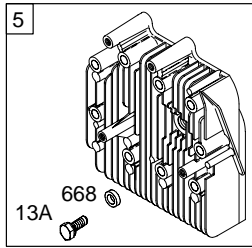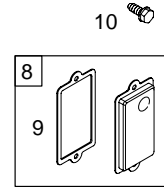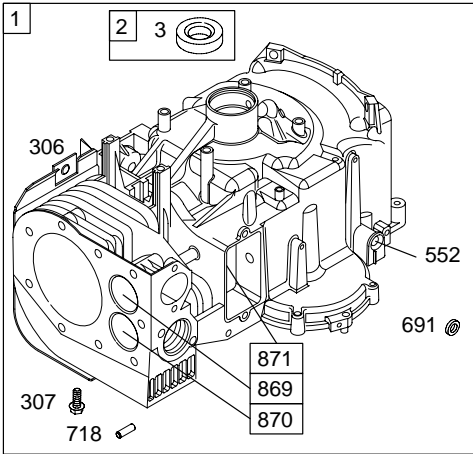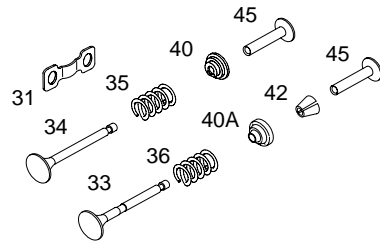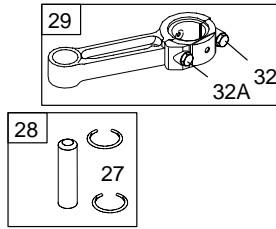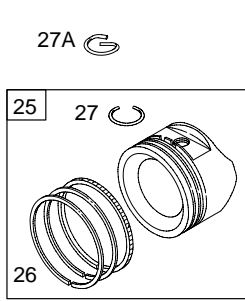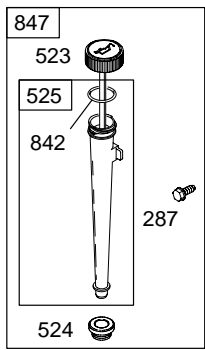


1019 LABEL KIT





1058 OPERATOR'S MANUAL

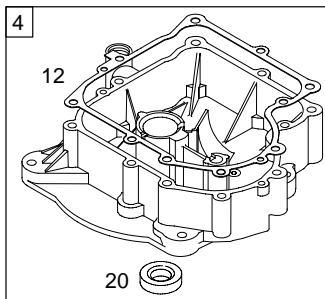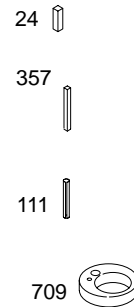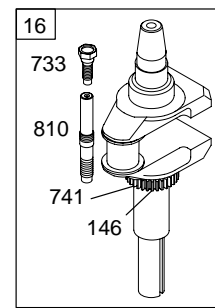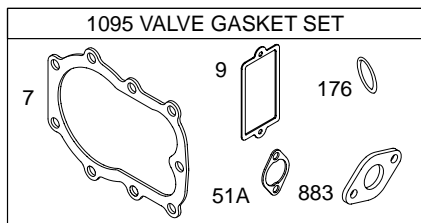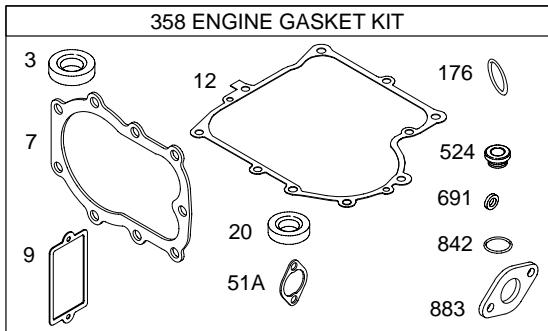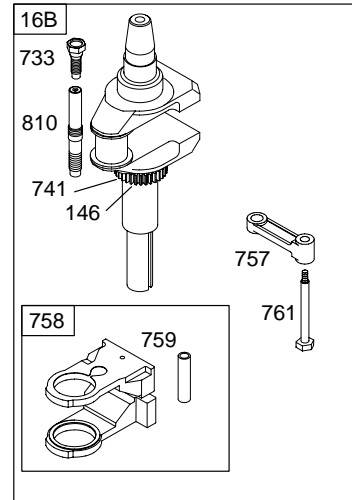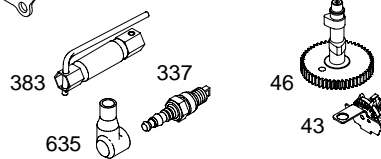

NIKKI

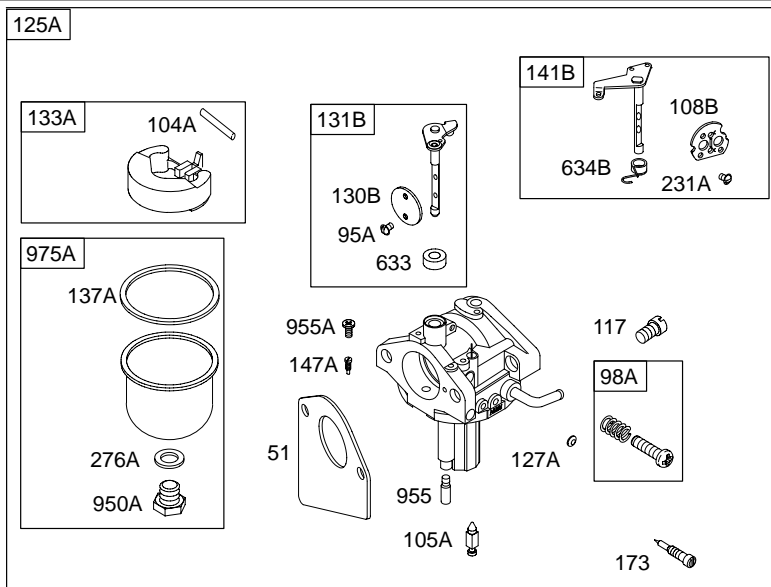


WALBRO








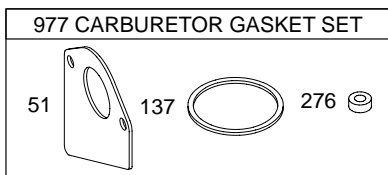
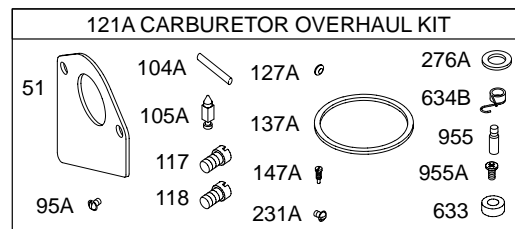
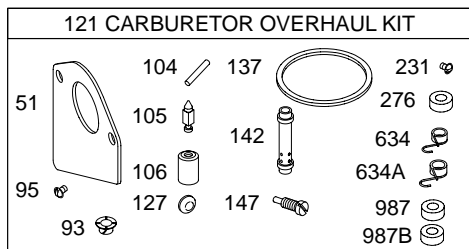
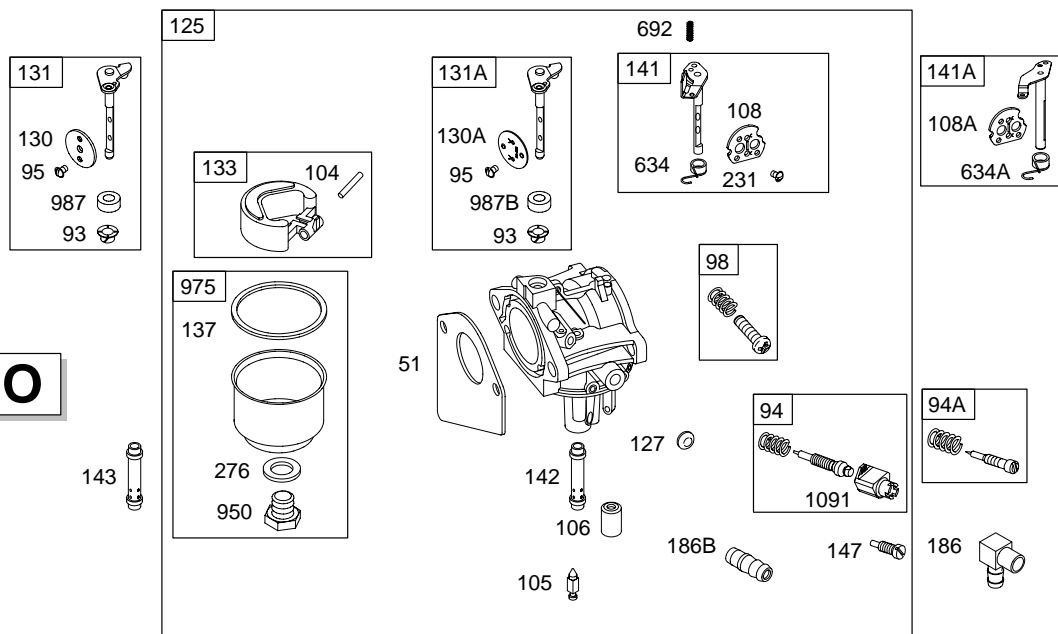



WALBRO

NIKKI







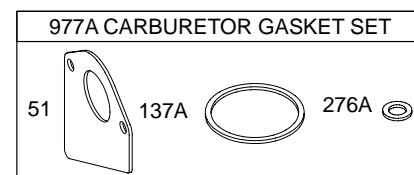





28D700

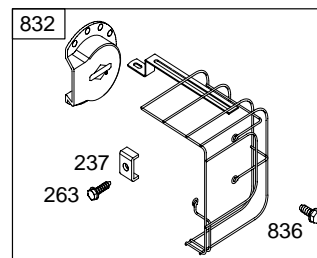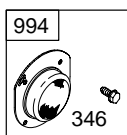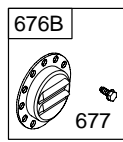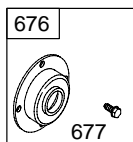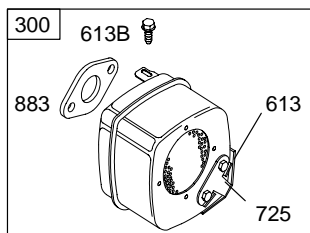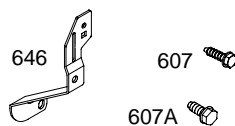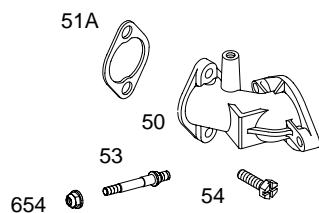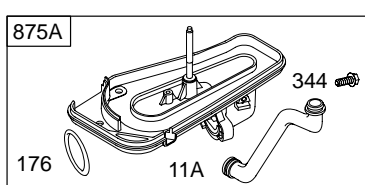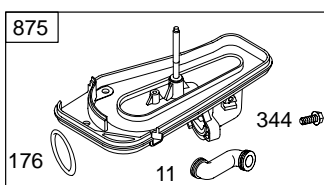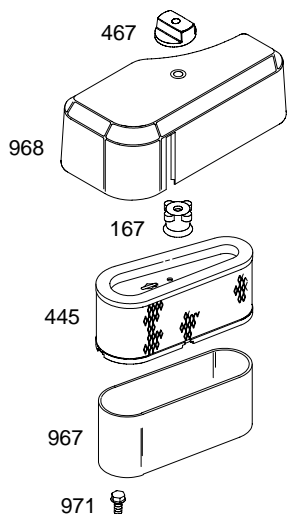



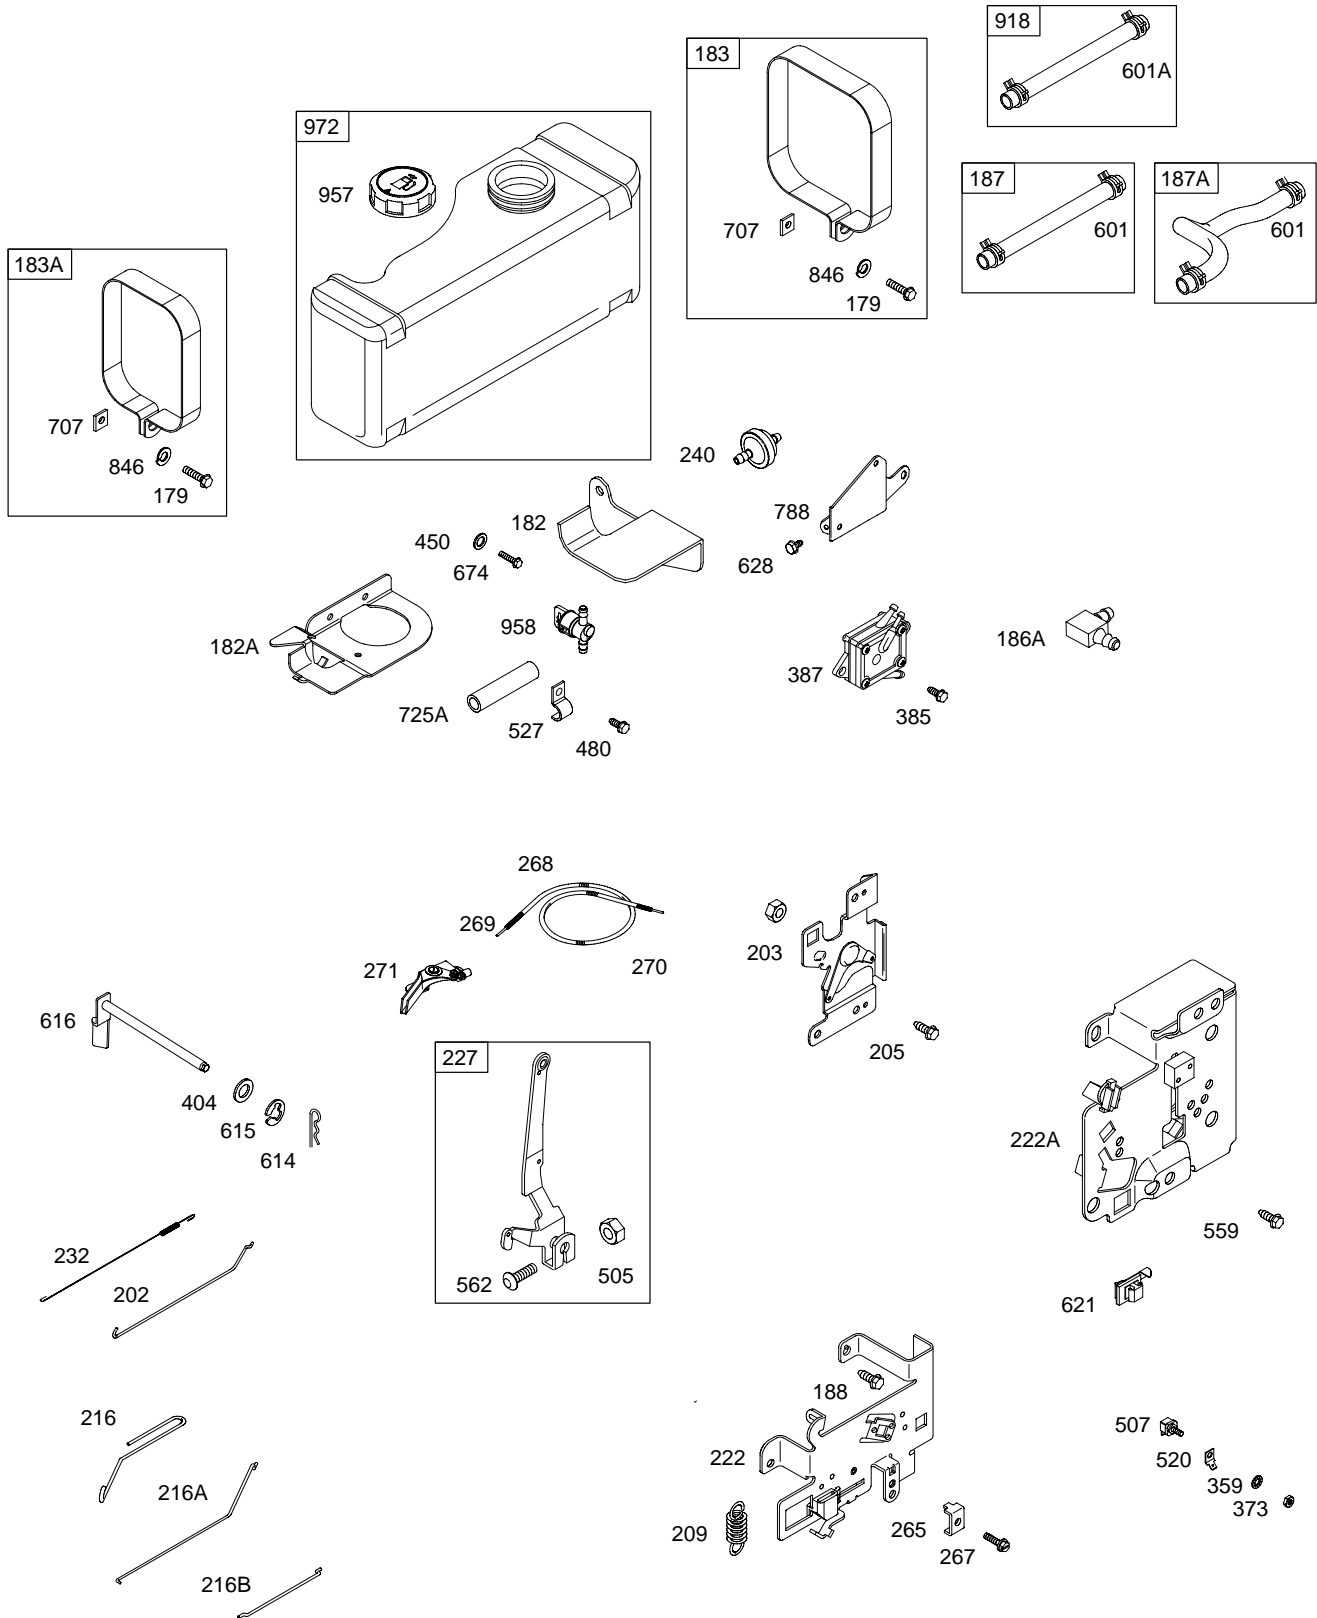


28D700

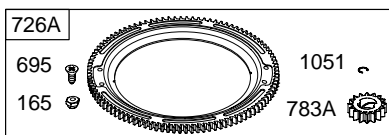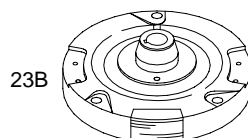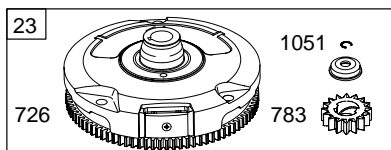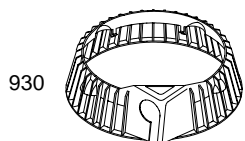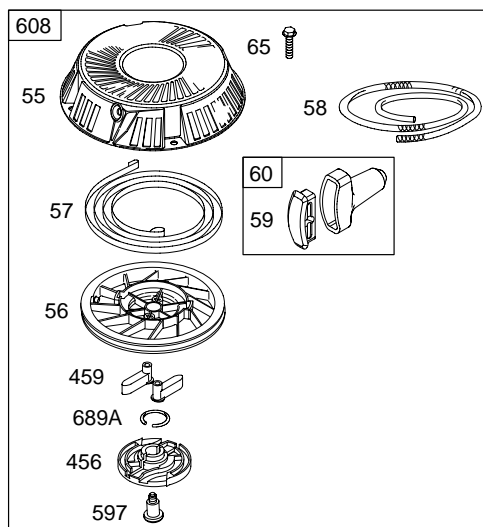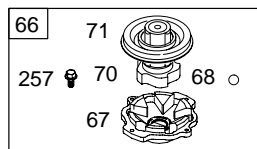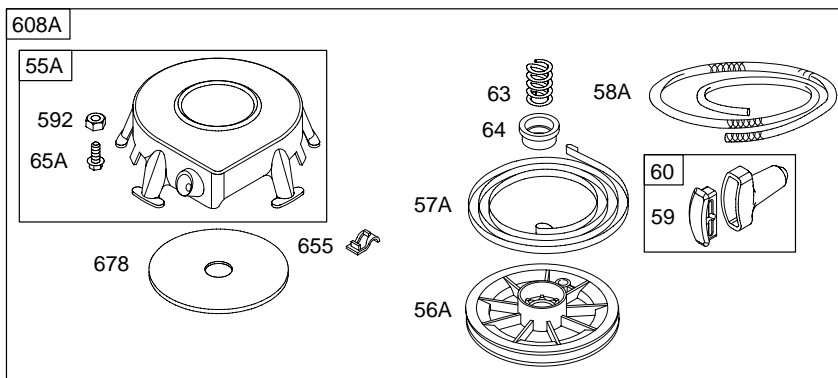





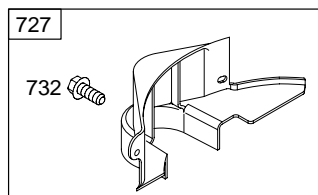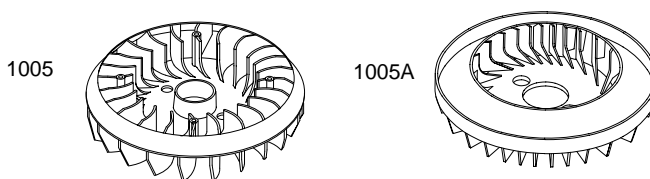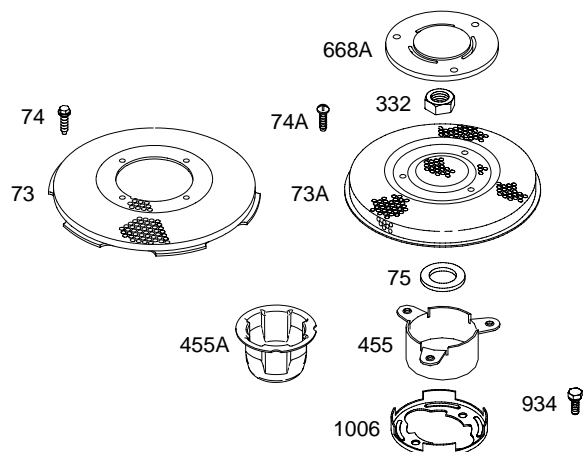

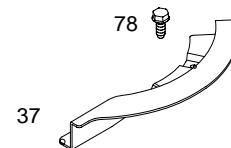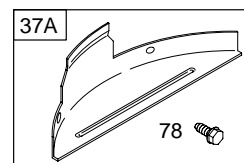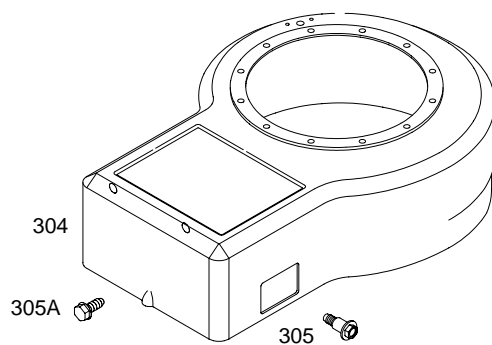




1036 EMISSIONS LABEL






28D700

DC ONLY	DUAL CIRCUIT
<p>474</p>  <p>877A</p>  <p>1059</p>	<p>474A</p>  <p>877</p>  <p>1059</p>
<p>578</p>  <p>578</p>	<p>878</p>  <p>878</p>

NOTE: All Stators Use Reference 1119 Mounting Screw.

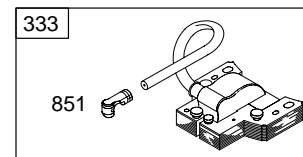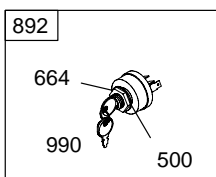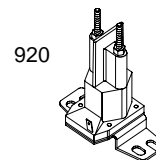

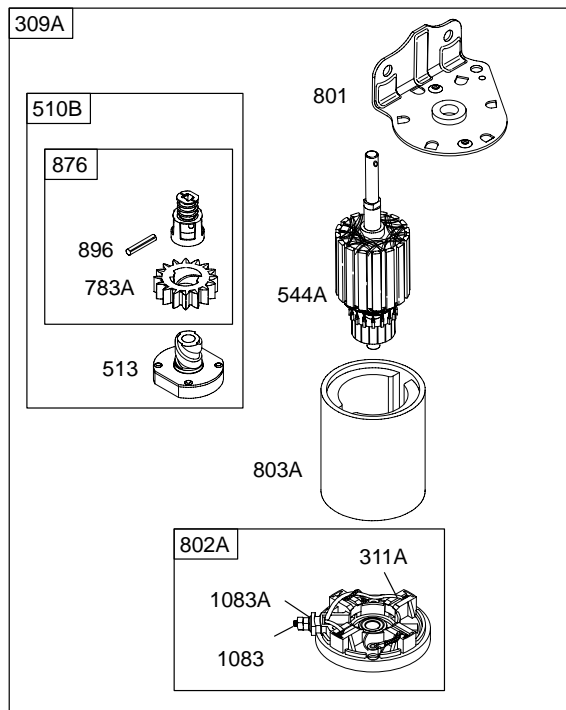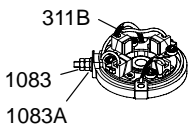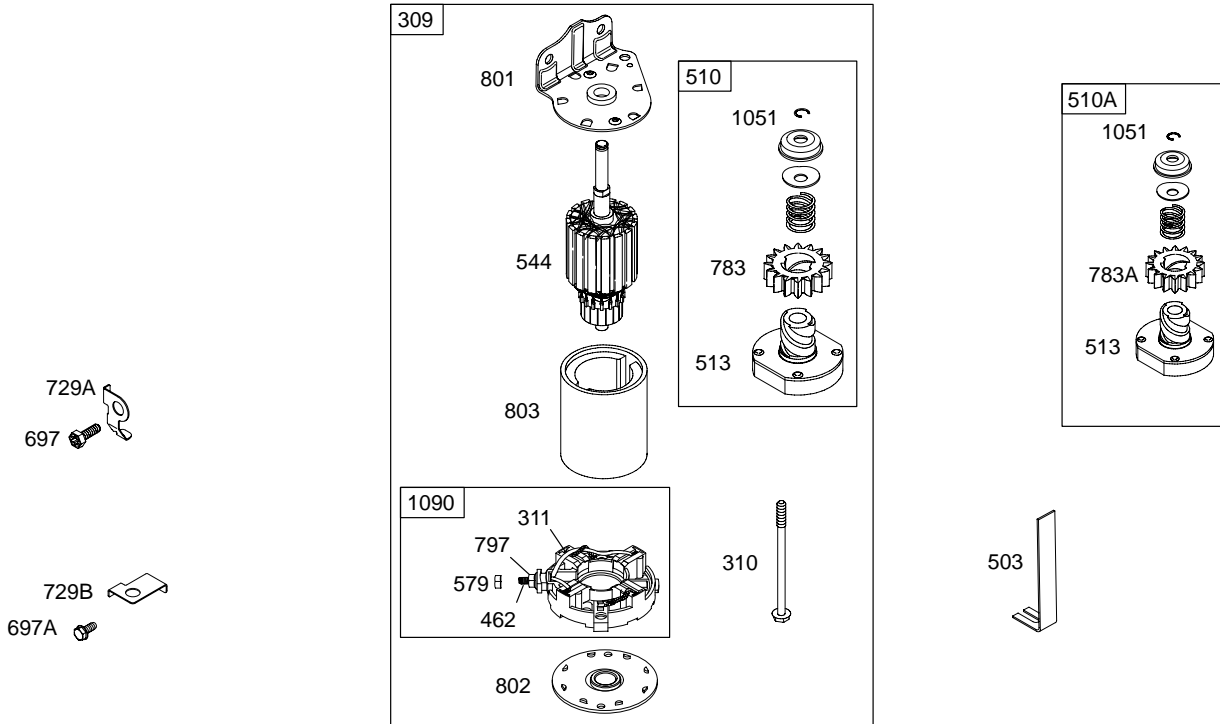

NOTE: For Replacement Starter Motor, See Reference 309.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
40	690656	Retainer-Valve (Intake)	65	695453	Screw (Rewind Starter) (Used After Code Date 99102400).	106	●690577	Seat-Inlet (Gravity Feed)
40A	691939	Retainer-Valve (Exhaust)						Note
42	494553	Keeper-Valve	65A	690837	Screw (Rewind Starter) (Used Before Code Date 99102500).			●691780 Seat-Inlet (Pump Feed)
43	691968	Slinger-Governor/Oil				108	690464	Valve-Choke (Manual Choke)
45	691811	Tappet-Valve				108A	692344	Valve-Choke (Choke A Matic)
46	697668	Camshaft	66	399671	Clutch-Starter (Used Before Code Date 99102500).	108B	694923	Valve-Choke
50	691711	Manifold-Intake				111	691679	Pin-Retainer
51	●692284	Gasket-Intake	67	394897	Clutch-Housing (Used Before Code Date 99102500).	117	●690880	Jet-Main (Standard) (Nikki)
51A	★∅272554	Gasket-Intake				118	●694925	Jet-Main (High Altitude) (Nikki)
53	690227	Stud (Carburetor)	68	691604	Ball-Clutch (Used Before Code Date 99102500).	121	697884	Kit-Carburetor Overhaul (LMT 696160, 696162, 696164, 696166)
54	690953	Screw (Intake Manifold)						Note
55	695130	Housing-Rewind Starter (Used After Code Date 99102400).	70	691945	Ratchet-Clutch (Used Before Code Date 99102500).			497481 Kit-Carburetor Overhaul (LMT 63, 65, 66)
55A	393576	Housing-Rewind Starter (Used Before Code Date 99102500).	71	691359	Cover-Ratchet (Used Before Code Date 99102500).			499220 Kit-Carburetor Overhaul (LMT 92, 93, 96, 108, 111, 162, 165, 169)
56	695129	Pulley-Starter (Used After Code Date 99102400).	73	691191	Screen-Rotating			499231 Kit-Carburetor Overhaul (LMT 97, 99, 133, 135, 136, 166, 168)
56A	295871	Pulley-Starter (Includes 63" Long Rope) (Used Before Code Date 99102500).	73A	691748	Screen-Rotating	121A	694930	Kit-Carburetor Overhaul (Nikki)
57	695131	Spring-Rewind Starter (Used After Code Date 99102400).	74	691627	Screw (Rotating Screen)			
57A	490179	Spring-Rewind Starter (Used Before Code Date 99102500).	74A	691655	Screw (Rotating Screen)			
58	695132	Rope-Starter (58" Long)	75	690582	Washer (Flywheel)			
58A	692188	Rope-Starter (63" Long) (Cut To Required Length)	78	690661	Screw (Flywheel Guard)			
59	490653	Insert-Grip	93	●690602	Bushing-Throttle Shaft			
60	490652	Grip-Starter Rope	94	498030	Kit-Idle Mixture			
63	690547	Spring-Ratchet (Used Before Code Date 99102500).	94A	496589	Kit-Idle Mixture			
64	691920	Adapter-Ratchet Spring (Used Before Code Date 99102500).	95	●691636	Screw (Throttle Valve)			
			95A	●690718	Screw (Throttle Valve)			
			98	495800	Kit-Idle Speed			
			98A	694907	Kit-Idle Speed			
			104	●690525	Pin-Float Hinge			
			104A	●694918	Pin-Float Hinge			
			105	●231855	Valve-Float Needle			
			105A	●694922	Valve-Float Needle			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

28D700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125	698171	Carburetor (LMT 696160, 696162, 696164, 696166) (Gravity Feed) Note _____ 498027 Carburetor (LMT 77, 78, 79, 80, 81, 92, 93, 96, 97, 99, 100, 108, 111, 133, 134, 136, 162, 165) (Gravity Feed) 499158 Carburetor (LMT 159, 166, 167, 168, 169) (Pump Feed)	142	●697592	Nozzle-Carburetor (Standard) (LMT 696160, 696162, 696164, 696166) Note _____ 497568 Nozzle-Carburetor (Standard) (LMT 97, 99, 100) 497860 Nozzle-Carburetor (Standard) (LMT 63, 65, 66, 133, 134, 135, 136) 498545 Nozzle-Carburetor (Standard) (LMT 108, 111) 499037 Nozzle-Carburetor (Standard) (LMT 162, 165, 169) 499039 Nozzle-Carburetor (Standard) (LMT 166, 167, 168)	146	691639	Key-Timing
125A	694941	Carburetor (Nikki)				147	●497472	Jet-Pilot (LMT 66, 98, 100) Note _____ 231983 Jet-Pilot (LMT. 133, 134, 136)
127	●695005	Plug-Welch				147A	●694927	Jet-Pilot (Nikki)
127A	●694916	Plug-Welch				165	693148	Nut (Ring Gear)
130	690468	Valve-Throttle (LMT 111, 169)				167	692297	Seal-Air Cleaner Nut
130A	691750	Valve-Throttle				173	694926	Valve-Idle Mixture
130B	694917	Valve-Throttle				176	★∅691917	Seal-O Ring (Air Cleaner Base)
131	494885	Kit-Throttle Shaft (LMT 111, 169)				179	692331	Screw (Fuel Tank Strap)
131A	494379	Kit-Throttle Shaft				182	690443	Bracket-Fuel Tank (Right Hand) Note _____ 222980 Bracket-Fuel Tank (Right Hand) Used on Type No(s). 0137, 1137.
131B	694909	Kit-Throttle Shaft (Nikki Carburetor)				182A	692535	Bracket-Fuel Tank (Left Hand)
133	494381	Float-Carburetor				183	698459	Strap-Fuel Tank (Right Hand)
133A	694914	Float-Carburetor				183A	692030	Strap-Fuel Tank (Left Hand)
137	●◆281165	Gasket-Float Bowl				186	692317	Connector-Hose
137A	●◆694920	Gasket-Float Bowl				186A	691609	Connector-Hose
141	495097	Kit-Choke Shaft (Manual Choke)				186B	698174	Connector-Hose (Carburetor)
141A	495931	Kit-Choke Shaft (Choke A Matic)				187	296004	Line-Fuel (Cut to Required Length)
141B	694913	Kit-Choke Shaft (Nikki)	143	499040	Nozzle-Carburetor (High Altitude) (LMT 162, 165, 166, 167, 168, 169) 498258 Nozzle-Carburetor High Altitude) (LMT 63, 65, 66, 100, 108, 111, 133, 134, 135, 136) 497737 Nozzle-Carburetor (High Altitude) (LMT 92, 94, 96) 497970 Nozzle-Carburetor (High Altitude) (LMT 97,98)	187A	691371	Line-Fuel (Molded)
						188	691693	Screw (Control Bracket)
						202	691841	Link-Mechanical Governor
						203	691381	Crank-Bell
						205	691693	Screw (Bell Crank)

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	690480	Spring—Governor (Red) Note ——— 692208 Governor Spring (Green) Used on Type No(s). 0027, 0130, 0135, 0140, 1130, 1135, 1140. 691798 Spring—Governor (Brown) Used on Type No(s). 0116, 0133, 0137, 1133, 1137. 691278 Spring—Governor (Platinum) Used on Type No(s). 0028, 0117, 0118, 0125, 0126, 0134, 0138, 1028, 1125, 1126, 1127, 1134, 1141, 1142, 1148.	269	691026	Wire—Control (Cut to Required Length)	310	690323	Bolt (Starter Motor) (3 5/8" Housing Length)
216	691840	Link—Choke	270	691027	Nut (Control Wire Casing)			Note ——— 691263 Bolt (Starter Motor) (4 3/8" Housing Length)
216A	690574	Link—Choke	271	691028	Lever—Control			692329 Bolt (Starter Motor) (4 9/16" Housing Length)
216B	691281	Link—Choke	276	692255	Washer—Sealing	311	497608	Brush Set
222	694042	Bracket—Control	276A	690997	Washer—Sealing	311A	395538	Brush Set (3 5/8" Housing Length)
222A	692002	Bracket—Control Used on Type No(s). 0132.	287	691002	Screw (Dipstick Tube)			311B 490311 Brush Set (4 9/16" Housing Length)
227	691374	Lever—Governor Control	300	691874	Muffler	322	692198	Screw (Cylinder Head Cover)
231	691636	Screw (Choke Valve)	304	690846	Housing—Blower (Black)	332	690662	Nut (Flywheel)
231A	690718	Screw (Choke Valve)	305	691108	Screw (Blower Housing)	333	492341	Armature—Magneto
232	691842	Spring—Governor Link	305A	692127	Screw (Blower Housing)	334	691061	Screw (Magneto Armature)
237	690409	Retainer—Muffler Guard	306	698477	Shield—Cylinder (Cylinder Shield)	337	802592	Plug—Spark
240	298090	Fuel Filter (Red) Note ——— 394358 Filter—Fuel (White)	307	691003	Screw (Steel Ring Gear)	344	693675	Screw (Cable Clamp)
257	691660	Screw (Starter Clutch)	308	491490	Cover—Cylinder Head	346	690661	Screw (Spark Arrester)
263	690367	Screw (Muffler Guard Retainer)	309	693551	Motor—Starter (3 5/8" Housing Length) Note ——— 693552 Motor—Starter (4 3/8" Housing Length) (Steel Ring Gear) 497595 Motor—Starter (3 5/8" Housing Length) (Plastic Ring Gear) 497401 Motor—Starter (4 3/8" Housing Length) (Plastic Ring Gear) 693054 Motor—Starter (3 5/8" Housing Length) (Aluminum Ring Gear) 499521 Motor—Starter (4 3/8" Housing Length) (Aluminum Ring Gear)			
265	691024	Clamp—Casing	309A		Motor—Starter (For Replacement Starter Motor, Order Reference 309)			
267	690804	Screw (Casing Clamp)						
268	691025	Casing—Control Wire (Cut to Required Length)						

★ Engine Gasket Set—Reference 358
● Carburetor Overhaul Kit—Reference 121

◆ Carburetor Gasket Set—Reference 977
⊘ Valve Gasket Set—Reference 1095

28D700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
349	691105	Nut (Cylinder Head Cover)	510	693699	Drive-Starter (Used With Steel Ring Gear)	601	95162	Clamp-Hose
356	690799	Wire-Stop				601A	691038	Clamp-Hose (Black)
356B	398808	Wire-Stop	510A	696541	Drive-Starter (Used With Aluminum And Plastic Ring Gears)	607	690703	Screw (Air Cleaner Brace)
357	691483	Key-Drive Pulley				607A	691693	Screw (Air Cleaner Brace)
358	494241	Gasket Set-Engine	510B	696540	Drive-Starter	608	695058	Starter-Rewind (Used After Code Date 99102400).
359	691077	Washer (Ground Terminal)	513	692024	Clutch-Drive	608A	390391	Starter-Rewind
363	19203	Puller-Flywheel	520	691084	Terminal-Ground	613	691416	Screw (Exhaust Muffler)
373	691612	Nut (Ground Terminal)	523	692013	Dipstick	613A	692198	Screw (Exhaust Muffler)
383	89838	Wrench-Spark Plug			Note	614	691620	Pin-Cotter
385	692198	Screw (Fuel Pump)			692014 Dipstick Used on Type No(s). 0123, 0643, 1123.	615	93307	Retainer-Governor Shaft
387	808656	Pump-Fuel	524	★281370	Seal-Dipstick Tube	616	692012	Crank-Governor (Steel Ring Gear Only)
404	691691	Washer (Governor Crank)	525	690841	Tube-Dipstick	621	692310	Switch-Stop
445	691667	Filter-Air Cleaner Cartridge			Note	628	690661	Screw (Fuel Pump Bracket)
450	691261	Washer (Fuel Tank Bracket)			691398 Tube-Dipstick Used on Type No(s). 0123, 0643, 1123.	633	●690998	Seal-Choke/Throttle Shaft
455	695113	Cup-Flywheel (Used After Code Date 99102400).	527	690394	Clamp-Tube	634	●690801	Spring/Seal Assembly (Manual Choke)
455A	691173	Cup-Flywheel (Used Before Code Date 99102500).	544	692034	Armature-Starter (3 5/8" Housing Length)	634A	●690802	Spring/Seal Assembly (Choke A Matic)
456	695128	Plate-Pawl Friction (Used After Code Date 99102400).	544A	390837	Armature-Starter (3 5/8" Housing Length)	634B	●694912	Spring/Seal Assembly
459	281505	Pawl-Ratchet (Used After Code Date 99102400).			Note	635	66538	Boot-Spark Plug
462	691261	Washer (Starter Cable)			490309 Armature- Starter (4 3/8" Housing Length)	646	690460	Brace-Air Cleaner
467	691668	Knob-Air Cleaner	552	491986	Bushing-Governor Crank	654	690958	Nut (Carburetor)
474	696578	Alternator (DC Only)	559	690661	Screw (Remote Choke Stop)	655	691734	Anchor-Rewind Spring (Used Before Code Date 99102500).
474A	696459	Alternator (Dual Circuit)			Note	664	691087	Nut (Key Switch)
480	690664	Screw (Tube Clamp)			693675 Screw (Remote Choke Stop) Used on Type No(s). 1025.	668	690510	Spacer
500	691086	Washer (Key Switch)	562	691119	Bolt (Governor Control Lever)	668A	691323	Spacer (Rotating Screen)
503	691532	Strap-Starter	578	692306	Wire Assembly	674	690341	Screw (Fuel Tank Bracket)
505	691251	Nut (Governor Control Lever)	579	691029	Nut (Starter Cable)			
507	691972	Insulator	592	690800	Nut (Rewind Starter) (Used Before Code Date 99102500).			
			597	691696	Screw (Pawl Friction Plate) (Used After Code Date 99102400).			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
676	396903	Deflector-Muffler	733	691658	Screw (Crankshaft Extension)	842	★691870	Seal-O Ring (Dipstick Tube)
676A	393761	Deflector-Muffler	741	691284	Gear-Timing	846	690371	Washer (Fuel Tank Strap)
676B	397630	Deflector-Muffler	757	691714	Link-Counterweight	847	496367	Dipstick/Tube Assembly
677	690661	Screw (Muffler Deflector)	758	692423	Counterweight	851	493880	Terminal-Spark Plug
678	490817	Spacer-Rewind (Used Before Code Date 99102500).	759	691239	Pin-Counterweight	869	691802	Seat-Valve (Intake)
689A	691855	Spring-Friction (Used After Code Date 99102400).	761	691096	Screw (Counterweight)	870	691844	Seat-Valve (Exhaust)
691	★692407	Seal-Governor Shaft	783	693713	Gear-Pinion (Used Before Code Date 99102500).	871	261961	Bushing-Valve Guide (Exhaust Valve)
692	690572	Spring-Detent	783A	695708	Gear-Pinion (Aluminum and Plastic Ring Gears)	————— Note —————		
695	693109	Screw (Ring Gear)	788	690458	Bracket-Fuel Pump	231218	Bushing-Valve Guide (Brass Intake Valve)	
697	690372	Screw (Drive Cap)	797	693167	Nut (Brush Retainer)	875	693670	Base-Air Cleaner <i>(Use with Walbro Carburetor)</i> (Stud is 2 1/2 Inches)
697A	691058	Screw (Drive Cap)	797A	691029	Nut (Brush Retainer)	875A	697659	Base-Air Cleaner <i>(Use with Walbro Carburetor)</i> (Stud is 3 13/32 Inches)
707	690279	Nut (Fuel Tank Strap)	801	691283	Cap-Drive	————— Note —————		
709	262243	Eccentric	802	691286	Cap-End	696129	Base-Air Cleaner <i>(Use with Nikki Carburetor)</i>	
718	690959	Pin-Locating	802A	395537	Cap-End (3 5/8" Housing Length)	876	696539	Kit-Pinion Spring
725	690403	Shield-Heat	803	693757	Housing-Starter (3 5/8" Housing Length)	877	393456	Wire/Connector- Alternator
725A	690420	Shield-Heat	803A	398159	Housing-Starter (3 5/8" Housing Length)	877A	393814	Wire/Connector- Alternator
726		Gear-Ring (Steel) (Sold in Flywheel Kit, Reference 23, Only)						
726A	696537	Gear-Ring (Aluminum) (Services Plastic Ring Gear Only)						
727	490324	Cover-Starter Drive						
729	690596	Clip-Wire						
729A	691224	Clip-Wire	810	691779	Extension-Crankshaft			
729B	224723	Clip-Wire	832	692361	Guard-Muffler			
732	691092	Screw (Starter Drive Cover)	836	691083	Screw (Muffler Guard)			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

28D700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
878	691237	Harness-Alternator	975	495933	Bowl-Float	1051	691265	Ring-Retaining
883	★∅692236	Gasket-Exhaust	975A	694908	Bowl-Float	1054	280275	Tie-Cable
892	692318	Switch-Key	977	690192	Gasket Set-Carburetor (Walbro)	1058	274787	Operator's Manual
896	691641	Pin-Drive Retainer	977A	694931	Gasket Set-Carburetor (Nikki)	1059	698516	Kit-Screw/Washer (Alternator)
918	393815	Hose-Vacuum (Cut to Required Length)	987	●691326	Seal-Throttle Shaft	1083	691626	Nut (End Cap)
920	691656	Solenoid-Starter	987B	●692001	Seal-Throttle Shaft	1083A	690958	Nut (End Cap) (Serrated)
930	691904	Guard-Rewind	990	691959	Key Set	1090	691293	Retainer-Brush
934	691058	Screw (Fan Retainer)	994	398067	Arrestor-Spark	1091	691333	Cap-Limiter
950	691657	Screw-Float Bowl	1005	695056	Fan-Flywheel (Used After Code Date 99102400).	1095	498539	Gasket Set-Valve
950A	694919	Screw-Float Bowl	1005A	691905	Fan-Flywheel (Used Before Code Date 99102500).	1119	691183	Screw (Alternator)
955	●694924	Plug-Carburetor (Idle Chamber)	1006	690452	Retainer-Fan			
955A	694921	Plug-Carburetor (Pilot Jet)	1019	697764	Kit-Label			
957	493988	Cap-Fuel Tank	1036	696770	Label-Emissions (Used After Code Date 01093000).			
958	698183	Valve-Fuel Shut Off			Note			
967	272477	Filter-Pre Cleaner			695699 Label-Emissions (Used After Code Date 00070200 and Before Code Date 01100100).			
968	691324	Cover-Air Cleaner			695036 Label-Emissions (Used After Code Date 99093000 and Before Code Date 00070300).			
971	691108	Screw (Air Cleaner Base to Carburetor)			694325 Label-Emissions (Used After Code Date 99010300 and Before Code Date 99100100).			
972	390225	Tank-Fuel			499362 Label-Emissions (Used After Code Date 97063000 and Before Code Date 99010400).			
					499361 Label-Emissions (Used Before Code Date 97070100).			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095