



# Illustrated Parts List

## Model Series

### 326400

TYPE NUMBERS  
0010 through 0080,  
0110 through 0399,  
0611, 0620,  
0630 through 0799,  
0801 through 0804,  
1160, 2256,  
2520 through 2563,  
2580, 2581, 2582,  
2583, 2596.

#### TO FIND

#### THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER NOTE.**
- D. If a *Note* appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under *Note*, order the part referred to at the *Note*.
- E. If your Engine Type Number does not appear after any part number listed under *Note*, use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 326400

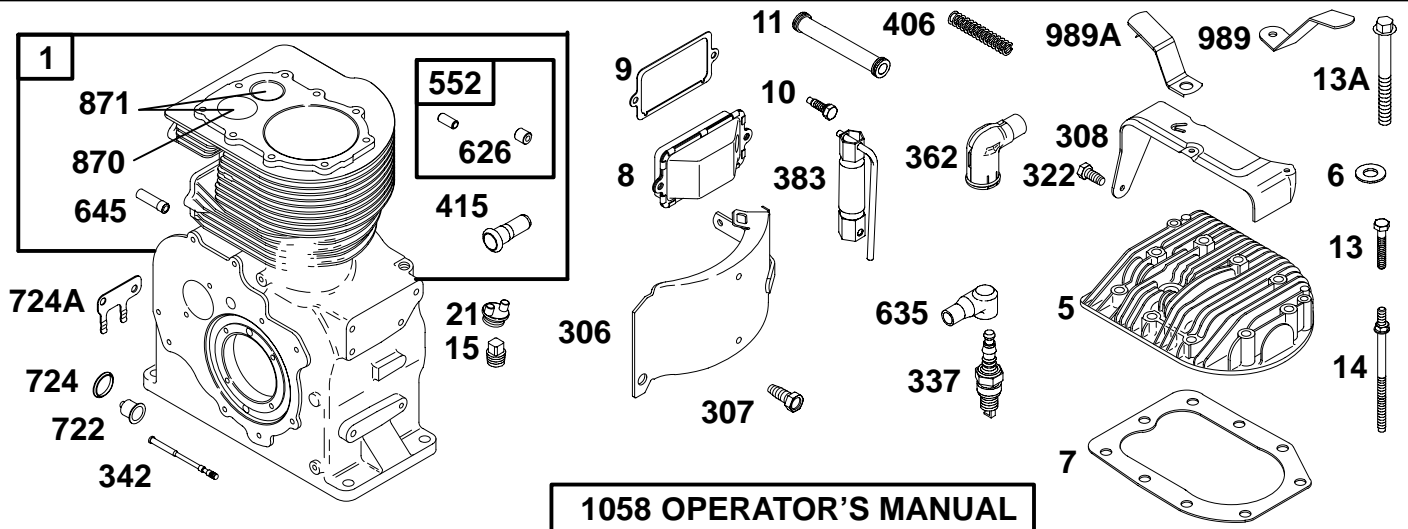


**1058 OPERATOR'S MANUAL**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800). ----- <b>Note</b> ----- <b>221953</b> Cover-Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)				989	690578	Stop Switch-Spark Plug ----- <b>Note</b> ----- <b>293739</b> Stop Switch-Spark Plug Used on Type No(s). 0200.
7	∅692231	Gasket-Cylinder Head	322	692198	Screw (Cylinder Head Cover)			<b>298926</b> Stop Switch-Spark Plug Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
8	495738	Breather Assembly	337	492167	Plug-Spark ----- <b>Note</b> ----- <b>802592</b> Plug-Spark (Resistor)			<b>390785</b> Stop Switch-Spark Plug Used on Type No(s). 0640, 0734.
9	∅27803	Gasket-Breather	342	298125	Plunger-Breaker	989A	690633	Stop Switch-Spark Plug
10	690294	Screw (Breather Assembly)	362	691954	Shield-Spark Plug	1058	270373	Operator's Manual
11	691512	Tube-Breather	383	89838	Wrench-Spark Plug			
13	691614	Screw (Cylinder Head) (1 3/4" Long) ----- <b>Note</b> ----- <b>691640</b> Screw (Cylinder Head) (2 1/16" Long)	406	690533	Spring-Breather Tube			
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	415	692882	Plug			
14	691690	Stud (Cylinder Head)	552	393666	Bushing-Governor Crank			
15	692833	Plug-Oil Drain	626	690512	Spacer-Governor Crank			
21	281658	Cap-Oil Fill	635	66538	Boot-Spark Plug			
306	299536	Shield-Cylinder	645	692880	Bushing-Plunger			
307	690294	Screw (Cylinder Shield)	722	68768	Seal-Plunger			
			724	93516	Retainer-Seal			
			724A	221873	Retainer-Seal			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

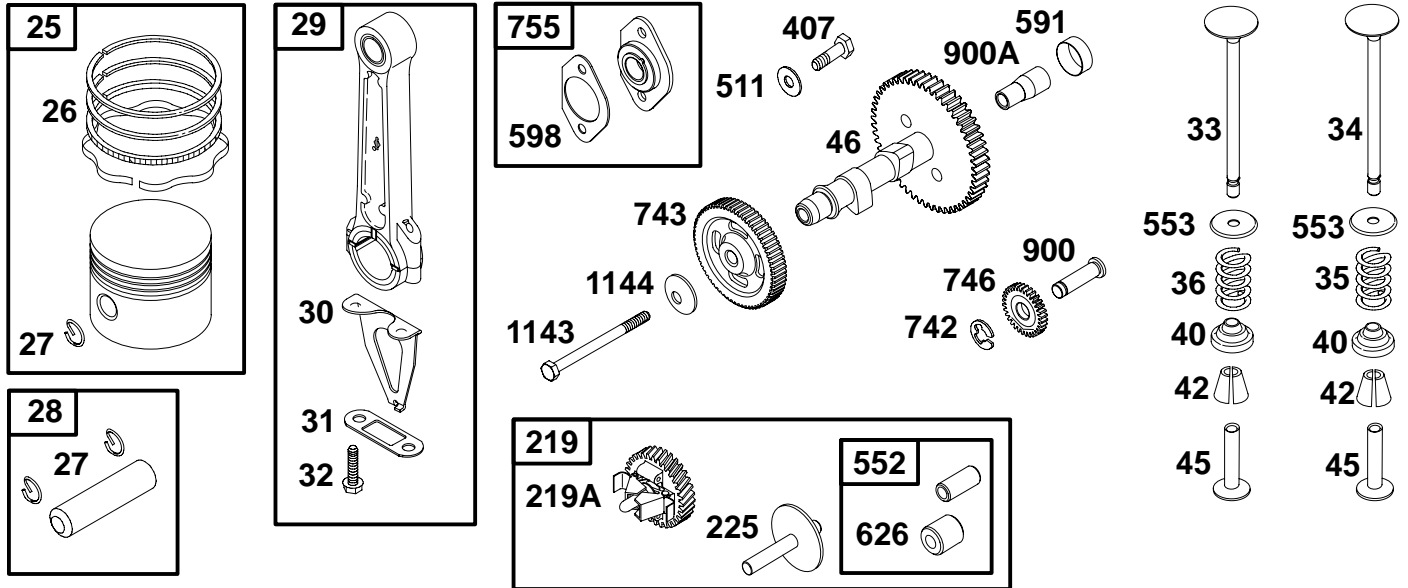


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	390364	Piston Assembly (Standard) ----- <b>Note</b> ----- 390366 Piston Assembly (.020" Oversize)	32	692345	Screw (Connecting Rod)	511	690402	Washer (Camshaft Bearing)
26	390484	Ring Set (Standard) ----- <b>Note</b> ----- 390679 Ring Set (Standard) (Chrome) 390505 Ring Set (.020" Oversize)	33	394436	Valve-Exhaust	552	393666	Bushing-Governor Crank
27	691792	Lock-Piston Pin	34	394435	Valve-Intake	553	690269	Retainer-Valve Spring
28	299691	Pin-Piston (Standard) ----- <b>Note</b> ----- 391286 Pin-Piston (.005" Oversize)	35	691597	Spring-Valve (Intake)	591	691746	Plug-Camshaft
29	299632	Rod-Connecting (Standard) ----- <b>Note</b> ----- 390306 Rod-Connecting (.020" Undersize)	36	691597	Spring-Valve (Exhaust)	598	★270516	Shim-End Play (Camshaft Bearing) (.009" Thick) ----- <b>Note</b> ----- ★270517 Shim-End Play (Camshaft Bearing) (.007" Thick) ★270518 Shim-End Play (Camshaft Bearing) (.005" Thick)
30	691726	Dipper-Connecting Rod	40	691939	Retainer-Valve ----- <b>Note</b> ----- 690274 Retainer-Valve Used on Type No(s). 0722.	626	690512	Spacer-Governor Crank
31	690396	Lock-Rod Screw	42	494553	Keeper-Valve (Used After Code Date 80111200). ----- <b>Note</b> ----- 68283 Keeper-Valve (Used Before Code Date 80111300).	742	691080	Retainer-E Ring
			45	691594	Tappet-Valve	743	691153	Gear-Drive
			46	692855	Camshaft	746	691803	Gear-Idler
			219	291192	Gear-Governor	755	299706	Bearing-Camshaft
			219A	393720	Gear-Governor	900	691767	Shaft-Gear
			225	691357	Shaft-Governor Gear	900A	691768	Shaft-Gear
			407	690810	Screw (Camshaft Bearing)	1143	691081	Screw (Drive Gear Cover)
						1144	690301	Washer (Drive Gear Cover)

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095




# 326400

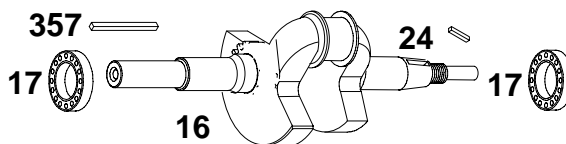

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	691797	Crankshaft ----- <b>Note</b> ----- <b>690534</b> Crankshaft Used on Type No(s). 0237, 0133, 0190, 0252, 0315, 0788, 2582. <b>261222</b> Crankshaft Used on Type No(s). 0139, 0204, 0228, 0328, 0678. <b>690535</b> Crankshaft Used on Type No(s). 0050, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0156, 0167, 0170, 0172, 0173, 0174, 0185, 0186, 0188, 0192, 0193, 0208, 0219, 0231, 0248, 0257, 0286, 0290, 0310, 0317, 0318, 0329, 0337, 0343, 0371, 0636, 0638, 0666, 0669, 0684, 0690, 0706, 0721, 0751, 2550. <b>690536</b> Crankshaft Used on Type No(s). 0022, 0063, 0114, 0129, 0153, 0175, 0176, 0183, 0198, 0205, 0217, 0224, 0233, 0235, 0236, 0238, 0247, 0255, 0261, 0265, 0266, 0273, 0277, 0278, 0279, 0285, 0287, 0291, 0296, 0303, 0320, 0334, 0338, 0340, 0344, 0345, 0346, 0347, 0348, 0353, 0359, 0361, 0363, 0366, 0367, 0374, 0375, 0383, 0385, 0394, 0396, 0633, 0634, 0648, 0650, 0654, 0661,			0671, 0674, 0676, 0680, 0687, 0692, 0693, 0694, 0696, 0698, 0699, 0702, 0703, 0708, 0714, 0718, 0722, 0724, 0729, 0733, 0736, 0746, 0753, 0754, 0757, 0764, 0771, 0772, 0774, 0776, 0782, 0787, 2522, 2563, 2596. <b>261255</b> Crankshaft Used on Type No(s). 0158, 0160, 0197, 0216, 0237. <b>690537</b> Crankshaft Used on Type No(s). 0210, 0262, 0630. <b>690540</b> Crankshaft Used on Type No(s). 0062, 0241, 0242, 0243, 0244, 0260, 0269, 0272, 0292, 0295, 0297, 0300, 0302, 0312, 0327, 0352, 0365, 0369, 0373, 0391, 0635, 0670, 0681, 0686, 0691, 0719, 0723, 0726, 0730, 0732, 0735, 0737, 0740, 0744, 0745, 0750, 0755, 0759, 0780, 0786, 2562. <b>690541</b> Crankshaft Used on Type No(s). 0061, 0124, 0246, 0253, 0305, 0308, 0335, 0341, 0342, 0646, 0710, 0711, 0713, 0728, 0781, 0785, 2529, 2561.			<b>690543</b> Crankshaft Used on Type No(s). 0259, 0293, 0647, 0756. <b>691806</b> Crankshaft (Used After Code Date 77072410). Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. <b>261219</b> Crankshaft (Used Before Code Date 77072510). Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. <b>690546</b> Crankshaft Used on Type No(s). 0682, 2560. <b>261944</b> Crankshaft Used on Type No(s). 0720, 0758, 0788.
						17	691938	Bearing-Ball
						24	222698	Key-Flywheel

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

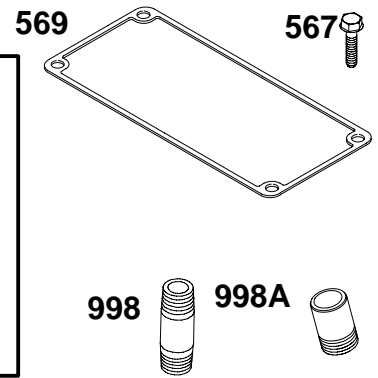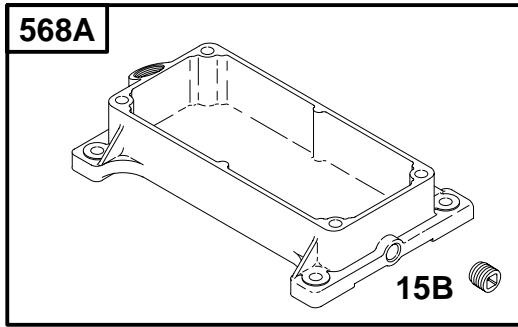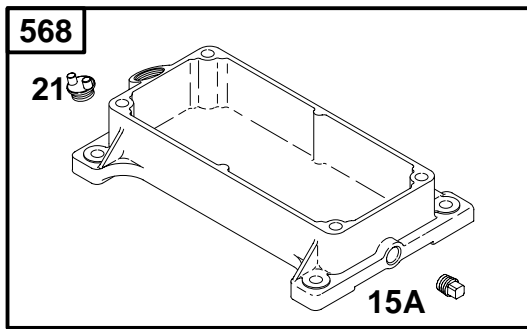


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15A	690946	Plug–Oil Drain	568A	391165	Base–Engine	569	★691569	Gasket–Engine Base
15B	691680	Plug–Oil Drain			Used on Type No(s).	998	690307	Pipe–Oil
21	281658	Cap–Oil Fill			0062, 0120, 0121,	998A	690502	Pipe–Oil
567	691104	Screw			0123, 0126, 0127,			
		(Engine Base)			0133, 0135, 0136,			
568	294751	Base–Engine			0140, 0144, 0149,			
		Used on Type No(s).			0157, 0158, 0162,			
		0020, 0023, 0050,			0163, 0164, 0165,			
		0139, 0145, 0150,			0169, 0170, 0172,			
		0151, 0152, 0155,			0173, 0174, 0178,			
		0159, 0175, 0191,			0180, 0182, 0183,			
		0199, 0203, 0206,			0184, 0185, 0186,			
		0208, 0212, 0218,			0190, 0192, 0198,			
		0219, 0226, 0356,			0201, 0204, 0205,			
		0804, 2527, 2583.			0210, 0215, 0222,			
		----- <b>Note</b> -----			0223, 0227, 0228,			
		<b>291404</b> Base–			0230, 0234, 0235,			
		Engine			0240, 0246, 0248,			
		Used on Type No(s).			0252, 0253, 0254,			
		0134, 0135.			0255, 0259, 0262,			
					0283, 0284, 0291,			
					0293, 0306, 0308,			
					0310, 0311, 0312,			
					0315, 0316, 0326,			
					0328, 0331, 0333,			
					0341, 0351, 0354,			
					0360, 0384, 0392,			
					0630, 0638, 0647,			
					0648, 0649, 0659,			
					0660, 0669, 0673,			
					0678, 0679, 0686,			
					0705, 0712, 0723,			
					0724, 0725, 0726,			
					0732, 0735, 0737,			
					0740, 0744, 0750,			
					0755, 0756, 0759,			
					0780, 0781, 0786,			
					2562, 2581, 2582.			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

∅ Valve Gasket Set–Reference 1095


# 326400

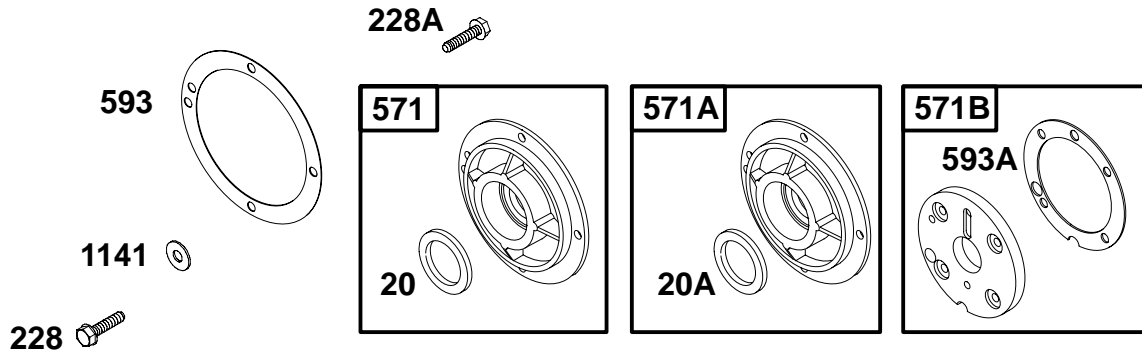

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
20	★691948	Seal-Oil (PTO Side)			0359, 0361, 0368, 0373, 0374, 0383, 0385, 0395, 0396, 0634, 0636, 0648, 0650, 0656, 0661, 0666, 0670, 0671, 0674, 0675, 0684, 0686, 0690, 0692, 0693, 0696, 0698, 0699, 0702, 0703, 0706, 0708, 0709, 0714, 0717, 0721, 0724, 0726, 0732, 0733, 0735, 0737, 0739, 0740, 0743, 0744, 0745, 0746, 0750, 0751, 0752, 0753, 0754, 0755, 0757, 0759, 0771, 0776, 0780, 0783, 0784, 0789, 0794, 0801, 0802, 2522, 2550, 2562, 2563, 2596.	571B	299705	Support-Bearing (Magneto Side)	
20A	★291675	Seal-Oil (PTO Side)				593	★691311	Gasket-Bearing Support	
228	691681	Screw (Bearing Support)				593A	★270513	Gasket-Bearing Support (.015" Thick)	
228A	691058	Screw (Bearing Support)				----- <b>Note</b> -----			
571	391062	Support-Bearing						★270514 Gasket- Bearing Support (.010" Thick)	
571A	291665	Support-Bearing Used on Type No(s). 0022, 0050, 0062, 0063, 0112, 0113, 0114, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0153, 0156, 0160, 0167, 0171, 0172, 0173, 0174, 0175, 0176, 0183, 0185, 0186, 0188, 0192, 0193, 0196, 0197, 0198, 0205, 0208, 0209, 0216, 0217, 0219, 0224, 0233, 0235, 0236, 0241, 0242, 0244, 0247, 0255, 0256, 0257, 0260, 0261, 0265, 0266, 0269, 0272, 0273, 0277, 0278, 0279, 0285, 0286, 0287, 0290, 0291, 0292, 0296, 0297, 0302, 0303, 0304, 0310, 0312, 0318, 0327, 0329, 0334, 0337, 0338, 0340, 0344, 0345, 0347, 0357,							★270515 Gasket- Bearing Support (.005" Thick)
						1141	690402	Washer (Bearing Support)	
						----- <b>Note</b> ----- 291710 Support- Bearing Used on Type No(s). 0647, 0668, 0682, 0713, 0717, 0755, 0772, 0782, 0788, 0790, 0792, 0793, 0801, 0804, 2521, 2530.			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

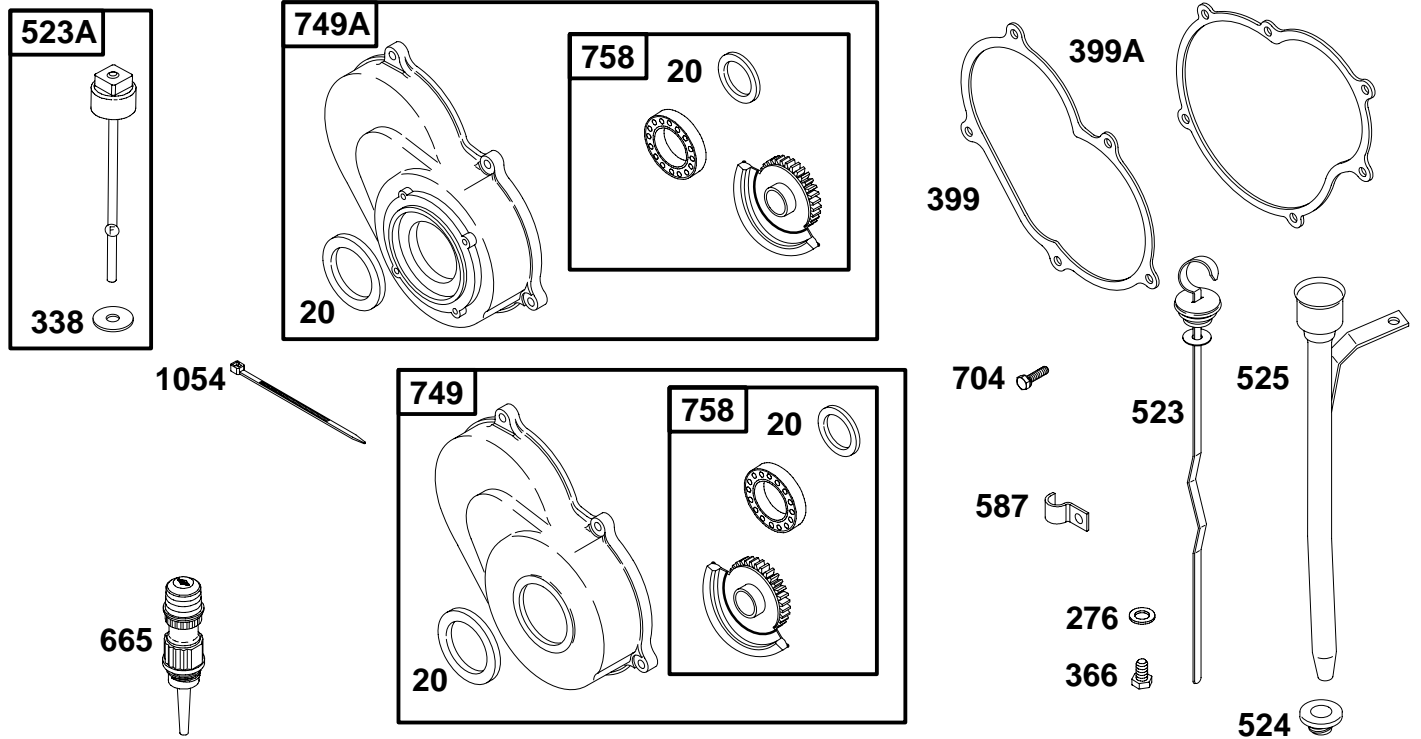


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	★691948	Seal—Oil (PTO Side)	525	690622	Tube—Dipstick	587	690389	Clamp—Cable
276	690258	Washer—Sealing			----- Note -----	665	298860	Minder—Oil
338	★690270	Gasket—Dipstick		690623	Tube—Dipstick	704	691083	Screw
366	690304	Screw (Timing Hole Plug)			Used on Type No(s).			(Counterweight Cover)
399	★691310	Gasket—Counterweight Cover (Magneto Side)			0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0198, 0210, 0222, 0234, 0235, 0240, 0248, 0262, 0266, 0309, 0312, 0316, 0331, 0338, 0341, 0351, 0358, 0630, 0638, 0679, 0705, 0707, 0724, 0744, 0750, 0755, 0770, 1160, 2581.	749	391061	Cover—Counterweight
399A	★692914	Gasket—Counterweight Cover (PTO Side)				749A	391361	Cover—Counterweight (Used on Alternator Equipped Engines)
523	691352	Dipstick				758	393164	Counterweight
523A	690620	Dipstick				1054	280275	Tie—Cable
524	★281370	Seal—Dipstick Tube						

★ Engine Gasket Set—Reference 358  
 ● Carburetor Overhaul Kit—Reference 121

∅ Valve Gasket Set—Reference 1095

# 326400

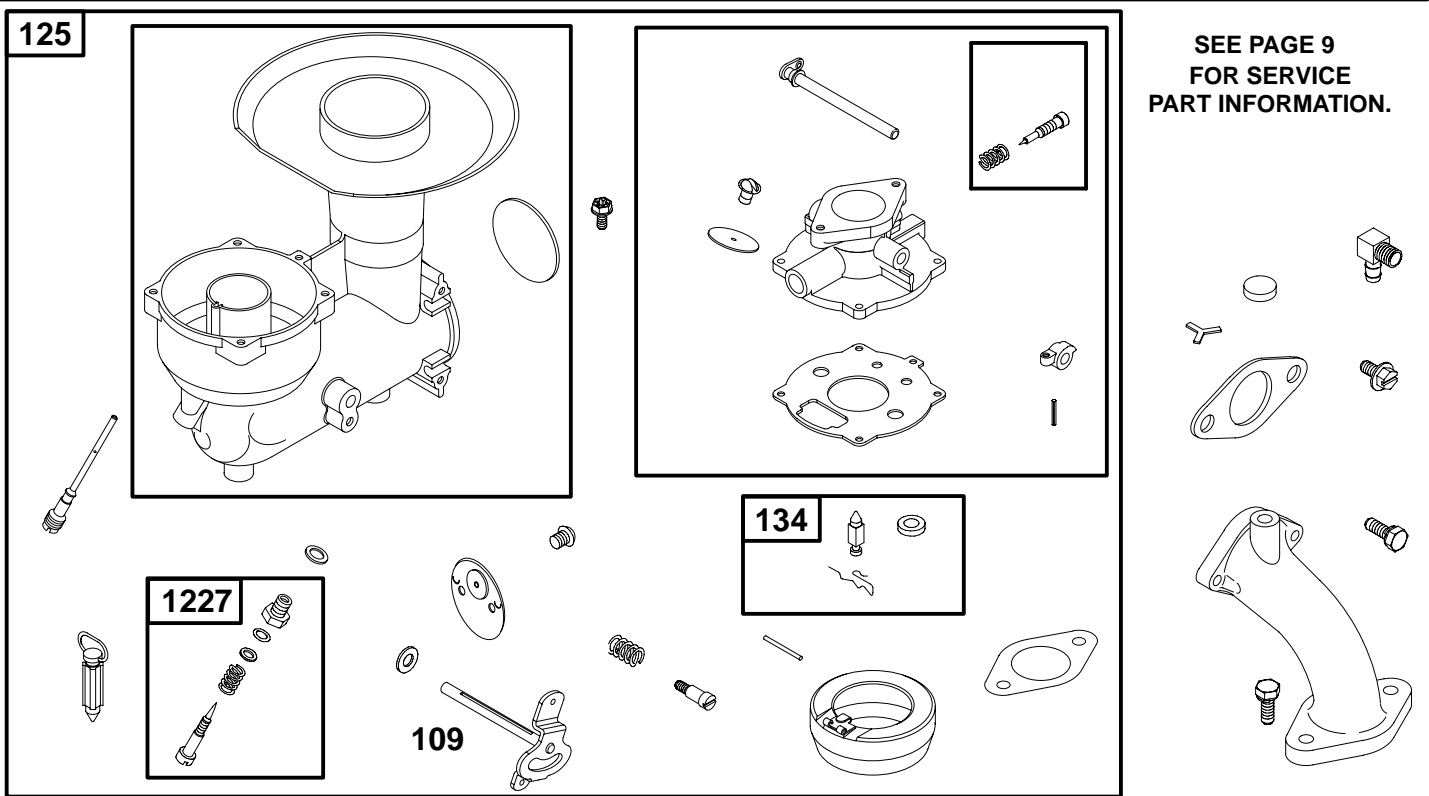


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
109	691353	Shaft-Choke ----- <b>Note</b> ----- <b>690617</b> Shaft-Choke Used on Type No(s). 0121, 0127, 0133, 0134, 0135, 0136, 0139, 0140, 0144, 0149, 0157, 0158, 0162, 0163, 0164, 0165, 0166, 0169, 0170, 0172, 0180, 0184, 0185, 0186, 0192, 0201, 0204, 0206, 0211, 0212, 0213, 0226, 0227, 0228, 0229, 0249, 0251, 0271, 0298, 0326, 0328, 0332, 2581, 2582.	125	391065	Carburetor ----- <b>Note</b> ----- <b>391068</b> Carburetor Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0184, 0192, 0240, 0331. <b>391070</b> Carburetor Used on Type No(s). 0127, 0133, 0134, 0135, 0136, 0139, 0140, 0149, 0162, 0163, 0166, 0172, 0173, 0180, 0185, 0186, 0201, 0204, 0206, 0211, 0212, 0213, 0226, 0227, 0228, 0229, 0249, 0251, 0271, 0298, 0326, 0328, 0332. <b>392035</b> Carburetor Used on Type No(s). 0182, 0210, 0222, 0309.			<b>392235</b> Carburetor Used on Type No(s). 0198, 0234, 0235, 0248, 0266, 0312, 0316, 0338, 0341, 0351, 0358, 0707, 0724, 0744, 0750, 0759, 0770. <b>393431</b> Carburetor Used on Type No(s). 0262, 0630.
						134	●394681	Kit-Needle/Seat ----- <b>Note</b> ----- <b>394682</b> Kit-Needle/Seat (Includes Brass Seat) <b>394683</b> Kit-Needle/Seat (Includes Brass Seat) (For Use With Impulse Pump)
						1227	●99525	Valve-High Speed

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095



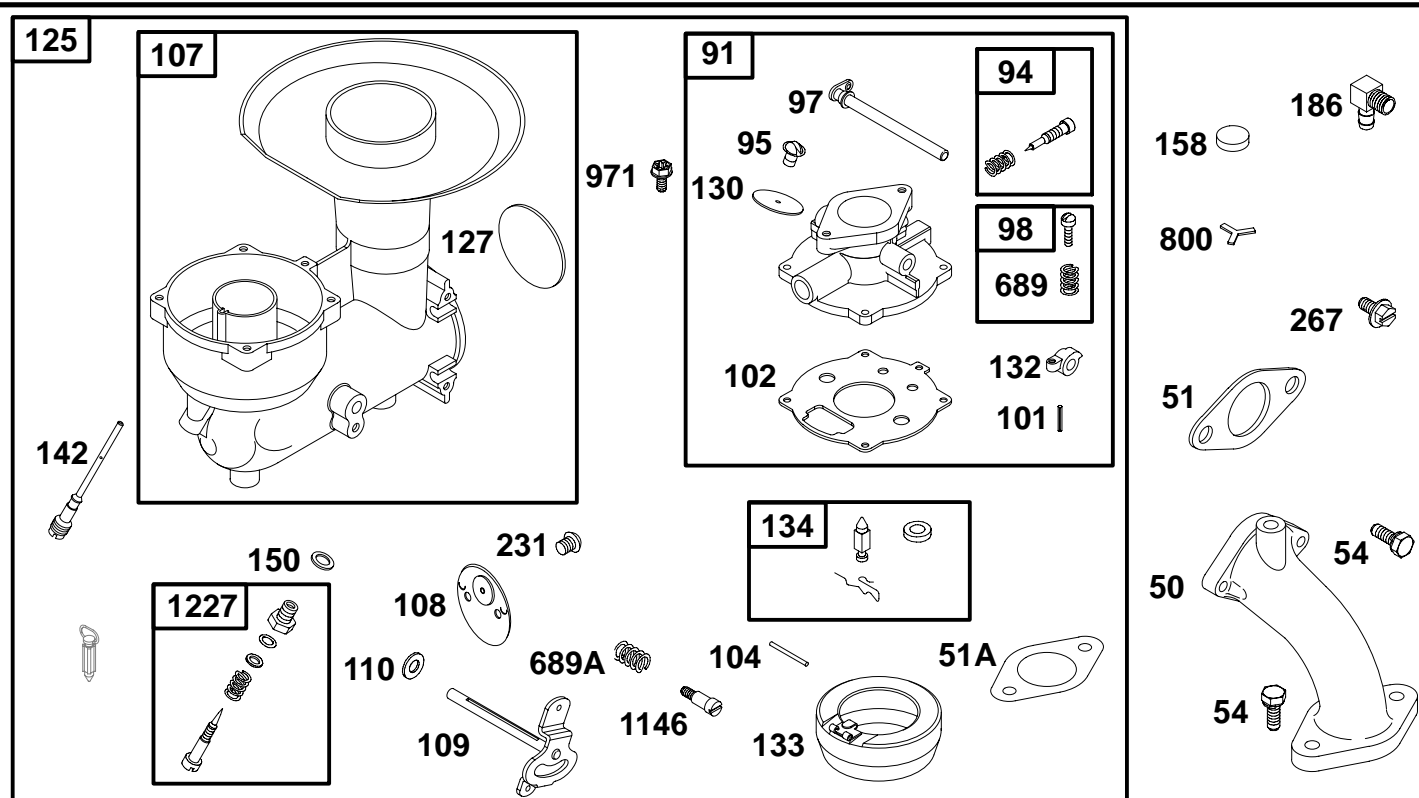


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake ----- <b>Note</b> ----- <b>692525</b> Manifold-Intake Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770.	102	●692215	Gasket-Carburetor Body			----- <b>Note</b> ----- <b>390950</b> Nozzle-Carburetor (Standard) (Labeled 40) (Used Before Code Date 81090900).
51	★Ø27381	Gasket-Intake	104	●691775	Pin-Float Hinge	150	●691610	Gasket-Nozzle
51A	★●692214	Gasket-Intake	107	391069	Body-Lower Carburetor	158	27590	Plug-Carburetor Filter/Drain
54	691681	Screw (Intake Manifold)	108	690621	Valve-Choke	186	691764	Connector-Hose
91	299687	Body-Upper Carburetor ----- <b>Note</b> ----- <b>391067</b> Body-Upper Carburetor Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0240, 0309, 0331, 0630, 0707, 0724, 0770.	109		Shaft-Choke <b>(See Previous Page)</b>	231	691437	Screw (Choke Valve)
94	●292681	Kit-Idle Mixture	110	691186	Washer (Choke Shaft)	267	691082	Screw (Casing Clamp)
95	691437	Screw (Throttle Valve)	125		Carburetor <b>(See Previous Page)</b>	689	691591	Spring-Friction
97	691944	Shaft-Throttle	127	●690627	Plug-Welch	689A	691590	Spring-Friction
98	693942	Kit-Idle Speed	130	691727	Valve-Throttle	800	220521	Retainer-Carburetor Drain
101	691616	Pin-Shaft	132	691708	Stop-Throttle	971	691090	Screw (Air Cleaner Base to Carburetor)
			133	692265	Float-Carburetor <b>(See Previous Page)</b>	1146	691587	Screw (Choke Shaft)
			134		Kit-Needle/Seat <b>(See Previous Page)</b>	1227		Valve-High Speed <b>(See Previous Page)</b>
			142	●691966	Nozzle-Carburetor (Standard) (Labeled B) (Used After Code Date 81090800).			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095



# 326400

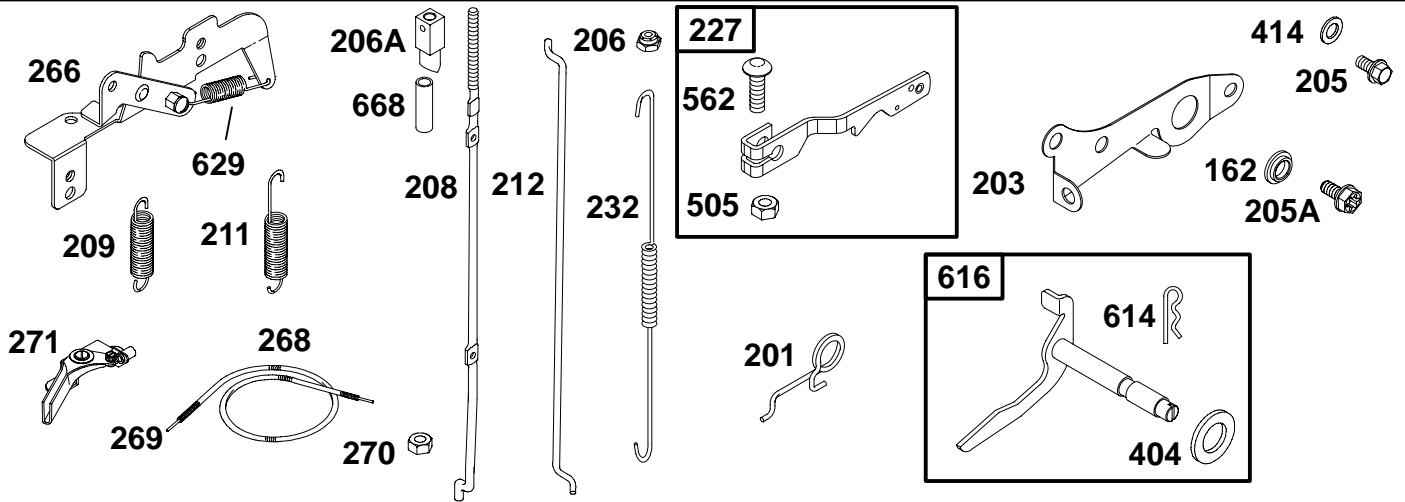

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690267	Collar-Bell Crank	212	691791	Link-Throttle	268	691025	Casing-Control Wire
201	261027	Link-Air Vane Used on Type No(s). 0234, 0705.			----- <b>Note</b> ----- 691595 Link-Throttle Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770.			(Cut to Required Length)
203	690263	Crank-Bell	227	690607	Lever-Governor Control	269	691026	Wire-Control (Cut to Required Length)
205	691681	Screw (Bell Crank) Used on Type No(s). 0136, 0139, 0204, 0228, 0234, 0248, 0328, 0678, 0705.			----- <b>Note</b> ----- 690616 Lever- Governor Control Used on Type No(s). 0611, 0630, 0647, 0651, 0684, 0690, 0706, 0721, 0660, 0671, 0675, 0681, 0683, 0685, 0689, 0692, 0694, 0697, 0699, 0801, 2520, 2527, 2528, 2529, 2550, 2561, 2581, 2582.	270	691027	Nut (Control Wire Casing)
205A	690810	Screw (Bell Crank)				271	691028	Lever-Control ----- <b>Note</b> ----- 221987 Lever-Control Used on Type No(s). 0678, 0705.
206	691079	Nut-Governor Adjusting	232	690545	Spring-Governor Link ----- <b>Note</b> ----- 692207 Spring- Governor Link Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770.	404	690264	Washer (Governor Crank)
206A	691584	Nut-Governor Adjusting				414	692810	Washer (Bell Crank) Used on Type No(s). 0136, 0139, 0204, 0228, 0234, 0248, 0328, 0678, 0705.
208	691761	Rod-Governor Control				505	691251	Nut (Governor Control Lever)
209	691596	Spring-Governor ----- <b>Note</b> ----- 691789 Spring- Governor Used on Type No(s). 0611, 0630, 0647, 0651, 0690, 0760, 0781, 0801, 2520, 2527, 2528, 2529, 2550, 2581, 2582.	266	494554	Control-Throttle ----- <b>Note</b> ----- 299361 Control- Throttle (Dial Control)	562	92613	Bolt (Governor Control Lever)
211	691790	Spring-Governed Idle Used on Type No(s). 0611, 0630, 0647, 0651, 0690, 0760, 0781, 0801, 2520, 2527, 2528, 2529, 2550, 2581, 2582.				614	691620	Pin-Cotter
						616	291364	Crank-Governor
						629	690538	Spring-Throttle Return Used on Type No(s). 0234, 0631, 0632, 0637, 0641, 0642, 0705, 0803, 2580.
						668	690313	Spacer

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

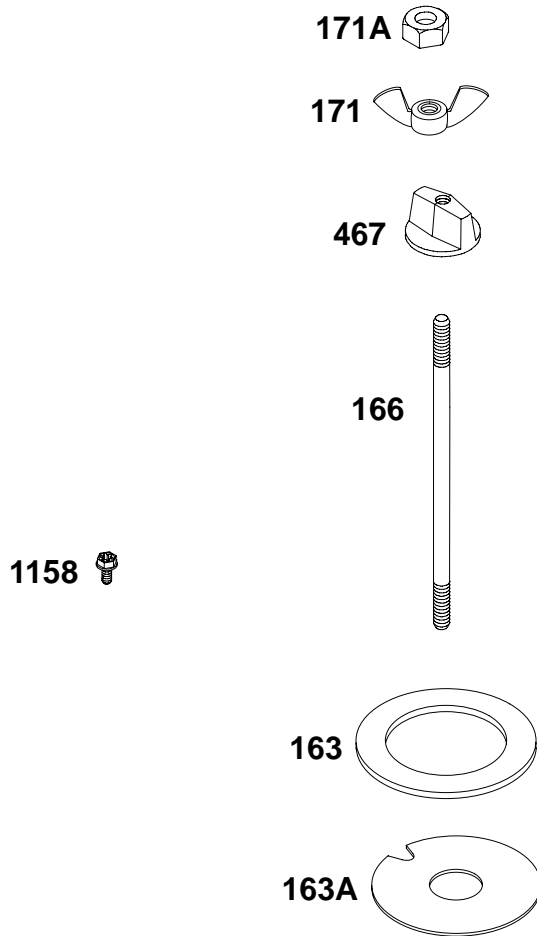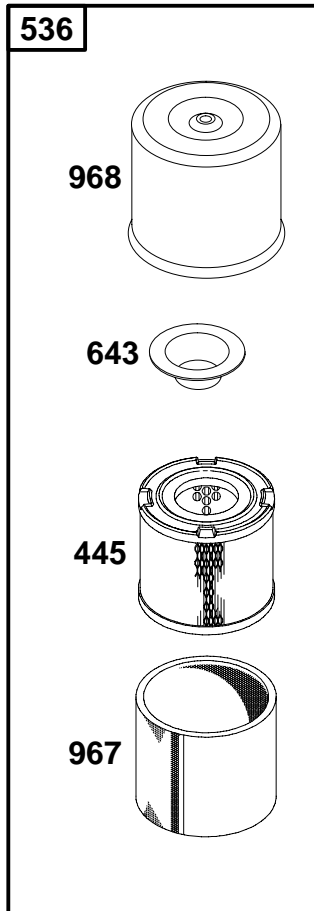


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163	67247	Gasket–Air Cleaner Used on Type No(s). 0308.	171	691331	Nut (Air Cleaner)	643	691730	Retainer–Air Filter
163A	270987	Gasket–Air Cleaner	171A	690284	Nut (Air Cleaner)	967	271794	Filter–Pre Cleaner
166	691241	Stud–Air Cleaner (9 1/2" Long)	445	393957	Filter–Air Cleaner Cartridge	968	691755	Cover–Air Cleaner
			467	691668	Knob–Air Cleaner	1158	690293	Screw (Carburetor) (Used to plug Air Cleaner Stud Hole) Used on Type No(s). 0262, 0630.
			536	391063	Cleaner–Air			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

∅ Valve Gasket Set–Reference 1095


# 326400

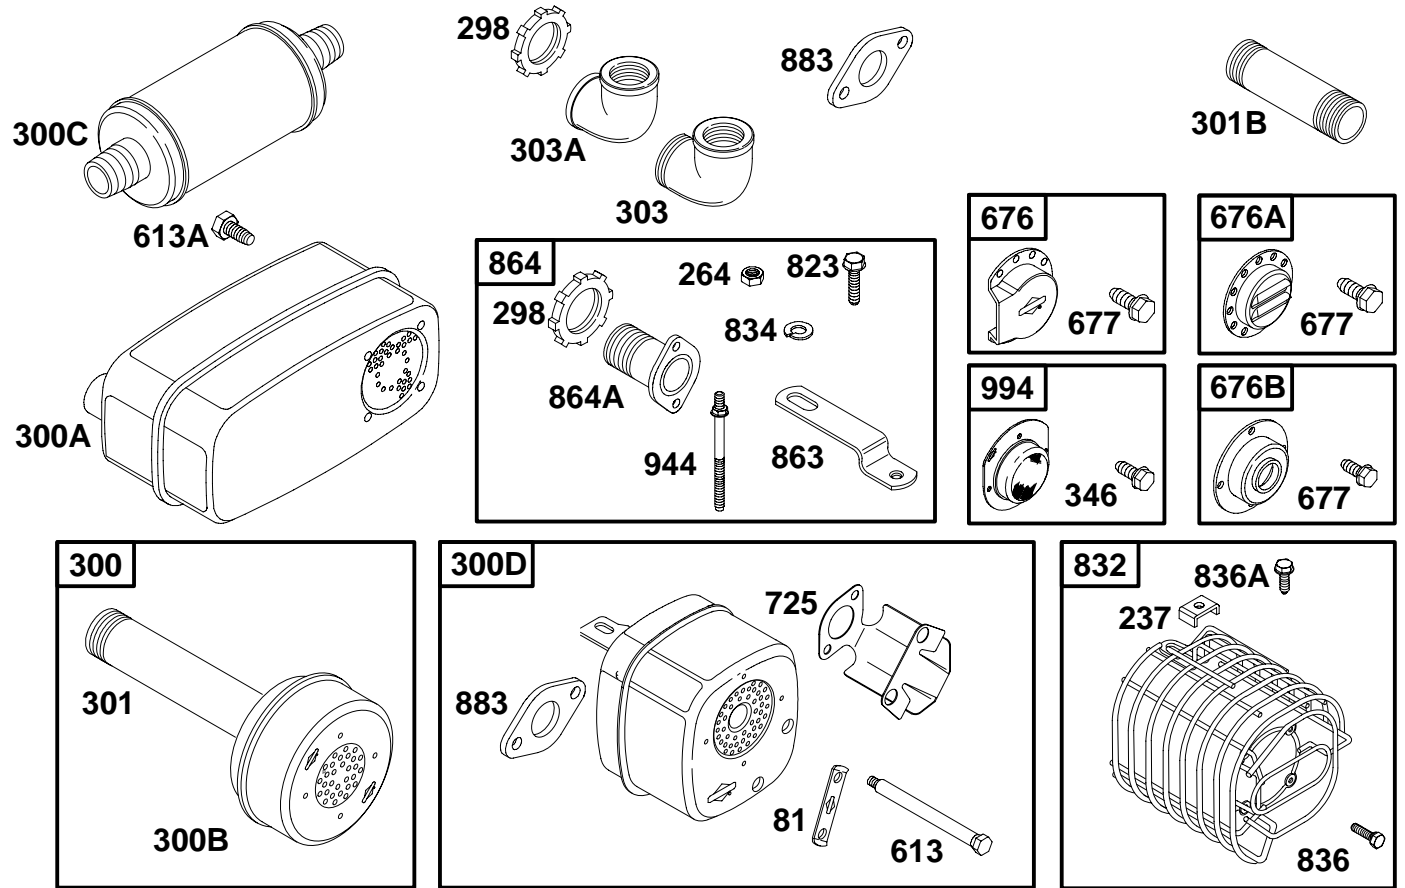

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree)	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			<b>Note</b>	677	690661	Screw (Muffler Deflector)
300	393232	Muffler			91415 Elbow-Exhaust (1", 45 Degree)	725	690420	Shield-Heat
300A	498984	Muffler	346	690661	Screw (Spark Arrestor)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613	691416	Screw (Muffler)	832	690648	Guard-Muffler
300C	291519	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			<b>Note</b>	836	691083	Screw (Muffler Guard)
301	93734	Pipe-Exhaust (8" Long)			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836A	690367	Screw (Muffler Guard)
301B	91416	Pipe-Exhaust (Used on Type No(s). 0163, 0327.)				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	★692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

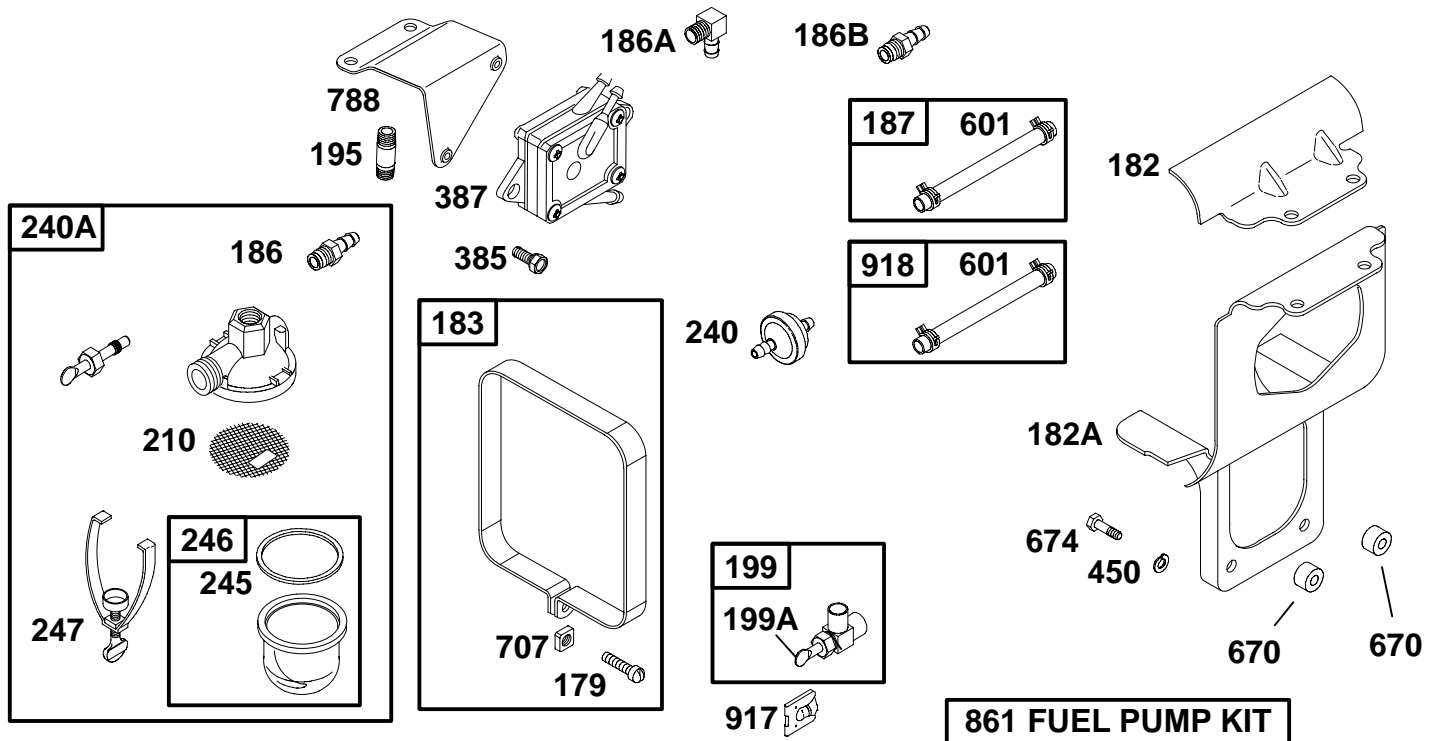


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	187	499167	Line-Fuel ----- <b>Note</b> ----- <b>89248</b> Line-Fuel (2 1/4" Long) Used on Type No(s). 0080, 0386, 0387, 0393, 0395, 0396, 0397, 0631, 0640, 0641, 0662, 2580.	387	808656	Pump-Fuel
182	691068	Bracket-Fuel Tank ----- <b>Note</b> ----- <b>222669</b> Bracket-Fuel Tank Used on Type No(s). 0205, 0291, 0648.	195	91635	Nipple-Fuel	450	691075	Washer (Fuel Tank Bracket)
182A	690262	Bracket-Fuel Tank	199	692302	Valve-Fuel Shut Off	601	95162	Clamp-Hose
183	691937	Strap-Fuel Tank ----- <b>Note</b> ----- <b>291367</b> Strap-Fuel Tank (4 Quart) Used on Type No(s). 0206, 0211, 0213, 0229, 0271.	199A	691940	Valve-Fuel Shut Off	670	690505	Spacer-Fuel Tank
186	691764	Connector-Hose	210	691962	Strainer-Fuel	674	690303	Screw (Fuel Tank Bracket)
186A	691609	Connector-Hose	240	298090	Filter-Fuel ----- <b>Note</b> ----- <b>394358</b> Filter-Fuel Used on Type No(s). 0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581.	707	690279	Nut (Fuel Tank Strap)
186B	231238	Connector-Hose	240A	690612	Filter-Fuel	788	224123	Bracket-Fuel Pump
			245	★692190	Gasket-Fuel Bowl	861	394462	Kit-Fuel Pump (Walbro) ----- <b>Note</b> ----- <b>494280</b> Kit-Fuel Pump Used on Type No(s). 0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.
			246	298683	Bowl-Fuel Filter	917	691737	Handle-Shut Off Valve
			247	691700	Yoke-Bowl	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
			385	692198	Screw (Fuel Pump)			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095



# 326400

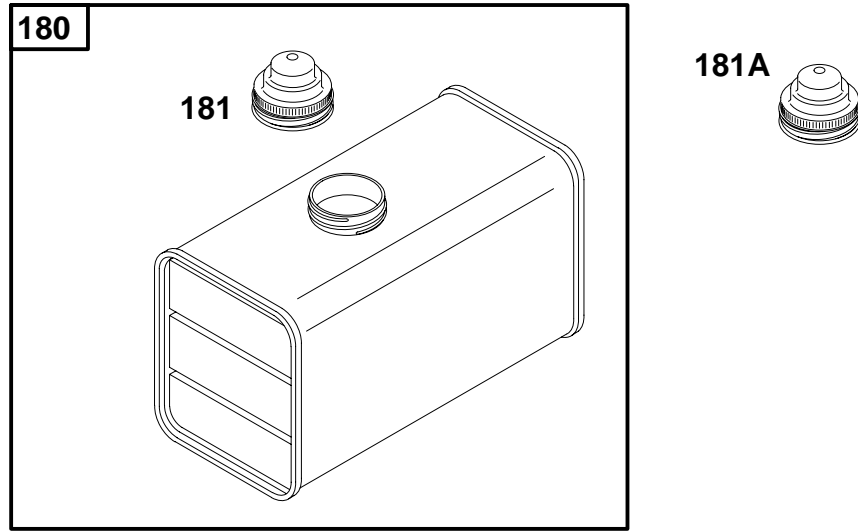

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>180</b>	<b>291488</b>	Tank-Fuel (6 Quart) ----- <b>Note</b> ----- <b>290816</b> Tank-Fuel (4 Quart) <b>292415</b> Fuel Tank (8 Quart) Used on Type No(s). 0137, 0140, 0141, 0143, 0148, 0151, 0152, 0153, 0156, 0162, 0163, 0167, 0172, 0173, 0175, 0176, 0178, 0180, 0181, 0183, 0185, 0186, 0197, 0199, 0201, 0203, 0205, 0212, 0215, 0219, 0226, 0227, 0242, 0245, 0249, 0254, 0255, 0257, 0259, 0273, 0282, 0284, 0286, 0289, 0291, 0293, 0300, 0303, 0307, 0311, 0318, 0330, 0336, 0347, 0354, 0369, 0372, 0376, 0377, 0381,			0384, 0392, 0635, 0640, 0647, 0648, 0657, 0659, 0661, 0664, 0666, 0674, 0682, 0685, 0690, 0694, 0696, 0697, 0698, 0704, 0712, 0714, 0721, 0723, 0729, 0730, 0743, 0745, 0746, 0754, 0757, 0771, 0772.	<b>181</b>	<b>791545</b>	Cap-Fuel Tank (Chrome)
						<b>181A</b>	<b>392305</b>	Cap-Fuel Tank (Black)

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

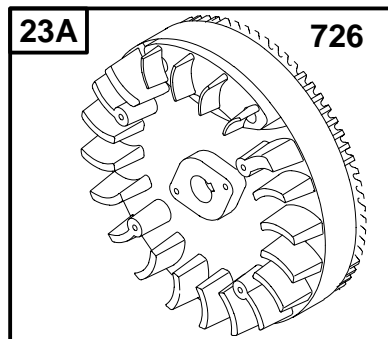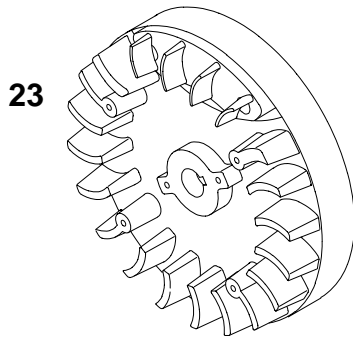


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
<b>23</b>	<b>395250</b>	Flywheel (For Magnetron Ignition, Identified by Two Red Stripes) Used on Type No(s). 0611, 0620, 0632, 0633, 0635, 0637, 0640, 0641, 0642, 0644, 0645, 0646, 0647, 0648, 0650, 0651, 0652, 0655, 0656, 0657, 0659, 0662, 0664, 0670, 0674, 0677, 0681, 0683, 0686, 0689, 0690, 0691, 0694, 0695, 0696, 0700, 0706, 0709, 0710, 0713, 0717, 0722, 0723, 0727, 0728, 0730, 0734, 0735, 0737, 0739, 0743, 0744, 0745, 0747, 0750, 0755, 0756, 0757, 0759, 0762, 0763, 0766, 0775, 0778, 0780, 0785, 0786, 0790, 0791, 0792, 0793, 0794, 0799, 0801, 0802, 0803, 0804, 2520, 2521, 2522, 2529, 2530, 2550, 2560, 2561, 2562, 2580, 2581, 2582, 2583.	<b>23A</b>	<b>395251</b>	Flywheel (For Magnetron Ignition, Identified by Two Red Stripes) ----- <b>Note</b> ----- <b>395269</b> Flywheel (For Magnetron Ignition, Identified by Two Red Stripes) Used on Type No(s). 0736. <b>391363</b> Flywheel (10 Amp) (Used With Breaker Points and Condenser System) Used on Type No(s). 0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0164, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0222, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238, 0240, 0248, 0249, 0250, 0251, 0252, 0257, 0261, 0262, 0265, 0271, 0273, 0274, 0275, 0276, 0277, 0278, 0279, 0281,				0282, 0283, 0284, 0285, 0286, 0287, 0288, 0296, 0298, 0303, 0304, 0306, 0307, 0309, 0310, 0311, 0315, 0316, 0317, 0318, 0319, 0320, 0321, 0322, 0323, 0324, 0325, 0326, 0328, 0330, 0331, 0332, 0333, 0334, 0337, 0338, 0340, 0343, 0347, 0348, 0349, 0350, 0351, 0353, 0355, 0358, 0359, 0360, 0363, 0364, 0367, 0370, 0371, 0372, 0374, 0375, 0376, 0377, 0378, 0379, 0381, 0382, 0383, 0388, 0389, 0392, 0394, 0399.
						<b>726</b>	<b>391362</b>	Gear-Ring	

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

# 326400

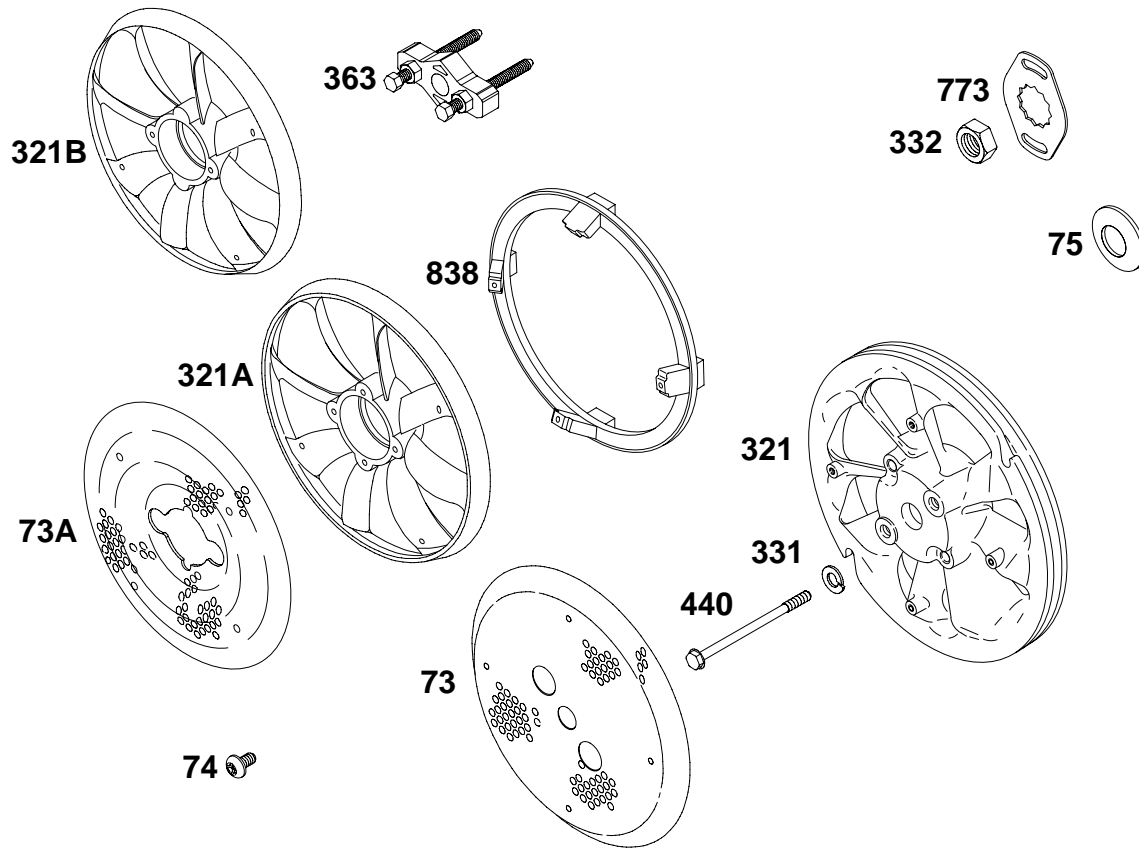


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	691171	Screen-Rotating -----Note----- 690404 Screen-Rotating Used on Type No(s). 0127, 0133, 0182, 0190, 0210, 0222, 0252, 0262, 0315, 0333, 0630, 0649, 2582, 2583.	74	691655	Screw (Rotating Screen)	440	691076	Screw (Booster Fan)
73A	690410	Screen-Rotating	75	691056	Washer (Flywheel)	773	690265	Retainer
			321	691151	Fan-Booster	838	211983	Adapter-Blower Housing Ring
			321A	690377	Fan-Booster			
			321B	212000	Fan-Booster			
			331	691075	Washer (Booster Fan)			
			332	691059	Nut (Flywheel)			
			363	19203	Puller-Flywheel			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095



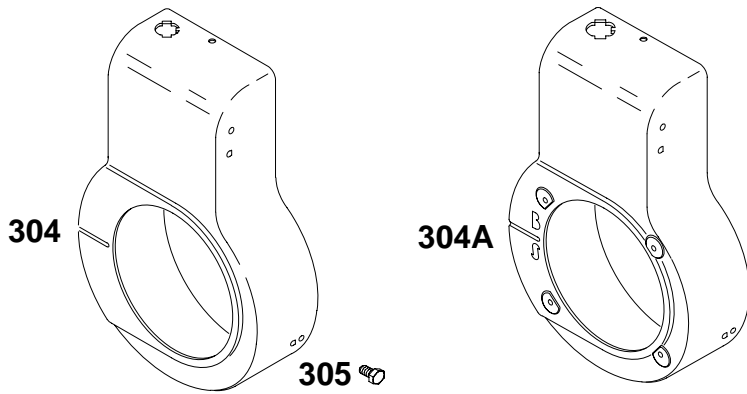


**1019 LABEL KIT**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>304</b>	<b>294698</b>	Housing-Blower ----- <b>Note</b> ----- <b>297010</b> Housing-Blower Used on Type No(s). 0060, 0119, 0160, 0197, 0216, 0223, 0237. <b>297453</b> Housing-Blower Used on Type No(s). 0020, 0023, 0050, 0136, 0139, 0140, 0145, 0150, 0151, 0152, 0155, 0159, 0175, 0181, 0183, 0191, 0199, 0203, 0204, 0205, 0206, 0208, 0212, 0218, 0219, 0226, 0227, 0228, 0254, 0255, 0259. <b>391229</b> Housing-Blower Used on Type No(s). 0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238,			0248, 0249, 0259, 0251, 0252, 0257, 0261, 0262, 0265, 0271, 0273, 0275, 0276, 0277, 0278, 0279, 0281, 0282, 0283, 0284, 0285, 0286, 0287, 0288, 0296, 0298, 0303, 0304, 0306, 0307, 0309, 0310, 0311, 0315, 0316, 0317, 0318, 0319, 0320, 0321, 0322, 0323, 0324, 0325, 0326, 0328, 0330, 0331, 0332, 0333, 0334, 0337, 0338, 0340, 0343, 0347, 0348, 0349, 0350, 0351, 0353, 0355, 0358, 0359, 0360, 0363, 0364, 0367, 0370, 0371, 0372, 0374, 0375, 0376, 0377, 0378, 0379, 0381, 0382, 0383, 0388, 0389, 0392, 0394, 0399, 0630, 0634, 0636, 0638, 0640, 0643, 0649, 0653, 0654, 0658, 0660, 0661, 0663, 0665, 0666, 0667, 0668, 0669, 0671, 0672, 0673, 0675, 0676, 0678, 0679, 0680, 0684, 0685, 0687, 0688, 0692, 0693, 0697, 0698, 0699,			0701, 0702, 0703, 0704, 0705, 0707, 0708, 0712, 0714, 0715, 0716, 0718, 0720, 0721, 0724, 0725, 0729, 0731, 0733, 0736, 0738, 0741, 0742, 0746, 0748, 0749, 0751, 0752, 0753, 0754, 0760, 0761, 0764, 0765, 0770, 0771, 0772, 0774, 0776, 0779, 0782, 0783, 0784, 0787, 0789, 0797, 2527, 2528, 2563, 2596. <b>692359</b> Housing-Blower Used on Type No(s). 0682. <b>395513</b> Housing-Blower Used on Type No(s). 0711, 0719, 0732, 0740, 0781, 2529. <b>399177</b> Housing-Blower Used on Type No(s). 0758, 0788.
	<b>304A</b>	<b>392343</b> Housing-Blower (Low Profile) Used on Type No(s). 0713, 0744, 0750, 0755, 0759, 0780, 0785, 0786, 2561, 2562.				<b>305</b>	<b>692198</b>	Screw (Blower Housing)
	<b>1019</b>	<b>491258</b> Kit-Label						

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095


# 326400

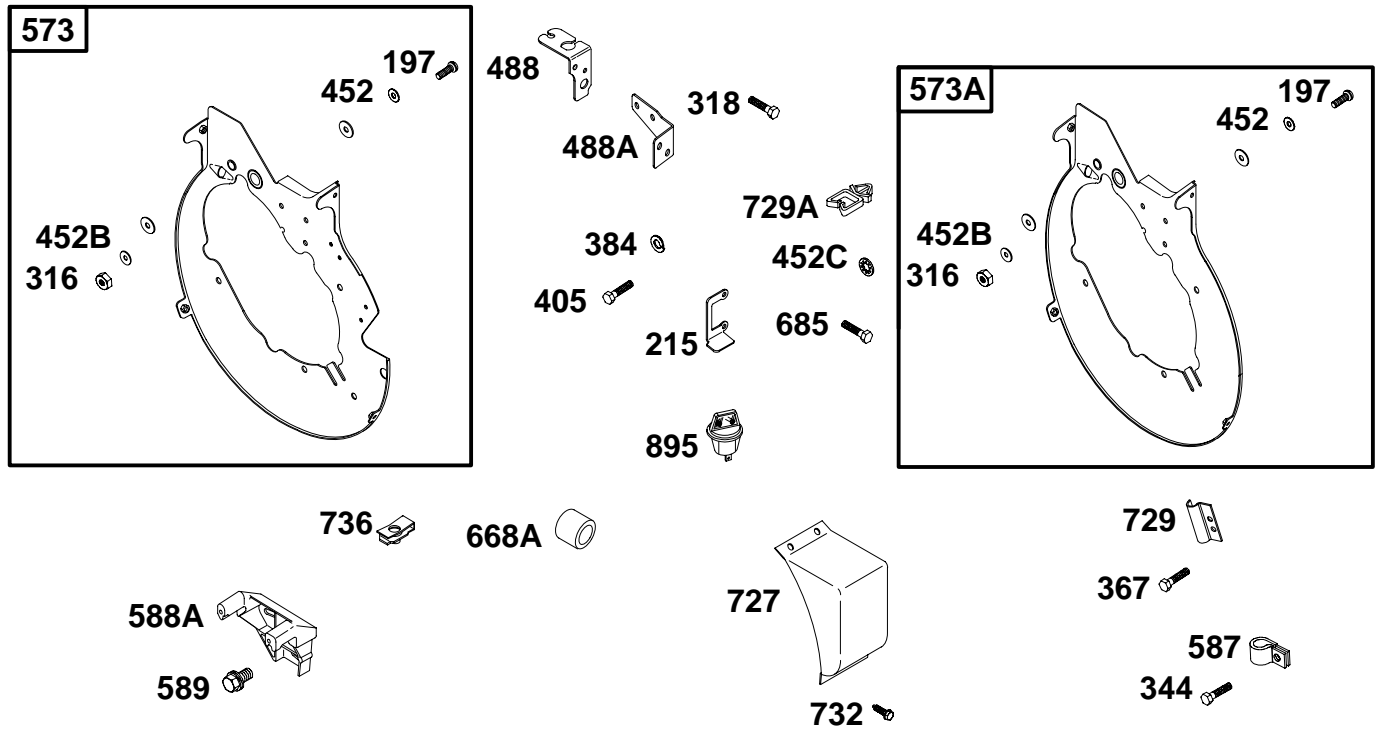

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
197	90072	Screw (Back Plate)	452	92864	Washer (Back Plate)	668A	231065	Spacer Used on Type No(s). 0164, 0240.
215	222445	Guide-Air	452B	26404	Washer (Back Plate)	685	690661	Screw (Rectifier)
316	691612	Nut (Back Plate)	452C	691077	Washer (Back Plate)	727	692338	Cover-Starter Drive
318	691666	Screw (Mounting Bracket)	488	222211	Bracket-Fuse	729	690432	Clip-Wire (Alternator)
344	690305	Screw (Cable Clamp)	488A	222345	Bracket-Fuse	729A	690588	Clip-Wire
367	690305	Screw (Wire Clip)	573	391220	Plate-Back <b>(Used on Engines With Electric Start Only)</b>	732	93410	Screw (Starter Drive Cover)
384	690371	Washer (Back Plate)	573A	299450	Plate-Back	736	690302	Nut-Clip
405	690290	Screw (Back Plate)	587	690389	Clamp-Cable	895	692309	Switch-Rotary
			588A	690375	Bracket-Armature <b>(Used on Engines With Electric Starter)</b>			
			589	690300	Screw (Armature Bracket)			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095


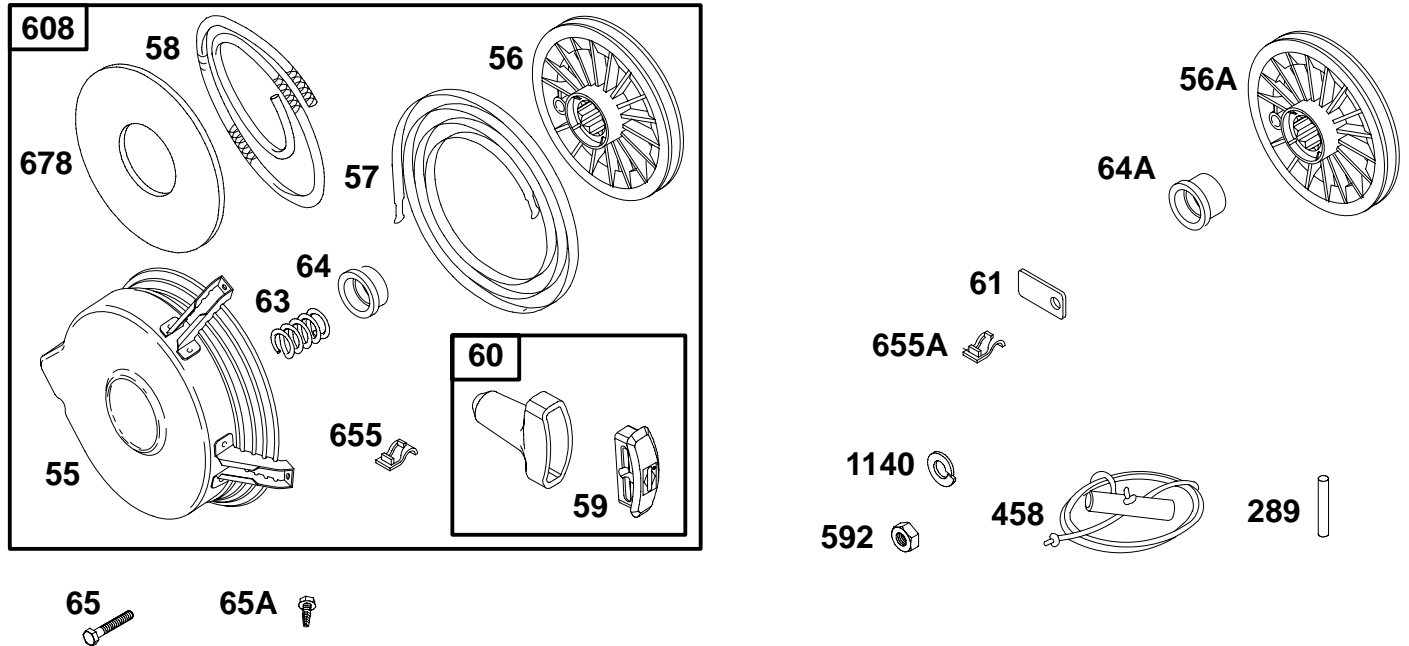


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing–Rewind Starter (Low Profile)	58	692188	Rope–Starter (63" Long) (Use With Plastic Pulley)	60	490652	Grip–Starter Rope
56	392630	Pulley–Starter (Low Profile)			----- <b>Note</b> -----	61	68848	Bumper–Starter Pulley (Wide Legs Starter Housing)
56A	295871	Pulley–Starter (Wide Legs Starter Housing, Includes 63" Rope)			<b>695002</b> Rope–Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley)	63	690547	Spring–Ratchet
57	490179	Spring–Rewind Starter			<b>66564</b> Rope–Starter (63" Long) (Use With Metal Pulley)	64	690511	Adapter–Ratchet Spring (Low Profile)
					<b>66574</b> Rope–Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley)	64A	691920	Adapter–Ratchet Spring (Wide Legs Starter Housing)
			59	490653	Insert–Grip	65	691693	Screw (Rewind Starter)
						65A	93254	Screw (Rewind Starter)
						289	230228	Pin–Starter Grip
						458	69932	Kit–Handle/Rope
						592	690276	Nut (Rewind Starter)
						608	691958	Starter–Rewind
						655	691734	Anchor–Rewind Spring
						655A	221014	Anchor–Rewind Spring (Wide Legs Starter Housing)
						678	490817	Spacer–Rewind
						1140	690286	Washer (Rewind Starter)

★ Engine Gasket Set–Reference 358  
 ● Carburetor Overhaul Kit–Reference 121

∅ Valve Gasket Set–Reference 1095

# 326400

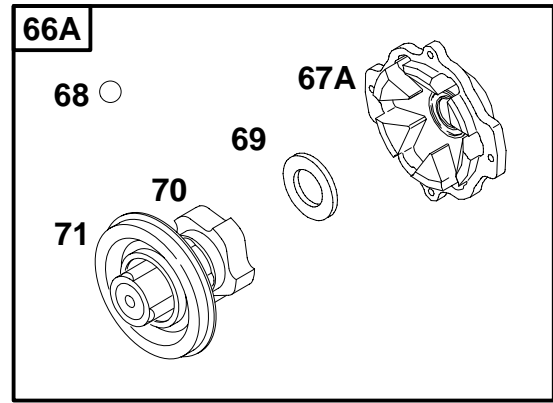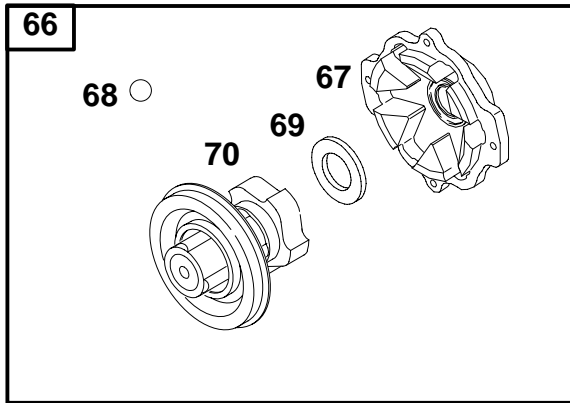

69A 


69B 

257 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
66	393127	Clutch-Starter	69	690271	Washer (Starter Clutch)	71	691359	Cover-Ratchet
66A	399671	Clutch-Starter (Sealed)	69A	690260	Washer (Starter Clutch)	257	690309	Screw (Starter Clutch)
67	690542	Housing-Clutch	69B	690277	Washer (Starter Clutch)			
67A	394897	Housing-Clutch	70	691945	Ratchet-Clutch			
68	691604	Ball-Clutch						

★ Engine Gasket Set-Reference 358  
 ● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

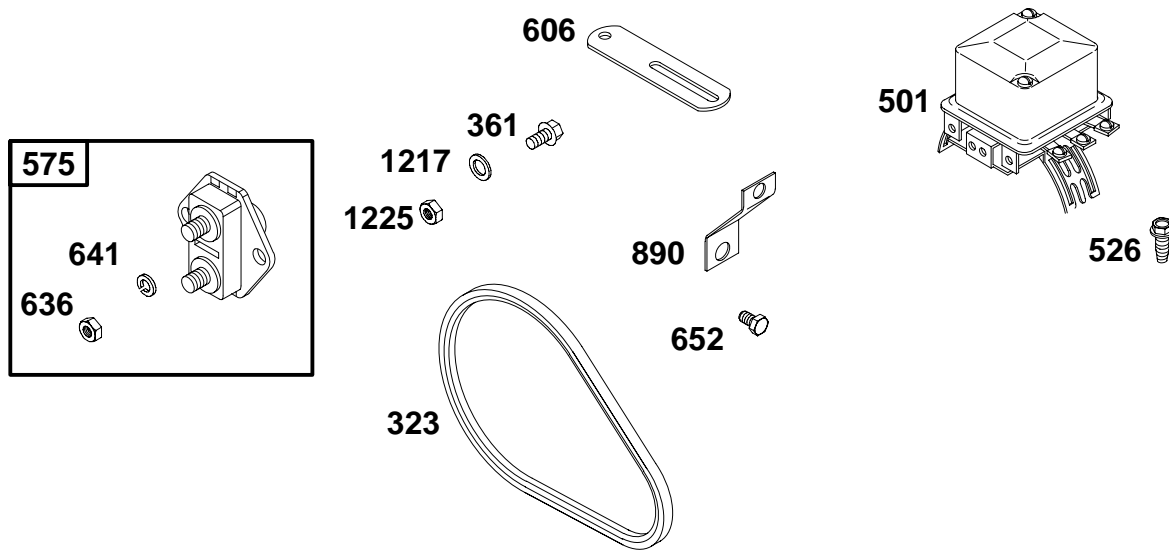


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
323	68898	Belt-Vee (For Low Position Mounting)	526	690297	Screw (Regulator)	890	221472	Bracket-Support
		----- <b>Note</b> -----	575	692303	Switch-Starting	1217	690282	Washer (Starting Switch)
		<b>68878</b> Belt-Vee (For High Position Mounting)	606	221442	Strap-Adjusting	1225	691029	Nut (Starting Switch)
361	691681	Screw (Starting Switch)	636	696198	Nut (Starting Switch) (Terminal)			
501	297196	Regulator (Saddle Mount) (Delco Remy No. 1119577)	641	691075	Washer (Starting Switch) (Terminal)			
			652	693972	Screw (Support Bracket)			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095






# 326400

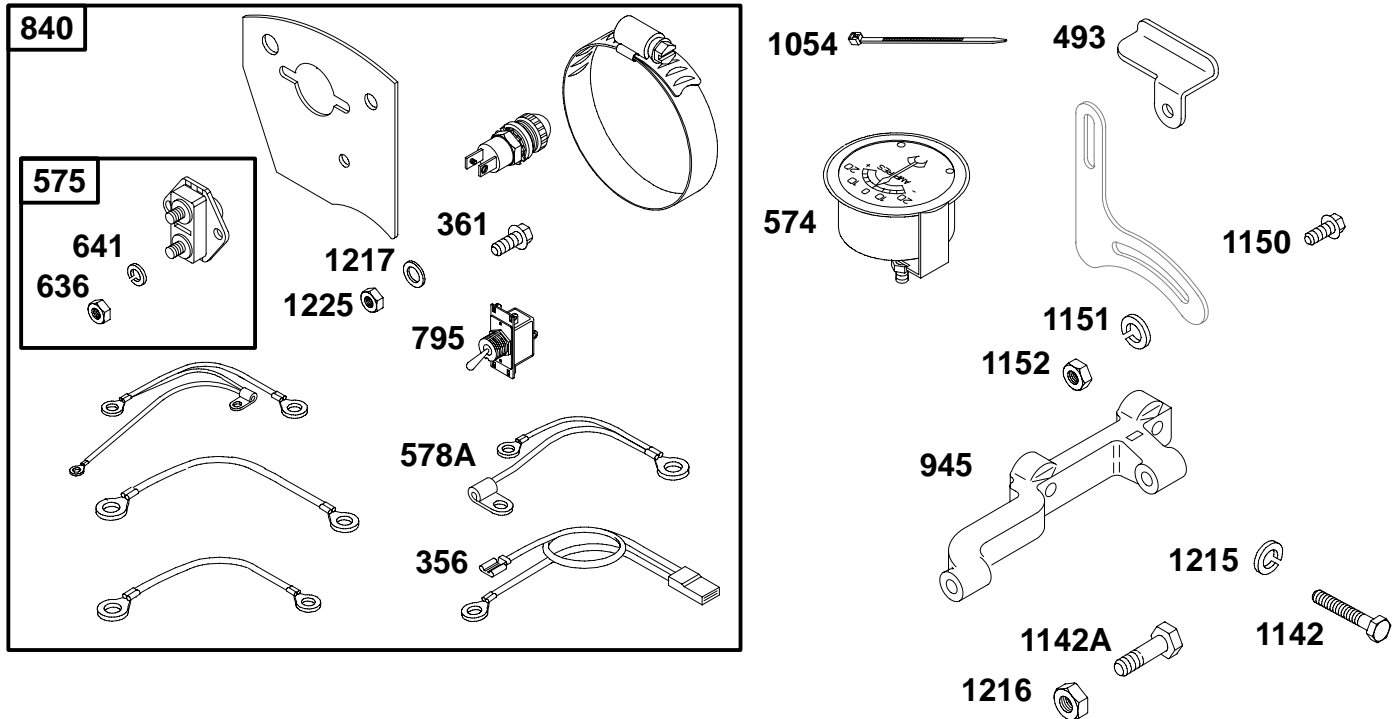

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	398808	Wire-Stop	795	298590	Switch-Toggle	1215	691075	Washer (Starter Bracket)
361	93415	Screw (Starting Switch)	840	298561	Kit-Panel (Generator Panel)	1216	691105	Nut (Starter Bracket)
493	221933	Bracket-Mounting	945	211785	Bracket-Starter Motor	1217	690282	Washer (Starting Switch)
574	295158	Ammeter (Stewart Warner Number 357-W)	1054	280275	Tie-Cable	1225	691029	Nut (Starting Switch)
575	692303	Switch-Starting	1142	690303	Screw (Starter Motor Bracket)			
578A	298582	Wire Assembly	1142A	691614	Screw (Starter Motor Bracket) (1 3/4" Long)			
636	696198	Nut (Starting Switch) (Terminal)	1150	691058	Screw (Adjusting Strap)			
641	691075	Washer (Starting Switch) (Terminal)	1151	690282	Washer (Adjusting Strap)			
			1152	691105	Nut (Adjusting Strap)			

★ Engine Gasket Set-Reference 358  
 ● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

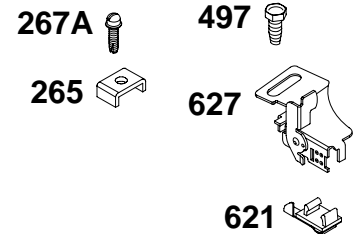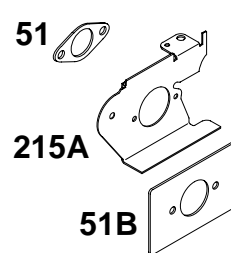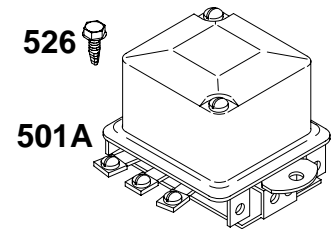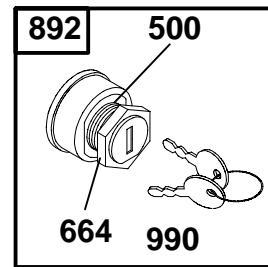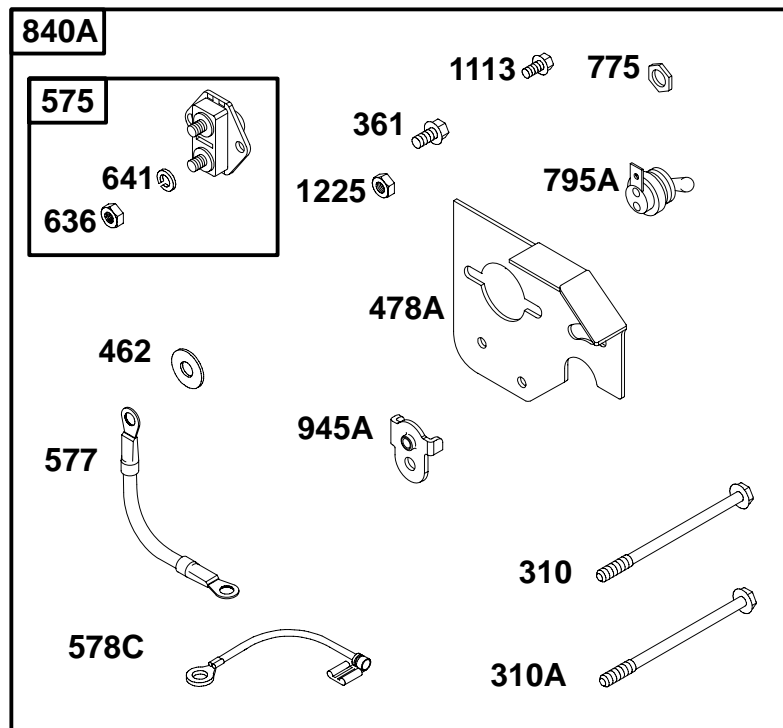


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★Ø27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	★Ø692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988)	795A	496590	Switch-Toggle
215A	291871	Guide-Air				840A	395408	Kit-Panel (Toggle Switch)
265	692179	Clamp-Casing						----- <b>Note</b> -----
267A	93107	Screw (Casing Clamp)						<b>395409</b> Kit-Panel (Key Switch)
		----- <b>Note</b> -----						
		<b>691044</b> Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	526	690297	Screw (Regulator)	892	392833	Switch-Key
310	690323	Screw (Starter Motor) (4" Long)	575	692303	Switch-Starting	945A	692132	Bracket-Starter Motor
310A	692329	Screw (Starter Motor) (5" Long)	577	690630	Cable-Starter	990	691959	Key Set
361	93415	Screw (Starting Switch)	578C	690647	Wire Assembly	1113	691681	Screw (Panel)
462	690282	Washer (Starter Cable)	621	297472	Switch-Stop	1225	691029	Nut (Starting Switch)
478A	395410	Panel	627	392884	Bracket-Stopswitch			
497	692198	Screw (Stopswitch Bracket)	636	696198	Nut (Starting Switch) (Terminal)			
			641	691075	Washer (Starting Switch)			
			664	691087	Nut (Key Switch)			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095

# 326400

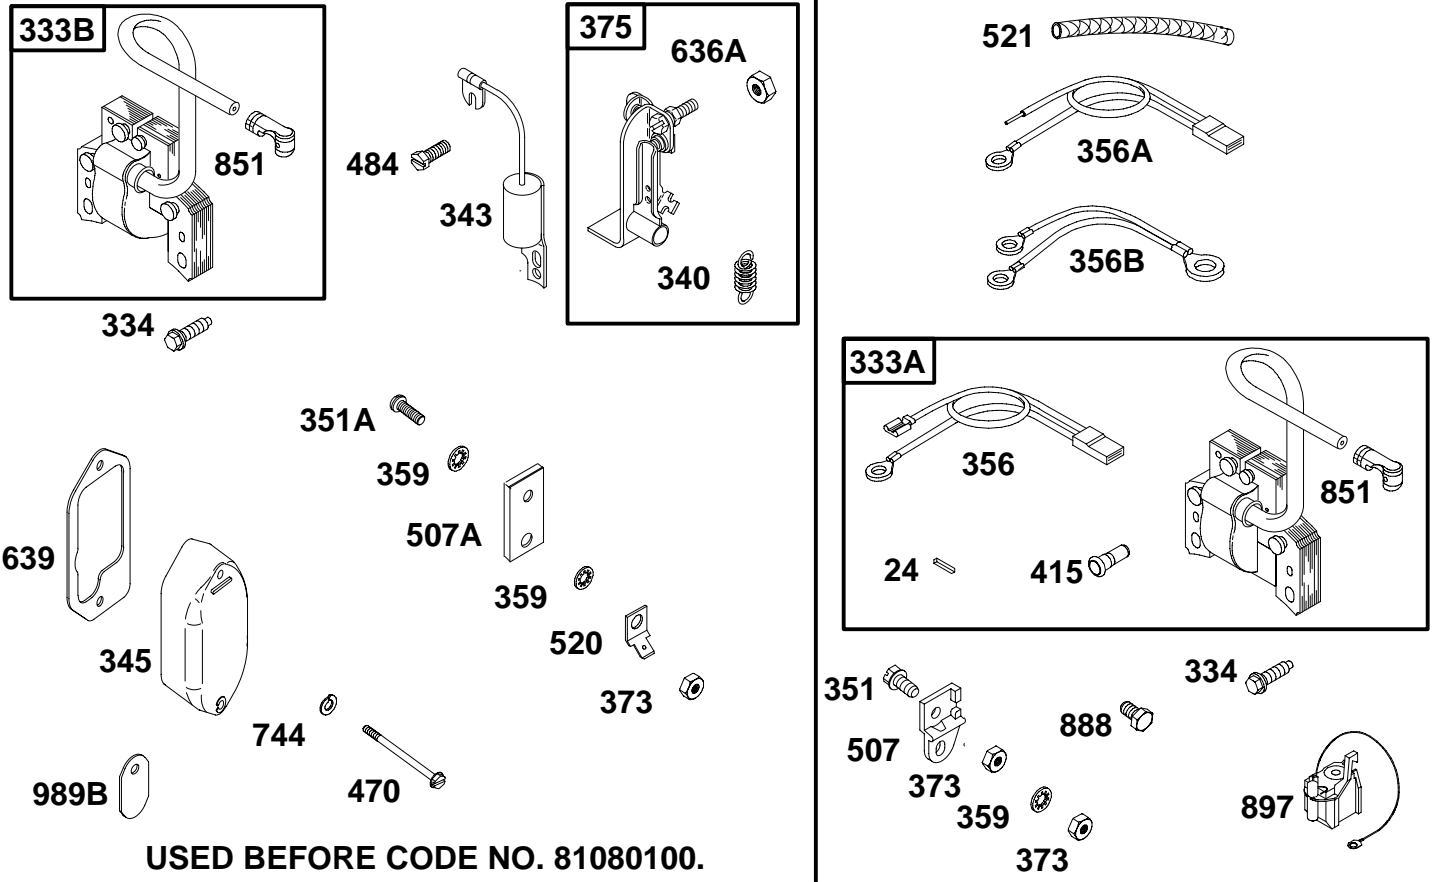

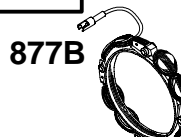

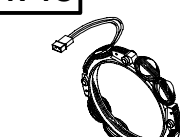

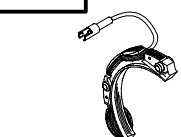

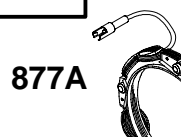








REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Armature Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop (Used on Type No(s). 0643, 0646, 0735.	----- <b>Note</b> -----		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	299598	691084	Insulator (Used on Type No(s). 0131.
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	520	691084	Terminal-Ground
343	298060	Condenser	375	298185	Breaker-Ignition	521	291508	Shield-Cable
345	211327	Cover-Breaker	415	692882	Plug	636A	230783	Nut (Starting Switch)
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	639	692913	Gasket-Breaker Box
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	744	690277	Washer (Breaker Cover)
						851	493880	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B	221976	Stop Switch-Spark Plug

★ Engine Gasket Set-Reference 358  
 ● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095



DUAL CIRCUIT	REGULATED	10/13/16 AMP	AC ONLY	DC ONLY
<b>474</b>  <b>877</b> 	<b>474A</b>  <b>877B</b> 	<b>474C</b>  <b>1059</b> 	<b>474D</b>  <b>1059</b> 	<b>474E</b>  <b>877A</b> 
<b>878</b> 	<b>878C</b> 	<b>578A</b> 	<b>578</b> 	<b>578A</b> 

**NOTE: ALL STATORS USE REFERENCE 119 MOUNTING SCREW.**




**NOTE: THE PROPER FLYWHEEL PART NUMBER AND/OR THE ALTERNATOR MAGNET SIZE WILL DETERMINE THE ALTERNATOR TYPE OR OUTPUT. SEE REPAIR INSTRUCTIN MANUAL FOR ADDITIONAL INFORMATION.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696459	Alternator (Dual Circuit)	501B	691185	Regulator (10 Amp)	1059	698516	Kit-Screw/Washer (Alternator)
474A	696457	Alternator (Tri-Circuit)	526	690297	Screw (Regulator)	1119	691183	Screw (Alternator)
474C	696458	Alternator (10, 13, 16 Amp) (Key Switch)	578	390867	Wire Assembly			
474D	391595	Alternator (AC Only)	578A	692306	Wire Assembly			
474E	696578	Alternator (DC Only)	844	261269	Spring-Diode			
475A	391507	Rectifier	877	393456	Wire/Connector-Alternator (Dual Circuit)			
481	230976	Bushing-Alternator	877A	393814	Wire/Connector-Alternator (DC Only)			
487	390888	Cap-Wire/Fuse	877B	393537	Wire/Connector-Alternator (Tri-Circuit)			
			878	691237	Harness-Alternator			
			878C	691955	Harness-Alternator (Tri-Circuit)			

★ Engine Gasket Set-Reference 358  
 ● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095



# 326400

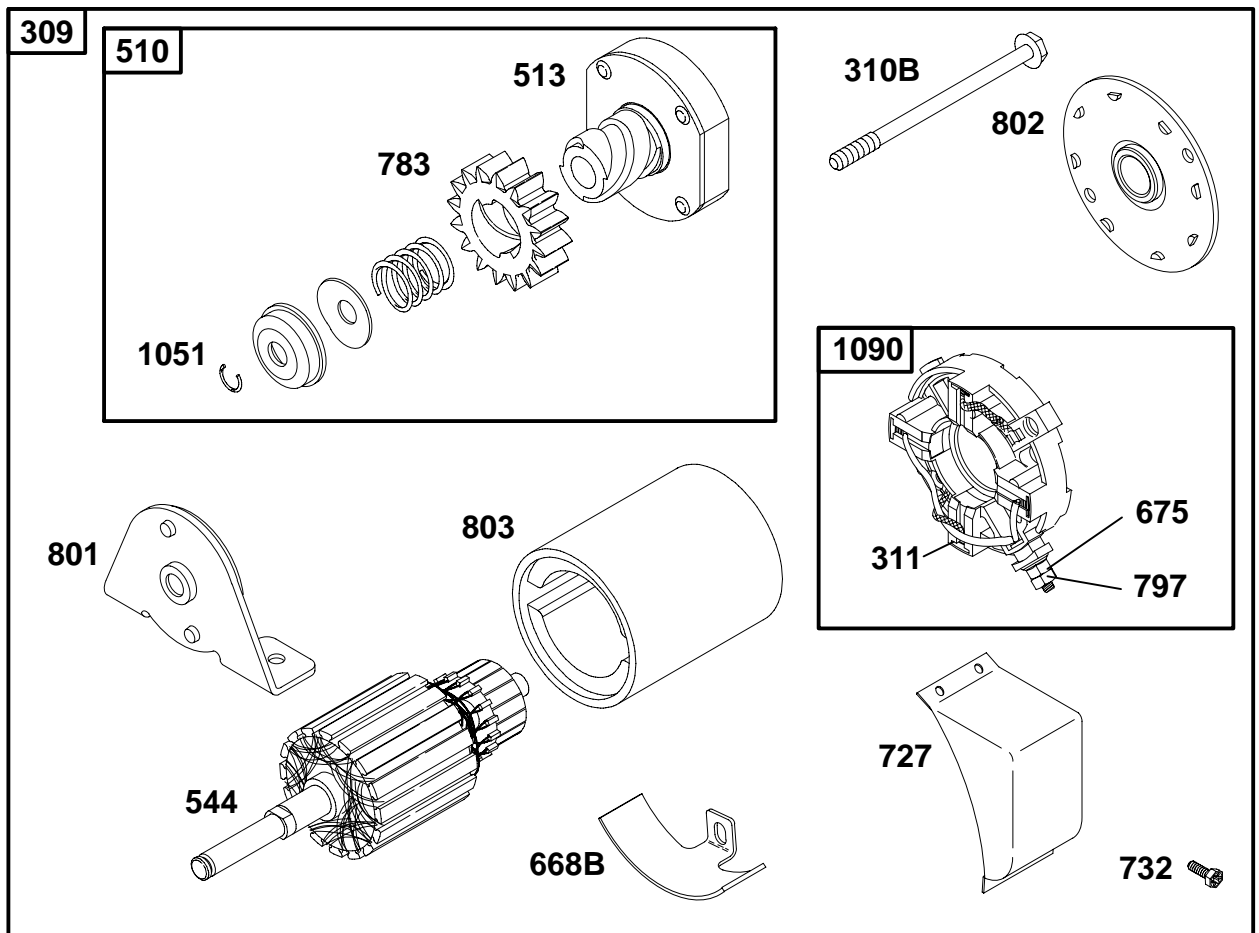

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	396306	Motor-Starter	668B	396515	Spacer	797	691029	Nut (Brush Retainer)
310B	691263	Screw (Starter Motor) (4 3/4" Long)	675	691261	Washer (Brush Retainer)	801	394802	Cap-Drive
311	497608	Brush Set	697	691058	Screw (Drive Cap)	802	691286	Cap-End
510	696541	Drive-Starter	727	692338	Cover-Starter Drive	803		Housing-Starter (Served By 396306 Starter Motor Only)
513	692024	Clutch-Drive	732	93410	Screw (Starter Drive Cover)	1051	691265	Ring-Retaining
544		Armature-Starter (Served By 396306 Starter Motor Only)	783	695708	Gear-Pinion	1090	691293	Retainer-Brush

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095


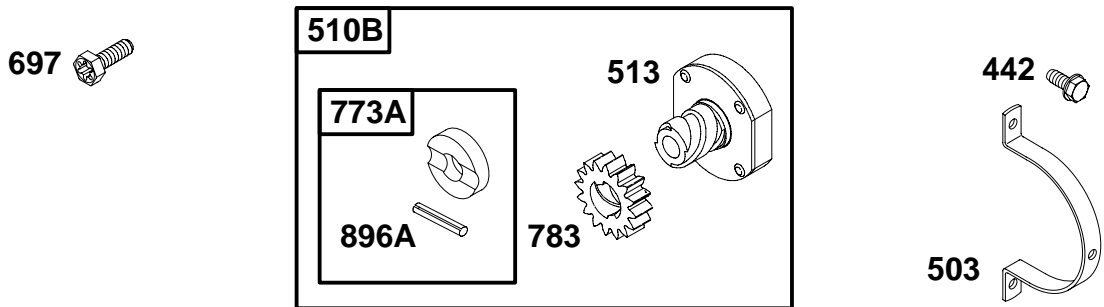
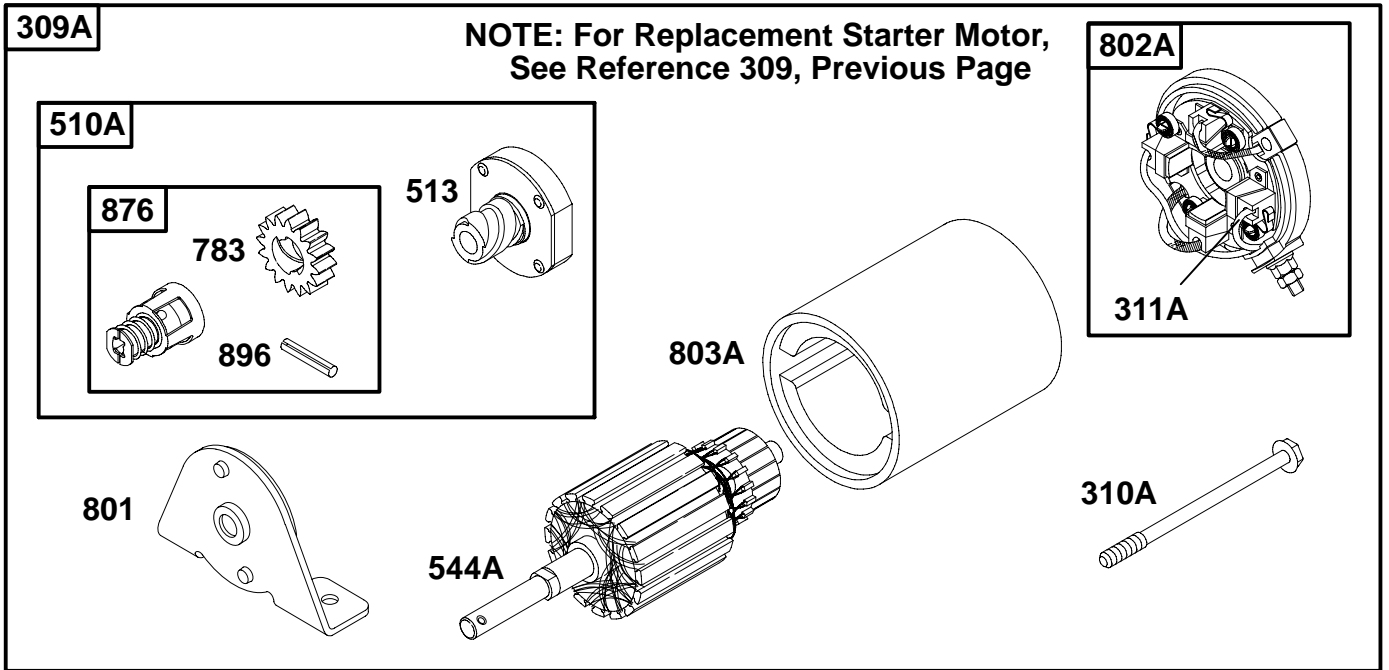


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>309A</b>		Motor-Starter (For Replacement Starter Motor, See Reference 309, Previous Page)	<b>503</b>	<b>690406</b>	Strap-Starter	<b>801</b>	<b>394802</b>	Cap-Drive
			<b>510A</b>	<b>696540</b>	Drive-Starter	<b>802A</b>	<b>395537</b>	Cap-End
			<b>510B</b>	<b>696535</b>	Drive-Starter	<b>803A</b>	<b>494205</b>	Housing-Starter
			<b>513</b>	<b>692024</b>	Clutch-Drive	<b>876</b>	<b>696539</b>	Kit-Pinion Spring
<b>310A</b>	<b>692329</b>	Screw (Starter Motor) (5" Long)	<b>544A</b>	<b>490309</b>	Armature Starter	<b>896</b>	<b>691641</b>	Pin-Drive Retainer (Copper)
			<b>697</b>	<b>691058</b>	Screw (Drive Cap)	<b>896A</b>	<b>94192</b>	Pin-Drive Retainer (Black)
<b>311A</b>	<b>395538</b>	Brush Set	<b>773A</b>	<b>391462</b>	Retainer			
	<b>442</b>	Screw (Starter Strap)	<b>783</b>	<b>693059</b>	Gear-Pinion			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

∅ Valve Gasket Set-Reference 1095

# 326400

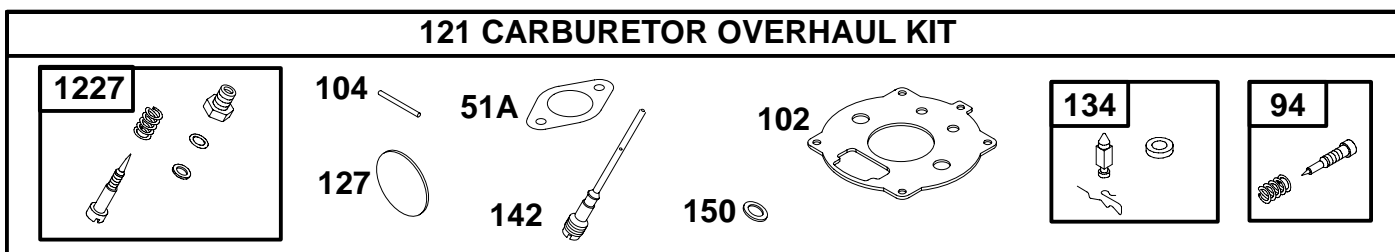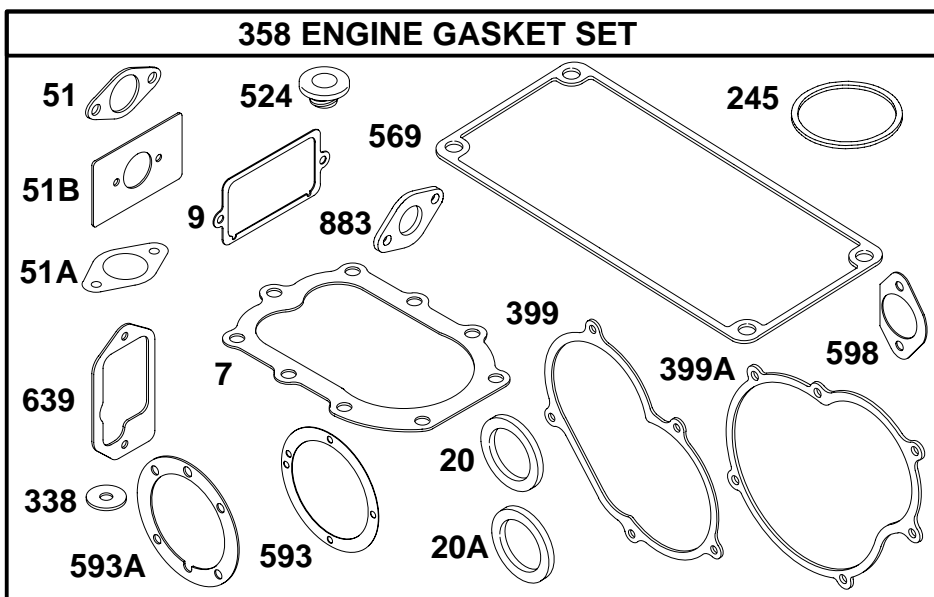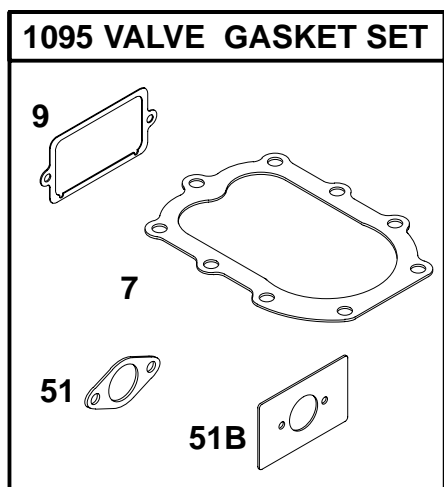

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
7	★Ø272166	Gasket-Cylinder Head	142	●691966	Nozzle-Carburetor (Labeled B)	593A	★270513	Gasket-Bearing Support (.015" Thick)
9	★Ø27803	Gasket-Breather	150	●691610	Gasket-Nozzle			----- <b>Note</b> -----
20	★691948	Seal-Oil (PTO Side)	245	★692190	Gasket-Fuel Bowl			★270514 Gasket-Bearing Support (.010" Thick)
20A	★291675	Seal-Oil (PTO Side)	338	★690270	Gasket-Dipstick			★270515 Gasket-Bearing Support (.005" Thick)
51	★Ø27381	Gasket-Intake	358	299719	Gasket Set-Engine	598	★270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
51A	★●692214	Gasket-Intake	399	★691310	Gasket-Counterweight Cover (Magneto Side)			----- <b>Note</b> -----
51B	★Ø692917	Gasket-Intake	399A	★692914	Gasket-Counterweight Cover (PTO Side)			★270517 Shim-End Play (Camshaft Bearing) (.007" Thick)
94	●292681	Kit-Idle Mixture						★270518 Shim-End Play (Camshaft Bearing) (.005" Thick)
102	●692215	Gasket-Carburetor Body	524	★281370	Seal-Dipstick Tube	639	★692913	Gasket-Breaker Box
104	●691775	Pin-Float Hinge	569	★691569	Gasket-Engine Base	883	★692236	Gasket-Exhaust
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593	★691311	Gasket-Bearing Support	1095	498540	Gasket Set-Valve
		----- <b>Note</b> -----				1227	●99525	Valve-High Speed
		391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).						
127	●690627	Plug-Welch						
134	●394681	Kit-Needle/Seat						

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

Ø Valve Gasket Set-Reference 1095