



350400

Illustrated Parts List

Model Series

350400

TYPE NUMBERS
0001 through 1421.

TABLE OF CONTENTS

Air Cleaners	7
Alternator	14
Blower Housing	11
Camshaft	2
Carburetor	6
Controls	10
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	15 & 16
Exhaust System	8
Flywheel	12
Fuel Supply	9
Gasket Set – Engine	2
Gasket Set – Valve	3
Governor Spring	10
Ignition	14
Intake Manifold	4
Kit – Carburetor Overhaul	6
Lubrication	5
Piston, Rings, Connecting Rod	2
Rewind Starter	13
Shrouds	11
Valves	3


PRINTED IN U.S.A.

BRIGGS & STRATTON




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

350400


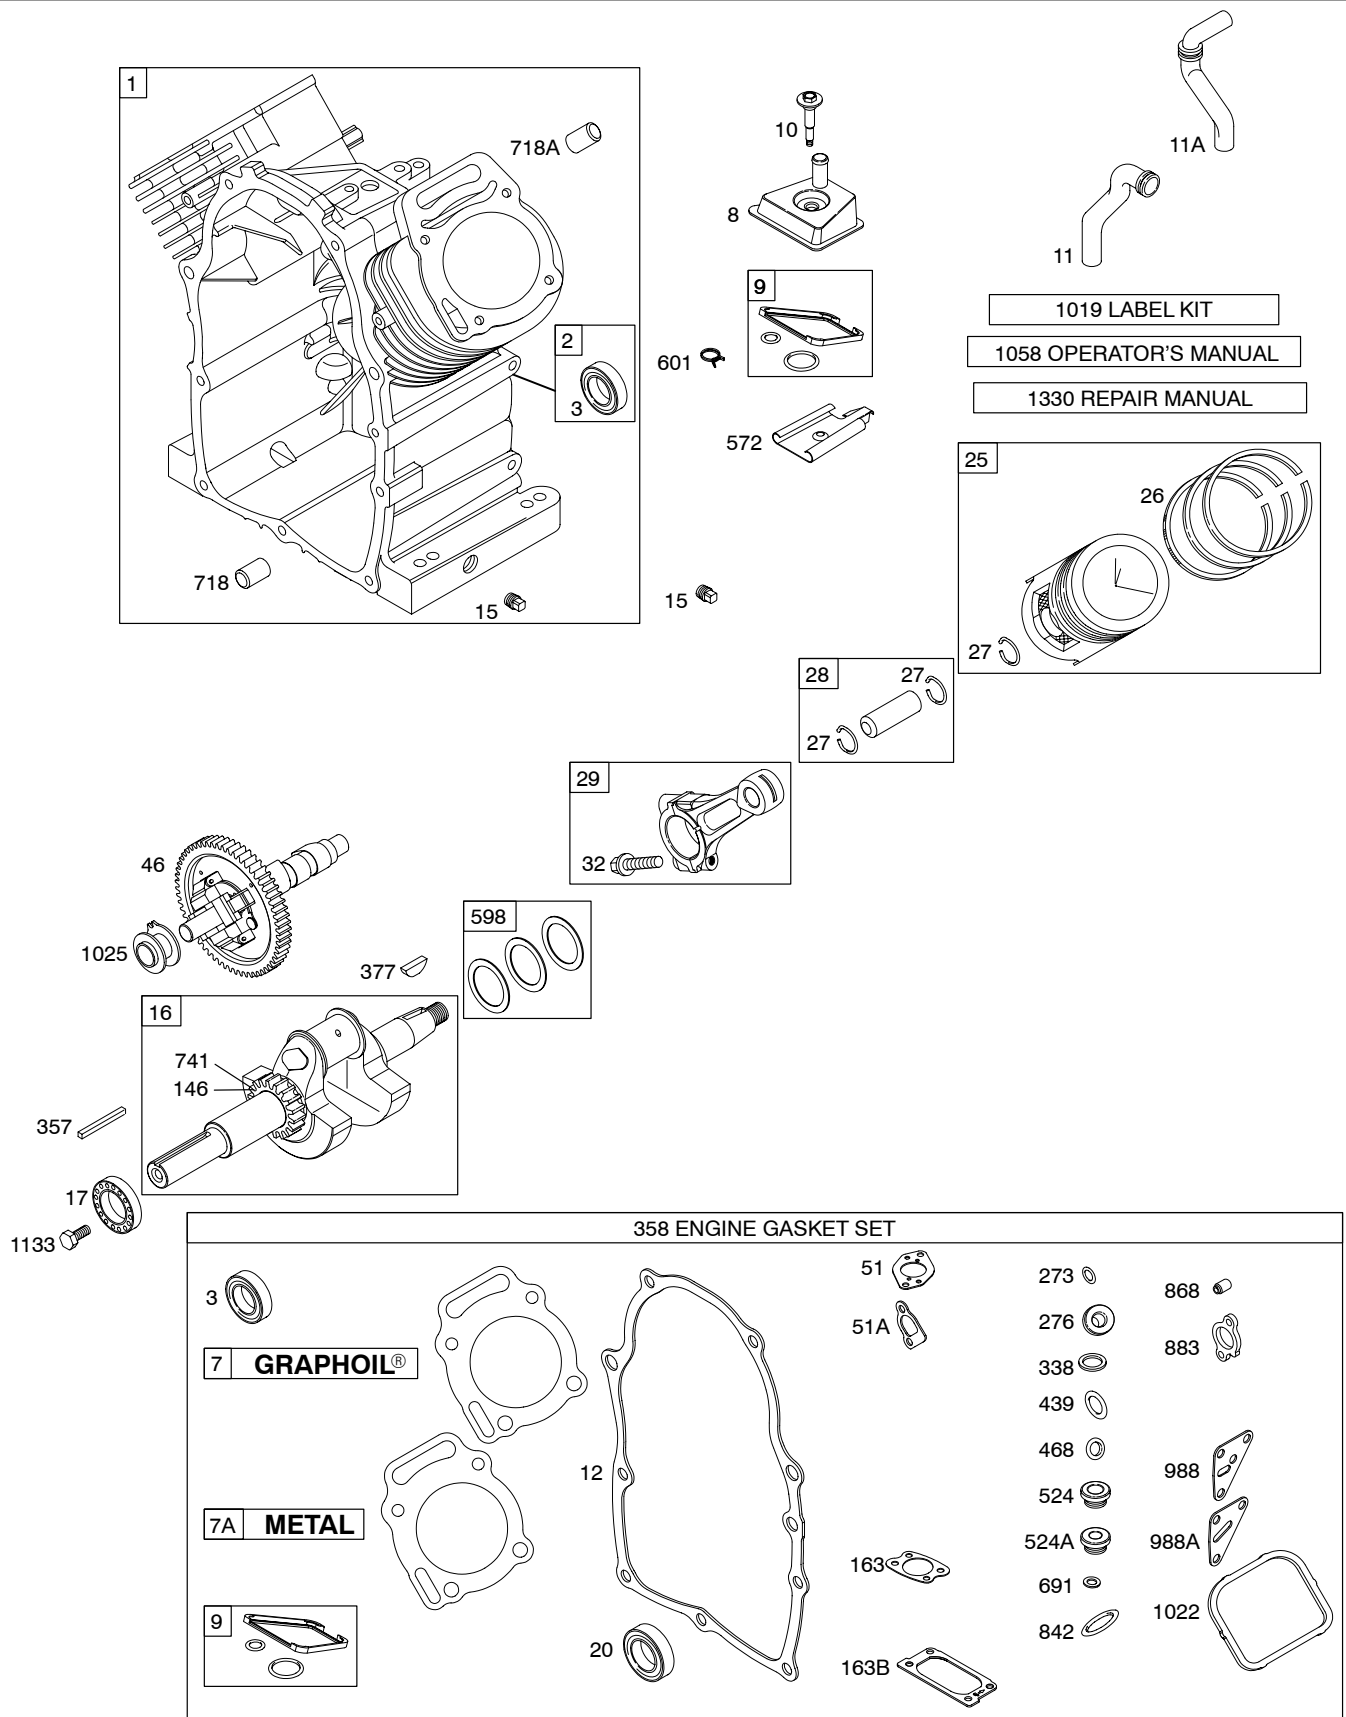


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-2 Assemblies include all parts shown in frames. 12/09/2005

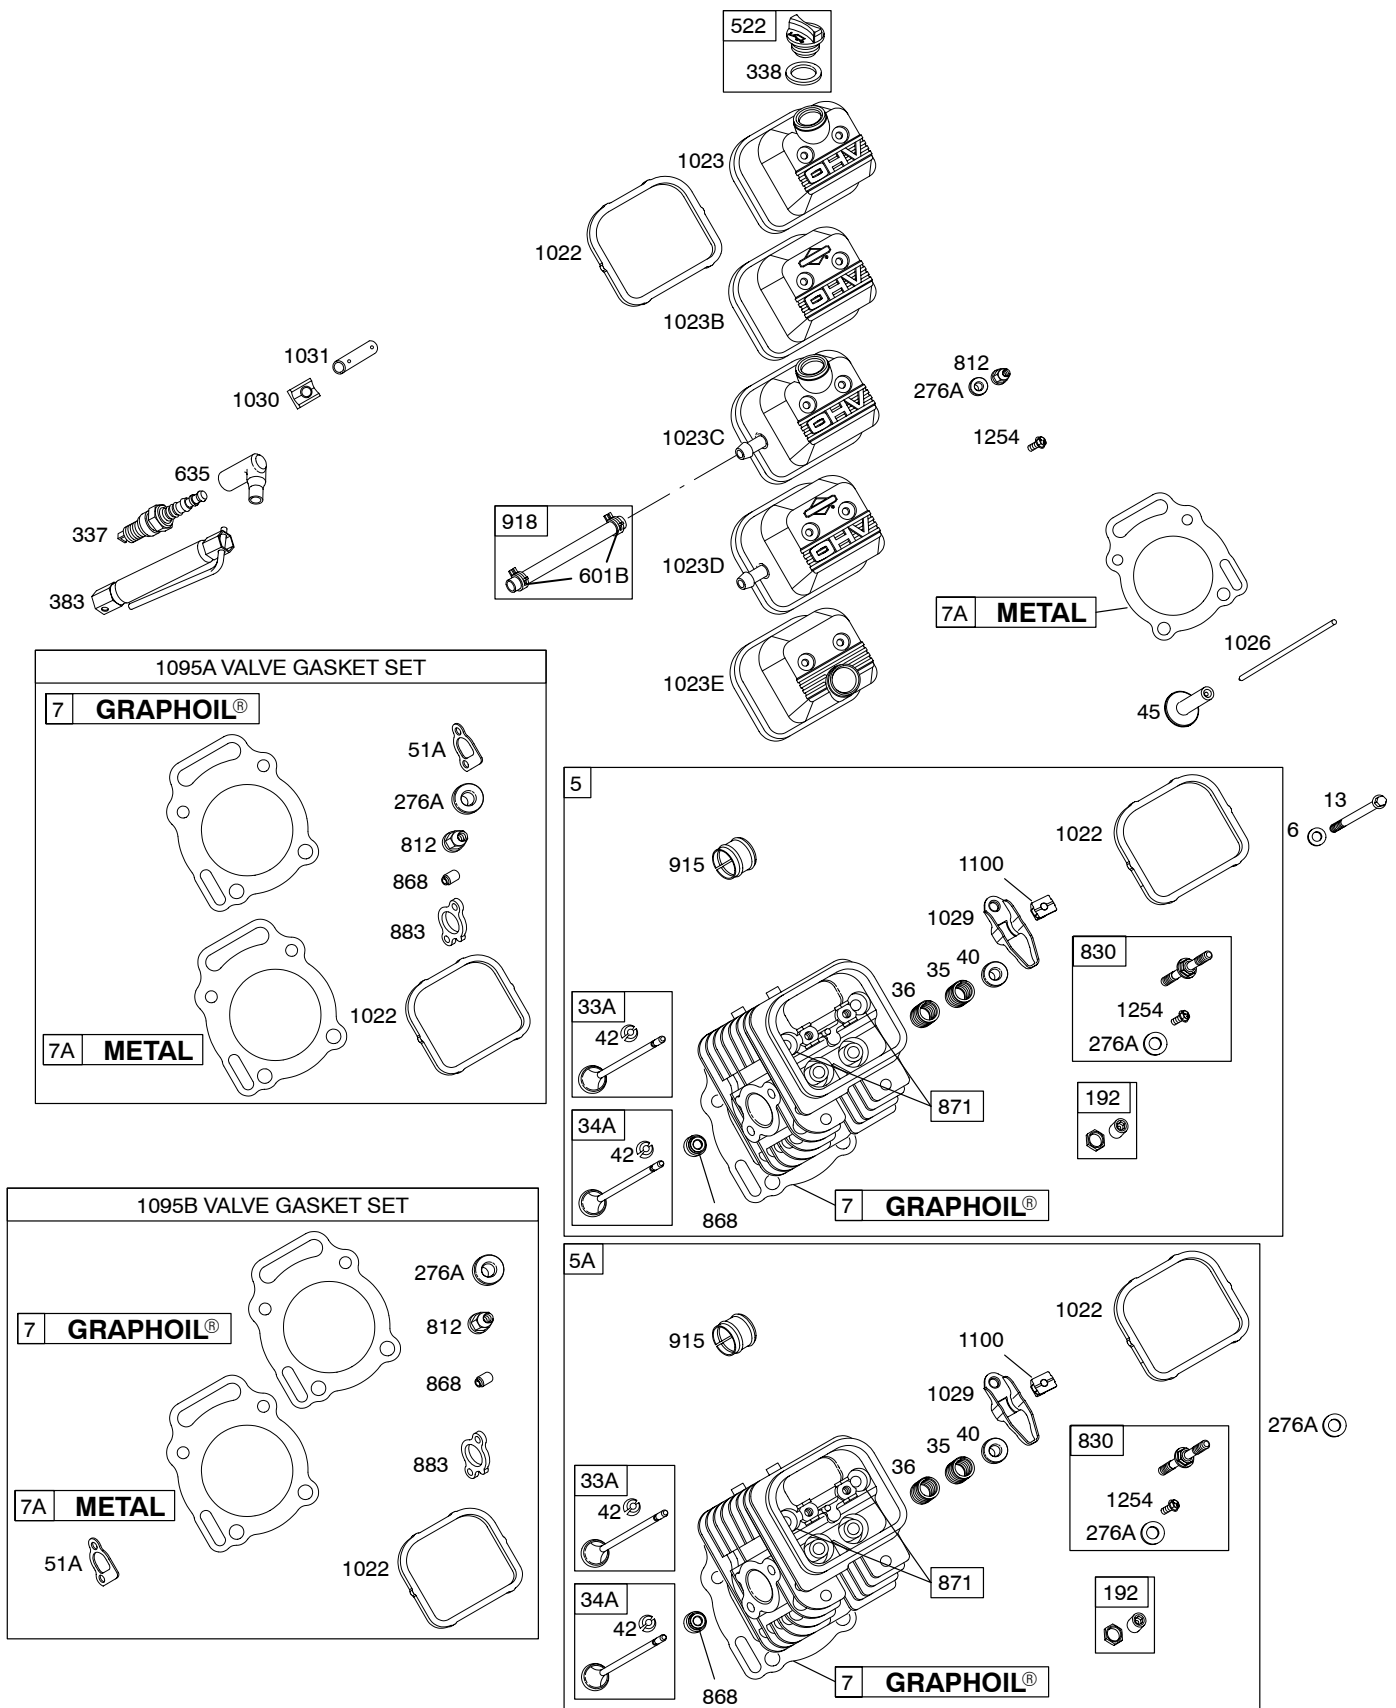


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-3 Assemblies include all parts shown in frames. 12/09/2005


350400

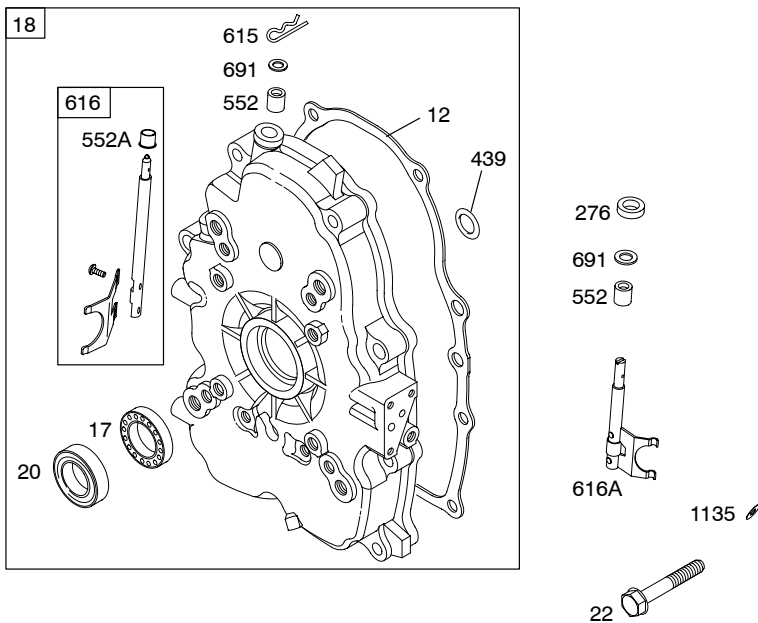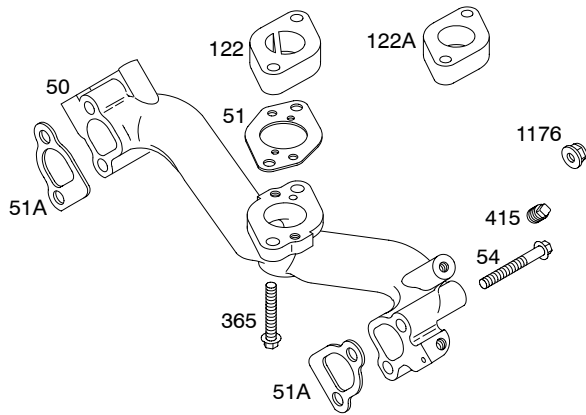


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
2263-4 Assemblies include all parts shown in frames. **12/09/2005**

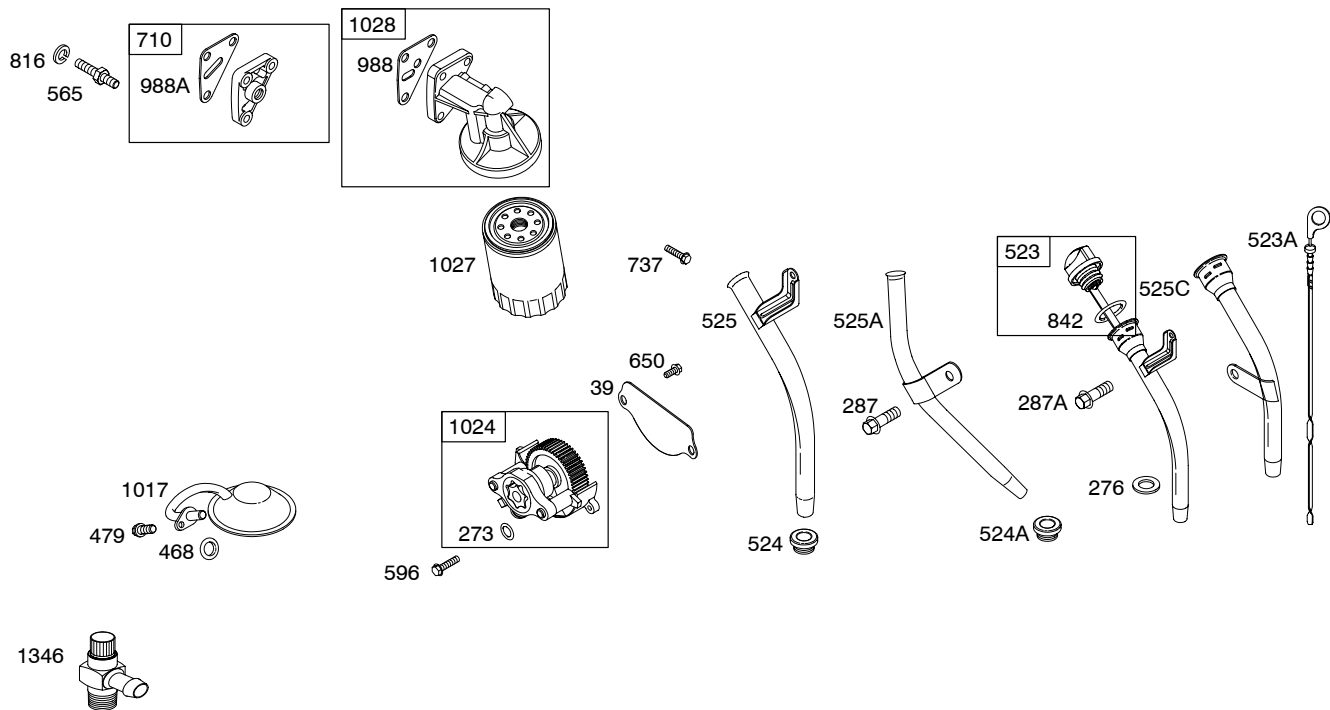

350400

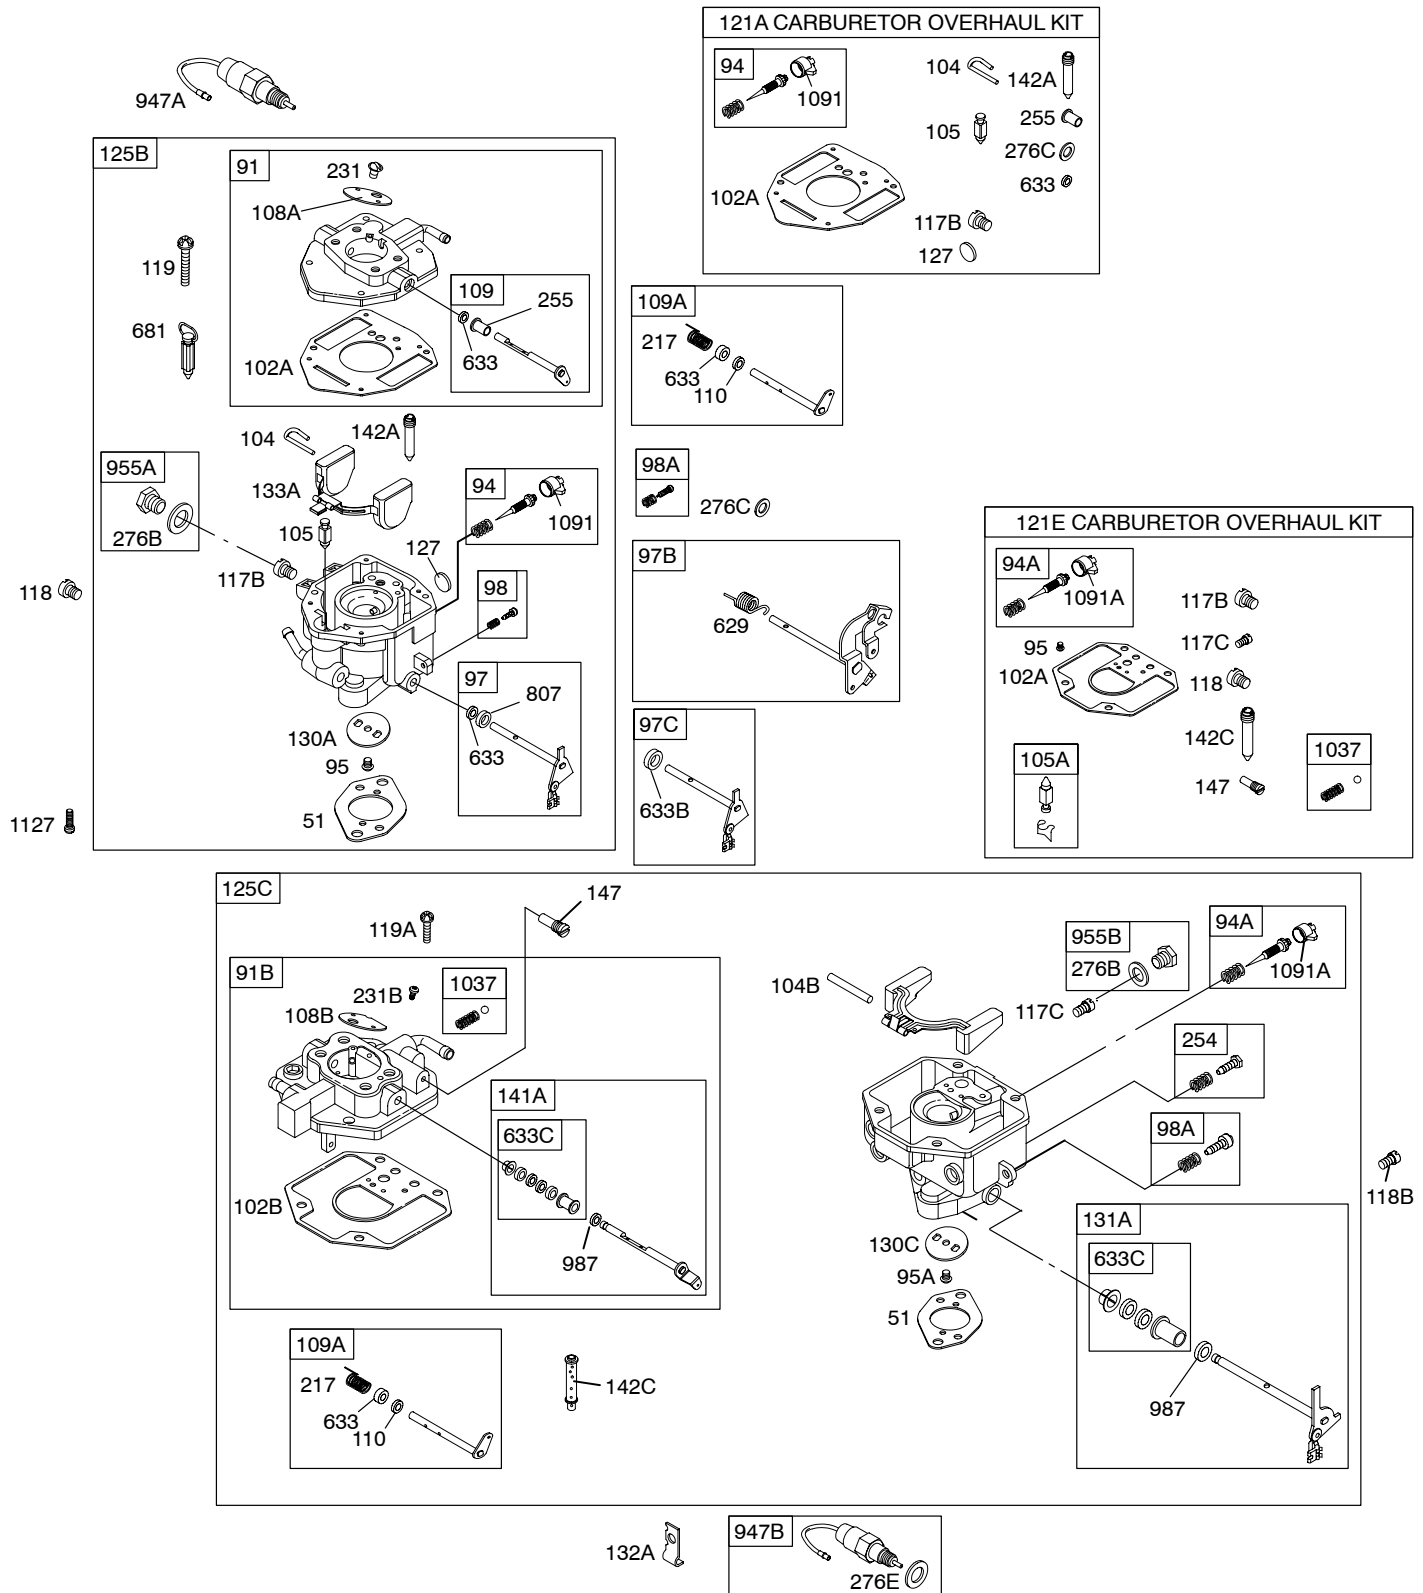


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-6 Assemblies include all parts shown in frames. 12/09/2005








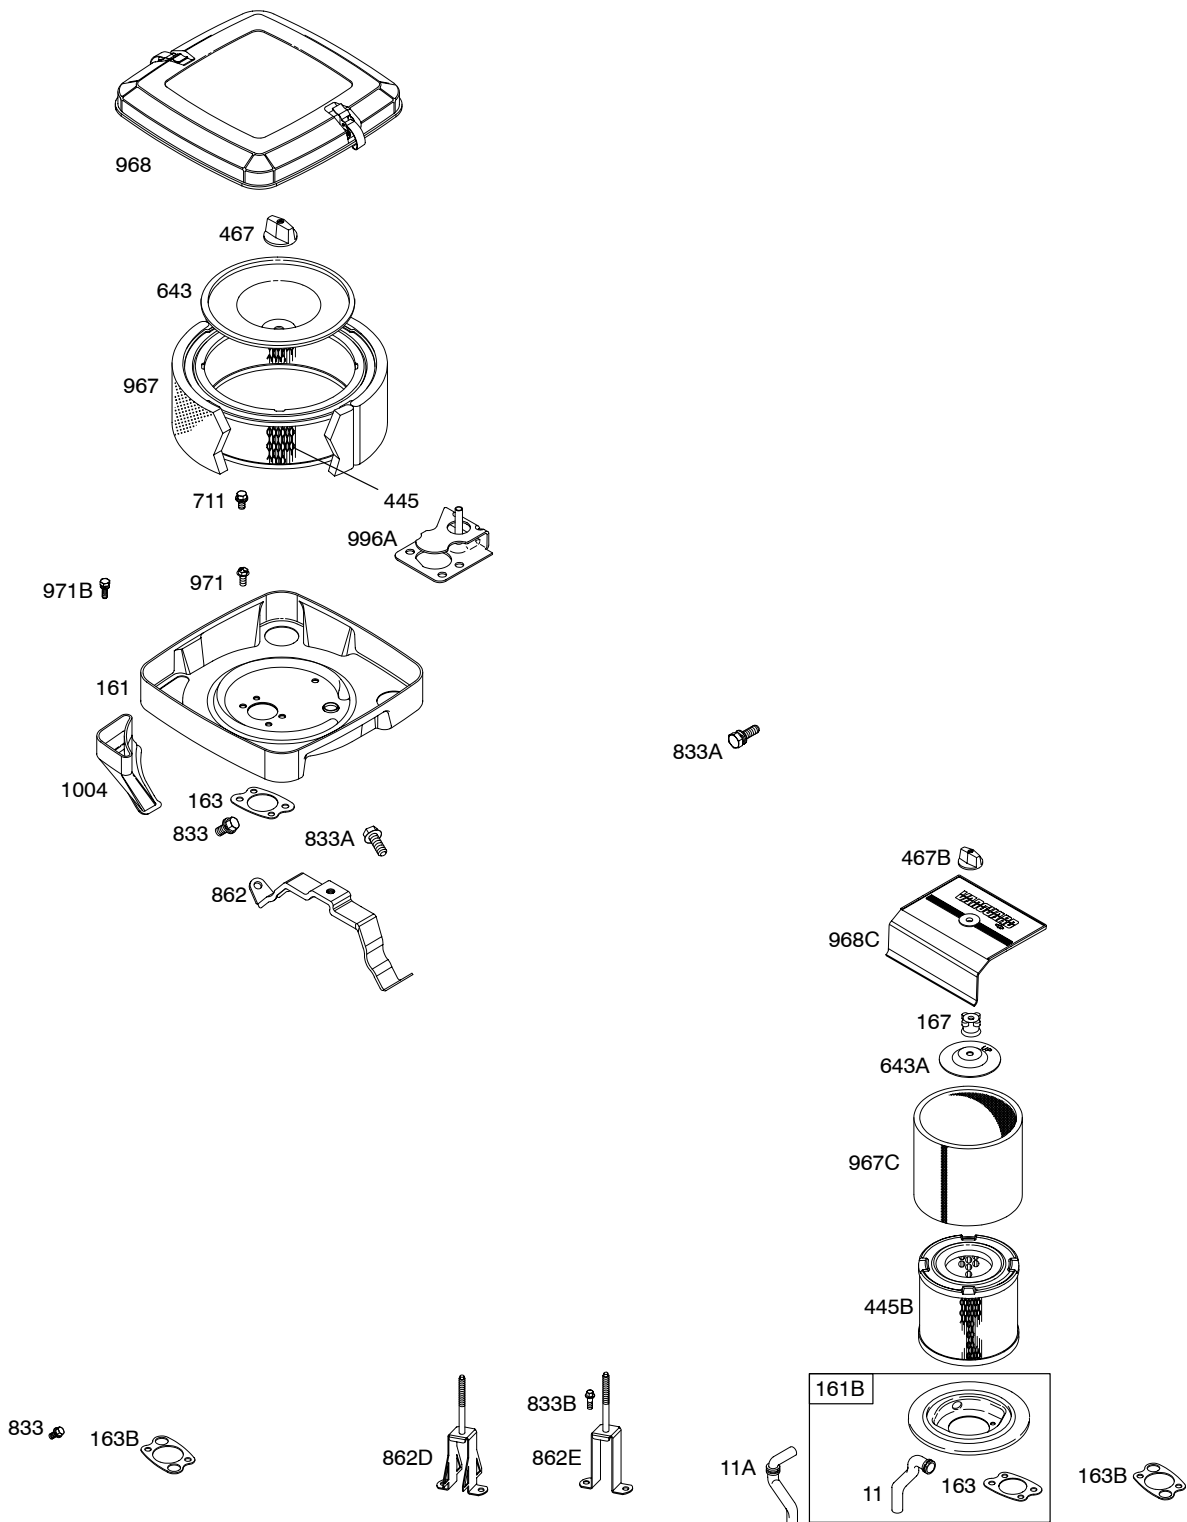


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
2263-7 Assemblies include all parts shown in frames. **12/09/2005**


350400

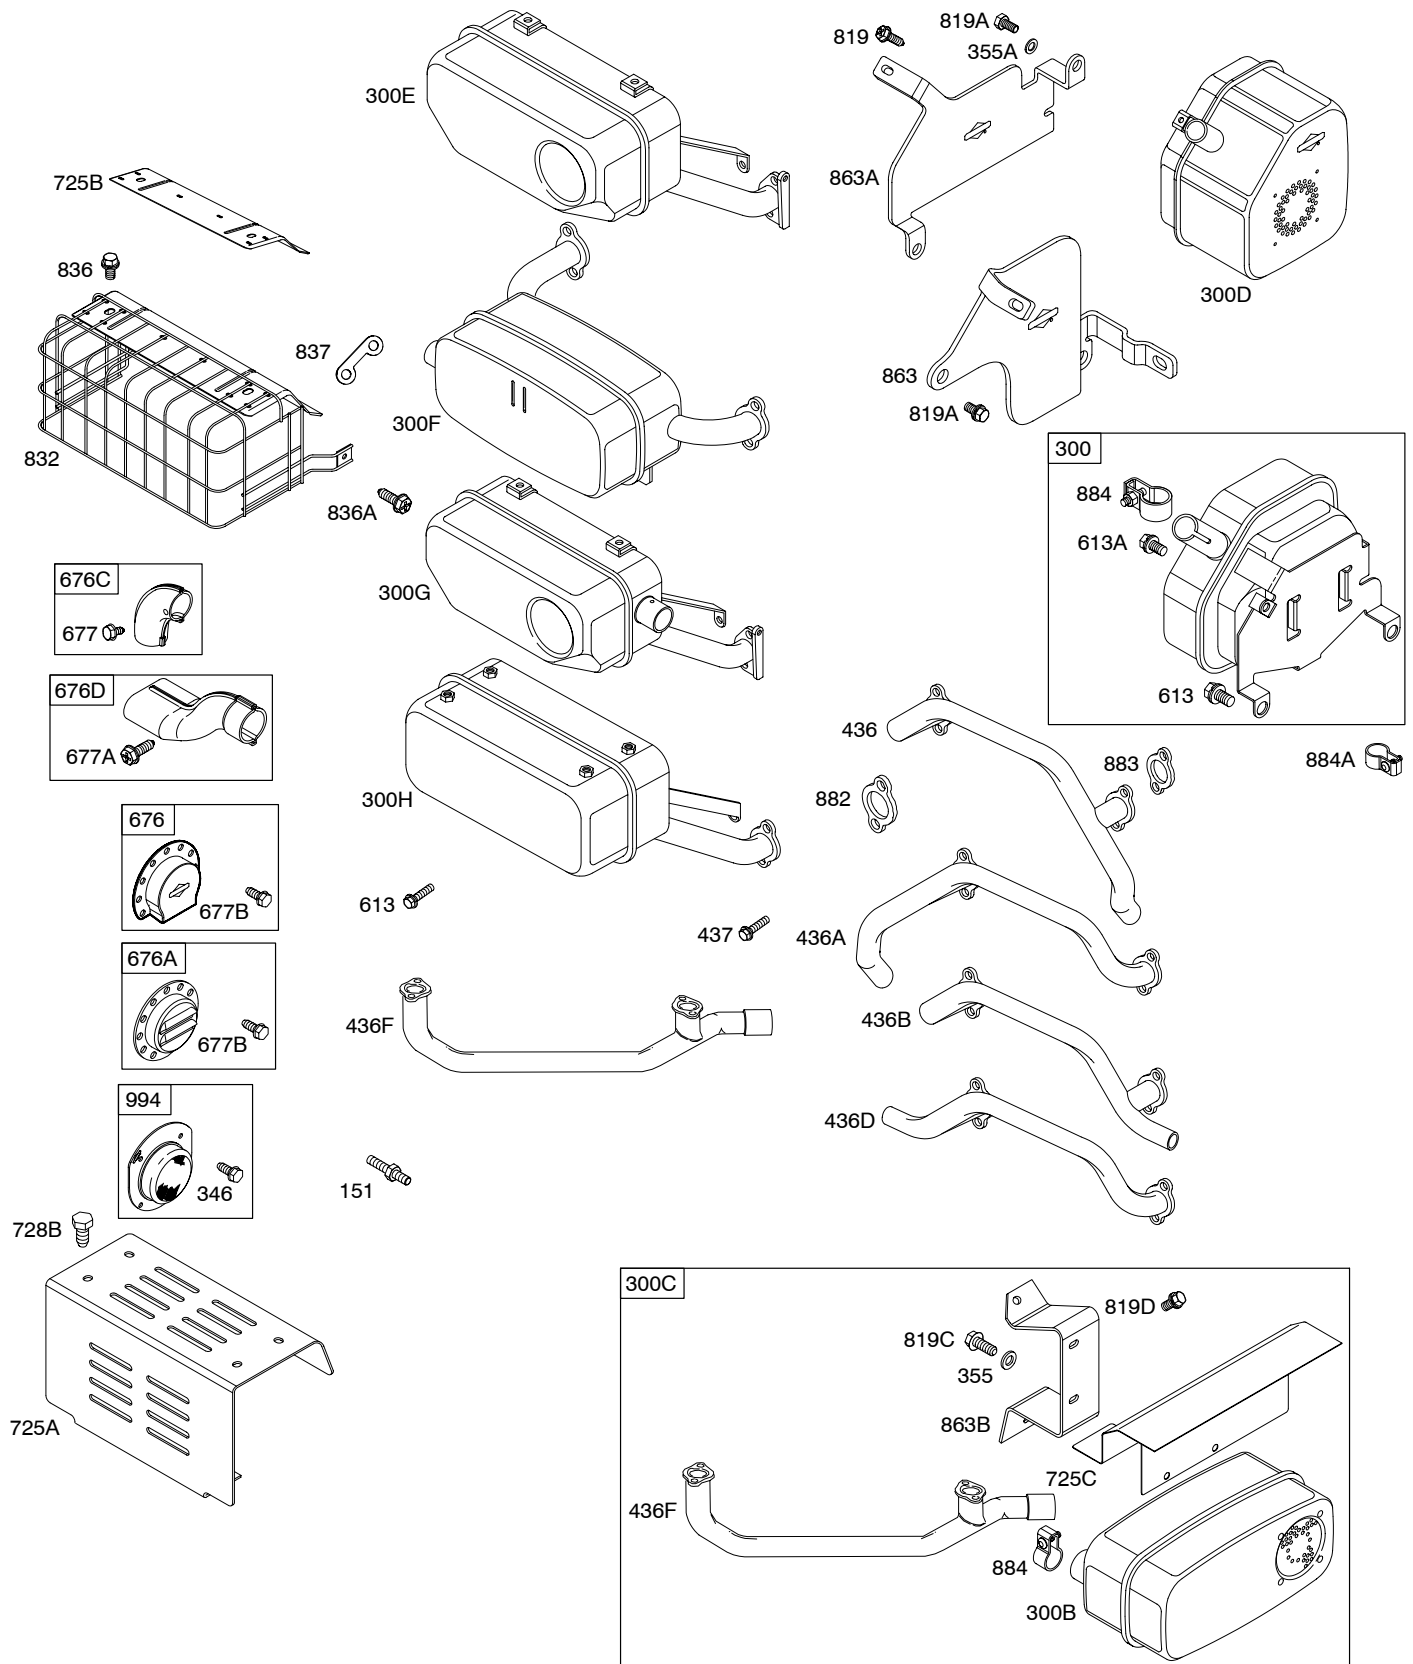



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-8 Assemblies include all parts shown in frames. 12/09/2005

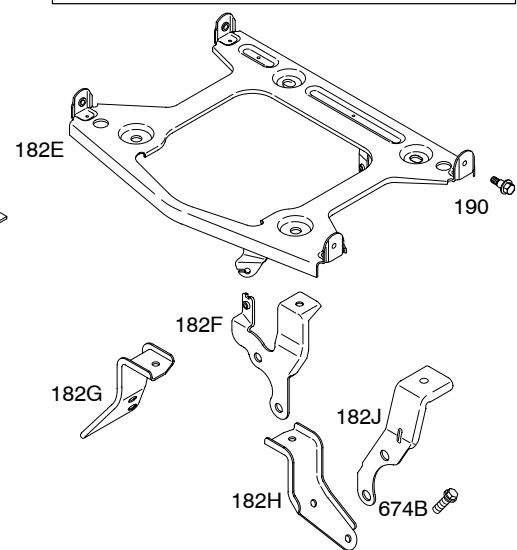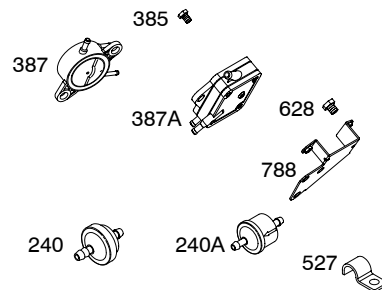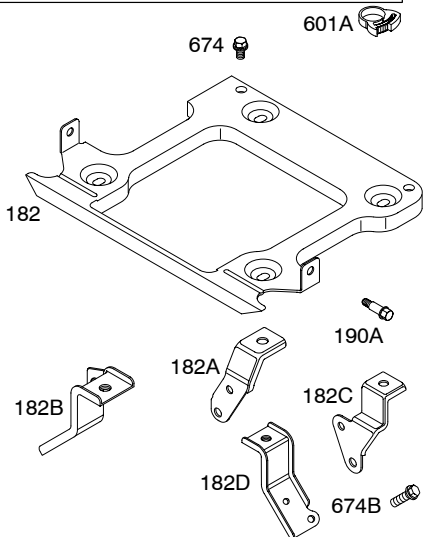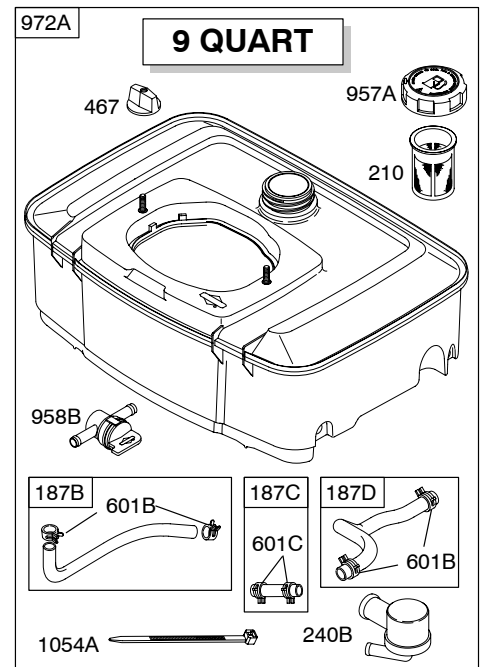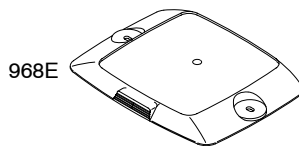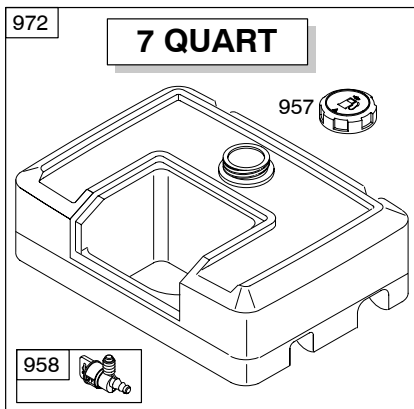


350400

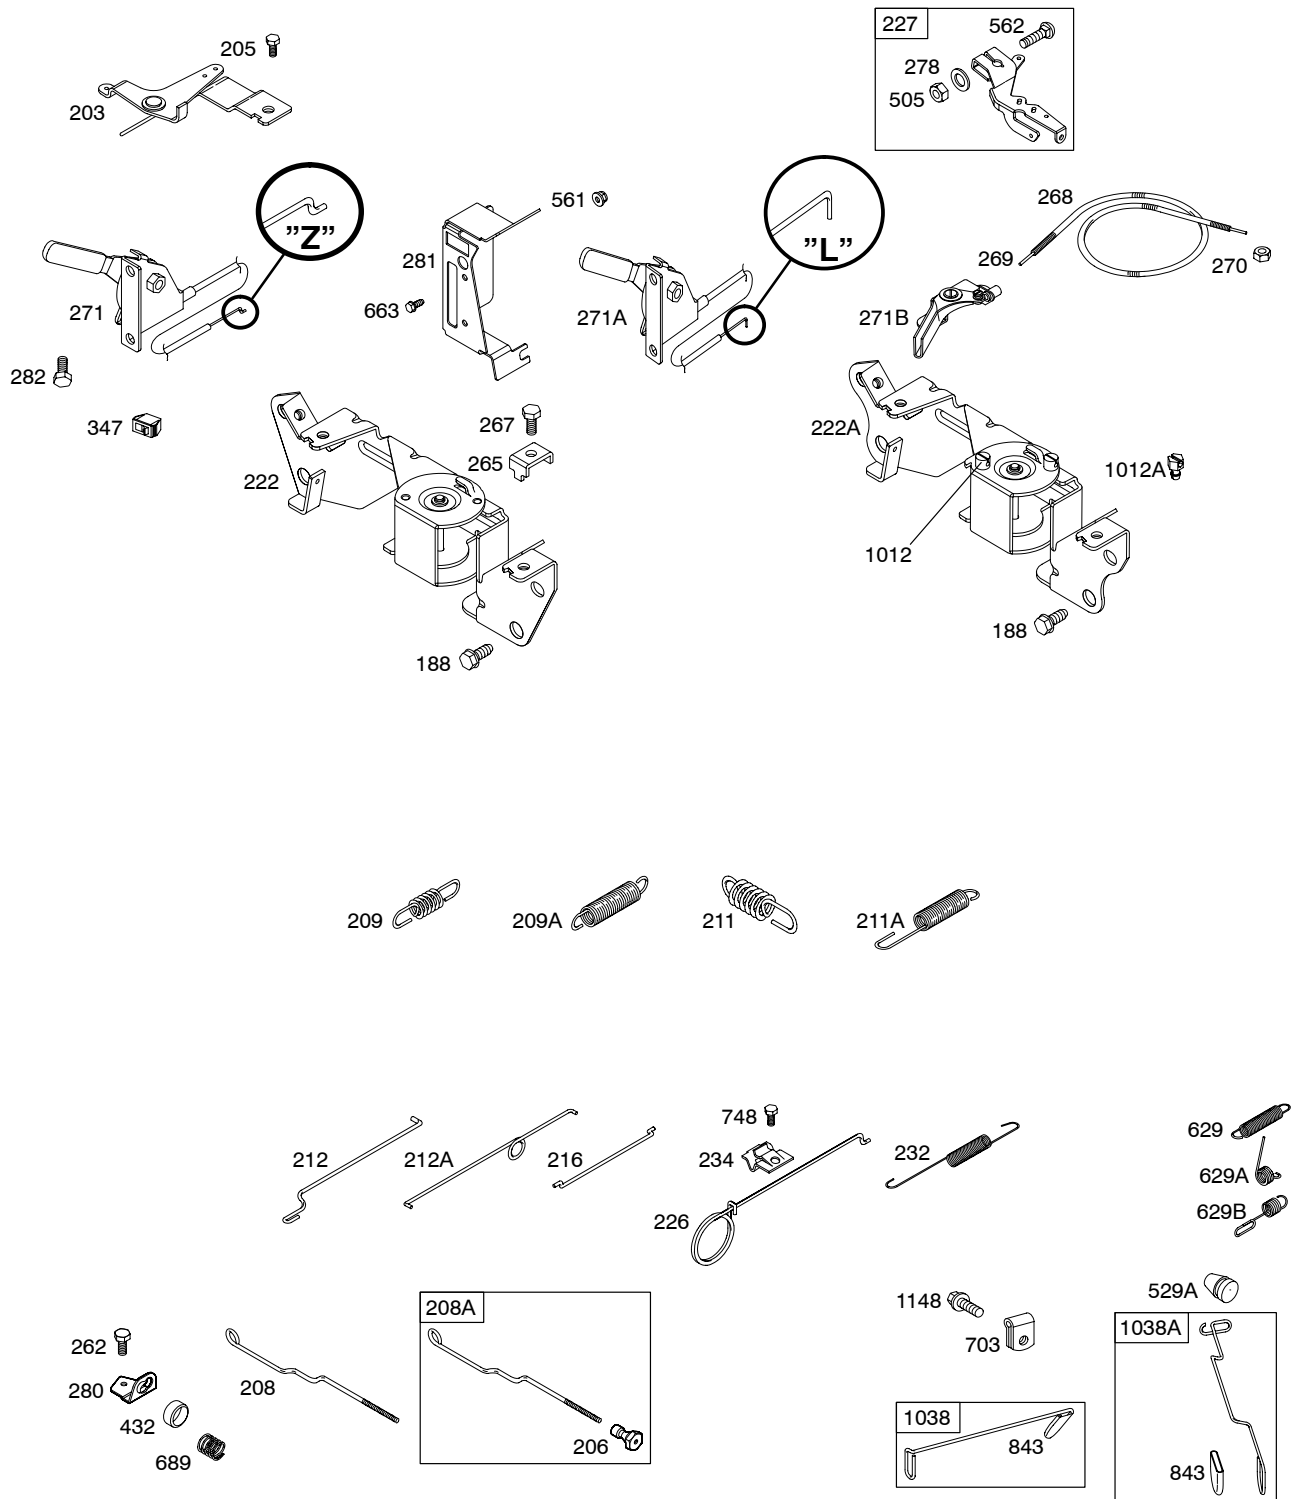

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-10 Assemblies include all parts shown in frames. 12/09/2005


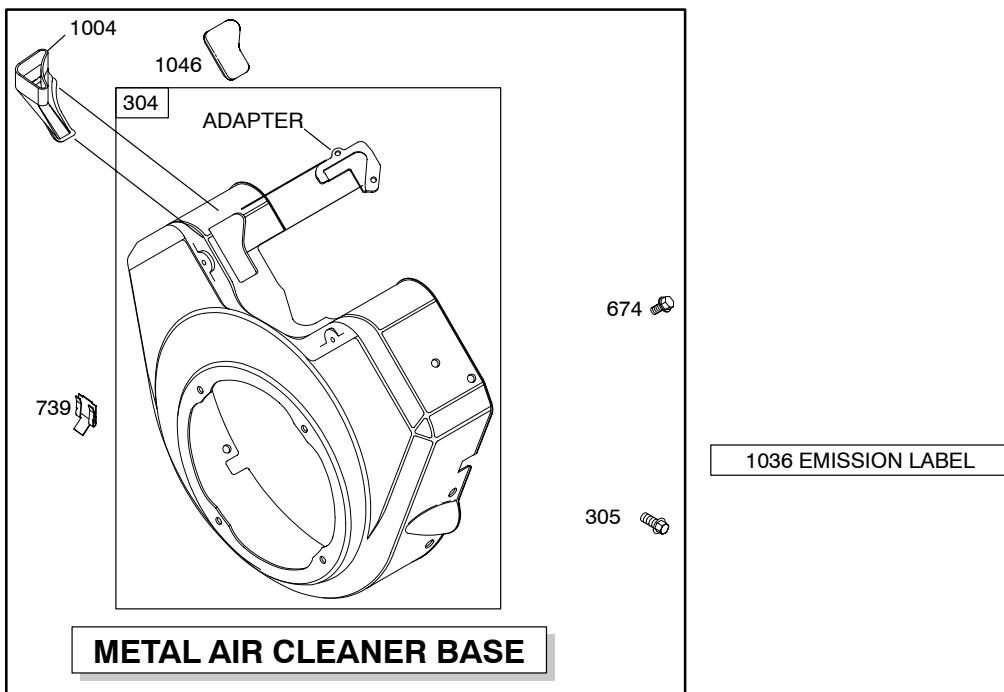
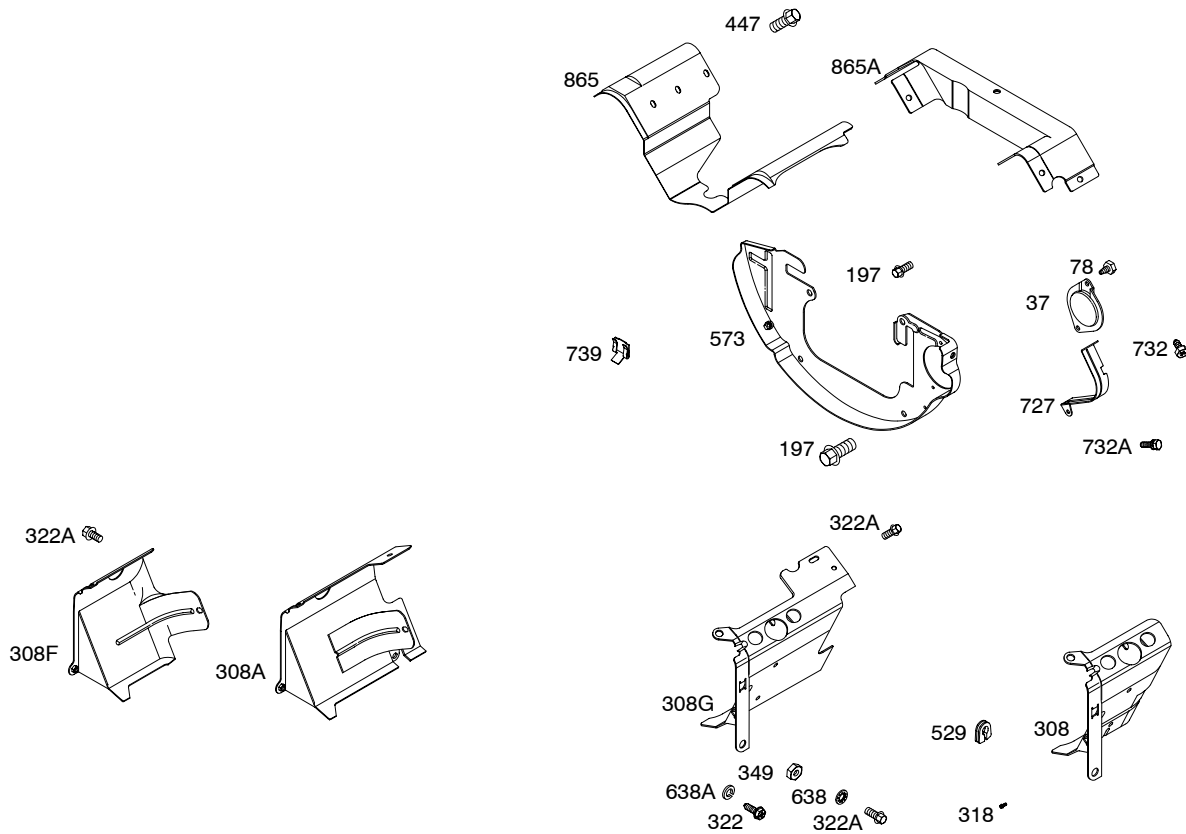


350400









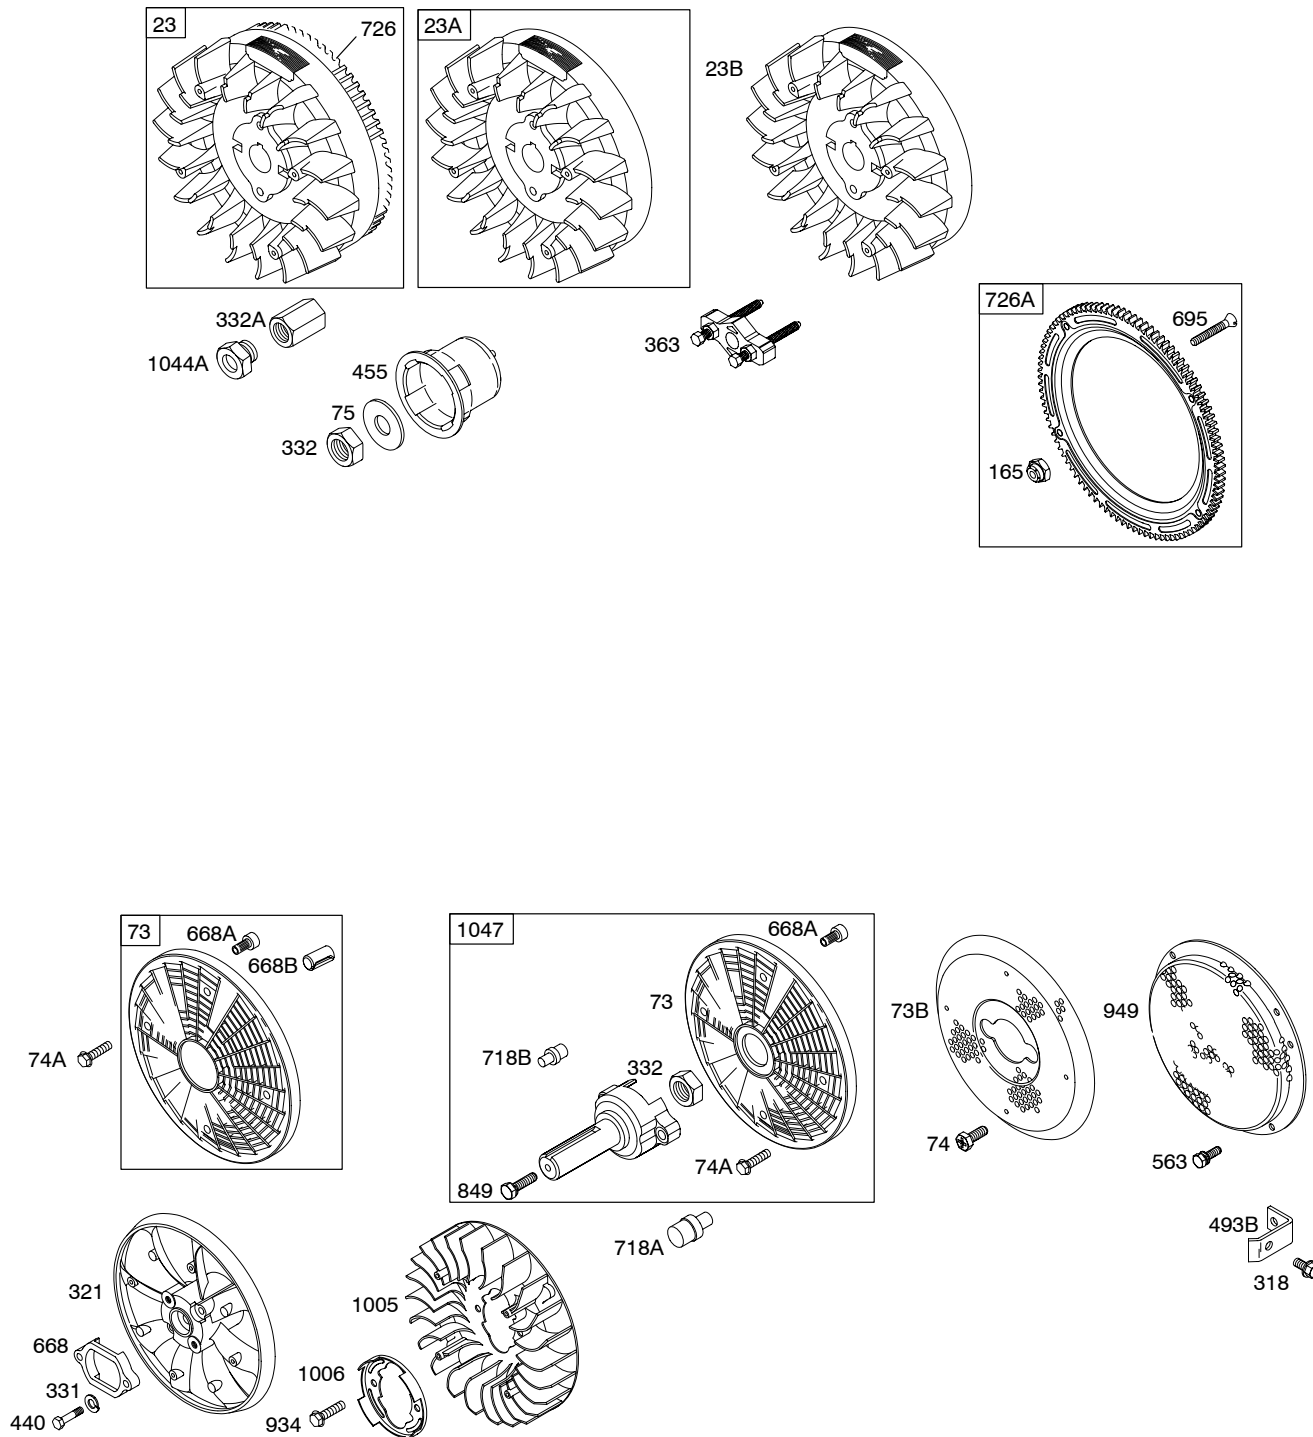



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-12 Assemblies include all parts shown in frames. 12/09/2005

350400

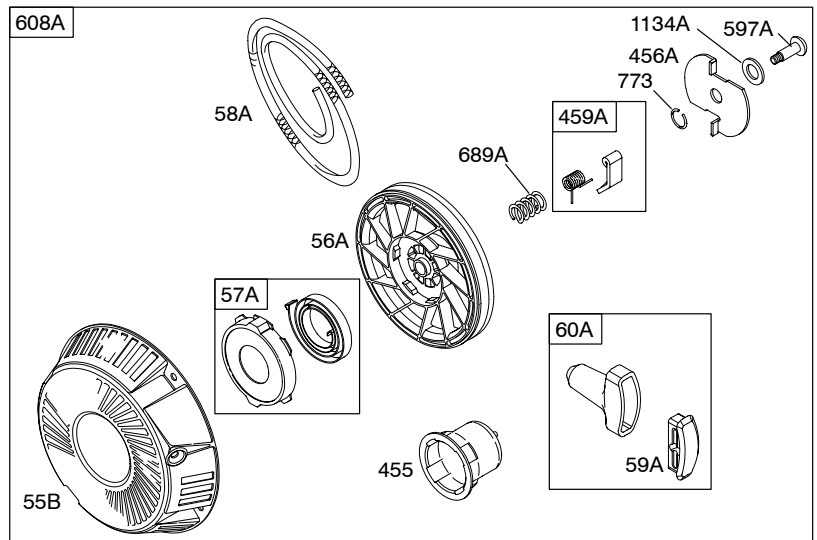
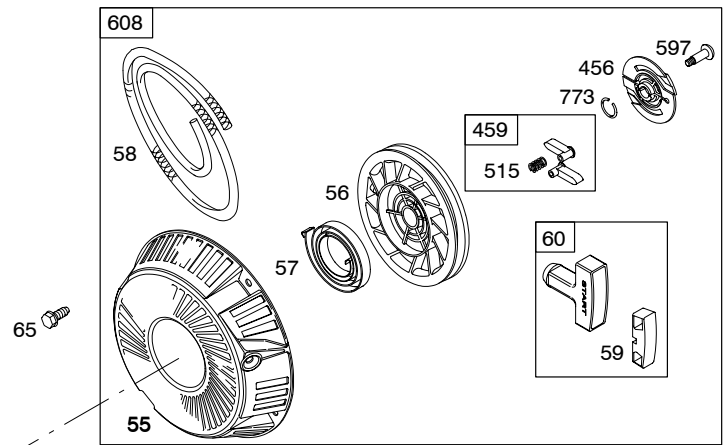
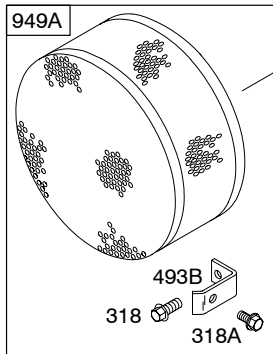


350400

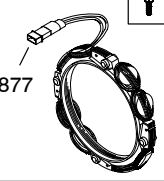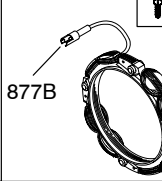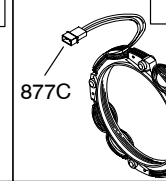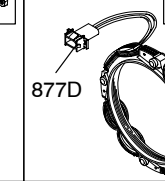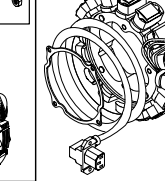
DUAL CIRCUIT	5 – 9 AMP	10 – 16 AMP	20 AMP	20 AMP POWER LINK		
474B 1059 877 	474C 1059 877B 	474D 1059 877C 	474E 1059 877D 	474F 877D 		
878 	578 	578 	578 	578 		
NOTE: All stators use a No. 1119 mounting screw. 				526A 501A 	526 501 	526B 501B 

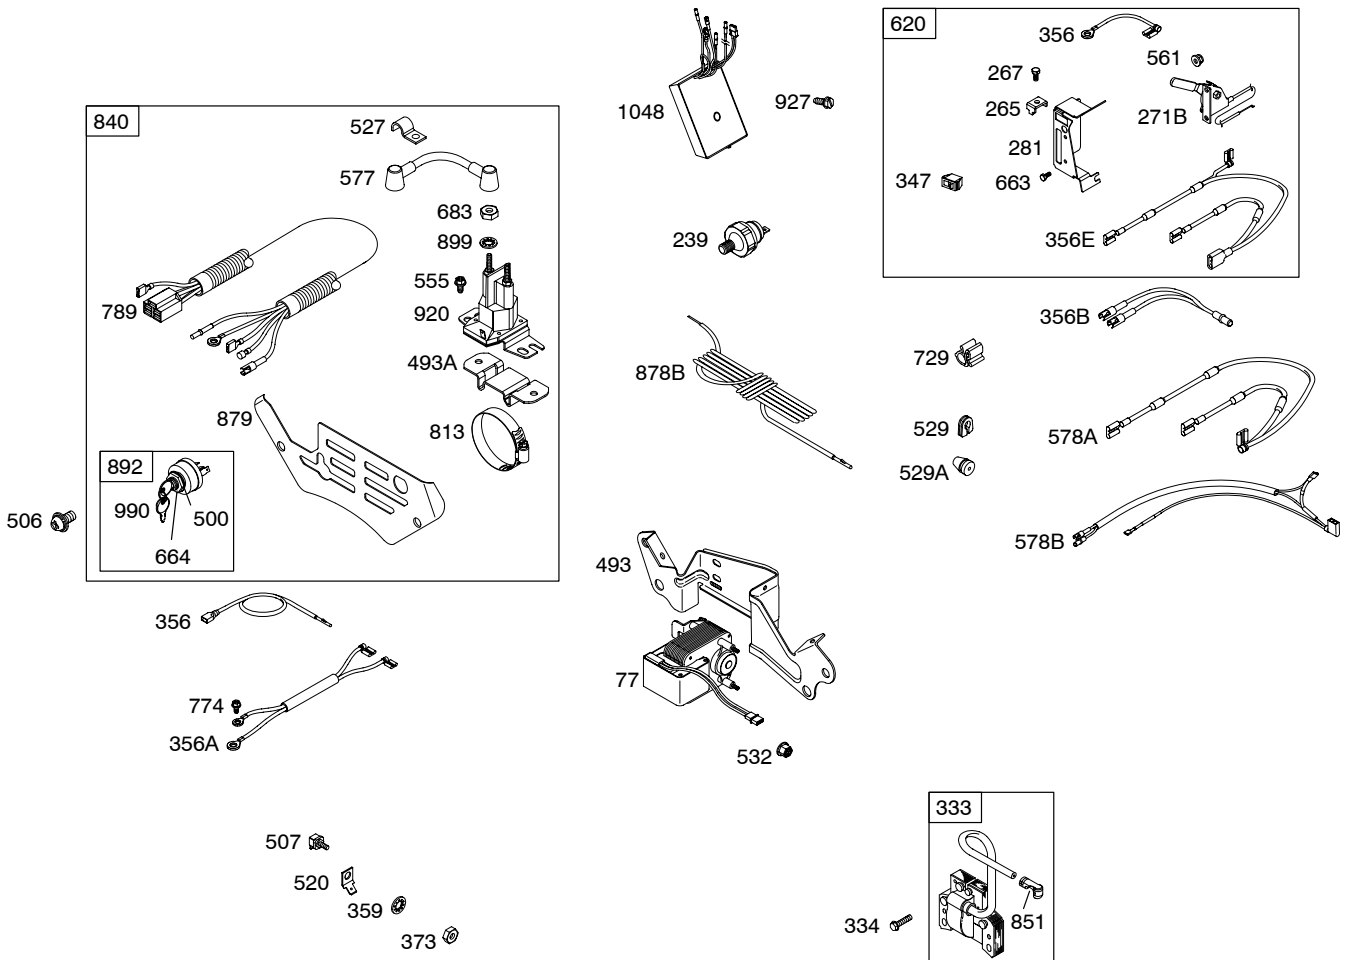


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 2263-14 Assemblies include all parts shown in frames. 12/09/2005

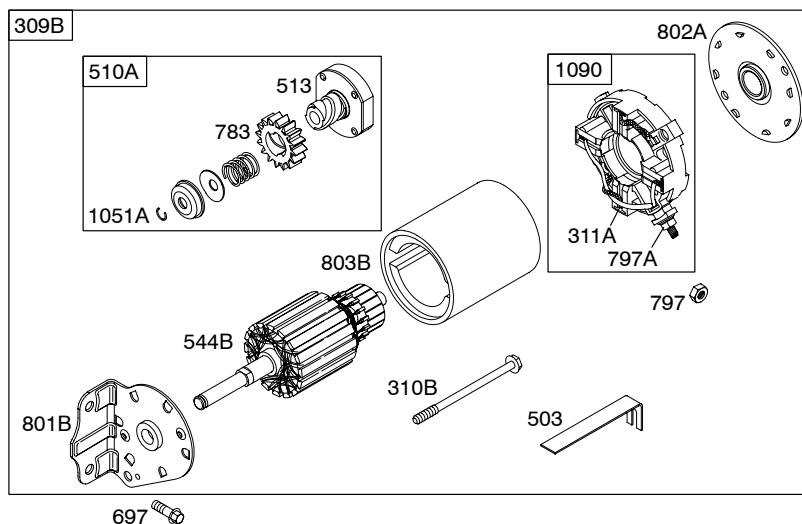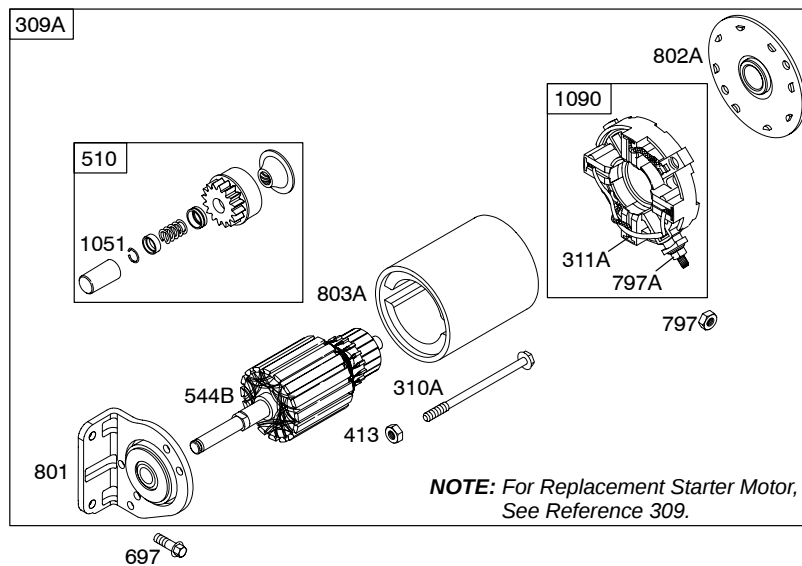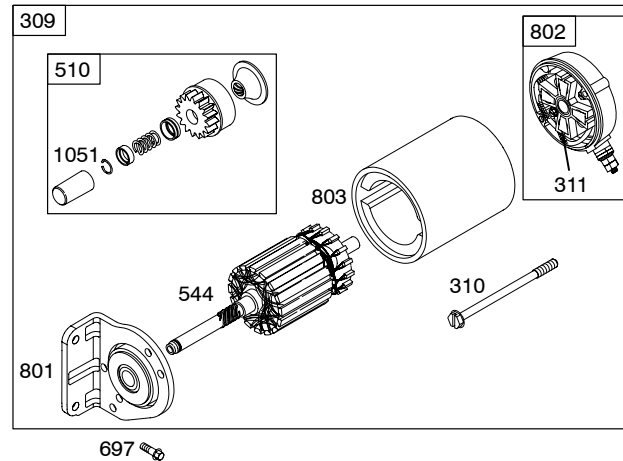

350400

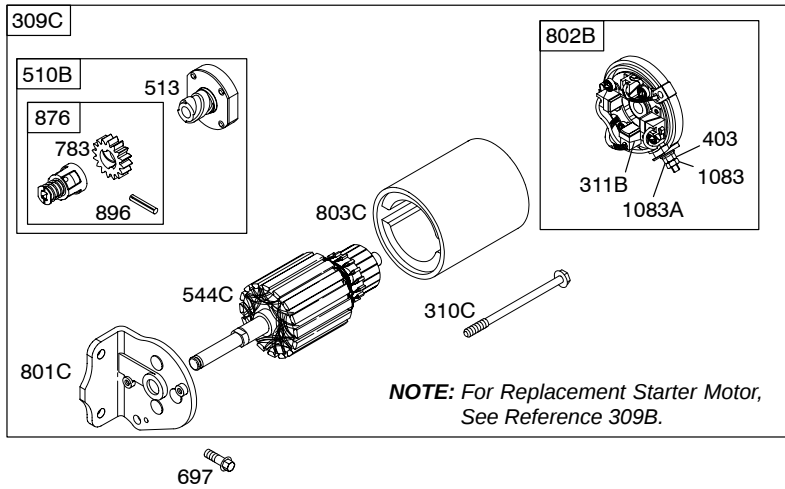

683 

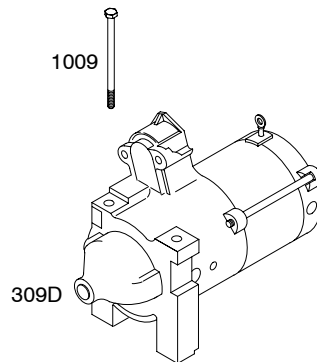

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	692544	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 690903 Cylinder Assembly (Used Before Code Date 97050100). 841146 Cylinder Assembly Used on Type No(s). 1268, 1312. 841562 Cylinder Assembly Used on Type No(s). 1416.	8	808984	Breather Assembly		692173	Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1003, 1005, 1011, 1042, 1052, 1078, 1081, 1085, 1105, 1113, 1120, 1121, 1123, 1125, 1129, 1131, 1132, 1150, 1156, 1160, 1167, 1190, 1194, 1203, 1213, 1222, 1227, 1277, 1284, 1378, 1398, 1399, 1401. 807780 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0042, 0052, 0078, 0081, 0082, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0160, 0167, 1003, 1004, 1005, 1006, 1011, 1042, 1052, 1078, 1081, 1085, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1156, 1159, 1160, 1167, 1190, 1194, 1203, 1213, 1222, 1227.	
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 97043000). ----- Note ----- 807687 Kit- Bushing/Seal (Magneto Side) (Used Before Code Date 97050100).	9	★809094	Gasket-Breather				
			10	690751	Screw (Breather Assembly)				
			11	691556	Tube-Breather				
			11A	806083s	Tube-Breather				
			12	★691684	Gasket-Crankcase				
			13	692059	Screw (Cylinder Head)				
			15	690946	Plug-Oil Drain				
			16	809842	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807778 Crankshaft (Used Before Code Date 97050100). 809804 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1077, 1080, 1110, 1377. 692170 Crankshaft (Used After Code Date 97043000 and Before Code Date 03050100). Used on Type No(s). 1077, 1080, 1110, 1172, 1276, 1377. 807777 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0077, 0080, 1077, 1080, 1172, 1175. 807779 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0113, 0157, 1113, 1157.				
3	★805101s	Seal-Oil (Magneto Side)							
5	809185	Head-Cylinder (Cylinder 1)							
5A	809186	Head-Cylinder (Cylinder 2)							
6	Δ805193	Washer (Cylinder Head) (Used Before Code Date 94050100).							
7	★Δ690888	Gasket-Cylinder Head (Graphoil) (Used After Code Date 96033100).							
7A	★Δ805653s	Gasket-Cylinder Head (Metal) (Used Before Code Date 96040100).							

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263-17

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		692175 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1115.			809842 Crankshaft Used on Type No(s). 1268, 1309.			808776 Flywheel (Steel Ring Gear) Used on Type No(s). 1277, 1296, 1300, 1399, 1412.
		808005 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0115, 1115.			808824 Crankshaft Used on Type No(s). 1266.			841169 Flywheel Used on Type No(s). 1415, 1416.
		809821 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1137, 1138, 1151, 1152, 1162.			809807 Crankshaft Used on Type No(s). 1157.	23A	690921	Flywheel
		809820 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1137, 1138, 1151, 1152, 1162.			809836 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1116.	23B	690922	Flywheel (Rewind Starter)
		692177 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1174.			692089 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1116.	25	808326	Piston Assembly (Standard) ----- Note -----
		808236 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0155, 1155, 1174.	17	690752	Bearing-Ball			808337 Piston Assembly (.020" Oversize)
		809806 Crankshaft Used on Type No(s). 1269, 1308, 1313, 1316, 1317, 1318, 1319, 1332, 1333, 1334, 1416, 1421.	18	808847	Cover-Crankcase ----- Note -----	26	807889	Ring Set (Standard) ----- Note -----
		809833 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1087.			808850 Cover- Crankcase Used on Type No(s). 0155, 1155, 1174.	27	690683	Lock-Piston Pin
		691139 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1087.			808508 Cover- Crankcase Used on Type No(s). 0081, 0082, 0083, 0151, 0152, 1009, 1012, 1081, 1105, 1120, 1151, 1152, 1209, 1222, 1227, 1276, 1277, 1399.	28	807886	Pin-Piston (Standard)
			20	★805049	Seal-Oil (PTO Side)	29	807900s	Rod-Connecting (Standard) ----- Note -----
			22	807362	Screw (Crankcase Cover/Sump)			807803 Rod- Connecting (.020" Undersize)
			23	808768	Flywheel (Steel Ring Gear) ----- Note -----	32	690698	Screw (Connecting Rod)
					808772 Flywheel (Steel Ring Gear) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1276, 1282, 1288, 1299.	33A	807681	Valve-Exhaust
						34A	807680	Valve-Intake
						35	692084	Spring-Valve (Intake)
						36	692084	Spring-Valve (Exhaust)
						37	690715	Guard-Flywheel (Black) ----- Note -----
								841309 Guard- Flywheel Used on Type No(s). 1001, 1065, 1067, 1102, 1137, 1156, 1186, 1194, 1256, 1263, 1313, 1365.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
39	690745	Deflector–Oil	60	808167	Grip–Starter Rope	98	808177	Kit–Idle Speed
40	692058	Retainer–Valve	60A	490652	Grip–Starter Rope	98A	807923	Kit–Idle Speed
42	807683	Keeper–Valve	65	691982	Screw (Rewind Starter)	----- Note -----		
45	690977	Tappet–Valve	73	494439	Screen–Rotating (8 9/32" Diameter)			808981 Kit–Idle Speed Used on Type No(s). 1331.
46	691557	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0081, 0082, 0083, 0151, 0152, 1009, 1012, 1081, 1105, 1120, 1151, 1152, 1209, 1222, 1227, 1276, 1277, 1399. 842064 Camshaft Used on Type No(s). 0137, 0138, 0162, 1137, 1138, 1162, 1401.	73B	690478	Screen–Rotating (9 3/32" Diameter)	102A	●692077	Gasket–Carburetor Body
			74	691655	Screw (Rotating Screen)	102B	●272460	Gasket–Carburetor Body
			74A	691647	Screw (Rotating Screen)	104	●690723	Pin–Float Hinge
			75	691490	Washer (Flywheel)	104B	●231784	Pin–Float Hinge
			77	690819	Motor–Servo	105	●807925	Valve–Float Needle
			78	690688	Screw (Flywheel Guard)	105A	●805620	Valve–Float Needle Used on Type No(s). 1057, 1065, 1066, 1067, 1085, 1096, 1109, 1125, 1162, 1185, 1186, 1190, 1194, 1201, 1220, 1234, 1250, 1254, 1256, 1263, 1268, 1269, 1289, 1296, 1300, 1313, 1365, 1366, 1396, 1401, 1412.
			91	809208	Body–Upper Carburetor Used on Type No(s). 1331, 1332.	108A	806134	Valve–Choke ----- Note ----- 690719 Valve–Choke Used on Type No(s). 1331.
50	690754	Manifold–Intake ----- Note ----- 692124 Manifold– Intake Used on Type No(s). 1206.	91B	807929	Body–Upper Carburetor	108B	224535	Valve–Choke
51	Δ★691694	Gasket–Intake (Manifold To Carburetor)	94	●808399	Kit–Idle Mixture Used on Type No(s). 1318, 1319, 1331, 1333, 1421.	109	808398	Shaft–Choke
51A	★692035	Gasket–Intake (Manifold to Head)	94A	●808259	Kit–Idle Mixture (Used After Code Date 94123100). ----- Note ----- 494923 Kit–Idle Mixture (Used Before Code Date 95010100).	109A	809096	Shaft–Choke Used on Type No(s). 1331.
54	690676	Screw (Intake Manifold)	95	●690718	Screw (Throttle Valve)	110	806861	Washer (Choke Shaft)
55	691568	Housing–Rewind Starter	95A	●94635	Screw (Throttle Valve)	117B	231660	Jet–Main (Standard) ----- Note ----- 808406 Jet–Main (Standard) Used on Type No(s). 1331.
55B	492193	Housing–Rewind Starter	97	809007	Shaft–Throttle Used on Type No(s). 1331.			
56	692085	Pulley–Starter	97B	809062	Shaft–Throttle (Used After Code Date 00071100).			
56A	280918	Pulley–Starter	97C	808397	Shaft–Throttle (Used Before Code Date 00071200).			
57	692086	Spring–Rewind Starter						
57A	492194	Spring–Rewind Starter						
58	66574	Rope–Starter (Cut To Required Length)						
58A	695002	Rope–Starter (Cut To Required Length)						
59	805957	Insert–Grip						
59A	490653	Insert–Grip						

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263–19

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117C	●806126	Jet–Main (Standard) ----- Note ----- 231829 Jet–Main (Standard) Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.	121E	808274	Kit–Carburetor Overhaul (Used Before Code Date 95080100). ----- Note ----- 808083 Kit–Carburetor Overhaul (Used Before Code Date 95010100). Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.			809217 Carburetor (Includes Solenoid) Used on Type No(s). 1331, 1332.
118	809685	Jet–Main (High Altitude) ----- Note ----- 809442 Jet–Main (High Altitude) Used on Type No(s). 1331.				125C		Carburetor (For Replacement, Order Reference 125B)
118B	231669	Jet–Main (High Altitude) ----- Note ----- 231806 Jet–Main (High Altitude) Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.	122	690691	Spacer–Carburetor Used on Type No(s). 1331, 1332.	127	●690727	Plug–Welch
			122A	690747	Spacer–Carburetor	130A	690726	Valve–Throttle Used on Type No(s). 1331.
			125B	809019	Carburetor (Gravity Feed) ----- Note ----- 809017 Carburetor (Nikki Carburetor) (Replaces Mikuni Carburetor)(Also Order Ref. No. 947A, Part No. 692094, Solenoid–Fuel) Used on Type No(s). 0064, 0075, 0079, 0163, 0166, 1005, 1012, 1013, 1026, 1029, 1042, 1046, 1047, 1064, 1075, 1077, 1078, 1079, 1080, 1081, 1084, 1086, 1087, 1100, 1102, 1108, 1109, 1111, 1116, 1118, 1139, 1145, 1156, 1174, 1195, 1198, 1206, 1209, 1225, 1243, 1244, 1246, 1253, 1264, 1273, 1274, 1275, 1279, 1282, 1283, 1284, 1290, 1294, 1299, 1302, 1308, 1312, 1315, 1316, 1317, 1318, 1375, 1377, 1378, 1397, 1399, 1402, 1409, 1410, 1416, 1421.	131A	807924	Kit–Throttle Shaft
						132A	690863	Stop–Throttle ----- Note ----- 692155 Stop–Throttle Used on Type No(s). 1145.
119	690720	Screw (Upper To Lower Carburetor Body)				133A	806961	Float–Carburetor
119A	94634	Screw (Upper To Lower Carburetor Body)				141A	807928	Kit–Choke Shaft
121A	809024	Kit–Carburetor Overhaul (Used After Code Date 95073100).				142A	●806128	Nozzle–Carburetor (Standard) ----- Note ----- 690725 Nozzle– Carburetor (Standard) Used on Type No(s). 1331.
						142C	231782	Nozzle–Carburetor (Standard)
						146	691639	Key–Timing
						147	●231783	Jet–Pilot
						151	841185	Stud (Exhaust Manifold)
						161	691561	Base–Air Cleaner (Metal) ----- Note ----- 690909 Base–Air Cleaner (Metal) Used on Type No(s). 0127, 0136, 0145, 0169, 1109, 1136, 1145, 1246, 1275, 1280, 1299, 1308, 1315, 1316, 1333.

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161B	808414	Base–Air Cleaner (Metal)	188	692056	Screw (Control Bracket) (14mm Bracket)			690710 Spring– Governor (Main)
163	★692081	Gasket–Air Cleaner			----- Note -----			Used on Type No(s).
163B	★692052	Gasket–Air Cleaner		692062	Screw (Control Bracket) (18mm Bracket)			0124, 0133, 1133, 1170, 1176, 1189, 1251, 1261, 1294.
165	693148	Nut (Ring Gear)						692071 Spring– Governor (White)
167	692297	Seal–Air Cleaner Nut	190	692199	Screw (Fuel Tank)			Used on Type No(s).
182	492317	Bracket–Fuel Tank	190A	94536	Screw (Fuel Tank)			0064, 0084, 0169, 1028, 1064, 1084, 1108, 1109, 1145, 1173, 1273, 1279, 1280, 1306, 1333, 1397.
182A	690778	Bracket–Fuel Tank	192	807623	Adjuster–Rocker Arm			691508 Spring– Governor (Blue)
182B	690779	Bracket–Fuel Tank	197	807163	Screw (Back Plate)			Used on Type No(s).
182C	690780	Bracket–Fuel Tank	203	690923	Crank–Bell			0115, 0158, 1115, 1116, 1158, 1169, 1198, 1204, 1224, 1225, 1253, 1266, 1269, 1274, 1275, 1308, 1311, 1315, 1318, 1402.
182D	690781	Bracket–Fuel Tank	205	692083	Screw (Bell Crank)			692072 Spring– Governor (Purple)
182E	841601	Bracket–Fuel Tank	206	691244	Nut–Governor Adjusting (Used After Code Date 96033100).			Used on Type No(s).
182F	691520	Bracket–Fuel Tank	208	691549	Rod–Governor Control (Used After Code Date 96033100).			1246, 1256, 1263.
182G	841600	Bracket–Fuel Tank	208A	808453	Rod–Governor Control (Used After Code Date 94113000 and Before Code Date 96040100).			690716 Spring– Governor (Green)
182H	691524	Bracket–Fuel Tank	209	692070	Spring–Governor (Red)			Used on Type No(s).
182J	691525	Bracket–Fuel Tank			----- Note -----			0027, 0048, 0080, 0086, 0113, 0153, 0157, 1027, 1080, 1086, 1110, 1113, 1153, 1157, 1230, 1241, 1415.
187	791766	Line–Fuel (Cut To Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut To Required Length) (Used Before Code Date 05070100). 809499 Line–Fuel (Cut To Required Length) Used on Type No(s). 1111.			691506 Spring– Governor (Yellow) Used on Type No(s). 0042, 0052, 0078, 0160, 1011, 1042, 1052, 1078, 1160, 1284, 1378, 1398, 1410. 691507 Spring– Governor (Brown) Used on Type No(s). 0026, 1026, 1029, 1405, 1409, 1414, 1416, 1421.			805630 Spring– Governor (Black) Used on Type No(s). 0137, 0138, 0162, 1137, 1138, 1162.
187A	791801	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691049 Line–Fuel (Molded) (Used Before Code Date 05070100).						
187B	692107	Line–Fuel						
187C	692106	Line–Fuel						
187D	692108	Line–Fuel						

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263–21

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		806507 Spring-Governor (Black) Used on Type No(s). 1282.			691553 Spring-Governed Idle Used on Type No(s). 1169, 1173, 1224, 1225, 1273, 1274, 1282, 1294, 1299, 1306.	234	691723	Clip-Control Rod
		806872 Spring-Governor (Orange) Used on Type No(s). 1259, 1331, 1332.			806868 Spring-Governed Idle Used on Type No(s). 1259, 1331, 1332.	239	690233	Switch-Oil Pressure (Lower) ----- Note -----
209A	690709	Spring-Governor (Main) Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0167, 1003, 1004, 1005, 1006, 1085, 1113, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1155, 1156, 1159, 1167, 1174, 1190, 1194, 1203, 1213, 1292.	211A	690707	Spring-Governed Idle Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0167, 1003, 1004, 1005, 1006, 1085, 1113, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1155, 1156, 1159, 1167, 1174, 1190, 1194, 1203, 1213, 1292.			491657s Switch-Oil Pressure (Normally Closed)
210	691370	Strainer-Fuel	212	690712	Link-Throttle	240	394358s	Filter-Fuel ----- Note -----
211	692069	Spring-Governed Idle ----- Note -----	212A	691519	Link-Throttle			298090s Filter-Fuel Used on Type No(s). 0137, 0138, 0151, 0152, 0162, 1137, 1138, 1151, 1152, 1162, 1398, 1401.
		692068 Spring-Governed Idle Used on Type No(s). 0042, 0052, 0078, 0137, 0138, 0160, 0162, 1011, 1042, 1052, 1078, 1116, 1137, 1138, 1160, 1162, 1259, 1284, 1331, 1378, 1398, 1401, 1410.	216	690705	Link-Choke	240A	691035	Filter-Fuel
		691505 Spring-Governed Idle Used on Type No(s). 0026, 0086, 1026, 1029, 1086, 1108, 1241, 1416.	217	806862	Spring-Choke Return	240B	808116s	Filter-Fuel
			222	808454	Bracket-Control (Used With Control Lever And/Or Wire With "Z" Formed End)	254	807921	Drain-Carburetor Bowl
			222A	690918	Bracket-Control (Used With Control Lever And/Or Wire With "L" Formed End)	255	690721	Bushing-Choke Shaft
			226	692075	Rod-Hand Choke	262	692083	Screw (Rod Bracket)
			227	690236	Lever-Governor Control	265	691024	Clamp-Casing
			231	690718	Screw (Choke Valve)	267	692083	Screw (Casing Clamp)
			231B	94457	Screw (Choke Valve)	268	691025	Casing-Control Wire (Cut To Required Length)
			232	692073	Spring-Governor Link	269	691026	Wire-Control (Cut To Required Length)
						270	691027	Nut (Control Wire Casing)
						271	692541	Lever-Control (Cable Wire With "Z" Formed End)
						271A	692105	Lever-Control (Cable Wire With "L" Formed End)
						271B	691028	Lever-Control
						273	690681	Seal-O Ring (Oil Pump)
						276	690704	Washer-Sealing (Governor Crank)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263-22

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276A	★△807085	Washer-Sealing (Head)(Rocker Cover) (Used After Code Date 01120200). ----- Note ----- 691766 Washer-Sealing (Head)(Rocker Cover) (Used Before Code Date 01120300).	304	690929	Housing-Blower (Black) ----- Note ----- 690930 Housing-Blower (Red)	308G	692805	Cover-Cylinder Head (Cylinder 2) (Non Ducted)
276B	690724	Washer-Sealing (Carburetor Plug)	305	841233	Screw (Blower Housing) (6mm) ----- Note ----- 692056 Screw (Blower Housing) (14mm)	309	691564	Motor-Starter (Steel Ring Gear Only)
276C	●806137	Washer-Sealing (Solenoid)	308	841183	Cover-Cylinder Head (Cylinder 1) (Non Ducted) ----- Note ----- 841317 Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 1013, 1084, 1111, 1116, 1118, 1139, 1195, 1198, 1206, 1244, 1311, 1317, 1318, 1402, 1405, 1409, 1414, 1421.	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)
276E	●692343	Washer-Sealing (Solenoid)				309B	499521	Motor-Starter (Aluminum Ring Gear)
278	842122	Washer (Governor Control Lever)				309C		Motor-Starter (Services Aluminum Ring Gear Only) (For Replacement See Reference 309B)
280	691526	Bracket-Rod				309D	808817	Motor-Starter Used on Type No(s). 1268, 1312.
281	690742	Panel-Control				310	496880	Screw (Starter Motor) (4 1/4" Long)
282	692083	Screw (Control Lever)				310A	690323	Screw (Starter Motor) (4 7/16" Long)
287	692062	Screw (Dipstick Tube)				310B	691263	Screw (Starter Motor) (4 13/16" Long)
287A	806660	Screw (Dipstick Tube) Used on Type No(s). 1195.				310C	692329	Screw (Starter Motor) (5-3/8" Long)
300		Muffler (For Replacement Muffler, Use 692099)				311	496887	Brush Set
300B	498984s	Muffler (High On The Side)				311A	497608	Brush Set
300C	807752	Muffler (High On The Side)				311B	490311	Brush Set (4 9/16" Housing Length)
300D	692099	Muffler (Lo Mount)(Starter Motor Side Or Oil Filter Side)	308A	806544	Cover-Cylinder Head (Cylinder 2)(Ducted) (Used Before Code Date 03110100). Used on Type No(s). 1010, 1013, 1084, 1111, 1116, 1118, 1139, 1158, 1195, 1198, 1206, 1217, 1244, 1311, 1402, 1405, 1409, 1414.	318	690932	Screw (Mounting Bracket)
300E	690906	Muffler (Hi Mount)(Starter Side Exit)				318A	691982	Screw (Mounting Bracket)
300F	690931	Muffler (Hi Mount)(Starter Side Exit)				321	690379	Fan-Booster
300G	691562	Muffler (Hi Mount) (Oil Filter Side Exit)	308F	841182	Cover-Cylinder Head (Cylinder 2)(Non Ducted)	322	841233	Screw (Cylinder Head Cover)
300H	807831	Muffler (Hi Mount) (Starter Side Exit)				322A	692067	Screw (Cylinder Head Cover)
						331	691075	Washer (Booster Fan)
						332	690887	Nut (Flywheel)
						332A	805744	Nut (Flywheel)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**2263-23**

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	492341	Armature-Magneto	356A	690809	Wire-Stop	436B	691501	Manifold-Exhaust (For Customer Supplied Muffler) (Oil Filter Side Exit)
334	692066	Screw (Magneto Armature)	356B	692961	Wire-Stop			
337	491055s	Plug-Spark	356E	691999	Wire-Stop	436D	691502	Manifold-Exhaust (For Customer Supplied Muffler) (Starter Side Exit)
		----- Note -----	357	691483	Key-Drive Pulley			
		496018s Plug-Spark	358	841188	Gasket Set-Engine (Used After Code Date 01120200).	436F	805609	Manifold-Exhaust (High On The Side)
		Used on Type No(s).			----- Note -----	437	691902	Screw (Exhaust Manifold)
		0010, 0115, 0163,			808389 Gasket	439	★692154	Seal-O Ring (Crankcase Cover/Sump) (Used After Code Date 97043000).
		1010, 1115, 1116,			Set-Engine			----- Note -----
		1163, 1170, 1176,			(Used Before Code Date 01120300).			805198 Seal-O Ring (Crankcase Cover/Sump) (Used Before Code Date 97050100).
		1331, 1332.				440	690342	Screw (Booster Fan)
		792015 Plug-Spark	359	691077	Washer (Ground Terminal)	445	394018s	Filter-Air Cleaner Cartridge
		Used on Type No(s).	363	19203	Puller-Flywheel	445B	393957s	Filter-Air Cleaner Cartridge
		1001, 1005, 1009,	365	690711	Screw (Carburetor)	447	841233	Screw (Air Guide Cover)
		1013, 1026, 1042,	373	691612	Nut (Ground Terminal)	455	690864	Cup-Flywheel (Used After Code Date 93081500).
		1046, 1047, 1065,	377	808095	Key-Woodruff			----- Note -----
		1066, 1067, 1079,	383	19374s	Wrench-Spark Plug			807881 Cup-Flywheel (Used Before Code Date 93081600).
		1085, 1087, 1096,			----- Note -----	456	691529	Plate-Pawl Friction
		1105, 1113, 1120,			19576s Wrench-Spark	456A	224228	Plate-Pawl Friction
		1125, 1145, 1156,			Plug	459	808166	Pawl-Ratchet
		1157, 1174, 1185,			Used on Type No(s).	459A	492431	Pawl-Ratchet
		1186, 1194, 1234,			1157, 1243, 1253,	467	691985	Knob-Air Cleaner
		1243, 1246, 1247,			1266, 1275, 1290,	467B	691668	Knob-Air Cleaner
		1250, 1251, 1253,			1308, 1309, 1311,	468	★690690	Seal-O Ring (Oil Pump Screen)
		1254, 1256, 1261,			1318, 1399, 1402,	474B	696459	Alternator (Dual Circuit) Used on Type No(s).
		1263, 1266, 1268,			1405, 1410, 1413.			1277, 1399.
		1269, 1275, 1283,	385	807084	Screw (Fuel Pump)			
		1288, 1289, 1290,	387	808656	Pump-Fuel			
		1292, 1296, 1300,	387A	808969	Pump-Fuel			
		1302, 1308, 1309,	403	690288	Washer (End Cap)			
		1311, 1312, 1315,	413	693587	Nut (Starter Motor)			
		1317, 1318, 1319,	415	690283	Plug (Intake Manifold)			
		1331, 1333, 1365,	432	691509	Cap-Spring			
		1366, 1375, 1377,	436	692061	Manifold-Exhaust (Lo Mount) (Oil Filter Side)			
		1378, 1396, 1399,			Manifold-Exhaust (Lo Mount) (Starter Motor Side)			
		1400, 1401, 1402,						
		1405, 1409, 1410,						
		1413, 1414, 1421.						
338	691312	Gasket-Dipstick (Dipstick Gasket)						
346	690661	Screw (Spark Arrestor)						
347	691995	Switch-Rocker						
349	690238	Nut (Cylinder Head Cover)						
355	842122	Washer (Muffler Bracket)						
355A	690944	Washer (Muffler Bracket)						
356	690796	Wire-Stop						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263-24

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474C	696457	Alternator (5 To 9 Amp Regulated) Used on Type No(s). 0121, 1121, 1292, 1412.		841170	Regulator (20 Amp) Used on Type No(s). 1416.	525C	690897	Tube-Dipstick (Used Before Code Date 98060100). ----- Note -----
474D	696458	Alternator (10-16 Amp Regulated)	503	691532	Strap-Starter		690907	Tube-Dipstick (Used Before Code Date 98060100). Used on Type No(s). 0115, 0124, 0139, 1105, 1111, 1115, 1139, 1206.
474E	696579	Alternator (20 Amp) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1264, 1276, 1282, 1288, 1299.	505	690238	Nut (Governor Control Lever)	526	692067	Screw (Regulator)(10-16 Amp Regulated)
474F	841178	Alternator (20 Amp) Used on Type No(s). 1416.	506	690677	Screw (Carburetor Cover)	526A	690717	Screw (Regulator)(5 To 9 Amp Regulated)
479	807084	Screw (Oil Pump Screen)	507	691972	Insulator	526B	691547	Screw (Regulator)(20 Amp)
493	691518	Bracket-Mounting	510	496881	Drive-Starter (Used With Steel Ring Gear)	527	690423	Clamp-Tube
493A	691177	Bracket-Mounting (Solenoid)	510A	696541	Drive-Starter (Used With Aluminum Ring Gear)	529	690744	Grommet
493B	691503	Bracket-Mounting (Solenoid) Used on Type No(s). 0153, 1266.	510B	696540	Drive-Starter	529A	691527	Grommet ----- Note -----
500	691086	Washer (Key Switch)	513	692024	Clutch-Drive		805783	Grommet (Breather Extension)
501	691185	Regulator (10-16 Amp Regulated)	515	691528	Spring-Pawl	532	691115	Nut (Mounting Bracket)
501A	691188	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0121, 1121, 1292, 1296, 1300, 1412.	520	691084	Terminal-Ground	544		Armature-Starter (Service With 691564 Starter Motor Only)
501B	691573	Regulator (20 Amp) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1264, 1276, 1282, 1288, 1299. ----- Note ----- 808877 Regulator Used on Type No(s). 1302.	522	491832	Plug-Dipstick/Fill	544B		Armature-Starter (Serviced By 499521 Starter Motor Only)
			523	692100	Dipstick (Used Before Code Date 98060100).	544C	490309	Armature-Starter (4 3/8" Housing Length)
			523A	693175	Dipstick (Used After Code Date 98053100).	552	690701	Bushing-Governor Crank (Output End)
			524	★693172	Seal-Dipstick Tube (Used After Code Date 98053100).	552A	806686	Bushing-Governor Crank (Flanged)
			524A	281370s	Seal-Dipstick Tube (Used Before Code Date 98060100).	555	692067	Screw (Starter Solenoid)
			525	693174	Tube-Dipstick (Standard) (Used After Code Date 98053100).	561	690713	Nut (Control Lever)
			525A	693173	Tube-Dipstick (Used After Code Date 98053100). Used on Type No(s). 1081, 1105, 1109, 1111, 1139, 1206, 1299.	562	690239	Bolt (Governor Control Lever)
						563	691982	Screw (Debris Screen Guard)
						565	690682	Stud (Oil Filter Adapter)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**2263-25**

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
572	690686	Baffle-Breather	613A	841233	Screw (Muffler)	638A	690706	Washer (Cylinder Head Cover)(Spring Lockwasher)
573	841310	Plate-Back			----- Note -----	643	692079	Retainer-Air Filter
		----- Note -----			----- Note -----	643A	690447	Retainer-Air Filter
	693045	Plate-Back Used on Type No(s). 1312.		690297	Screw (Muffler) (Used After Code Date 97012300).	650	692539	Screw (Oil Deflector)
	841314	Plate-Back Used on Type No(s). 1416.		692198	Screw (Muffler) (Used Before Code Date 97012400).	663	692083	Screw (Control Panel)
577	690795	Cable-Starter				664	691087	Nut (Key Switch)
578	692306	Wire Assembly	615	691550	Retainer-Governor Shaft	668	690860	Spacer
578A	692319	Wire Assembly	616	806685	Crank-Governor (Used After Code Date 99072000).	668A	691500	Spacer
578B	691377	Wire Assembly				668B	691215	Spacer
596	691492	Screw (Oil Pump)	616A	690899	Crank-Governor (Used Before Code Date 99072100).	674	692056	Screw (Fuel Tank Bracket) (M8 x 14)
597	690876	Screw (Pawl Friction Plate)				674B	692062	Screw (Fuel Tank Bracket) (M8 x 18)
597A	94463	Screw (Pawl Friction Plate)	620	494052	Panel-Speed Control	676	393761	Deflector-Muffler
598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	628	806660	Screw (Fuel Pump Bracket)	676A	397630	Deflector-Muffler
601	691038	Clamp-Hose	629	806717	Spring-Throttle Return	676C	495518	Deflector-Muffler
601A	691145	Clamp-Hose	629A	806716	Spring-Throttle Return	676D	808394	Deflector-Muffler
601B	95162s	Clamp-Hose	629B	692088	Spring-Throttle Return Used on Type No(s). 0081, 0082, 0083, 1009, 1012, 1081, 1105, 1222, 1227, 1276, 1277, 1399.	677	810079	Screw (Muffler Deflector)
601C	691522	Clamp-Hose				677A	690688	Screw (Muffler Deflector)
608	692102	Starter-Rewind (Used After Code Date 93081500).	633	●690722	Seal-Choke/Throttle Shaft	677B	690661	Screw (Muffler Deflector)
608A	808153	Starter-Rewind (Used Before Code Date 93081600).	633B	806131	Seal-Choke/Throttle Shaft	681	808798	Kit-Needle/Seat
613	692067	Screw (Muffler)	633C	●808022	Seal-Choke/Throttle Shaft	683	691029	Nut (Starter Solenoid)
		----- Note -----				689	691272	Spring-Friction (Governor Control Rod)
	692328	Screw (Muffler) Used on Type No(s). 1184, 1405, 1409, 1414, 1421.	635	692076	Boot-Spark Plug	689A	262564	Spring-Friction (Rewind Starter)
	692581	Screw (Muffler) Used on Type No(s). 1154, 1158, 1246, 1311, 1315, 1318, 1402.	638	691551	Washer (Cylinder Head Cover)(Internal Tooth Lockwasher) (Used Before Code Date 03110100).	691	690680	Seal-Governor Shaft
						695	693149	Screw (Ring Gear)
						697	692062	Screw (Drive Cap)
						703	94484	Clip
						710	807689	Cover-Oil Filter

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
711	841233	Screw (Carburetor Shield)			841318 Harness– Wiring Used on Type No(s). 1268, 1312.	819C	692537	Screw (Muffler Bracket) ----- Note -----
718	806469	Pin–Locating						692067 Screw (Muffler Bracket) Used on Type No(s). 1266, 1300, 1399, 1410, 1413.
718A	690760	Pin–Locating Used on Type No(s). 0118, 0124, 0158, 1118, 1158, 1195, 1217, 1311, 1318, 1402, 1409, 1414, 1421.	797	691029	Nut (Brush Retainer)	819D	692062	Screw (Muffler Bracket)
			797A	693167	Nut (Brush Retainer)	830	809157	Stud–Rocker Arm (Used After Code Date 96033100). ----- Note -----
			801	808778	Cap–Drive			691497 Stud–Rocker Arm (Used Before Code Date 96040100).
718B	690740	Pin–Locating Used on Type No(s). 0136, 0144, 1136, 1144, 1244, 1308, 1316.	801B	691283	Cap–Drive	832	691571	Guard–Muffler
			801C		Cap–Drive (For Replacement Starter Motor, Order Reference 309B)	833	841233	Screw (Air Cleaner Mounting Strap/Stud)
725A	805702	Shield–Heat	802	496813	Cap–End	833A	690872	Screw (Air Cleaner Mounting Strap/Stud)
725B	691498	Shield–Heat	802A	691286	Cap–End	833B	691593	Screw (Air Cleaner Mounting Strap/Stud)
725C	806102	Shield–Heat	802B		Cap–End (For Replacement Starter Motor, Order Reference 309B)	836	691514	Screw (Muffler Guard)
726		Gear–Ring (Steel)(See Reference 23 for Service)	803	690854	Housing–Starter (3 7/16" Housing Length)	836A	692067	Screw (Muffler Guard)
726A	807805	Gear–Ring	803A	693547	Housing–Starter (3 13/16" Housing Length)	837	808085	Spacer–Muffler (Includes 2)
727	841313	Cover–Starter Drive			Housing–Starter (Serviced By 499521 Starter Motor Only)	840	692096	Kit–Panel
728B	691514	Screw (Heat Shield)	803B		Housing–Starter (4 3/8" Housing Length)	842	690611	Seal–O Ring (Dipstick Tube)
729	690586	Clip–Wire			----- Note -----	843	691322	Sleeve–Lever
732	690688	Screw (Starter Drive Cover)	803C	494205	Housing–Starter (4 3/8" Housing Length)	849	691088	Screw (Stub Shaft)
732A	841233	Screw (Starter Drive Cover)			398892 Housing– Starter (4 9/16" Housing Length)	851	493880s	Terminal–Spark Plug
737	690679	Screw (Oil Filter Adapter)	807	805557	Spacer–Throttle	862	692153	Strap/Stud–Air Cleaner Mounting
739	690451	Clip–Debris	812	Δ692055	Nut (Rocker Cover) (Used Before Code Date 01120300).	862D	691565	Strap/Stud–Air Cleaner Mounting
741	691530	Gear–Timing	813	690635	Clamp	862E	492133	Strap/Stud–Air Cleaner Mounting
748	692083	Screw (Control Rod Clip)	816	690706	Washer (Oil Filter Adapter)	863	691513	Bracket–Muffler (Lo Mount) (Oil Filter Side)
773	690875	Retainer	819	692056	Screw (Muffler Bracket)	863A	690756	Bracket–Muffler (Lo Mount)(Starter Motor Side)
774	692067	Screw (Stop Wire)	819A	690943	Screw (Muffler Bracket)	863B	805610	Bracket–Muffler
783	695708	Gear–Pinion (Services Aluminum Ring Gear Only)						
788	691559	Bracket–Fuel Pump						
789	691996	Harness–Wiring ----- Note ----- 691578 Harness– Wiring Used on Type No(s). 1009, 1012, 1057, 1241, 1264, 1276, 1288, 1299.						

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

2263–27

Assemblies include all parts shown in frames.

12/09/2005

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
865	841312	Cover-Air Guide (Black)	949	690475	Guard-Debris Screen	1005	809441	Fan-Flywheel (Used After Code Date 00121200).
865A	841319	Cover-Air Guide (Black)	949A	808226	Guard-Debris Screen			----- Note -----
		----- Note -----	955A	807723	Plug-Carburetor (Jet)			690911 Fan-Flywheel (Used Before Code Date 00121300).
		690908 Cover-Air Guide (Black)	955B	807927	Plug-Carburetor (Jet)			1006 690452 Retainer-Fan
		Used on Type No(s). 0124, 0139, 1111, 1139, 1206.	957	491367s	Cap-Fuel Tank (Plastic)	1009	806474	Screw (Starter Motor)
868	691963	Seal-Valve	957A	493988s	Cap-Fuel Tank (Plastic)	1012	690592	Retainer-Link
871	692057	Bushing-Valve Guide	958	698182	Valve-Fuel Shut Off (Plastic)	1012A	691521	Retainer-Link
876	696539	Kit-Pinion Spring	958B	692008	Valve-Fuel Shut Off (Plastic)	1017	690900	Screen-Oil Pump
877	393456	Wire/Connector-Alternator (White Dual Socket)	967	272490s	Filter-Pre Cleaner	1019	808036	Kit-Label
877B	393537	Wire/Connector-Alternator (Green)(Single Socket)	967C	271794s	Filter-Pre Cleaner	1022★△806039s		Gasket-Rocker Cover
877C	399916	Wire/Connector-Alternator	968	699959	Cover-Air Cleaner (With Clips)	1023	690758	Cover-Rocker
877D	698092	Wire/Connector-Alternator	968C	691910	Cover-Air Cleaner	1023B	691494	Cover-Rocker
878	691237	Harness-Alternator Used on Type No(s). 1277.	968E	691334	Cover-Air Cleaner	1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump) (Used After Code Date 98053100).
878B	691362	Harness-Alternator	971	807084	Screw (Air Cleaner Base to Carburetor)	1023D	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump) (Used Before Code Date 98060100).
879	690757	Cover-Carburetor	971B	692537	Screw (Air Cleaner Base to Carburetor)	1023E	691531	Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks)
882	692074	Flange-Exhaust	972	492369	Tank-Fuel (Plastic)(7 Quart)	1024	693185	Pump-Oil
883 ★△691613		Gasket-Exhaust	972A	690663	Tank-Fuel (Plastic)(9 Quart)	1025	690689	Spool-Governor
884	690898	Clamp-Muffler	987	492172	Seal-Throttle Shaft	1026	691836	Rod-Push (Steel)
884A	691956	Clamp-Muffler	988	★692063	Gasket-Oil Adapter			----- Note -----
892	692318	Switch-Key	988A	690687	Gasket-Oil Adapter (Used With Reference 710 Only)			691758 Rod-Push (Aluminum)
896	691641	Pin-Drive Retainer	990	691959	Key Set			1027 492932s Filter-Oil (2 1/4" Long) (Used After Code Date 95020200).
899	691077	Washer (Starter Solenoid)	994	392390	Arrestor-Spark			----- Note -----
915	691493	Liner-Port			----- Note -----			491056 Filter-Oil (3 1/4" Long) (Used Before Code Date 95020600).
918	393815	Hose-Vacuum (Cut To Required Length)			808361 Arrestor-Spark (Used on Type No(s). 1289.			
920	691656	Solenoid-Starter	996A	691577	Shield-Carburetor			
927	691116	Screw (Electronic Governor Module)	1004	690743	Duct-Air			
934	691058	Screw (Fan Retainer)						
947A	692094	Solenoid-Fuel						
947B	807922	Solenoid-Fuel						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1028	808033	Adapter–Oil Filter (For Horizontal Mounted Oil Filter) ----- Note ----- 808235 Adapter–Oil Filter	1046	692082	Plug–Blower Housing	1100	690973	Pivot–Rocker Arm
			1047	841580	Shaft–Stub	1119	691552	Screw (Alternator)
			1048	690669	Module–Electronic Governor	1127	94460	Screw (Float Bowl)
			1051	691124	Ring–Retaining	1133	690342	Screw (Crankshaft)
1029	807323	Arm–Rocker	1051A	691265	Ring–Retaining	1134A	94464	Washer (Pawl Friction Plate)
1030	691496	Support–Rocker Arm (Used Before Code Date 96040100).	1054A	280275	Tie–Cable	1135	806497	Washer (Crankcase Cover/Sump)
1031	690693	Shaft–Rocker Arm (Used Before Code Date 96040100).	1058	276343	Operator's Manual	1148	94504	Screw (Clip)
1036		Label–Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1059	698516	Kit–Screw/Washer	1176	842067	Nut (Exhaust Manifold)
1037	807915	Ball–Choke Locator	1083	691626	Nut (End Cap)	1254	807084	Screw (Rocker Cover Stud) (Used After Code Date 01120200).
1038	492374	Rod–Fuel Shut Off	1083A	690958	Nut (End Cap)	1330	272144	Repair Manual
1038A	691567	Rod–Fuel Shut Off	1090	691293	Retainer–Brush	1346	492031	Valve–Oil Drain Shut Off Used on Type No(s). 1311, 1318, 1421.
1044A	805756	Screw (Flywheel)	1091	691516	Cap–Limiter			
			1091A	806054	Cap–Limiter			
			1095A	808391	Gasket Set–Valve (Used Before Code Date 01120300).			
			1095B	841191	Gasket Set–Valve (Used After Code Date 01120200).			

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**2263–29**

Assemblies include all parts shown in frames.

12/09/2005