



**357700**

# Illustrated Parts List

## Model Series

# 357700

TYPE NUMBERS  
0113.

### TABLE OF CONTENTS


<b>Air Cleaner</b> .....	7
<b>Alternator</b> .....	6
<b>Blower Housing</b> .....	9
<b>Camshaft</b> .....	3
<b>Carburetor</b> .....	4
<b>Controls</b> .....	6
<b>Crankshaft</b> .....	3
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	5
<b>Electric Starter</b> .....	9
<b>Engine Sump</b> .....	2
<b>Flywheel</b> .....	8
<b>Gasket Set - Engine</b> .....	2
<b>Gasket Set - Valve</b> .....	5
<b>Governor Spring</b> .....	6
<b>Ignition</b> .....	6
<b>Intake Manifolds</b> .....	3
<b>Kit - Carburetor Overhaul</b> .....	4
<b>Lubrication</b> .....	10
<b>Piston, Rings, Connecting Rod</b> .....	2
<b>Shrouds</b> .....	10
<b>Valves</b> .....	5









PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





**357700**

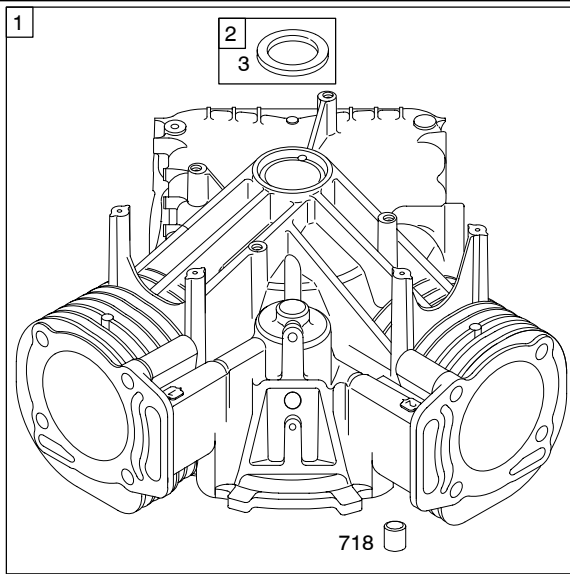

- 1019 LABEL KIT
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL

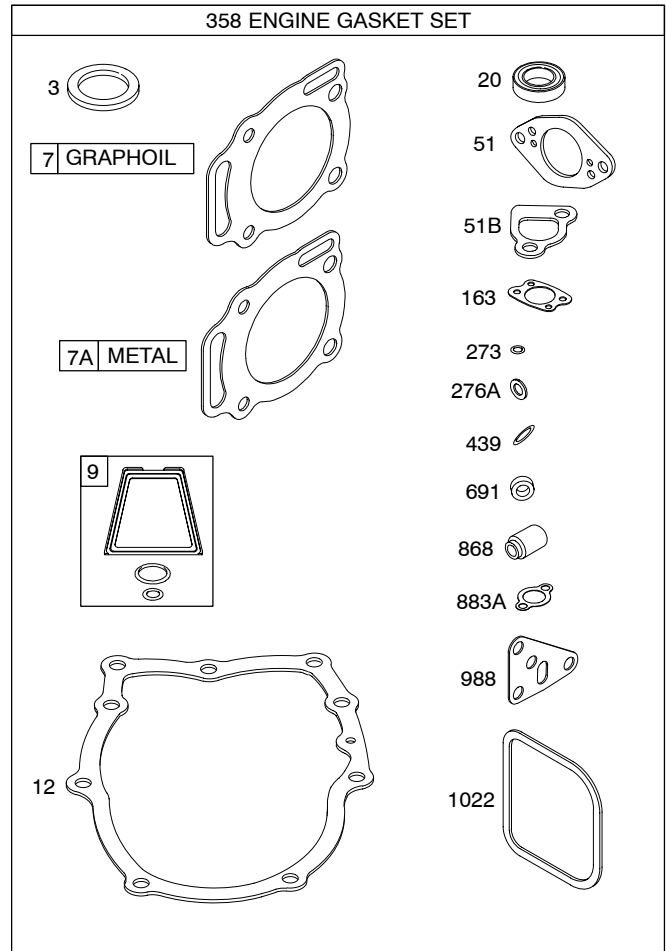
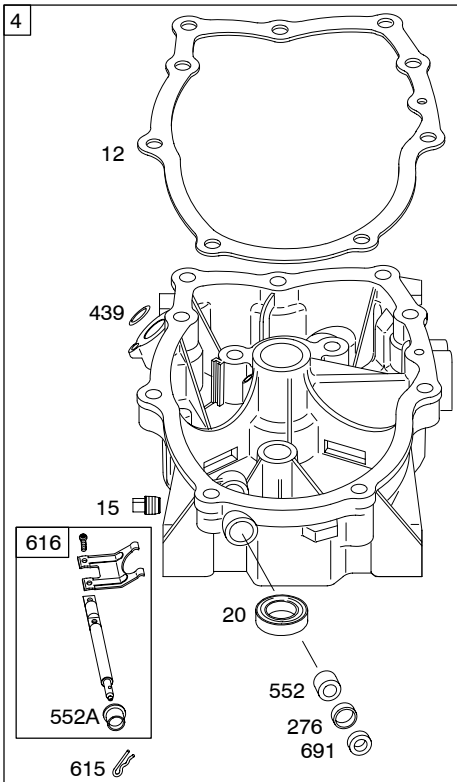
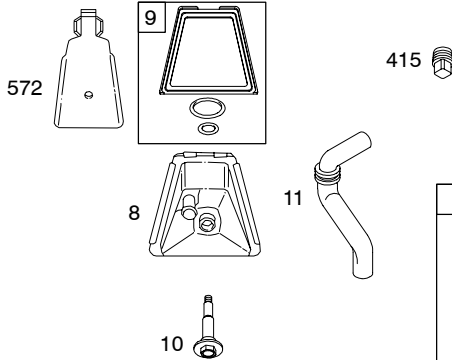
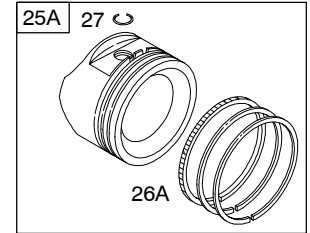




*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
 5371-2 Assemblies include all parts shown in frames. 12/07/2005

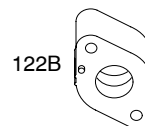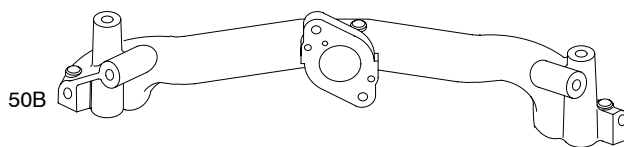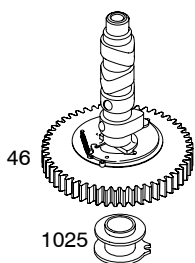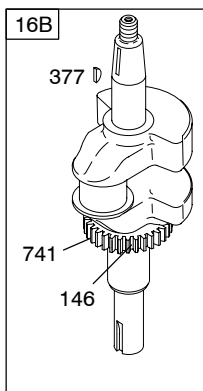




654 ©

# 357700

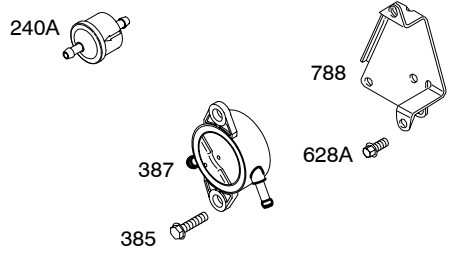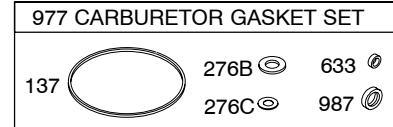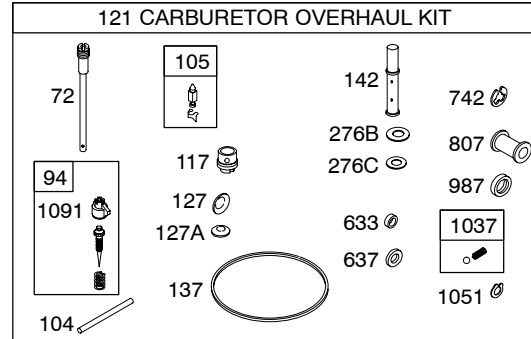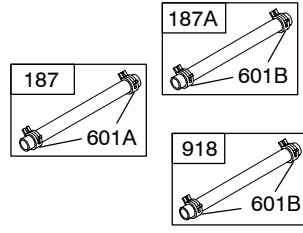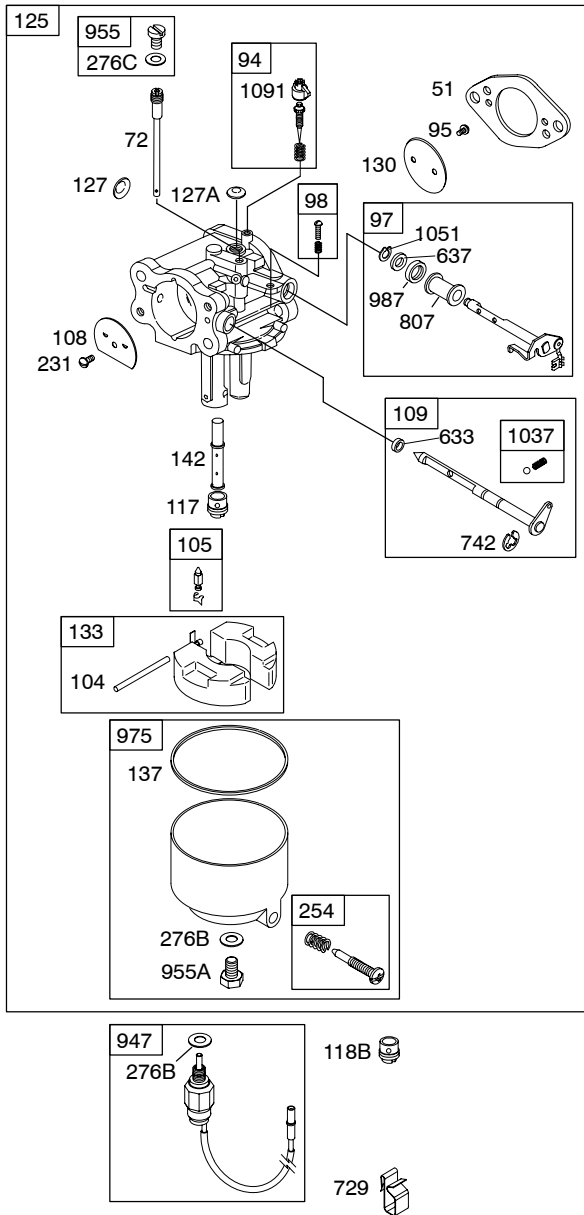


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5371-4 Assemblies include all parts shown in frames. 12/07/2005

437 

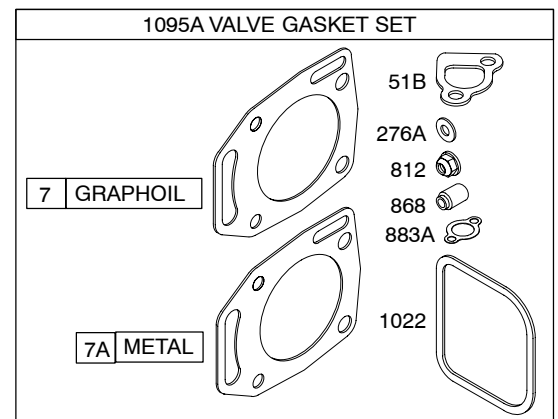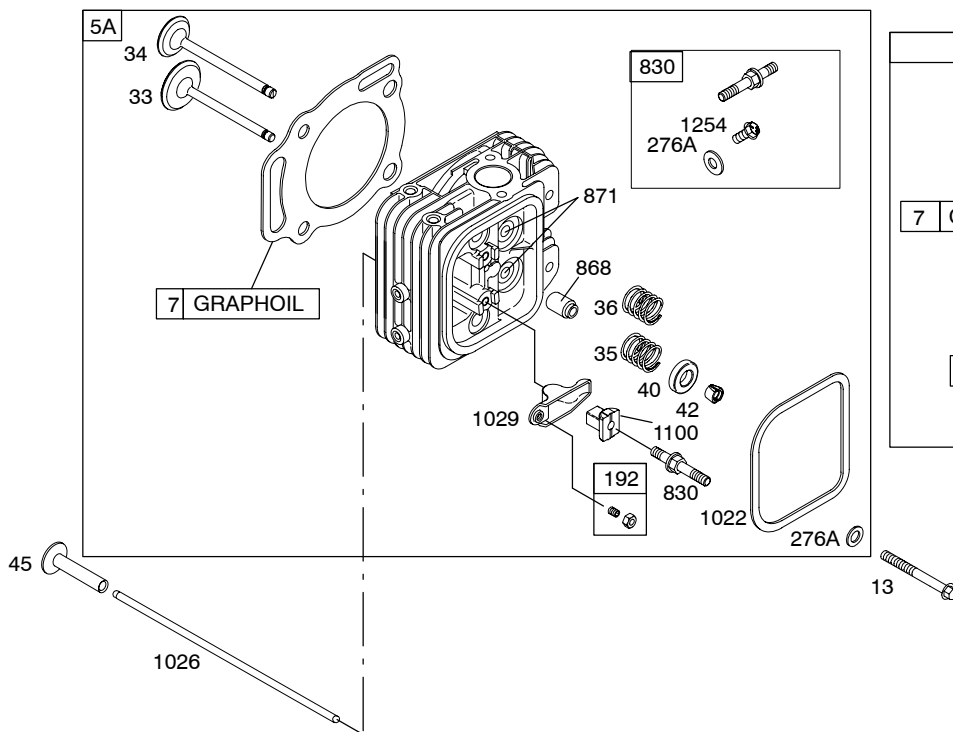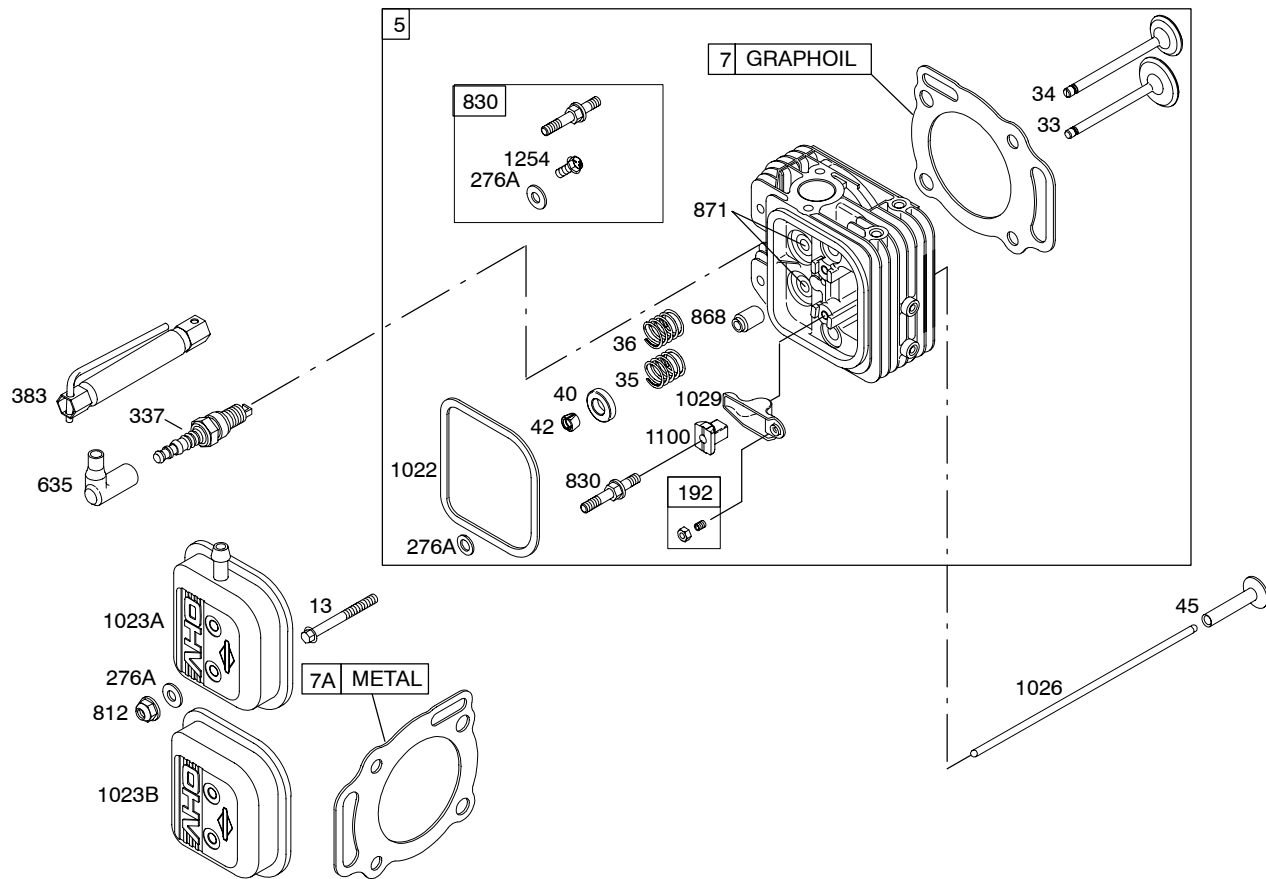


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5371-5 Assemblies include all parts shown in frames. 12/07/2005

# 357700

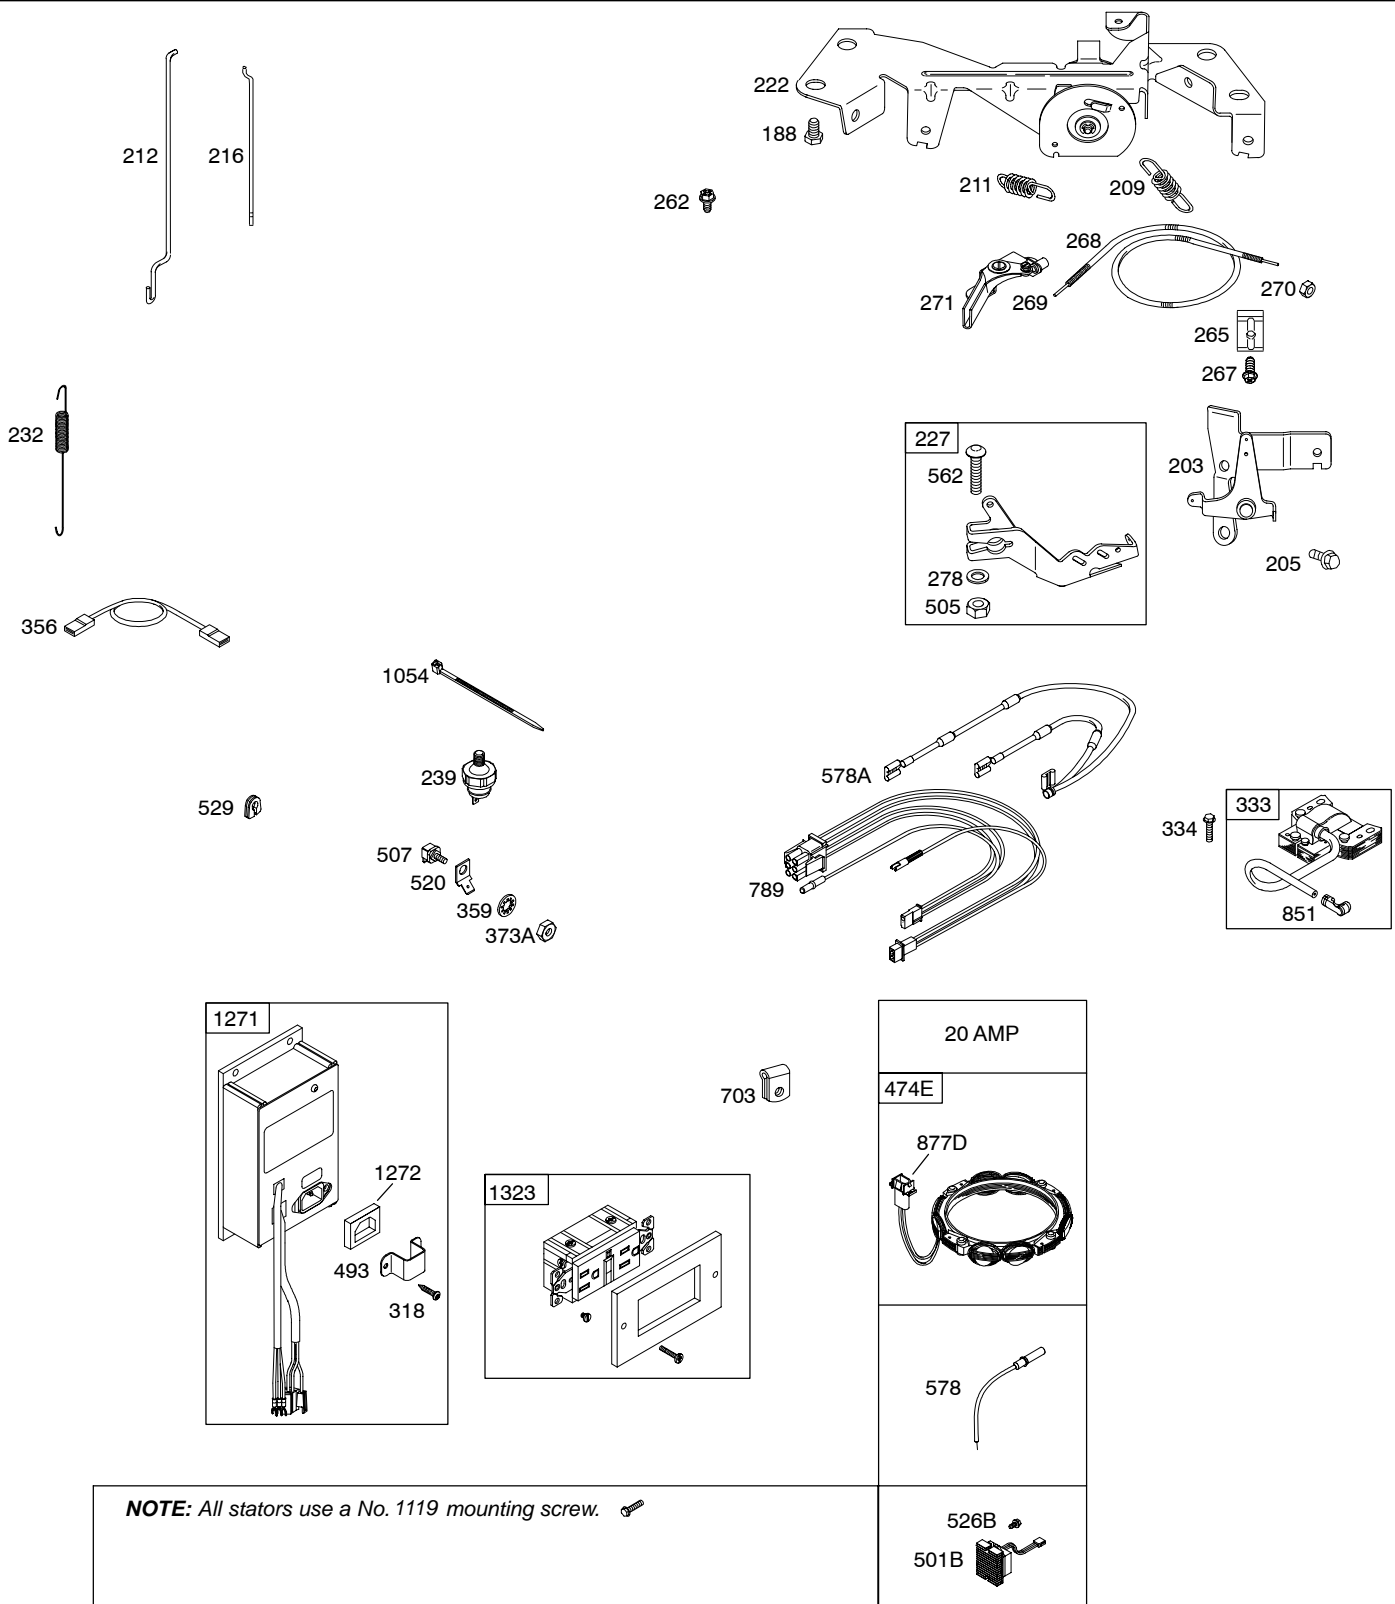


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5371-6 Assemblies include all parts shown in frames. 12/07/2005




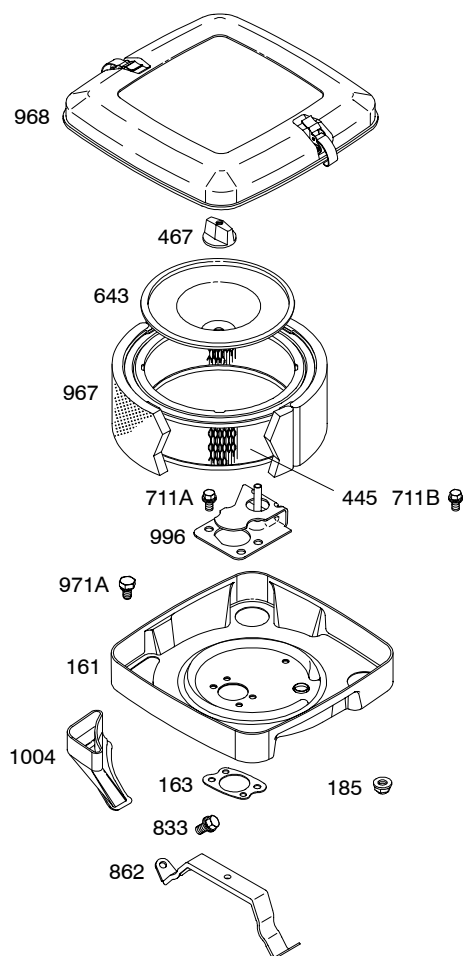


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
5371-7 Assemblies include all parts shown in frames. 12/07/2005

# 357700

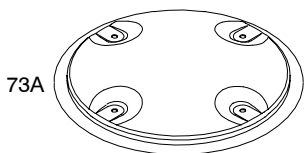

668B

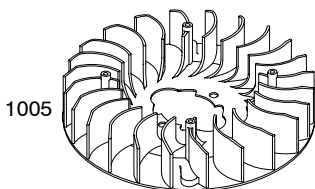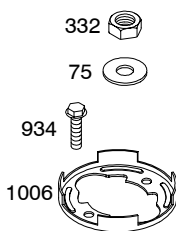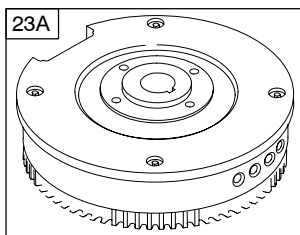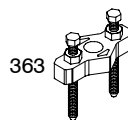




5371-8 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

Assemblies include all parts shown in frames.

12/07/2005




1036 EMISSION LABEL

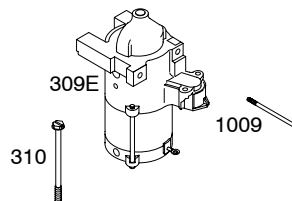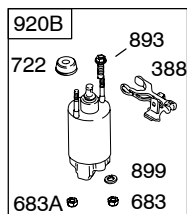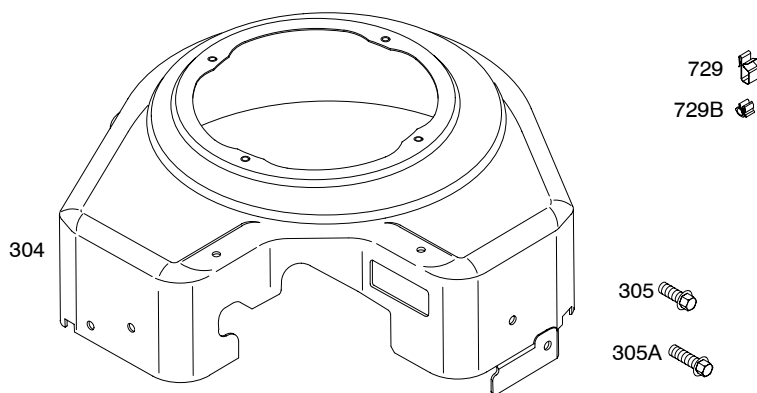

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
5371-9 Assemblies include all parts shown in frames. 12/07/2005

**357700**

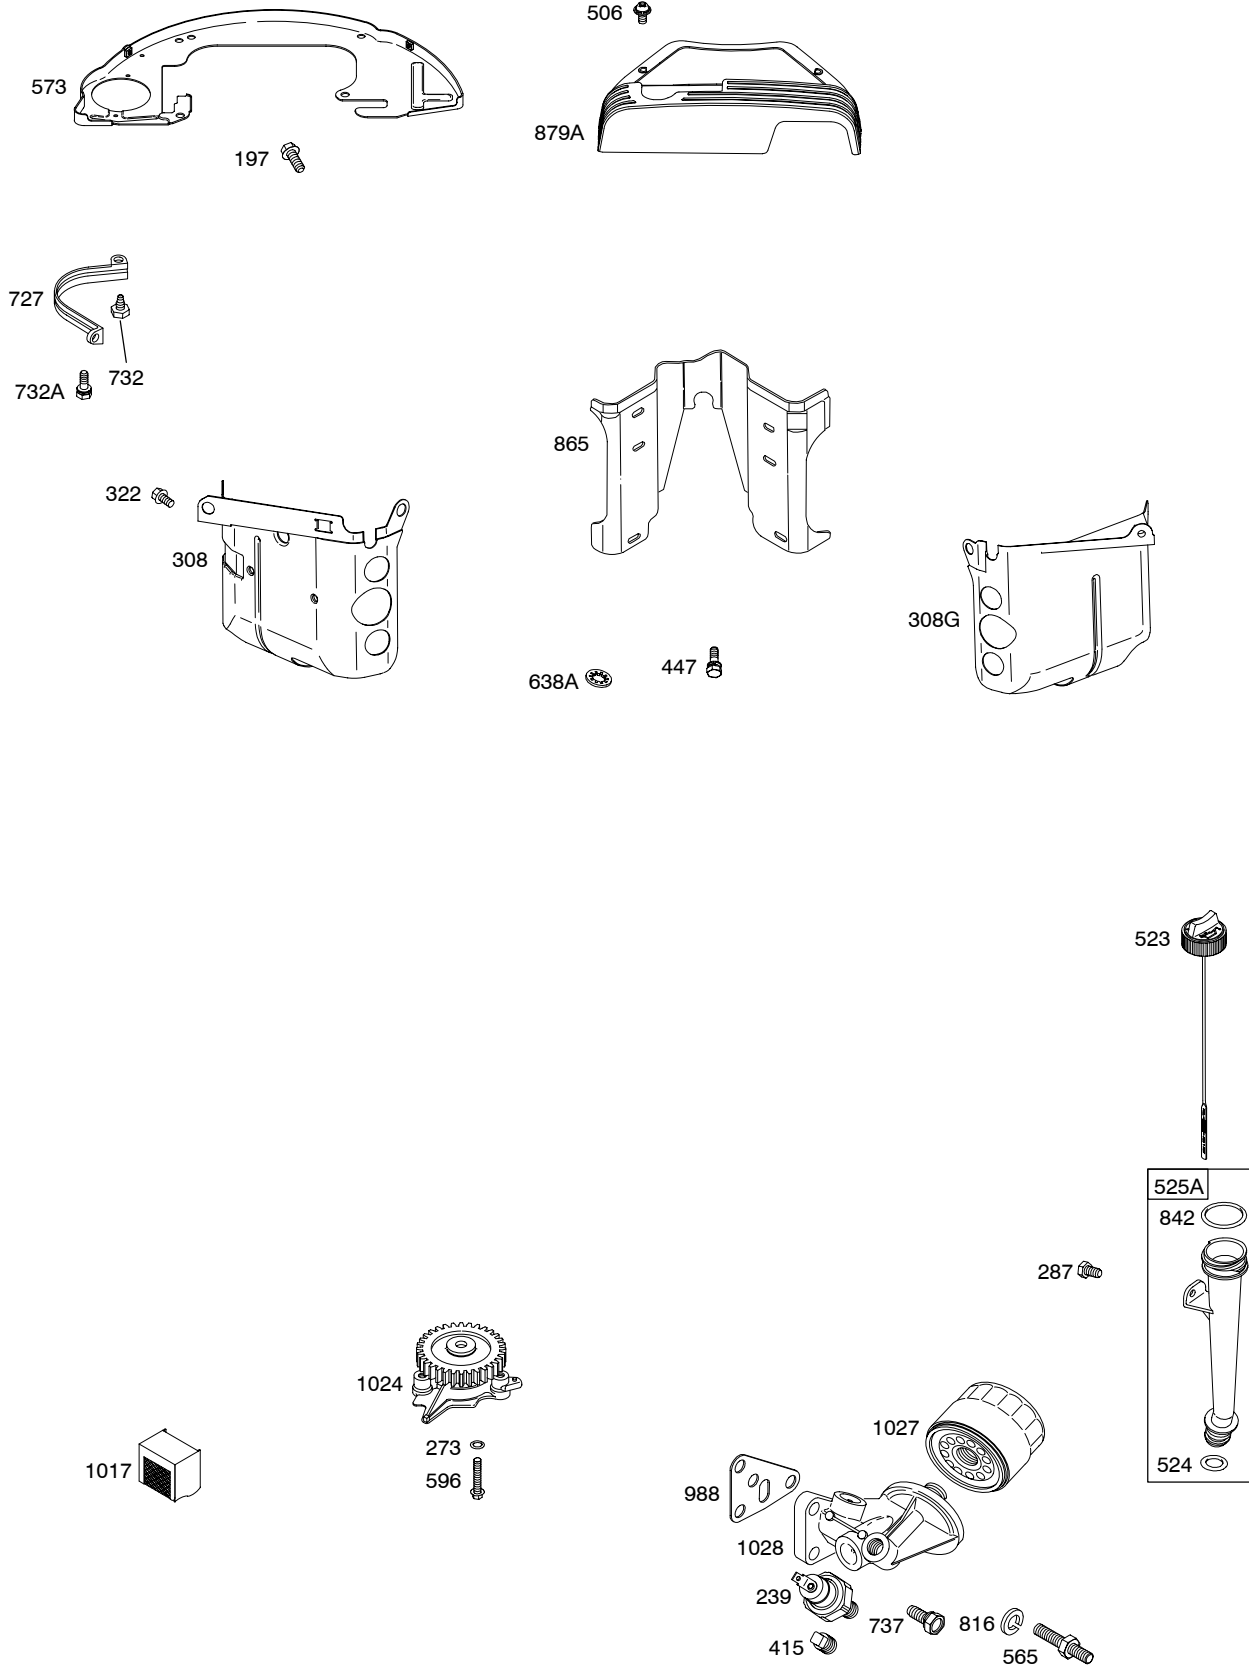

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

**357700**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	809180	Cylinder Assembly	32	690698	Screw (Connecting Rod)	117	●806471	Jet-Main (Standard)	
2	808534	Kit-Bushing/Seal (Magneto Side)	33	807681	Valve-Exhaust	118B	809693	Jet-Main (High Altitude)	
3	★805101s	Seal-Oil (Magneto Side)	34	807680	Valve-Intake	121	808718	Kit-Carburetor Overhaul	
4	808846	Sump-Engine	35	692084	Spring-Valve (Intake)	122B	690748	Spacer-Carburetor	
5	809185	Head-Cylinder (Cylinder 1)	36	692084	Spring-Valve (Exhaust)	125	808725	Carburetor	
5A	809186	Head-Cylinder (Cylinder 2)	40	692058	Retainer-Valve	127	●690730	Plug-Welch (9mm Diameter)	
7	★△690888	Gasket-Cylinder Head (Graphoil)	42	807683	Keeper-Valve	127A	●690731	Plug-Welch (6.9mm Diameter)	
7A	★△805653s	Gasket-Cylinder Head (Metal)	45	690977	Tappet-Valve	130	806470	Valve-Throttle	
8	808988	Breather Assembly	46	691557	Camshaft	133	807710	Float-Carburetor	
9	★809094	Gasket-Breather	50B	690754	Manifold-Intake	137	◆●806481	Gasket-Float Bowl	
10	690751	Screw (Breather Assembly)	51	691694	Gasket-Intake (Manifold/Carburetor Spacer)	142	●691555	Nozzle-Carburetor (Standard)	
11	806083s	Tube-Breather	51B	★△692035	Gasket-Intake (Manifold/Heads)	146	691639	Key-Timing	
12	★691684	Gasket-Crankcase	54	690676	Screw (Intake Manifold)	161	691561	Base-Air Cleaner (Metal)	
13	692059	Screw (Cylinder Head) (86mm Long)	72	●806480	Tube-Jet	163	★692081	Gasket-Air Cleaner (Used With Metal Air Cleaner Base)	
15	690946	Plug-Oil Drain (Square Head)	73A	841440	Screen-Rotating (Used After Code Date 04011800). ----- <b>Note</b> -----	185	690939	Nut (Air Cleaner Base)	
16B	809807	Crankshaft			807111	Screen-Rotating (Used Before Code Date 04011900).	187	791766	Line-Fuel
20	★805049s	Seal-Oil (PTO Side)	74	841441	Screw (Rotating Screen) (Used After Code Date 04011800). ----- <b>Note</b> -----	187A	841858	Line-Fuel (Cut To Required Length)	
23A	809174	Flywheel (Steel Ring Gear)			807112	Screw (Rotating Screen) (Used Before Code Date 04011900).	188	692056	Screw (Control Bracket)
25A	808326	Piston Assembly (Standard) ----- <b>Note</b> ----- 808337			807112	Screw (Rotating Screen) (Used Before Code Date 04011900).	192	807623	Adjuster-Rocker Arm
		Piston Assembly (.020" Oversize)			807112	Screw (Rotating Screen) (Used Before Code Date 04011900).	197	807163	Screw (Back Plate)
26A	807889	Ring Set (Standard) ----- <b>Note</b> ----- 807995			807112	Screw (Rotating Screen) (Used Before Code Date 04011900).	203	690923	Crank-Bell
		Ring Set (.020" Oversize)			807112	Screw (Rotating Screen) (Used Before Code Date 04011900).	205	692083	Screw (Bell Crank)
27	690683	Lock-Piston Pin	75	691490	Washer (Flywheel)	209	692071	Spring-Governor	
28A	807886	Pin-Piston	94	●808374	Kit-Idle Mixture	211	692069	Spring-Governed Idle	
29	807900s	Rod-Connecting (Standard) ----- <b>Note</b> ----- 807803	95	690728	Screw (Throttle Valve)	212	690712	Link-Throttle	
		Rod-Connecting (.020" Undersize)	97	808375	Shaft-Throttle	216	690705	Link-Choke	
			98	807705	Kit-Idle Speed	222	808454	Bracket-Control	
			104	●690739	Pin-Float Hinge	227	690236	Lever-Governor Control	
			105	●807706	Valve-Float Needle	231	690728	Screw (Choke Valve)	
			108	690729	Valve-Choke	232	692073	Spring-Governor Link	
			109	807711	Shaft-Choke	239	690233	Switch-Oil Pressure (Oil GARD Only)	

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

### 357700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
240A	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating)	305A	692062	Screw (Blower Housing)	474E	809175	Alternator (20 Amp)
254	807713	Drain-Carburetor Bowl	308	841183	Cover-Cylinder Head (Cylinder 1)	493	698024	Bracket-Mounting
262	692083	Screw (Rod Bracket)	308G	841182	Cover-Cylinder Head (Cylinder 2)	501B	809176	Regulator
265	691024	Clamp-Casing	309E	808726	Motor-Starter	505	690238	Nut (Governor Control Lever)
267	692083	Screw (Casing Clamp)	310	820807	Screw (Starter Motor)	506	807120	Screw (Carburetor Cover)
268	691025	Casing-Control Wire (Cut To Required Length)	318	807130	Screw (Mounting Bracket)	507	691972	Insulator
269	691026	Wire-Control (Cut To Required Length)	322	841233	Screw (Cylinder Head Cover)	520	691084	Terminal-Ground (Brass)
270	691027	Nut (Control Wire Casing)	332	690887	Nut (Flywheel)	523	692101	Dipstick
271	691028	Lever-Control	333	492341	Armature-Magneto	524	692053	Seal-Dipstick Tube
273	★690681	Seal-O Ring (Oil Pump)	334	692066	Screw (Magneto Armature)	525A	692093	Tube-Dipstick
276	690704	Washer-Sealing (Crankcase Cover/Sump)	337	792015	Plug-Spark	526B	691547	Screw (Regulator)
276A	★△807085	Washer-Sealing (Rocker Cover) (Used After Code Date 01120200). ----- Note -----	355	807063	Wire-Stop	529	690744	Grommet
		691766 Washer-Sealing (Rocker Cover) (Used Before Code Date 01120300).	358	841188	Gasket Set-Engine (Used After Code Date 01120200). ----- Note -----	552	690701	Bushing-Governor Crank
		373A 691612 Nut (Ground Terminal)			808389 Gasket Set-Engine (Used Before Code Date 01120300).	552A	806686	Bushing-Governor Crank
276B	◆●806476	Washer-Sealing (Float Bowl)	359	691077	Washer (Ground Terminal)	562	690239	Bolt (Governor Control Lever)
276C	◆●806477	Washer-Sealing (Carburetor Plug)	363	19203	Puller-Flywheel	565	690682	Stud (Oil Filter Adapter)
278	842122	Washer (Governor Control Lever)	377	808095	Key-Woodruff	572	690686	Baffle-Breather
287	807084	Screw (Dipstick Tube)	383	19374s	Wrench-Spark Plug	573	841311	Plate-Back
304	841397	Housing-Blower	385	807084	Screw (Fuel Pump)	578	692306	Wire Assembly
305	692056	Screw (Blower Housing) (14mm)	387	808656	Pump-Fuel	578A	692319	Wire Assembly (With Diodes)
			388	820799	Lever-Pinion Drive	596	691492	Screw (Oil Pump)
			415	690283	Plug (Square Head)	601	691638	Clamp-Hose (Silver)
			437	691902	Screw (Exhaust Manifold)	601A	791850	Clamp-Hose
			439	★692154	Seal-O Ring (Crankcase Cover/Sump)	601B	841859	Clamp-Hose (Silver)
			445	394018s	Filter-Air Cleaner Cartridge (Round)	615	691550	Retainer-Governor Shaft
			447	841233	Screw (Air Guide Cover)	616	806685	Crank-Governor
			467	691985	Knob-Air Cleaner	628A	806660	Screw (Fuel Pump Bracket)
						633	◆●690738	Seal-Choke/Throttle Shaft
						635	692076	Boot-Spark Plug
						637	●690735	Washer (Throttle Shaft)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

**357700**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
638A	691551	Washer (Cylinder Head Cover) (Used Before Code Date 03110100).	862	692542	Strap/Stud-Air Cleaner Mounting	1009	806474	Screw (Starter Motor)
643	692079	Retainer-Air Filter	865	807119	Cover-Air Guide (Black)	1011	692929	Tube-Vent (Cut To Required Length)
654	690939	Nut (Carburetor)	868	★△691963	Seal-Valve	1017	690878	Screen-Oil Pump
668B	●690737	Spacer	871	692057	Bushing-Valve Guide	1019	808036	Kit-Label
683	820813	Nut (Starter Solenoid)	877D	698092	Wire/Connector-Alternator	1022★△806039s		Gasket-Rocker Cover
683A	820809	Nut (Starter Solenoid)	879A	841857	Cover-Carburetor	1023A	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump)
691	★690680	Seal-Governor Shaft	883A	★△691613	Gasket-Exhaust	1023B	691494	Cover-Rocker
703	807116	Clip	893	820805	Nut (Starter Solenoid)	1024	693186	Pump-Oil
711A	807084	Screw (Carburetor Shield)	899	820811	Washer (Starter Solenoid)	1025	690689	Spool-Governor
711B	807163	Screw (Carburetor Shield)	918	393815	Hose-Vacuum (Cut To Required Length)	1026	691836	Rod-Push (Intake)(Steel)
718	806469	Pin-Locating	920B	825418	Solenoid-Starter			----- <b>Note</b> -----
722	820801	Seal-Plunger	934	691058	Screw (Fan Retainer)	1027	492932s	691758 Rod-Push (Exhaust)(Aluminum)
727	841313	Cover-Starter Drive (Black)	947	806472	Solenoid-Fuel	1028	808235	Filter-Oil (2 1/4" Long)
729	807136	Clip-Wire (Black)(Spring Steel)	955	807714	Plug-Carburetor	1029	807323	Adapter-Oil Filter
729B	690586	Clip-Wire (Snap In)(Nylon)	955A	691511	Plug-Carburetor	1036		Arm-Rocker Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
732	690688	Screw (Starter Drive Cover)	967	272490s	Filter-Pre Cleaner (Round)			
732A	841233	Screw (Starter Drive Cover)	968	699959	Cover-Air Cleaner (Used With Metal Air Cleaner Base)	1037	●807717	Ball-Choke Locator
737	690679	Screw (Oil Filter Adapter)	971A	807084	Screw (Air Cleaner Base to Carburetor)	1051	●690736	Ring-Retaining
741	691530	Gear-Timing	975	807715	Bowl-Float	1054	280275	Tie-Cable
742	●805578	Retainer-E Ring	977	808325	Gasket Set-Carburetor	1058	276353	Operator's Manual
788	691559	Bracket-Fuel Pump	987	◆●691548	Seal-Throttle Shaft	1091	●691515	Cap-Limiter
789	695050	Harness-Wiring	988	★692063	Gasket-Oil Adapter	1095A	841191	Gasket Set-Valve (Used After Code Date 01120200).
807	●690733	Spacer-Throttle	996	691577	Shield-Carburetor			----- <b>Note</b> -----
812	△692055	Nut (Rocker Cover) (Used Before Code Date 01120300).	1004	807121	Duct-Air (Used With Metal Air Cleaner Base)	808391		Gasket Set-Valve (Used Before Code Date 01120300).
816	690706	Washer (Oil Filter Adapter)	1005	841439	Fan-Flywheel (Used After Code Date 04011800).	1100	690973	Pivot-Rocker Arm
830	809157	Stud-Rocker Arm			----- <b>Note</b> -----	1119	807117	Screw (Alternator)
833	841233	Screw (Air Cleaner Mounting Strap/Stud)			809179 Fan-Flywheel (Used Before Code Date 04011900).	1130	690746	Stud (Intake Manifold)
842	691870	Seal-O Ring (Dipstick Tube)	1006	690452	Retainer-Fan	1135	806497	Washer (Crankcase Cover/Sump)
851	493880s	Terminal-Spark Plug				1254	807084	Screw (Rocker Cover Stud)
						1271	697261	Inverter
						1272	697260	Gasket-Inverter
						1323	699146	Receptacle-Powerlink
						1330	272144	Repair Manual

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095A.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**